



GO^{TRAX}

Scout

KIDS ELECTRIC SCOOTER

USER MANUAL

Congratulations on your purchase!

A silver and blue Gotrax electric scooter is shown from a side profile. It has a silver main frame, a blue deck, and blue wheels. The handlebar has a blue grip and a blue adjustment knob. The Gotrax logo is visible on the handlebar and deck.

GOTRAX

This user manual will help you assemble and operate your new Electric Scooter. Be sure to read **ALL OF THE INFORMATION** in this manual before riding.

NOTE TO ALL RIDERS UNDER 12 YEARS OR AGE:

It's very important that you get parental permission before riding your electric scooter. Electric scooter for kids age of 4-7.



Don't ride until you read this



ALWAYS wear a helmet when riding your Electric Scooter.



Make sure your scooter has a **full battery** before taking it out to ride.



Always be aware of local road laws, and follow them.



Do not ride the scooter under the influence of drugs or alcohol.



Always respect pedestrians.



Do not ride under wet conditions. The scooter may slide from under your feet causing injury. Wet conditions may damage the electronics and void the warranty.




Warning Message

1. **Avoid water** - The scooter is not waterproof. The electronics may be damaged due to water and water damage is not covered by our warranty. Riding in wet conditions is also very dangerous and may result in injury.
2. **Abuse** - We do not cover physical damage due to negligent care and extreme riding.
3. **Whenever you ride the GOTRAX scooter**, you risk severe injury or even death from loss of control, collisions, and falls. Use caution and ride at your own risk.
4. **Do not** modify the product from the manufacturer's original design.
5. **Keep** hands and all body parts away from moving parts while operating the scooter.
6. **Before riding** - be sure to check the scooter over and make sure the scooter is operating correctly before each use.
7. **Before riding** - be sure to check that the braking system is functioning properly; also be sure to check that all safety labels are in place and you understand the safety warnings.
8. **Before riding** - be sure that any and all axle guards, chain guards, or other covers or guards supplied by the manufacturer are in place and in serviceable condition.
9. **Before riding** - be sure to check that the tires are in good condition, inflated properly, and have sufficient tread remaining.
10. This scooter is suitable for children aged 4-7.
11. **Maximum Speed** - Your electric scooter goes the maximum speed of 6 mph.

Unpack

You should find each of these items in your box:


1. Scooter Front & Rear Wheel Compartment
2. Handlebar
3. Handlebar stem
4. 4mm Allen wrench
5. Approved Power Adapter/ Charging Unit

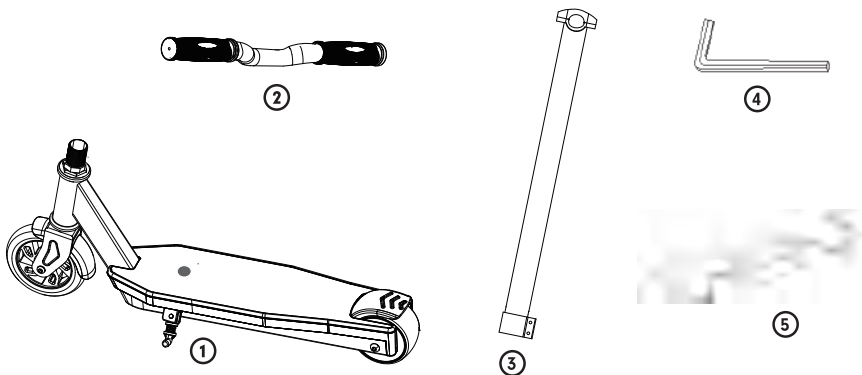

Remove all packaging material, then inspect each item for any accidental damage that may have occurred during shipping.



 Get To Know Your Scooter

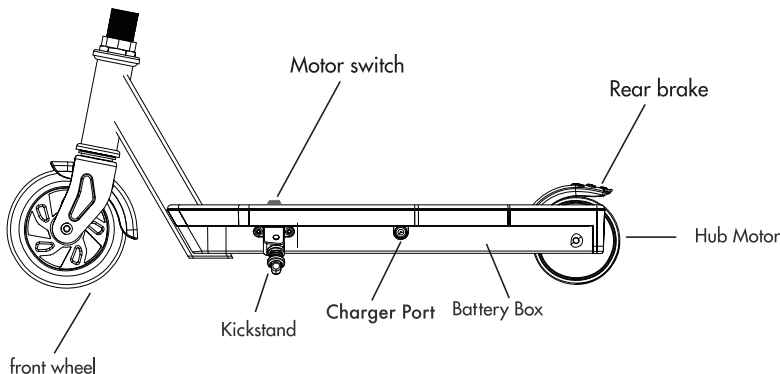

The electric scooter comes partially assembled.


Specifications

Top Speed:	6 mph
Battery life:	About 30minutes(110lb rider)
Max Weight:	110lb
Battery Type:	10.8V 2.6Ah
Battery Input:	DC12.6V 0.6A
Charging Time:	About 4.5hours
Motor Power:	80W
Power Requirements:	AC100V ~ 240V 50/60Hz



Assemble Your Scooter

 
1

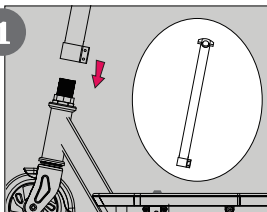

ASSEMBLE THE HANDLEBAR STEM

Assemble the handlebar stem to the front wheel compartment.


2

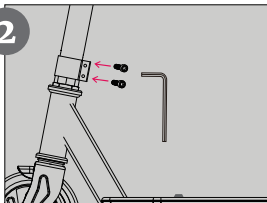

TIGHTEN THE HANDLEBAR STEM

Place the hoop of the handlebar stem toward the rear wheel, then tighten the screws of the hoop.

3

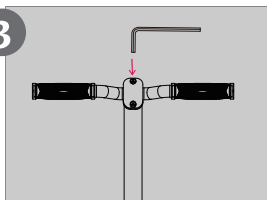


REMOVE SCREW FROM BLOCK ON TOP OF THE HANDLEBAR STEM

Use 4mm Allen wrench to remove the screws from the block on the top of the handlebar stem, put the handlebar on and cover with the top of the block. Tighten the screws. Test the scooter after you've finished assembling.






Charge Your Scooter

Before using the scooter, you must fully charge the battery.

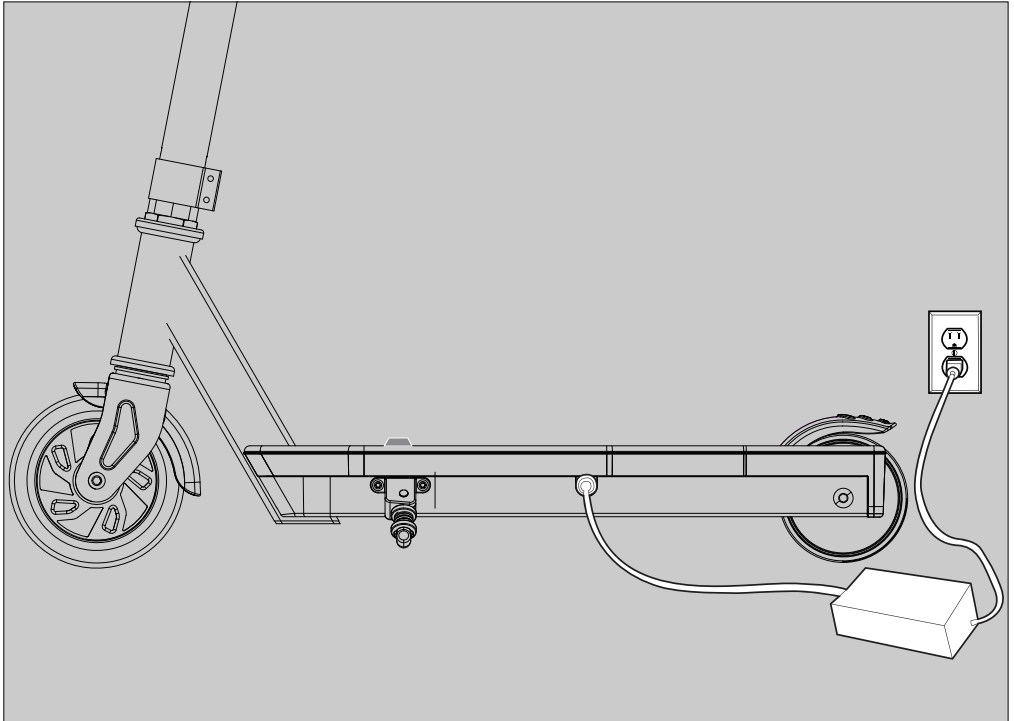

1. Open the rubber charging port cover.
2. Insert the charging plug into the port.
3. The charger box will have a green light when fully charged and a red light when charging.
4. When you are done charging be sure to cover the charging port to keep it clear of dust and debris.
5. Charging Time: About 4.5hours

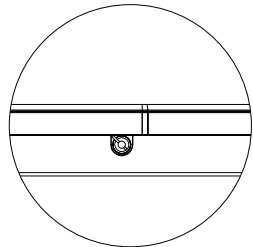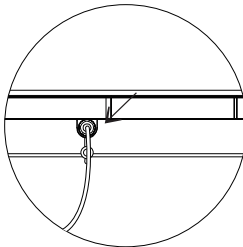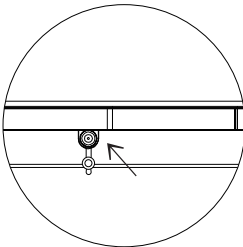




Scooter Functions

To start the scooter, put your right foot on the motor switch of the board, when the start speed is over 3.1 mph, the motor will engage.

To brake, place your foot on the rear fender brake to slow down or stop.

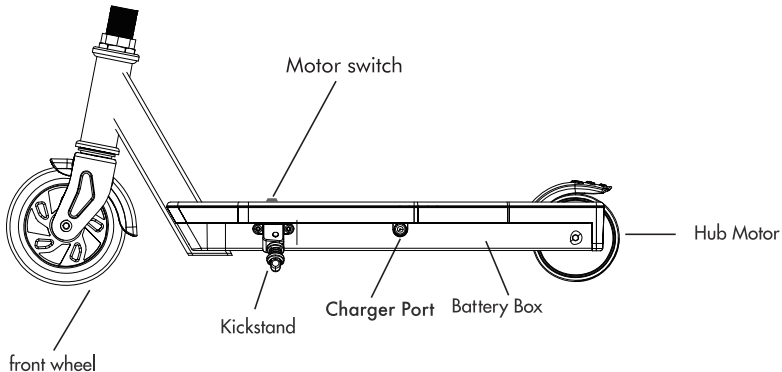



Riding Tips

1. You will want to start riding your scooter with one foot on the **motor switch area** and one foot on the ground. Use your foot on the ground to push off.
2. Press the rear fender foot brake with your foot to slow down or stop.
3. The scooter performs best when on a smooth surface e.g. car parks, smooth roads, footpaths, & bike lanes.
4. Always clean your scooter (wheels, platform, etc.), it's a machine and it needs to be maintained.
5. Be aware of the terrain you are riding on, watch out for curbs and obstacles!

How to ride the scooter?

1. Put your right foot on the motor switch of the board, when the start speed is over 3.1 mph, the motor will engage.
2. Step on the rear fender to stop the scooter.
3. It will automatically turn off after 1 minute of none operation.



Maintenance & Repair

If you regularly clean and maintain your electric scooter, it will extend its life.

Cleaning and storage: If the scooter is dirty, wipe it clean with a soft damp cloth.

DO NOT use alcohol, gasoline, kerosene, or other corrosive chemical solvents to clean the scooter. It can severely damage the appearance and structure of the scooter. Please do not use a pressure washer as it may also cause damage to the electronics.

Storage: When you're not using your scooter store in a dry and cool location. Avoid storing your scooter outdoors because sun exposure can damage its appearance and may cause wear on the life of the battery and tires.



Battery Information

Only use the approved GOTRAX power adapter to charge your scooter, others may cause risk of fire & equipment may be damaged.

Improper disposal of used batteries may seriously pollute the environment. Please comply with local disposal regulations.

Make sure to store your scooter and power adapter in conditions that do not exceed 122 degrees Fahrenheit or below -4 degrees Fahrenheit.

Warning - Risk of Fire - No User Serviceable Parts, The prolonged exposure to UV Rays, Rain and the Elements may damage the enclosed materials, store indoors when not in use.

Troubleshooting

We frequently update our user manuals at **GOTRAX.com**, and reserve the rights to update and change manuals online.

Please contact our customer service team if you are experiencing problems or need more detailed information. They can be reached at GOTRAX.com

Warranty

For warranty information, please visit **GOTRAX.com**.



WWW.GOTRAX.COM

#RideGOTRAX





GOLABS, INC

GOTRAX.com
2201 Luna Rd.
Carrollton, TX 75006