



USER MANUAL

**32" ROLLABLE SMART
TOUCHSCREEN TV**

OR3200RTV



Table of Contents

Safety Precautions 2

In The Box 6

Product Overview 7

Remote Control 8

Battery 9

Assembly Instructions 10

Angle Adjustment 15

Powering On Your Device 16

Connections 17

Screen Mirroring 18

Troubleshooting 20

Specifications 21

Need Help? 22

Warranty Information 23



Safety Precautions

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ IT CAREFULLY AND KEEP FOR FUTURE REFERENCE.

- To avoid potential fire hazards, refrain from storing the Product in the locations listed below. Doing so could result in fire hazards, electric shock, combustion/explosion, malfunction, or damage to the Product:
 - Prolonged exposure to direct sunlight.
 - High-humidity environments, such as bathrooms.
 - Proximity to heat sources, such as stoves or other heaters.
 - Contact with steam or oily fumes, such as kitchens or humidifiers.
 - Exposure to rainwater or moisture.
 - Placement near inflammable substances, such as gasoline or candles.
 - Areas prone to dust accumulation.
 - Unstable or high places, such as shelves or desks.
- Place the Product in a well-ventilated space to prevent overheating. Avoid placing it in a narrow space that can restrict the flow of air.
- Never cover the Product with materials such as clothes or blankets. This can restrict airflow and cause the device to overheat, posing a risk of fire.
- After prolonged use, the Product's ventilation port may become hot. Avoid touching the ventilation port to prevent burns or other injuries.
- To avoid product damage and potential electric leakage, protect the power cables from twisting, bending, and cutting. If the power cables are damaged, do not use the device and seek professional assistance.
- When connecting the power cable, make sure the power interface is securely and correctly connected to the device. A loose or poor connection can not only damage the product, but also pose a risk of electric shock. Do not move the Product while connecting the power cable to avoid any accidents.
- Do not remove the Product's power cable by force.
- Be sure to handle with caution when connecting to/removing the power cable from the power source.

Safety Precautions

- To avoid fire hazards or electric shock, do not connect too many devices on one singular power supply source.
- Follow all installation instructions to avoid damage or injury due to improper assembly.
- Position the Product in a secure area to prevent damage or personal injury.
- Please connect the Product's adapter to a three-pole grounded AC socket. Make sure to connect the grounding wire to avoid electric shock.
- In case of lightning, do not touch the Product. Electric shock may occur.
- Do not drop metals into the Product. If foreign matters fall into the Product, please remove the power cable and contact Customer Service.
- In any of the following cases, please cut off the Product's power supply and contact Customer Service.
 - The Product is damaged.
 - Water or other foreign matter enters the Product.
 - The Product has smoke or other odor.
- Do not use high-voltage electronic equipment around the Product; otherwise, it may lead to faults such as signal interference.
- Make sure to use authorized parts and components; otherwise fire hazard, electric shock or malfunction may occur.
- Do not try to modify the Product; otherwise, fire hazard or electric shock may occur. Please contact Customer Service or authorized repair personnel to receive service or maintenance.
- Do not dismantle the AC adapter or power cable; otherwise, fire hazard or electric shock may occur.
- Do not drop or hit the Product.
- To reduce fire hazards or electric shock, do not touch the Product with wet hands.
- Wipe off water or dust (if any) on the power plug.

Safety Precautions

- Do not apply unreasonable pressure or use sharp objects to press the Product's screen; otherwise, product damage and personal injury may occur.
- While cleaning the Product, please remove the power cable and wipe it gently with a dry cotton cloth.
- Do not spray water or other liquids directly onto the Product.
- Do not clean your product with harmful chemicals, such as glass cleaner, air freshener, insecticide, lubricant, automotive or industrial wax, polishing agent, diluent, benzene or alcohol; otherwise, electric shock or product damage may occur.
- For any battery liquid leakage in the Base, stop use immediately to avoid skin and eye contact. Any accidental contact may lead to blindness or burns. Flush the contacted area with water immediately and contact a medical professional for further assistance.
- The battery may fail to recharge completely or have a reduced life if it is discharged completely or idled for a long period of time.
- Any unauthorized disassembly/assembly of product parts without consulting the manufacturer may lead to product failure, and you will not be entitled to maintenance services.
- Do not push or kick the Product.
- Do not suspend or put heavy objects on the Product.
- Do not move or slide the Product while sitting on its Base.
- Do not exceed the Product's limit angle by force.

 
Safety Precautions

SAFETY WARNING (Stability Hazards)

Serious personal injury may occur due to display instability. The following preventive work is recommended to avoid injury:


- Be sure to use the suggested stand and mounting methods.
- Be sure to put the Product on level ground.
- Warn children about the hazards of climbing on or touching the display or stand.
- Make sure to arrange the Product's power wires and cables neatly to avoid tripping or dragging.
- Do not put the Product at a high or tilted place.
- Do not place articles such as toys, on the Product or stand, as this may induce children to climb onto the Product.

In the Box

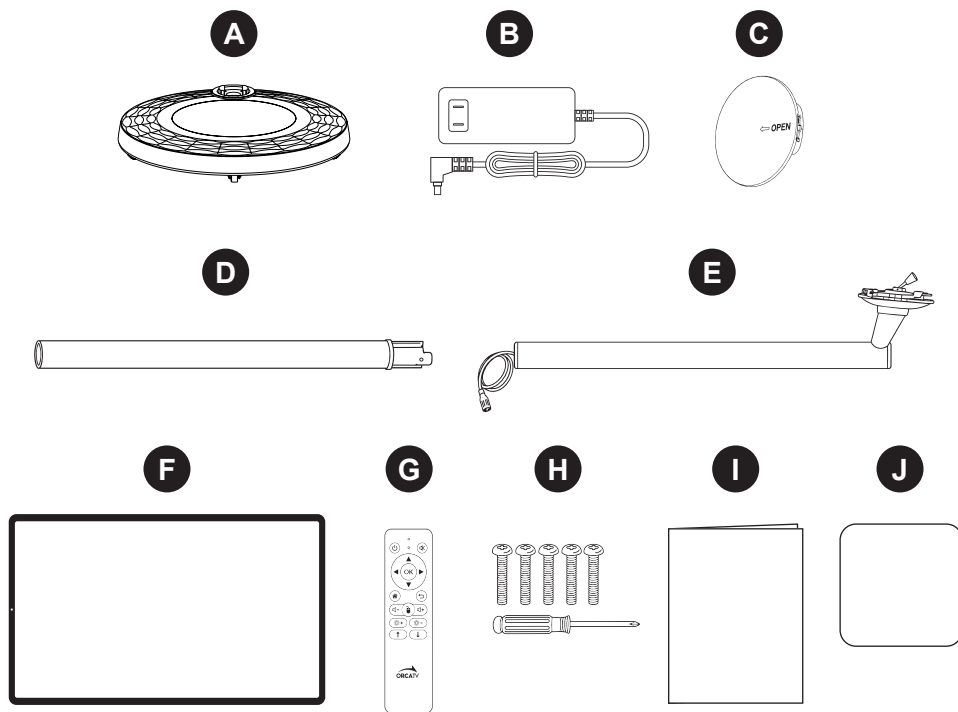


- A. Base
- B. Power Adapter
- C. Bottom Cover
- D. Stand (Lower)
- E. Stand (Upper)
- F. Monitor
- G. Remote Control

 - H. Screws and Screwdriver
- I. User Manual
- J. Warranty Card

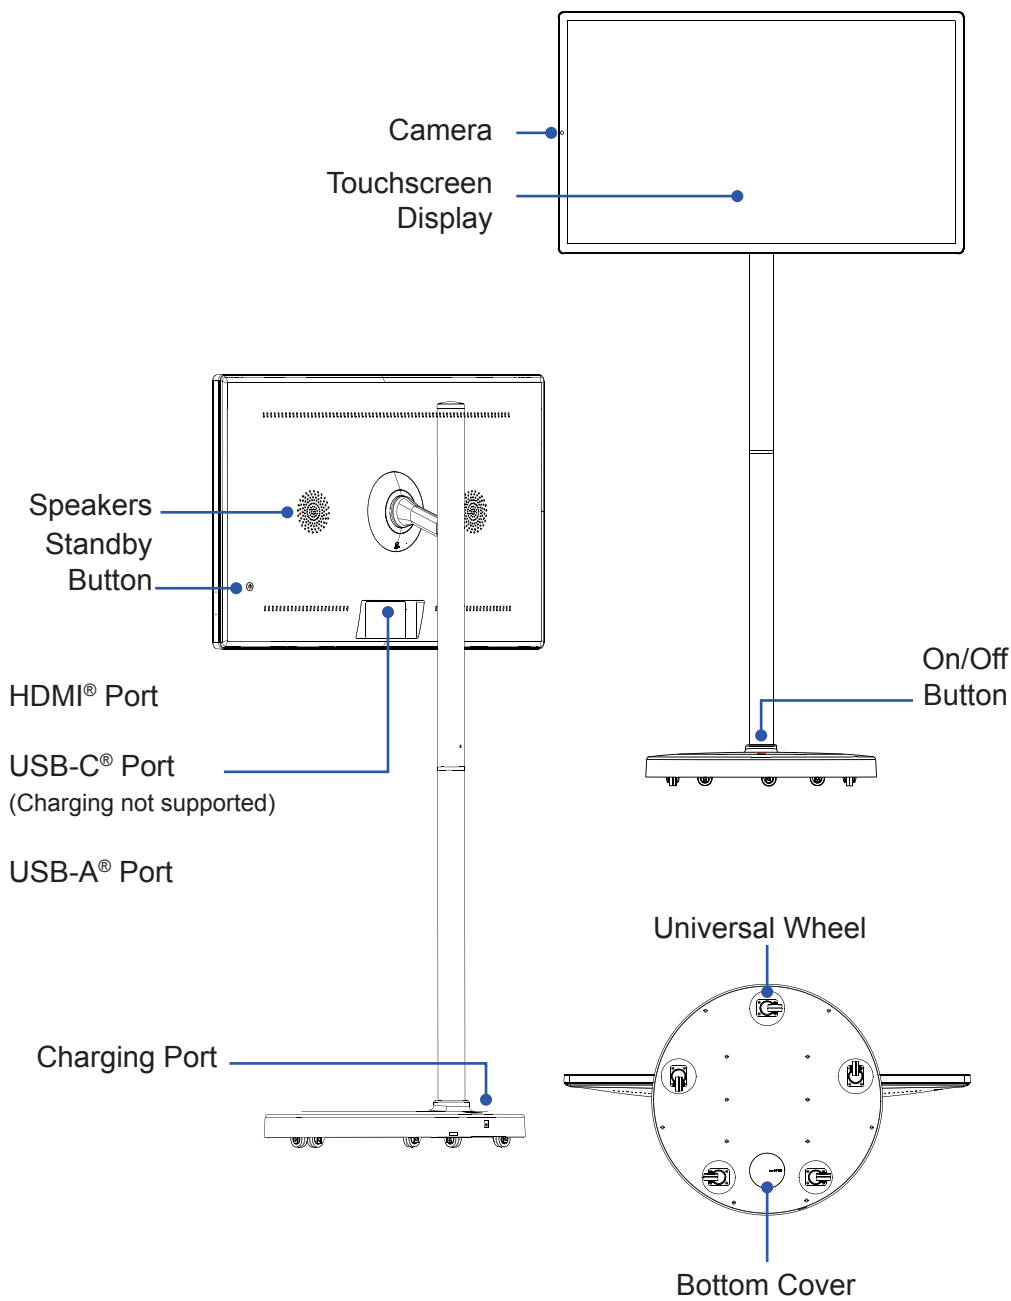

Remote Control

 To pair your remote control, go to Settings > Bluetooth® on the main unit and select “**Add Bluetooth Device**”. Press and hold the Home + Back buttons on the remote until “**Display**” appears, then select it to pair.

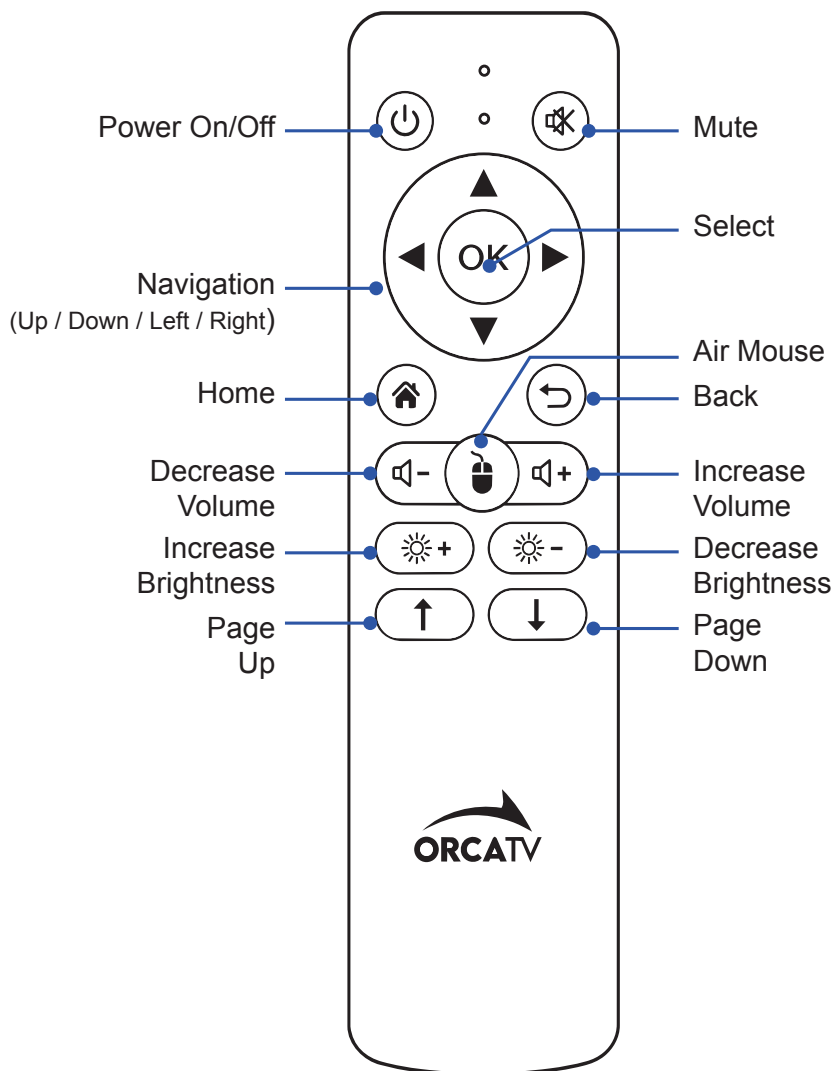

Note: Remote Control requires two (2) AAA batteries (included).



Battery

The product's movable Base is fitted with a built-in battery to ensure operation for periods of time without a connection to a power supply.

NOTE:

- The power supply indicator serves the singular function of indicating the status of the external power supply. A luminous green indicator denotes the successful connection of the external power supply, while a lack of illumination signifies its disconnection.
- The built-in battery can be fully recharged within approx. 7 hours.
- The product's battery life will decrease with time and usage.
- The product's battery may encounter charging failures when temperatures are below 32°F.
- To optimize battery longevity, it is recommended to use the battery for some time before recharging, rather than constantly keeping the battery full.
- Keep the battery's power level at 50% to prolong its service life.
- Note: The actual use period may vary along with use conditions, habits and different factors, such as connected devices, ambient temperature and product settings.

 
WARNING:

Using the wrong battery can be dangerous and may cause an explosion. Be sure to handle the battery with caution. Users should not attempt to dismantle and replace the battery on their own.


- The battery shall not be disassembled, dropped or thrown into fire.
- If there is severe swelling, do not continue to use it.
- Do not place it in a high temperature environment.
- Do not use the battery if immersed in water.

Assembly Instructions


1. Remove the Lower Stand **D** and the Upper Stand **E** from the packaging. Feed the power cable from the Upper Stand through the center of the Lower Stand, then connect the two stand sections.

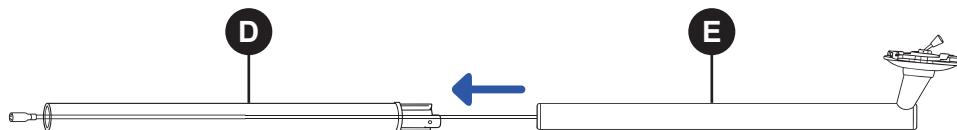

 2. Secure the connection with one screw using a screwdriver.


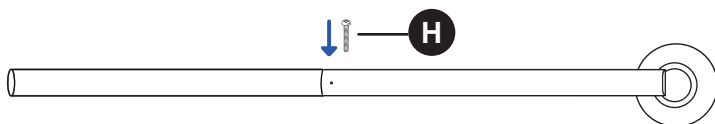


 3. Remove the Base **A** from the packaging. Install the assembled stand onto the Base while routing the power cable through the opening. Secure the stand to the Base with the screws **H** using a screwdriver.

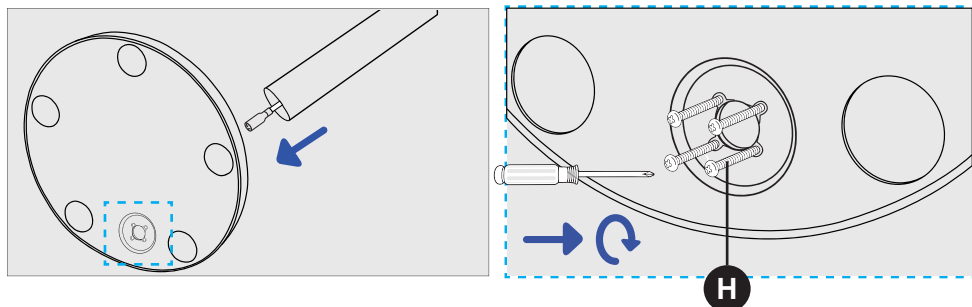


Assembly Instructions

  4. Connect the two wires, then tuck them inside the Base.




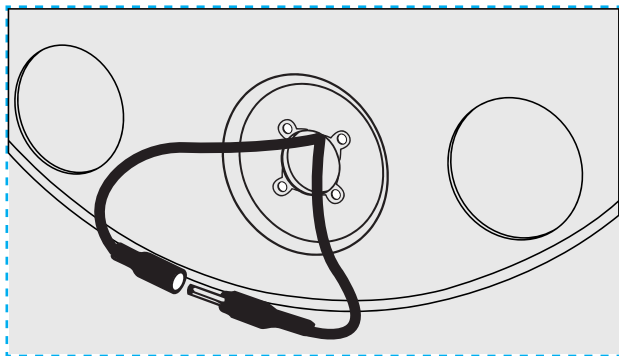
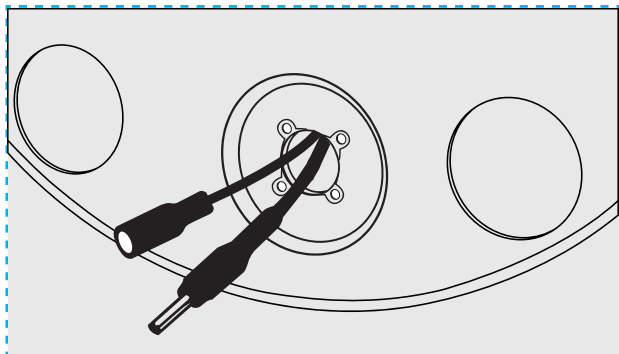


 5. Install the **C** Bottom Cover as indicated below.

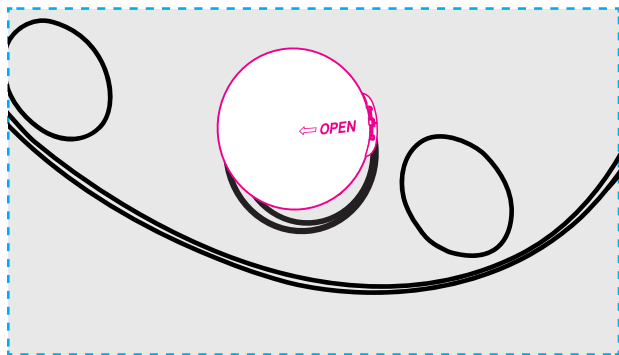



Assembly Instructions

     6. Keep the assembled stand upright on a level surface. Locate the positioning column as shown below. Remove the display monitor from the packaging and locate the mounting holes on the back of the monitor.

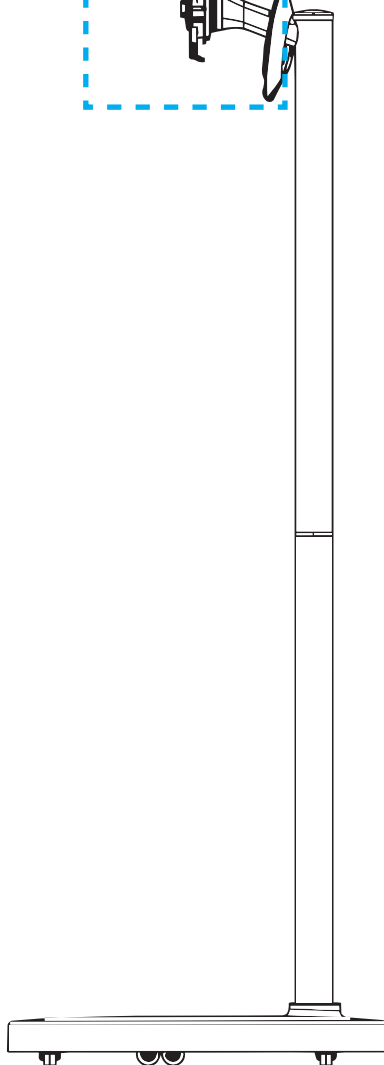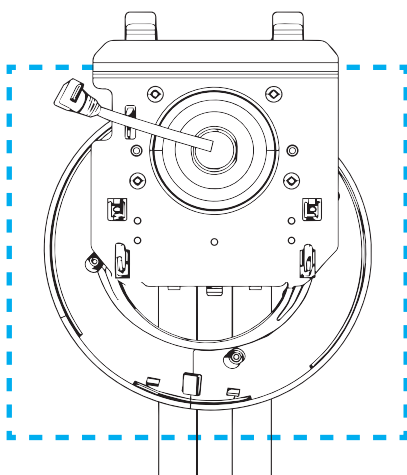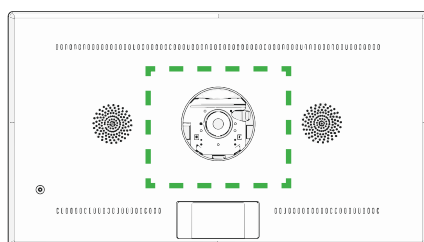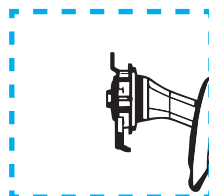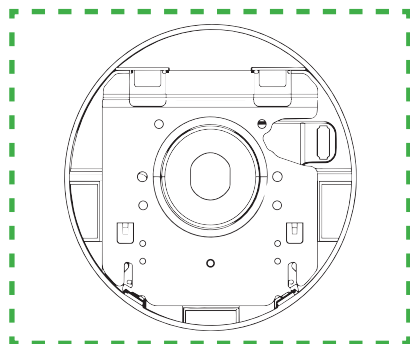

Assembly Instructions

  7. Hold the monitor securely with both hands, with the touchscreen facing away from you. Align the mounting points on the back of the monitor with the positioning posts on the stand. Insert and engage the upper mounting clips first. Once the upper clips are engaged, push the bottom locking tab upward until the locking tabs on both sides engage securely, then release it.

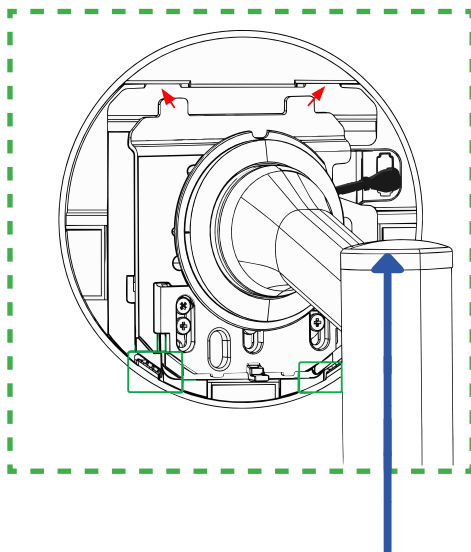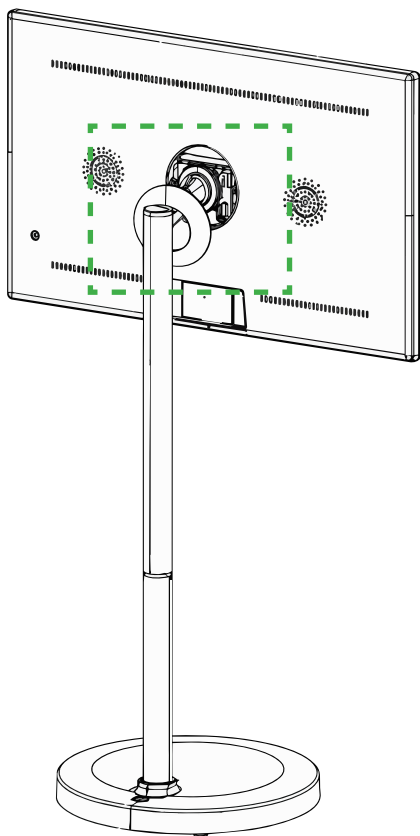


Insert the stand's power cable into the power port on the back of the monitor.

Note:

- Ensure the power cable is firmly connected before turning on the product. If the product does not power on, check the cable connection and reconnect the power adapter if necessary.

Assembly Instructions

 8. Install the mount cover as shown below. Align the clips with the corresponding slots, then push the cover into place until it is securely attached.

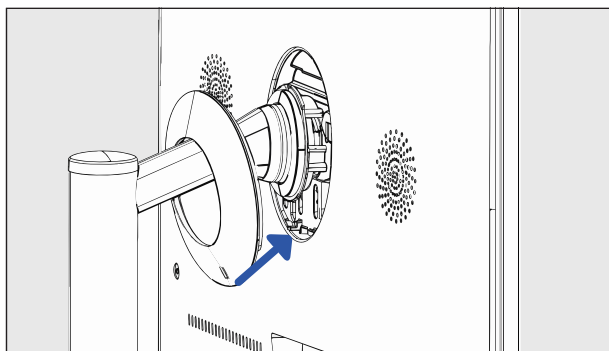

Align the clips with the slots and push in.

 
NOTE: To remove, push the top of the back cover until the bottom edge pops out, then pull the cover away.

Angle Adjustment

You may adjust the angle and height of the display for the optimal viewing experience in any scenario.


- Supports 180° rotation (left rotation: 90°; right rotation: 90°).
- Supports tilt adjustment of 45° (+25°/-20°) and height adjustment up to 7 inches.

NOTE: The actual angle may vary slightly due to the external factors.

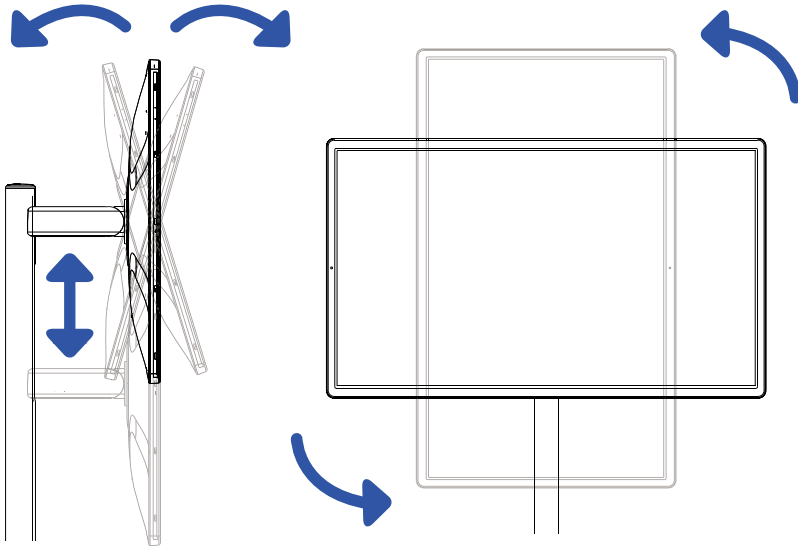

Powering On Your Device

 1. Insert the Power Adapter into the charging port, and once connected, refrain from unplugging it.
2. During initial use, it is important to correctly connect the Power Adapter to facilitate optimal operation.
3. To power on the product, press and hold the ON/OFF button on the stand for 3 seconds.

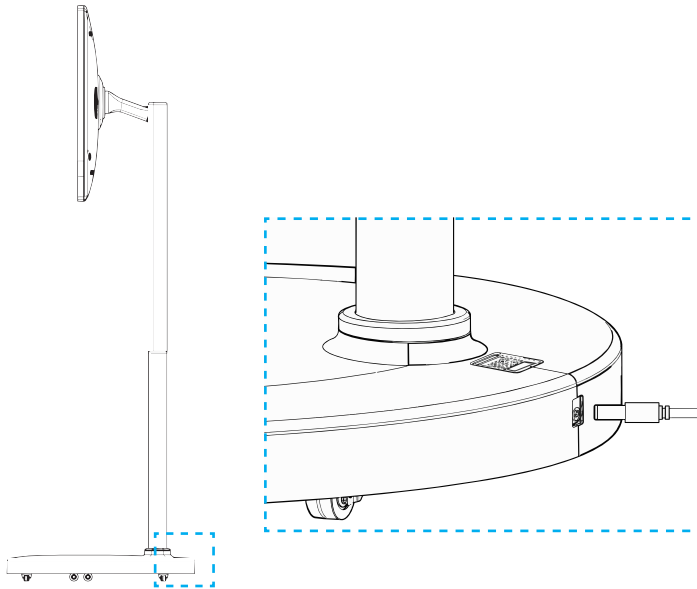


NOTE:

- To avoid product damage and personal injury, keep the device in a vertical position at all times, refraining from laying it flat.
- Keep hands clear of the base.
- When moving the product, hold the middle section of the stand securely. This prevents product damage and reduces the risk of personal injury due to tilting.
- If foreign matter gets stuck on the stand or base, gently remove them using a clean, damp paper towel or cloth.

Connections

 This TV can be connected to other devices through HDMI®, USB-C®, and USB-A® cables.

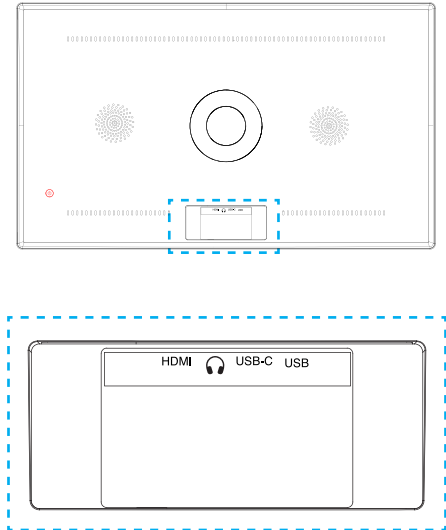

HDMI®

You may connect a laptop to the display via HDMI® cable to use the display as an external monitor. The device does not support connection of other products of the same interface.

USB Type-C®

Connects to: external hard drive or flash drive, card reader, keyboard, mouse.

USB Type-A®

 
Connects to: external hard drive or flash drive, card reader, keyboard, mouse.

NOTE: When the device is connected to a PC or laptop, some images may have display errors, depending on the graphics card.

Screen Mirroring

Screen Mirroring on iOS Devices

1. Ensure that your iOS device and the rolling TV are connected to the same network.
2. On your iOS device, navigate to the Control Center and tap on the Screen Mirroring widget.
3. Tap on the device “**DISPLAY_XXXX**” to connect and start mirroring.

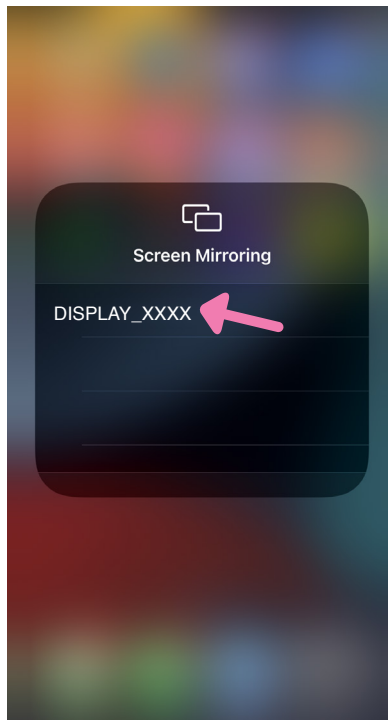

Screen Mirroring

Screen Mirroring on Android™ Devices

Method 1

1. Ensure that your Android™ device and the rolling TV are connected to the same network.
2. On your Android™ device, navigate to the Control Center and tap on the Screen Cast widget. Tap on the device “**DISPLAY_XXXX**” to connect and start casting.

Method 2

1. Navigate to <http://usbdisplay.cn> and download the app on your Android™ device, and then select “**DISPLAY_XXXX**” to connect and start casting.

Screen Mirroring on Laptops

1. Navigate to <http://transcreen.app> and download the app on your laptop, and then connect to the Rolling TV's hotspot **DISPLAY_XXXX**.
2. Run the client app on your laptop, select **DISPLAY_XXXX**, then follow the instructions to start mirroring.

No image and sound

- Please check if the product is powered on normally.
- Please check if the power adapter is powered on normally.
- Please connect other products to see if the wall outlet is faulty.
- Please check if the power cable at the back of the display is properly connected.

The product has unexpected shutdown

- Please check if battery is low.
- Please check if the auto shutdown function is within the set time period.
- Please check if the Product has entered Eco mode and the display is under auto shutdown status.
- If the battery is overheating, the Product will shut down automatically to trigger protection mechanism.

No signal when external HDMI® device is connected

- Please reboot the Product.
- Please reconnect the HDMI® cable.
- After the Product is rebooted, please restart the external HDMI® device.

Display error

- As the Product's display has millions of pixels, tiny black spots or highlight color light spots may be shown on the display in PPM units. These neither represent abnormal display status, nor affect the Product's performance and reliability.
- When viewing the Product in different locations, the user may notice different brightness and display colors. This is a normal phenomenon that belongs to the Product's characteristics and is unrelated to the Product's performance.

Abnormal sound

- Circuit buzzing/display signal noise: The Product may emit a low noise due to high currents when the circuit has high-speed switching. This noise does not affect the Product's performance and reliability.

Specifications

CPU	MideaTek MT6769 Octa-core 2*A75 up to2.0Ghz +6*A55 upto 1.8Ghz
RAM	8GB
Storage	128 GB
OS	Android™ 13
Display	32" Diagonal
Resolution	1080x1920 IPS
Touchscreen	10-Point Capacitive Touchscreen
Aspect Ratio	16:9
Wi-Fi®	WiFi® 5 802.11 a/b/g/n/ac 2.4G + 5G
Bluetooth®	5.0
Brightness	250cd/m² max
Refresh Rate	60Hz
Connections	HDMI® x1 USB-C® x1 USB® 3.0 x1 DC In x1
Gravity Sensor	Supports 90°
Speaker	Built-in 4Ω 3W*2 Speakers
Microphone	Built-in Microphone
Power Adapter	12V 5A
Operating Temperature	32° - 122°F



Need Help?

For customer support regarding your device, please submit a request by emailing **support@dpaudiovideo.zendesk.com**. You will be provided a ticket number regarding your inquiry, which you can refer to when contacting us further.

You may also reach a customer service representative by calling **1-833-909-2673**. We are available Monday - Friday, 9am - 5pm PST, except major holidays. We strongly urge customers to email their inquiry prior to calling, as this will enable us to better assist you.

Please make sure to note the model number and a description of your inquiry.

Thank you for purchasing this product.

Warranty Information

Limited Warranty

OrcaTV (the “Company”) warrants this new product purchased and contained in this package (the “Product”) against defects in material or workmanship for 90 Days (Parts & Labor) and 1 Year (Limited) from the date of delivery. In order for the Company to honor this limited warranty, you must present a valid proof of purchase or delivery, as applicable (e.g. a receipt or delivery notice that also shows purchase) of this Product. **IMPORTANT NOTE:** The customer is encouraged to carefully inspect the Product upon receipt after purchase – especially prior to any assembly, disassembly, mounting, installation or utilizing a third-party product of any kind, such as a decorative or protective cover or case.

This warranty is void if the Company deems, in its discretion, that the Product may have been damaged when the packaging was opened, through modification, improper transport, improper storage, improper use, improper assembly or disassembly, exposure to adverse elements, mounting or other installation, end user negligence, water damage or tampering of the barcode of the Product. This warranty does not apply: (a) to cosmetic damage, including but not limited to screen damage, a cracked display, scratches, dents and broken ports; (b) to damage caused by accident, abuse, misuse, fire, water vapor exposure, excessive exposure to humidity, water or other liquid contact, earthquake or other external cause; (c) to defects caused by normal wear and tear or otherwise due to the normal aging of the product; (d) if any serial number has been removed or defaced from the product; or (e) to damage caused by installation or mounting, assembly or disassembly, use with a third party device, cable, protective or decorative cover/case, component or product that does not meet the Company’s product specifications. This warranty is a limited warranty for repair of the Product or replacement of the Product with a new or refurbished product, subject to the conditions set forth herein.

The Company is not liable for consequential, indirect, incidental, special or punitive damages and the Company’s total liability hereunder shall not exceed an amount greater than the retail purchase price of the product.

Warranty Information

90 Days Parts & Labor

The Company warrants to you as the original retail purchaser of the Product, that should the Product have any warranted defect out of the packaging, under normal conditions, such defect(s) will be repaired or replaced with a new or refurbished part (at the Company's sole discretion) without charge, if the Product is submitted to the Company within a period of ninety (90) calendar days from the date of delivery of the Product. The customer is responsible for transportation cost and insurance charges (if applicable) to the Company and must be able to document a clear proof of delivery to the Company as well as proof of registered receipt by the Company. It is the customer's responsibility to retain original packaging or provide like packaging in order to facilitate the warranty repair or replacement process. The Company will incur no liability whatsoever to provide packaging for warranty items. Should the product be damaged en route to the Company due to insufficient or improper packaging or improper transport, the warranty may be voided. You must receive a return authorization number (RMA#) before sending the unit in for service. This warranty only applies to manufacturer defects, and the Product must be returned to the Company in its original condition.

1 Year Limited Parts

If determined to be covered under warranty, the one (1) year (from delivery) limited parts warranty gives the customer the option to return the Product to the Company for repair or replacement. The customer will be responsible for labor charges. This warranty does not cover any incidental or indirect costs incurred as a result of a defect in the Product, including any consequential, incidental or indirect damages.

Warranty Information

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Mobile device: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.



OrcaTV intends to make this manual accurate and complete. However, OrcaTV makes no claim that the information contained herein covers all details and conditions. The information in this document is subject to change without notice at any time. OrcaTV assumes no responsibility for accuracy or completeness of the information contained in this manual.