

Taylor Sweden

INSTRUCTION MANUAL

COFFEE MAKER



MODEL 300105RUB

PLEASE READ THIS MANUAL CAREFULLY BEFORE OPERATING
THE PRODUCT AND RETAIN IT FOR FUTURE REFERENCE

IMPORTANT SAFETY INSTRUCTIONS =

When using electrical appliances, basic safety precautions should always be followed, including:

1. Read all instructions before operating or using the appliance.
2. Do not touch hot surfaces.
3. To protect against electric shock, do not place cord, plug or appliance in water or any other liquid.
4. Close supervision is necessary whenever the appliance is used near children.
5. Unplug the appliance from the electrical socket when it is not in use and before cleaning. Allow it to cool before putting on or removing parts and before cleaning.
6. Do not operate the appliance if the cord or plug is damaged or after the appliance malfunctions or has been damaged in any way. Return the appliance to our authorised service facility for examination, repair or adjustment.
7. The use of an accessory not intended for use with this appliance may cause injury.
8. Do not use the appliance outdoors.
9. Do not allow the cord to hang over the edge of

a table or counter or come into contact with a hot surface.

10. Do not place the appliance on or near a hot gas or electric burner or oven.
11. Do not move the unit when the appliance is on or when there is hot liquid in the thermal carafe.
12. Ensure the appliance is off before connecting or disconnecting the plug from the electrical socket.
13. Only use the appliance for its intended purpose.
14. **WARNING:** To reduce the risk of fire and electric shock, do not remove the bottom cover of the appliance. There are no user-serviceable parts inside. Repairs should be done by authorised professionals only.
15. Use cold filtered or bottled water for the best results. Warm water or other liquids may damage the appliance.
16. Scalding may occur if the water reservoir cover is lifted or removed during the brewing cycle.
17. If the supply cord is damaged, it must be replaced by the manufacturer or a similarly qualified person to prevent risk to person and property.

18. The glass carafe is designed for use with this appliance only. It must never be used in any other drip-type coffee maker, on a range top or in a microwave.
19. Never clean the inside of the carafe with a hard implement, scouring pad or abrasive cleaning products. Scratches on the glass can eventually cause the glass to break.
20. Never stir the liquid inside the carafe with a spoon or other utensil.
21. Do not use a cracked glass carafe or a carafe with a loose or weakened handle.
22. Never use ice cubes in the carafe or place the carafe in the refrigerator.
23. Never drink directly from the carafe. Always check beverages for broken glass before drinking.
24. This product is not intended for use by children.
25. Do not tilt or overturn the carafe as this may cause spillage.
26. Always carry the carafe by the handle.
27. Never leave an empty carafe on the warming plate as this may cause it to crack.


Short Cord Instructions

This appliance has a three-prong plug. To reduce the risk of electric shock, the

plug is intended to fit into an electric socket in one way only. If the plug does not fit fully into the socket, reverse it. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

A short power cord is provided to reduce the tripping and entanglement risks posed by a longer cord. Extension cords are available and may be used with the appropriate care. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. The appliance is grounded and the extension cord should provide a grounded type 3 wire cord. Arrange the cord so that it does not hang over a countertop or tabletop where it can be pulled on by children or tripped over.

PRODUCT OVERVIEW

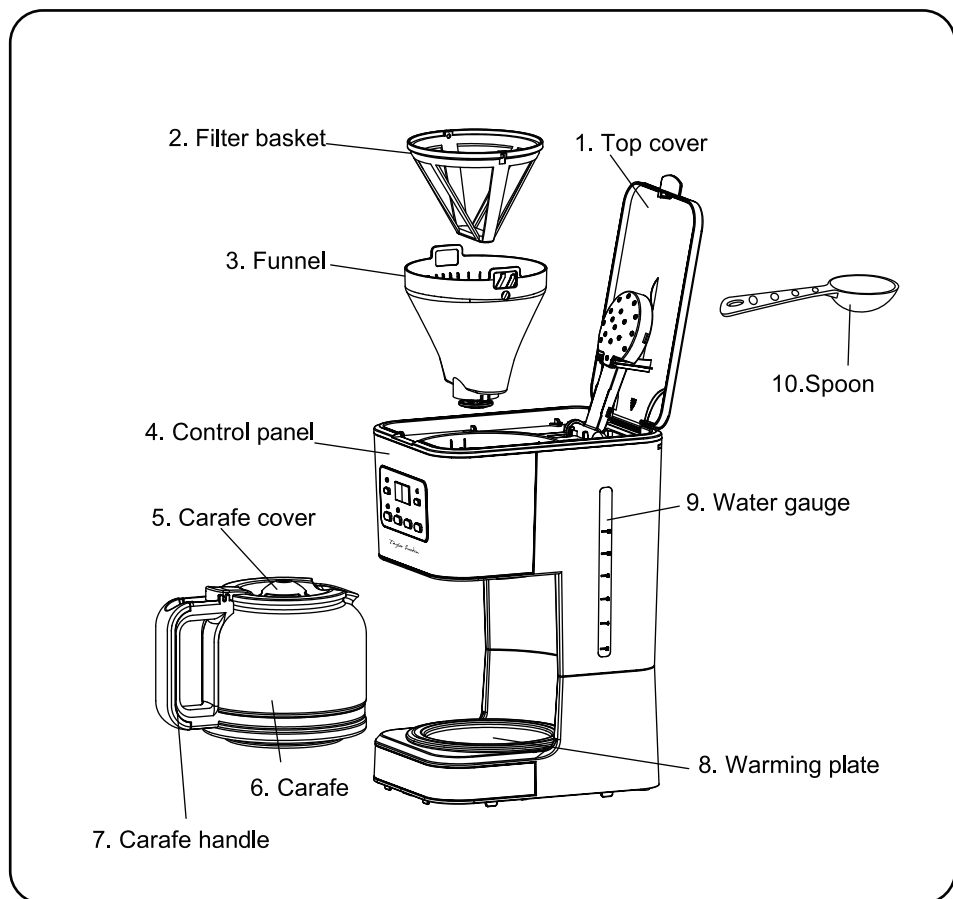


TECHNICAL SPECIFICATIONS

Model No.	300105RUB
Power Supply	220-240V ~ 50-60Hz
Power Consumption	950W
Dimensions	L230*W168*H325mm
Capacity	1.5L

Specifications and design are subject to change without notice.

CONTROL PANEL ILLUSTRATION

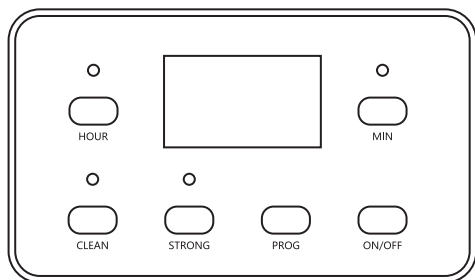

1. ON/OFF button: Press to turn the appliance on and off.
2. PROG button: Press to pre-set the auto-brew time.
3. HOUR button: Press to set the clock and pre-set time (00-23 in one hour increments).
4. MIN button: Press to set the clock and pre-set time (00-59 in one minute increments).
5. STRONG button: Press to lengthen the brewing time and thus alter the strength of the coffee. You can start the STRONG function during the brewing process or start the appliance using the STRONG button.
6. CLEAN button: Press to decalcify your appliance.

BEFORE FIRST USE

1. Before using the appliance for the first time, remove the carafe and filter basket and wash them in warm, soapy water and then rinse and dry thoroughly.
2. Wipe the main body of the appliance with a soft, damp cloth and allow it to dry thoroughly. Do not immerse the main body in water or any other liquid. Never use harsh or abrasive cleaning detergents or scourers to clean the appliance as this could cause damage.
3. Clean your appliance before using it by running two brewing cycles (as

described below) without coffee or a coffee filter.

OPERATING INSTRUCTIONS

1. Place the appliance on a hard, flat surface and connect it to the electricity supply.
2. Open the top cover and pour cold water (preferably bottled or filtered water) into the water chamber. The water level indicator shows the number of cups of coffee. Do not exceed the maximum fill level (12 cups). We do not recommend making fewer than four cups of coffee.
3. Place the carafe with the lid closed in the coffee maker, making sure it is fully in place to activate the PAUSE & SERVE function.

CAUTION: If the carafe is not positioned properly on the warming plate, hot water or hot coffee could spill over.

4. With the top cover fully open, insert the filter basket (or coffee filtering paper) into the funnel.
5. Add coffee using the measuring scoop provided. Use the same coffee: water ratio you use when you prepare ground coffee.
6. Close the top cover and ensure it is closed securely.
7. Then:

Make coffee immediately

- Press the ON/OFF button to immediately begin brewing coffee. The red LED light will flash to indicate the brewing cycle is taking place. The LCD display will read "ON" in the top right-hand corner alongside the coffee cup icon.
- If you want to stop the appliance during the brewing cycle, press the ON/OFF button again.

Pre-set the auto-brew time

- You can pre-set the auto-brew time using the PROG function. First, set the current time. When plugged in, the coffee maker will show "00:00" by default. Use the HOUR and MIN buttons to set the current time.
- Set the desired auto-brew time. Press the PRO button once. The display will show "PROGRAM". Set the desired start time using the HOUR and MIN buttons.
- The appliance will now be in auto-brew mode. A green light will come on and the display will show "AUTO", the current time. Your coffee maker will automatically begin brewing at the pre-set time. When the brew cycle begins, the red light will flash to indicate the coffee maker is in operation and the green light will turn off.
- Press the PRO button for about three seconds to cancel the auto-brew setting.

CAUTION: Never open the top cover during the brewing cycle even if no water is draining from the funnel. Extremely hot water/coffee can spill out from the filter basket and cause injury. If water/coffee is not draining from the filter basket, IMMEDIATELY unplug the appliance and wait 10 minutes before opening the top cover and checking the filter.

NOTE: This appliance has a PAUSE & SERVE function that allows you to pour a cup of coffee at any time before the brewing cycle is complete. If activated, the appliance will stop dripping automatically but for no longer than 30 seconds.

While the PAUSE & SERVE function is a convenient way to pour a cup of coffee mid-cycle, we recommend you wait until the completion of the brewing cycle as the strength of the coffee poured mid-cycle may vary from the finished brew and will affect the coffee's flavour.

8. When the brewing cycle ends and the water level indicates that the water chamber is empty, there will still be hot liquid in the filter basket. Wait a few minutes for the remaining liquid to drip through into the carafe. The coffee maker will then enter warming mode and the red indicator light will remain on for 40 minutes. Always switch the appliance off when the carafe is empty or you no longer want to keep coffee hot.
9. Once the warming time is finished and the coffee grounds have cooled, open the top cover and carefully remove the filter by grasping the handle and lifting it straight up from the funnel compartment. Discard the used coffee grounds.

Note: If two or more pots of coffee are needed, it is recommended that the appliance be allowed to cool for 10 minutes between each pot. The filter should be rinsed after each brewing cycle.

COFFEE-MAKING HINTS AND TIPS

1. Always use fresh, cold water to fill the water chamber.
2. The quantity of ground coffee used can be adapted to taste. Use more or less coffee for a stronger or weaker flavour.
3. If using regular ground coffee, more grounds are needed per cup to achieve the same strength of flavour as finer ground coffee.
4. After using packaged ground coffee, tightly reseal and store it in a cool, dry place.
5. To achieve the best-tasting coffee, use whole coffee beans and finely grind them in a coffee grinder.
6. Do not reuse ground beans as this will greatly reduce the flavour of the coffee.
7. Reheating the resulting coffee is not recommended as this interferes with the taste.

CLEANING AND MAINTENANCE

1. Always unplug the appliance and allow it to cool before cleaning.
2. Wash the carafe, carafe lid and removable filter basket holder in hot, soapy water or the dishwasher (in the top rack). DO NOT place any other parts of the appliance in the dishwasher.
3. Never use harsh or abrasive cleaning products on any part of the appliance. To clean, simply wipe with a soft, damp cloth. The warming plate may be wiped with a clean, damp cloth when necessary. For hard to remove stains, use a plastic mesh pad or cloth dipped in vinegar.

IMPORTANT: Never immerse the warming plate or main body of the appliance in water or any other liquid. Do not try to clean the inside of the water chamber with a cloth as this will leave lint residue that may clog the appliance. Simply rinse with cold water periodically.

4. **DECALCIFYING YOUR COFFEE MAKER (CLEAN function)**

Calcium build-up frequently occurs in drip coffee makers. This build-up is

normal and caused by

minerals commonly found in drinking water. The appliance needs to be cleaned periodically to remove any calcium or mineral deposits. You will know when your unit needs decalcifying when you notice an obvious slowing of the brewing cycle.

We recommend decalcifying your unit with a solution of white vinegar and cold water. A solution of two tablespoons of white vinegar to one carafe of cold water works best. Pour this solution into the water chamber and follow normal operating instructions without a filter in the filter holder. Press the CLEAN button. When the brewing cycle is finished, empty the carafe and rinse with water. Refill the water chamber with cold water and repeat the brewing cycle twice more with water only. This will remove any remaining vinegar solution. We recommend you do this four times annually.

Note: After the appliance is used 60 times, the CLEAN light (green) will flash to remind users to clean the unit. Press the CLEAN button to clean the appliance (in standby mode) or the green light will keep flashing.

DISPOSAL



As a responsible retailer, we care about the environment.

As such, we urge you to follow the correct disposal procedures for the appliance and its packaging materials. This will help conserve natural resources and ensure that these items are recycled in a manner that protects health and the environment.

You must dispose of the appliance and its packaging according to local laws and regulations.

As this appliance contains electronic components, it and its accessories must be disposed of separately from household waste when the appliance reaches the end of its life.

Contact your local authority to learn about your disposal and recycling options.

The appliance should be taken to your local recycling centre. Some collection points accept appliances free of charge.

WARRANTY: 2 YEARS



BENSON IMAGE B.V
WIJNSTRAAT 227, 3311BV,DORDRECHT, THE NETHERLANDS
CIF:NL852321211B01

WWW.TAYLORSWODEN.COM
MADE IN P.R.C