



# Disc Type Anti-freeze tester

## INSTRUCTIONS FOR USE:

Before use, refer to the vehicle manufacturer's or relevant Haynes workshop manuals.

- Carefully remove the radiator cap using a cloth or gloves.
- Run engine to normal temperature if needed to mix fresh coolant.
- Draw fluid to level line.
- If fluid is dirty or rusty, drain then flush and refill radiator - clean tester and redraw fluid to level line.
- Squeeze lightly to remove air bubbles.
- The number of floating discs indicates the strength of anti-freeze in Celsius and Fahrenheit.
- Flush tester with hot soapy water and rinse with clean warm water,

Caution:

- If antifreeze is spilt on paintwork or comes into contact with the skin, wash off immediately. The tester should be washed out after each use.