

POFOTO



PD16

Portable Video Player with ATSC

User Manual

*Please read the manual carefully before you use the product,
and keep the manual well after using.

V2

Warm Tips

Register **2 Years Warranty** For Free
by sending Amazon Order to
help@pofotovip.com



Email us: **help@pofotovip.com**

Customer Service



2 Years Free
Warranty



60 Days Money-Back
Guarantee



Free Accessories
Warranty



Lifetime Customer
Support

Email Us



Customer Support: help@pofotovip.com

Warranty and Support

Warranty

Please send your Amazon Order to **help@pofotovip.com** to **Register 2 Years Warranty** .

WHAT IS COVERED BY THIS WARRANTY?

For help warranties the product hardware problem and accessories contained in the original packaging against manufacturing defects for 2 Years from the date you bought your product.

WHAT IS NOT COVERED BY THIS WARRANTY?

This Warranty does not apply to damage caused by accident, abuse, misuse, fire, liquid contact, earthquake or any other external cause. Especially the cracked/broken screen that is damaged by the external force is Not included in the warranty.

Contents

IMPORTANT SAFEGUARDS	I
USEFUL TIPS	4
PACKAGE CONTENTS	7
BUTTON INTRODUCTION	8
BUTTON AND PORT INTRODUCTION.....	8
REMOTE CONTROL.....	11
MENU OPERATION	14
MODE OPERATIONS.....	19
DVD MODE	19
ATSC MODE.....	21
AV OUT MODE.....	23
USB / CARD MODE	23
MEMORY CARD OPERATION.....	24
HD IN OPERATION	25
FM RADIO.....	26
EASY ACCESS PROGRAMMING	28
SPECIFICATION	30
TROUBLESHOOTING	31
WARRANTY.....	34
Warning	35
Regulatory Notices — FCC Part 15 (Class B)	36

IMPORTANT SAFEGUARDS

- Always follow basic safety precautions when using electrical products.
- Install the device according to the operating instructions.
- Supervision is required when using around children.
- To avoid personal injury, risk of fire or damage to the unit, ensure that the voltage of the main power source matches that of the unit. Disconnect immediately and contact us in case of unusual smell or noise.
- To avoid damage to the cornea, DO NOT look directly or expose yourself to the DVD player laser lens or laser beam.
- To avoid damage to the player lens, ensure that the inserted disc isn't broken, distorted or mended.
- Keep this device away from extremely hot or cold places. Do not expose the DVD player or remote control to excessive and direct heat (sunshine, fire, etc.).
- To prevent the risk of electrocution, do not use in damp environments such as bathtubs, kitchens, swimming pools, and the like.
- Do not touch with wet hands.
- Ensure that the device is not exposed to a risk of splashing and dripping and that no objects filled with liquids is placed near or on the device.
- Do not expose to high humidity, dust or smoke.
- Do not place any naked flame sources, such as lighted candles, on the apparatus.
- Do not place the DVD player near heat sources such as radiators, heaters, stoves, or other apparatus(including amplifiers) that produce heat.
- Do not drop or throw the device, or subject it to strong vibrations or collisions. If the LCD screen were to break, DO NOT touch the screen liquid and contact us immediately. If your skin accidentally touches the LCD screen liquid, run your skin under water for at least 15 mins.
- Disconnect all cables before cleaning.
- Do not use polishing cloth, abstergents, any type of propellant or chemical detergent (alcohol, benzene, etc.) to clean your device.

- The power cord should not be walked on or pinched, particularly where it exits the device or where it connects to the plug.
- Do not block the ventilation holes.
- Unplug the product during lightning storms or when unused for long periods of time.
- Do not operate this device with a damaged cord or plug, or after it malfunctions or has been damaged in any manner.
- Keep magnetic objects, such as speakers, away from the unit.
- Please contact us immediately at help@pofotovip.com.net if any issues arise or if you have any questions.
- To prevent fire or electrocution, DO NOT use the power cord with an extension cord, power cord strip or multi-plug wall mount outlet unless the prongs can be fully inserted into the socket.
- Do not place on any objects that would completely block the ventilation holes and cause the unit to overheat (such as sofa, bed, and other fabrics).
- Store your discs in a cool area to avoid damage from heat.
- Keep batteries away from children and pets.
- Never throw batteries into a fire or expose them to fire or other heat sources.
- Follow the battery safety and usage instructions.
- When using with earphones, ensure that the volume is at its lowest prior to adjusting to your liking to avoid damaging your eardrum. It isn't recommended listening to audio at a high volume level for extended periods of time.
- This set features an optical laser beam system in the CD mechanism designed with built-in safeguards. Do not attempt to disassemble. Exposure to this invisible laser light beam may be harmful to the eye. Use of controls, adjustments or procedures other than those specified herein may result in hazardous laser light beam exposure. This compact disc player should not be adjusted or repaired by anyone except qualified service personnel.

- This user manual is for reference only. No further notice is available for modifications of the information contained therein. Features and design of this device are subject to change without notice.

PLEASE NOTE: POFOTO does not accept liability for interference in the unit caused by means of unauthorized modifications. Tampering with the internal systems by any means will void the warranty.

USEFUL TIPS

1. Battery

Please recharge the Battery for at least 6 hours before the initial use. If you connect this player with AC power, you can use it directly.

Note: The left indicator light will light up red when charging, and the red light will turn off when the battery is fully charged. When the device is turned on, the right indicator light will light up green.

2. Power switch

Slide the Power switch on the right side of the player to "ON" position to turn on the player after connecting the mains power supply. Slide the Power switch on the player to "OFF" position to turn off the player completely. When the DVD player is turned off, the power indicator will go out.


3. LCD Screen

If you find scratches on the screen, just remove the screen protector.



4. Laser Pickup

There is a card inside the player. Before you insert a disc, please remove the card. Please DO NOT touch the laser pick up or other parts with your hand

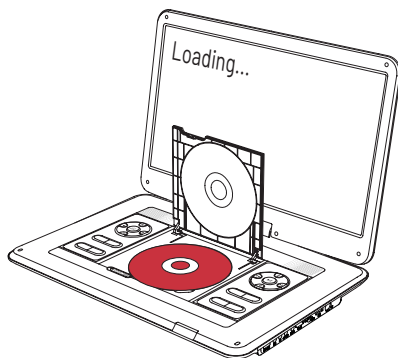

5. Disc Format

- Disc Format supported

File	Supported Format
Compatible Disc	CD, DVD, DVD+R/-R, DVD+RW/-RW, VCD, SVCD, CD-R/RW
Audio	MP3, OGG, MPEG1 Layer2, MPEG1 Layer3, WMA (Bit rates 32-192kbps)
Video	AVI, MPG, VOB, MPEG1, MPEG 2, MPEG 4 (Resolution must be within 720*480)
Picture	JPG

- Disc Format NOT Supported

Blu-ray, HD DVD, Discs recorded in the AVCHD format, DVD-Audio, Version 1.0 of DVD-RW, DVD-ROM, CD-ROM, CDV, CD-G, SACD, Photo CD, DVD-RAM that cannot be removed from their cartridges, 2.6-GB and 5.2-GB DVD-RAM, PAL discs.

- Language Settings

Press key [SET UP] ► [OSD Lang] ►

Change the display language. It is the same procedure for Audio, Subtitles and Menu.

- About the Maintenance


Wipe with a soft, dry cloth to clean this unit.

Use eyeglass cleaner to remove stubborn dirt from the LCD.

Do not use alcohol, paint thinner or benzine to clean it.

Do not press onto the LCD screen or drop the product from a high place.

This unit is not waterproof. To prevent getting wet, do not place any container with liquid near this unit (such as a vase or flower pot) or expose it to dripping, splashing, rain or moisture.

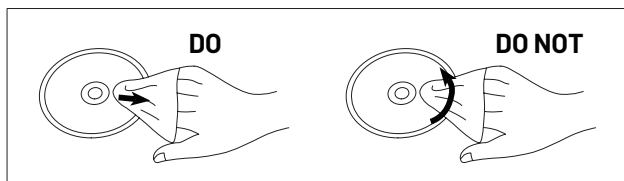

To clean discs, wipe with a damp cloth and then wipe dry.


Do not attach labels or stickers to any discs (This may cause disc warping, making it unusable).

Do not write on the discs with a ball-point pen or any other writing instrument.


To protect discs from scratches and dirt, please return them to their cases or cartridges when they are not in use.

Do not use discs that are badly warped or cracked, or irregularly shaped discs, such as heart shapes.


PACKAGE CONTENTS

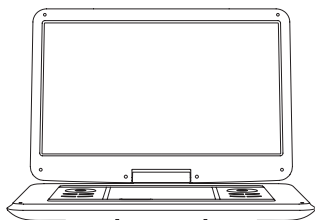


Portable DVD Player

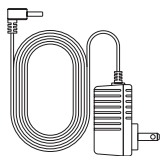


AC Adapter

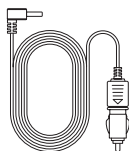


Car Charger

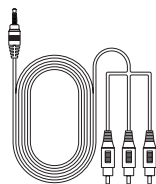


AV Cable

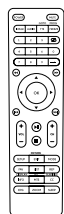

Remote Control

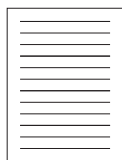

User Manual

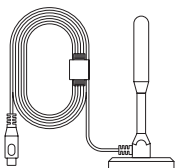


Active TV antenna



TV connector


BUTTON INTRODUCTION

Button and Port Introduction

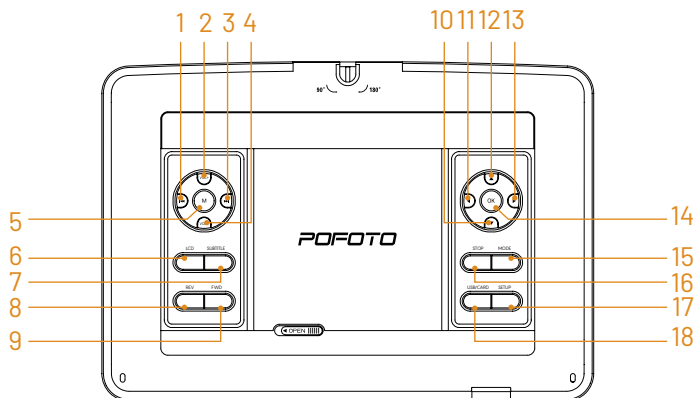


1	Previous ◀◀	Press to return to the previous chapter
2	VOL +	Press to increase volume, maximum to 100
3	NEXT ▶▶	Press to enter to the next chapter
4	VOL -	Press to decrease volume, minimum to 00
5	MENU	Press to view the main menu on a loaded DVD
6	LCD	Turn on/off the LCD screen (For complete power off, slide the side switch from ON to OFF)
7	SUBTITLE	Press to select subtitles in DVD mode
8	REV	Press to select the rewind speed, 2X, 4X, 8X, 20X, press "OK" to cancel
9	FWD	Press to select the fast forward speed, 2X, 4X, 8X, 20X, press "OK" to cancel
10	DOWN	Direction Keys, down; CH-
11	LEFT	Direction Keys, left

12	UP	Direction Keys, up; CH+
13	RIGHT	Direction Keys, right
14	OK	Press once to pause the playing. Press again to resume
15	MODE	Press to select among different input signal sources: ATSC/DVD/CARD/AV/HD IN/USB/FM Radio
16	STOP	Press to suspend current broadcast; stop TV searching
17	SETUP	Press to enter the setup menu, then use the direction keys and OK to set the system menu
18	USB/CARD	Press repeatedly to switch among the input of the Disc, SD card, USB source

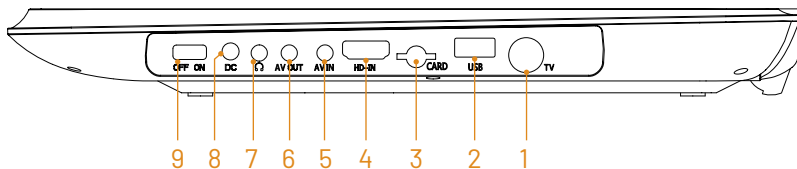

1	TV	To connect to the aerial socket on the wall with the RF coaxial cable. (When using ATSC and FM Radio functions, please connect an antenna)
2	USB	Allows the insertion of a USB storage device to play video, audio, photo and text files (Media mode)
3	CARD	Allows the insertion of a SD storage device to play video, audio, photo and text files
4	HD-IN	To connect to a High-Definition (HD) signal output device, such as a Fire TV Stick
5	AV-IN	AV IN by AV cable
6	AV OUT	AV OUT by AV cable
7	SUBTITLE	Press to select subtitles in DVD mode
8	Headphone out	To connect to the earphones
9	POWER ON/OFF	To turn on the machine and turn the machine off

Remote Control

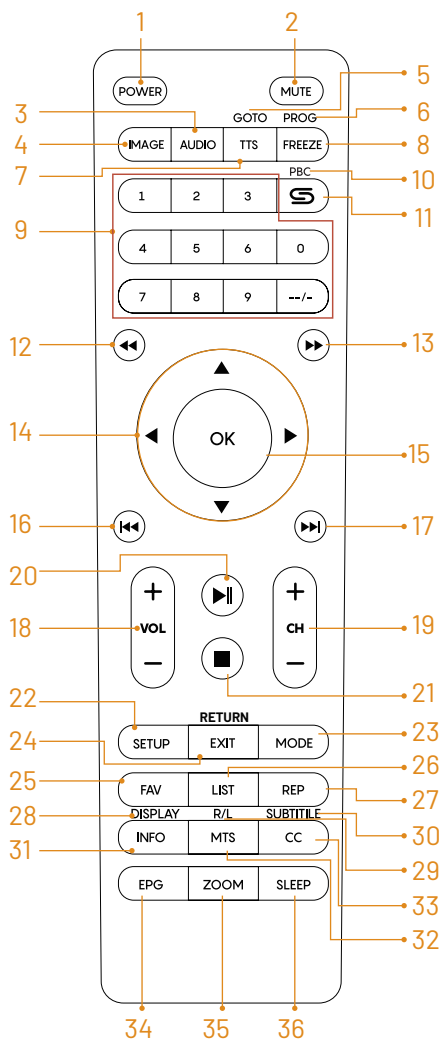

1	Power	Turn on/off standby mode (low-power state) For complete power off, slide the side switch from ON to OFF
2	MUTE	Enable/disable the sound output
3	AUDIO	Change the sound preset mode to standard, music, movie, sports, user mode (expect FM Radio mode) Press to close or open the display screen, and this operation won't take affect on the FM Radio receiving (only in FM Radio mode)
4	IMAGE	Change the picture preset mode (expect FM Radio mode) Press to scan and save the FM frequency channels automatically (only in FM Radio mode)
5	GOTO	Reach the desired title/section, or play time. (only in DVD mode)
6	PROG	Programming the order in which chapters are played
7	TTS (Text to Speech):	Convert machine's language text to speech. (only in ATSC mode)
8	FREEZE	Pause the video. (only in ATSC mode)
9	Channel Keys	Use the number keypad to change the channel
10	PBC	View the main menu on a loaded DVD. (only in DVD mode)
11	 Return	Go to the last viewed channel. (only in ATSC mode)
12		Fast rewind
13		Fast forward
14		Browse up/down/left/right in menu list
15	OK	Confirm a selection
16		Go to the previous track
17		Skip to the next track

18	VOL+/ VOL-	Increase/decrease the volume level
19	CH+/CH-	Change the channel up or down. (only in ATSC mode)
20	▶ 	Start, pause, or resume playback
21	■	Stop playback
22	SETUP	View the setup menu
23	MODE	Change the input source mode (ATSC, DVD, CARD, AV, HD IN, USB, FM Radio)
24	EXIT	Returns to the desktop. (DVD and ATSC mode) Returns to the previous level. (CARD and USB mode)
25	FAV	View the channels in your favorites list. (only in ATSC mode)
26	LIST	View all the available channels. (only in ATSC mode)
27	REP	Play music or video repeatedly
28	DISPLAY	Display the video information such as title, play time (only in DVD mode)
29	R/L	Switch left and right sound track
30	SUBTITLE	Start/disable subtitle (DVD MODE)
31	INFO	View program information (only in ATSC mode)
32	MTS	Change the default audio language (only in ATSC mode)
33	CC	Start/disable subtitle (ATSC mode)
34	EPG	If available, view program guide information from over-the-air ATSC TV broadcasts
35	ZOOM	Change the size of the screen
36	SLEEP	Set a sleep timer (max 240 minutes)

Menu Operation

PICTURE

1. Picture mode: Select a picture preset that looks best (Standard, Soft, user, and Vivid).

User mode:

- Contrast: Press left/right button to adjust 0 to 100
- Brightness: Press left/right button to adjust 0 to 100
- Color: Press left/right button to adjust 0 to 100
- Sharpness: Press left/right button to adjust 0 to 100

2. Color Temperature: Press "OK" then the Left/Right arrow keys to adjust color to Warm, User or Cold.

3. Aspect Ratio: Adjust the screen width by pressing "OK" then UP/DOWN arrows to select 16:9, 4:3, Auto, Panorma, Zoom2, Zoom1.

4. Noise Reduction: Press "OK" then the Left/Right arrow keys to select, "close, low, middle, or high."




SOUND

1. Sound mode: Set a preset equalizer to match the type of program you are watching from; standard, music, movie, sports, and user setting.

2. Balance: Press "OK" then the Left/Right arrow keys to adjust the audio level from -50 to +50.


3. Auto Volume: Press the "OK" key to enter the menu and select Open or Close to set Auto Vol.

4. Surround Mode: Press "OK" then the Up/Down arrow keys to select, "open or close surround."

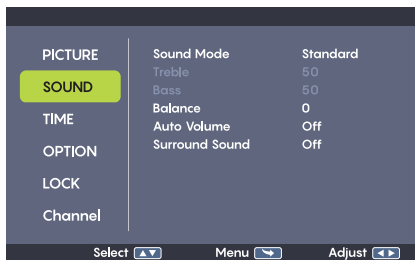


⌚ TIME

- 1. Clock:** Press the "OK" key to enter the menu, then the ▲/▼ to select; then press the ◀/▶ keys to adjust the current date and time.
- 2. Off Time:** Press the "OK" key to enter the menu, then ◀/▶ arrow keys to set a day and time to auto shut off the TV.
- 3. On Time:** Press the "OK" key to enter the menu, then ◀/▶ arrow keys to set a day and time to auto turn on the TV.
- 4. Sleep Timer:** Set a timer. The TV will turn off automatically at the end of the timer.
- 5. Auto Sync:** Set the system time to match the time carried by the antenna signal (cable or air). This option is not adjustable. The TV must be connected to an antenna or cable system for Auto Sync to work.
- 6. Time Zone:** Set the time zone adjustment to match your location.

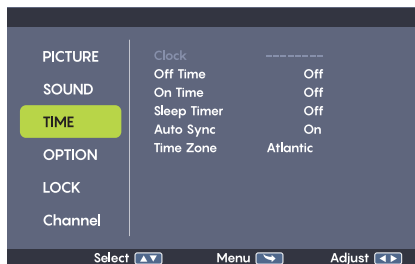


- 1. OSD Language:** Set the display language of the onscreen menus.
- 2. Closed Caption:** When closed caption is available for a TV program, a synchronized transcript of the program can be displayed on screen.
 - Select Off to never display the closed caption information.
 - Select On to always display the closed caption information.
 - Select CC on Mute to only display the closed caption information when MUTE is enabled.
- 3. Setup Wizard:** An on-screen guide that will help you get your TV up and running. Set the menu language, time zone, DST, and time format. Then it scans all the channels to find all stations within broadcast range.
- 4. Restore Factory Default:** Return all options to their factory setting
- 5. TTS (Text to Speech):** Convert machine's language text to speech.

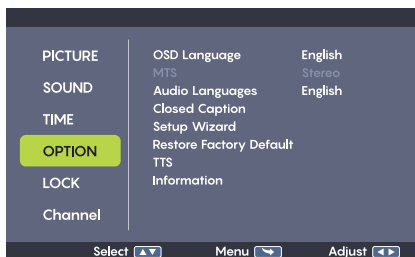

LOCK

Use the remote control to enter the default password (0000) to access the Lock options.

- 1. Lock System:** Enter the default password of (0000) to access the Lock Options to enable or disable.
- 2. Set Password:** Set a new password. When you change the password, write it down and store it in a safe place. Resetting the factory options will not reset the password.
- 3. US:** Prevent programs from being viewed based on US TV or MPAA rating guidelines.
- 4. Canada:** Prevent programs from being viewed based on Canadian English or French guidelines.
- 5. Reset RRT:** Refresh the Rating Region Table if you are having problems with the US or Canada rating guidelines.
- 6. Unrated:** Enable or disable the ability to watch un-rated programs.

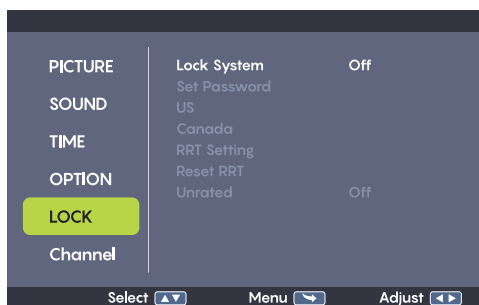

✂ CHANNEL (ONLY IN ATSC MODE)

When using ATSC and FM Radio functions, please connect an antenna.

Press the MENU key on remote to access the menu list and then press the OK key to enter the list.

Press the ▲/▼ and ◀/▶ key to move within the Menu, and then press the OK key to confirm the change. To exit the menu, press the MENU key to back out of all menu options.

1. Air/Cable: Set to Air if you are using an antenna like the ones provided to receive over-the-air TV broadcasts. Set to cable if you are connecting to a Cable TV system.

2. Auto Scan: Automatically finds all TV stations with a signal and saves them to the channel list. Note: use this Auto Scan feature whenever you move the TV to a different geographic location.

3. 5V antenna power: When the machine is connected to the TV antenna, 5V antenna power supply needs to be turned on to power the TV antenna so that it can function properly.

4. Favorite: Add channels to the Favorites list. Press ▲/▼ and ◀/▶ to browse the channel list, then press OK to mark/unmark a channel as a Favorite.

5. Show/Hide: Choose whether a channel will be select-able when tuning with the CH+/CH- keys. Press ▲/▼ and ◀/▶ to browse the channel list, then press OK to mark/unmark a channel as hidden.

You can still tune to a hidden channel directly with the numeric keypad.

6. DTV Signal: Displays the signal quality of the current channel.



MODE OPERATIONS

DVD MODE

DVD Operation

1. Slide the disc button to the left to open the disc door.
2. Place the disc, into the disc compartment and gently close the compartment door.
3. Press the MODE button on the remote, select DVD and press OK to confirm.
4. The system will automatically start to read the disc once in DVD mode.
5. Press the M button to access the DVD title menu (if applicable).
6. Use the playback controls as needed.

Ensure to hit the EXIT button prior to opening the disc compartment if there is already a disc playing to avoid damaging the disc.

Ensure to handle all your discs with caution, grabbing them by the edges to avoid scratching or damaging them and ensure optimal reading capabilities.

DO NOT touch the laser lens at any time; This could result in damage of the player and destroy its reading capabilities.

UNDERSTANDING THE SYSTEM SETUP ON THE DVD MODE

- Press the MENU button to access the menu and customize the setting to you liking Use the up and down arrows to select the desired sub-menu, and press the right arrow to access it.
- Use the left or right arrow to adjust the highlighted setting.
- Use the up or down arrow to go to the next or previous setting you would like to adjust.
- Repeat steps 3 and 4 as needed.
- Press the MENU button to return to the main menu.

SYSTEM SETUP ON DVD MODE

- **TV System:** Select between AUTO/NTSC/PAL when outputting to a bigger television screen with an AV cable.

NTSC format is usually standard in the US, while PAL is standard in Europe .

- **POWER RESUME:** When turn on , the disc will start back to the last playing position after a power outage.
- **TV Type:** Determines the height and width ratio of the image(4:3PS/4:3LB/16:9).
- **Password :** Allows to access the RATING setting. Set a 4 digits password when the padlock is in the open position.Once the padlock is in the closed position, only the previously set password will enable the RATING menu. The password can be changed whenever the padlock is on the open position.
- **Rating:** When selecting a rating, the programs matching the locked rating will not be available for viewing (only applicable to rated programs).

US MPAA RATING GUIDELINES

G: Suitable for all ages audiences

PG: Parental guidance suggested

PG13: Parents strongly cautioned, some material may be inappropriate for children under 13

PG-R: Parental guidance is recommended; some content may be inappropriate for children under 17.

R: Restricted, program contains some adult material inappropriate for audiences under 17

NC-17: Program for audiences 17 and above

ADULT: Unsuitable for audiences under 21

SUBTITLE AND AUDIO LANGUAGE SETTING

- This player features subtitle and audio language selection whenever supported by the DVD.
- Language selection can be made through the MENU menu or directly on the remote. For optimal performance and easier access, we recommend using the remote control whenever the audio and/or subtitle language needs to be changed.

- "MTS" audio language switching and "CC" subtitle language switching in the remote control

SUBTITLE LANGUAGE

- To activate and/or change the subtitle language, press the SUBTITLE button on the remote.
- The selected subtitle language will appear at the top left corner of the screen. Press the SUBTITLE button until the desired language has been selected. The information about the language selected will disappear after a few seconds. The subtitles on the chosen language will appear either at the top or bottom of the screen, according to your DVD factory settings.

AUDIO LANGUAGE

- To change the audio language, press the AUDIO button on the remote control. The selected audio language will appear at the top left corner of the screen. Press the AUDIO button until the desired language has been selected. The information about the language selected will disappear after a few seconds. The audio playback will change to the chosen language.
- If the audio or subtitles language does not match the selected language, this means that the language you have selected is not supported by the DVD. Please ensure that the desired language is supported by the DVD prior to adjusting the language settings.

ATSC MODE

(When using ATSC and FM Radio functions, please connect an antenna)

Search for TV Programs:

1. Press MODE key, select ATSC mode.
2. Press MENU key, select Channel.
3. Select Air/Cable, then go to Auto scan. Choose Yes → start audio search (DTV+ATV).
4. Press CH+/CH- key after auto scan is completed to select the desired program.

5. Favorite: Set your favorite programs from programs list.

ATSC Operation

- Connect the supplied antenna to the antenna socket on the right side of the device. Set the antenna upright.
- Completing Auto Scan "ATSC".
- After all connections have been made properly, switch on the unit. Press "MODE" and select with "CH- /CH+" the function "ATSC". Confirm the selection with "OK". If you are using the function for the first time or restored to factory default, the Setup Wizard will appear on the display.

1. Select the "Menu Language" with "▲," and press "OK" to confirm the language.

2. Choose the "Time Zone" and "Time Format" with "▲▼◀▶" and confirm again with "OK".

3. Choose "Air" to Scan for air channels, press OK to confirm, start scan.

4. When the scan is complete, you are now ready to watch TV.

TV Signal Compatibility (U.S. Only):

1. Supported Frequency Range: 473-863 MHz (UHF channels 14-69)

2. Channel Availability: Actual receivable channels vary by location

3. Check Local Channels: Visit FCC DTV Reception Maps:

www.fcc.gov/media/engineering/dtvmaps

ATTENTION! With this device, only free-to-air programs can be played! If no or only a few stations are found, this can have several causes:

1. Bad reception. Move the antenna or the device to another location and restart the search.

2. The connected antenna is not sufficient for the current reception range of the device.

3. Connect an outdoor or roof antenna to the device.

4. In the current reception area, no ATSC reception is possible.

5. Do not place the device or the antenna in the vicinity of possible sources of interference.


6. e.g.microwaves, refrigerators. etc.

AV OUT MODE

Your player comes equipped with an AV output jack. Use this feature to connect the player's signal to external equipment (e.g. TV, monitor). Please refer to the image as below to connect them.

1. Connect the 3.5mm-RCA Cable to the AV Output on the unit and the audio/ video inputs on the Television (Red to Red, white to white, and Yellow to Yellow).
2. Turn the unit on by switching the Power Button to the On position.
3. Change the television to the correct audio/video input setting.
4. Press [MODE] button on DVD player, choose "AV" mode.

Audio and the video played through the unit will now be seen and heard on the connected television.

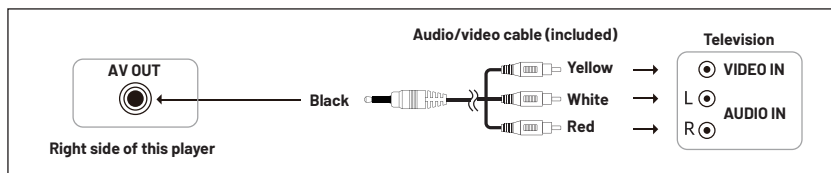


USB / CARD MODE

USB OPERATION

1. Insert the USB flash-drive into the USB port.
2. Press the MODE button, select USB and press OK to confirm. You can also press the USB/CARD button on the unit to directly switch to the USB mode.
3. The USB mode main menu should appear on the screen. If you need to access the main menu, press the EXIT button until the menu screen appears.
4. Select the desired sub-menu (Photo, Music, movie, text) using the left and right arrows.
5. Press OK to confirm.
6. Use the up and down arrows to select the desired file/folder and press OK to confirm. Repeat as needed to locate a specific file.
7. Press the EXIT button to return to the previous level (folder or main menu).

Support format as follow:

Multimedia	Support file
Photo	jpg
Music	MP3
Movie	MPEG, AVC, MP4, H.264, HEVC (H.265) FLV, MKV

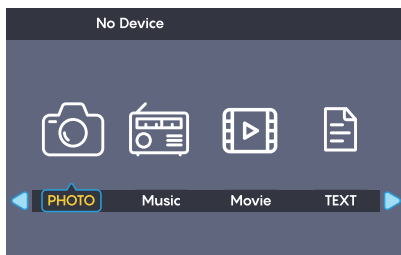

MEMORY CARD OPERATION

1. Insert the memory card into the reader.
2. Press the MODE button, select CARD and press OK to confirm.
3. In CARD mode, the audio files will be reader preferentially. If you want to play your videos or images, Press EXIT button on the unit or the remote to the main menu.
4. Select sub menu (**Video:** MPEG4/VOB/AVI, under 720 * 576, **Audio:** MP3, WMA, Image: JPG. BMP)
5. Use the up and down keys to select the files and press OK to confirm. Repeat as needed to locate a specific files.
6. Press the EXIT button to return to the previous level (folder or main menu).

Important Notices

- **USB Capacity Limit:** Please ensure that the USB device used does not exceed 32GB in capacity.
- **File Format Requirement:** This device supports .MP4 files; however, please convert the file extension to AVI before use to ensure compatibility.

- **Video and Image Resolution:** Please refer to the SPECIFICATION page.

IMAGE PLAYBACK

1. From the USB main menu, select the PHOTO sub-menu and press OK to confirm.
2. Use the forward and backward arrows to select the desired file/folder and press OK to confirm, Repeat as needed to locate a specific file.
3. The operation bar on the bottom, functions can be used to Play/Pause/Repeat/Rotate/Zoom in/Zoom out the screen.
4. Use the ◀/▶ arrows to manually skip between pictures.
5. Choose STOP in the bar or press STOP button on the unit or the remote to the main menu.


HD IN OPERATION

1. Please prepare the HD IN cable.
2. Use an HD IN cable to connect a device with HD IN output function to the DVD player.
3. Press the MODE button, select HD IN and press OK to confirm.


PS: please make sure that your device has the HD IN out function.

Use this feature to connect a Fire TV Stick


1. Plug the Fire TV stick into the HD-IN port

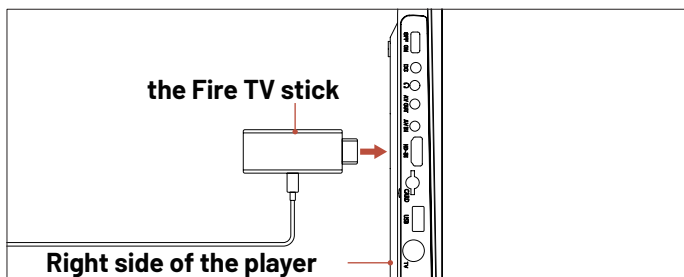

2. Power the Fire TV Stick, You can choose to power it internally, plug into the USB port of DVD player, or externally, plug it into a power bank or a wall outlet.

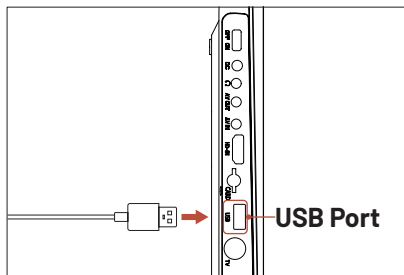

Internal Power Supply

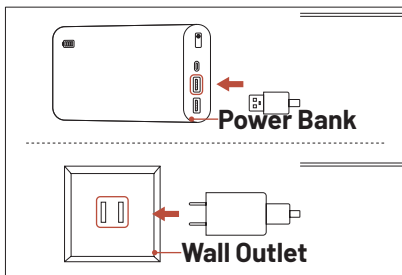

External Power Supply

Note: Using a DVD player for power will accelerate battery usage.

FM RADIO

(When using ATSC and FM Radio functions, please connect an antenna)

FM Radio Receiving

- Press "MODE" to select "FM Radio" mode and then press the red key "IMAGE" on remote to scan and save the FM frequency channels automatically.
- Press ▲/▼ to switch the FM channels.
- Press the green key "AUDIO" on remote to close or open the display screen, and this operation won't take affect on the radio receiving.

No Device		
1	87.00	CH01
2	87.00	CH02
3	87.00	CH03
4	87.00	CH04
5	87.00	CH05
6	87.00	CH06
7	87.00	CH07
8	87.00	CH08
9	87.00	CH09
10	87.00	CH10
● All Tune		● Backlight

 All Tune	Select (IMAGE) Red Button on Remote perform a FM Scan.
 Backlight	Select (Audio) Green Button on Remote to Turn ON/OFF TV backlight.
 OK Choose CH	Press (OK) button on remote to select the Station you want to listen to.
	Use the down arrow key to go next station. press the up arrow key to go to previous station.

Info	
Channel Number:	1
Frequency:	87.00
Name:	CH01

Info		
Channel Number: 1	FM CH number	
Frequency: 87.00	Frequency/ Station	You can change the FM Frequency by pressing the (OK) button on remote. press the (R) arrow key to single digits press the (UP) arrow key for Next auto frequency tuning.
Name: CH01	Channel Name/ Number	Input the preset Channel number to go to your desire CH FM station.

EASY ACCESS PROGRAMMING

The player features a programming function for easy and quick access to specific titles, chapters or files.

DVD TITLE/CHAPTER PROGRAMMING

1. In DVD mode, during DVD playback, press the PROG button on the remote.

T C	T C	T C	T C
1--:--	5--:--	9--:--	13--:--
2--:--	6--:--	10--:--	14--:--
3--:--	7--:--	11--:--	15--:--
4--:--	8--:--	12--:--	16--:--

PLAY CLEAR

2. On the pop-up screen, using the keypad, input the numerical values corresponding to the Title (T) you wish to program for easy access.
3. Press the right arrow to go to the Chapter (C) field. Using the keypad, input the numerical value corresponding to the chapter you wish to program for easy access.
4. Press the up, down, left or right arrows as needed to navigate through the pop-up window and input the desired numerical values corresponding to the title and chapter you wish to program for easy access.
5. When all the desired values have been inputted, use the arrows to navigate and select "PLAY". Once "PLAY" is highlighted, press the OK button on the remote control. If you wish to cancel the programming, select "CLEAR" and press OK.
6. Once programming has been set, choose PLAY and press OK, press the PROG button to exit the programming window.
7. Use ◀ and ▶ buttons to navigate through the programmed titles and chapters.

CARD/CD/DVD FILE PROGRAMMING

1. In CARD or DVD mode, during playback, press the PROG button on the remote.
2. The below pop-up screen will appear on the screen.



3. Use the up or down arrow to select the first file you wish to add to the programmed list. Press OK on the remote to confirm. The selected file will appear in the programming pop-up screen.
4. Repeat for each file you wish to add to the list.
5. Once satisfied, press the left arrow until the first file in the list is highlighted. Press the left arrow once more until ► is highlighted.
6. Press OK on the remote control to confirm programming.
7. Once programming has been set, press the PROG button to exit the programming window .
8. Use the ◀ and ▶ buttons to navigate through the programmed files.
9. To delete the files in the list, press the down arrow to select 🗑 and press OK (do this step after step 5).

You will not be able to program different types off file at once. The programming will only be available for the file type selected in the chosen mode main menu (AUDIO, JPEG, GAME, VIDEO or TXT).

SPECIFICATION

Screen	15.6 inches TFT-LCD Screen
Resolution	1600 x900
Battery	Li-ion 7.4V/5000mAh
Solution	Mstar3553
Lens	Sanyo850
Power Source	AC 100-240V DC 12V 1.5A
Discs & Formats Supported	DVD Formats: DVD, DVD+R, DVD-R, DVD+RW, DVD-RW, CD, CD+R, CD-R, CD+RW ,CD-RW, VCD SVCD (Blu-Ray not Support) Video Formats: VOB, AVI, MPEGI, MPEG2, XVID

Audio Formats	MP3, WMA
Image Formats	JPG, JPEG
USB	MPEG-1/ MPEG2_HD / MPEG2 / MPEG4_HD / MPEG4 / H.264 / MKV / AVI / MOV / VOB / FLV / DAT/ MPEG/ MPG / MP4 / TS / TRP (Max capacity 32G)(Max resolution 1080P)
Memory Card	VOB, AVI, RMVB (Max capacity 32G)(Max resolution 720*576)
Interface	DC, earphone, AV OUT, AV IN, HD IN, CARD, USB, TV

TROUBLESHOOTING

- If you have any questions, please contact our customer service team: **help@pofotovip.com** and we will provide a solution within 24 hours on business days.
- You can also refer to the troubleshooting section below for assistance.

Quick Fix Guide

Problem	First Steps	Advanced Solution
No signal	(1) Check antenna/cable connections (2) Extend antenna fully	(1) Check antenna/cable connections
Loud radio noise	(1) Test different audio mode (2) Do not place the device near interference sources, such as microwave ovens, refrigerators, etc.	(1) Long press the "IMAGE" button to search channels again (2) Choose channels with best signal
Function Failure	Restart your portable DVD player	Restore factory settings

Detailed Trouble Clearing

PROBLEM	SOLUTION
No image and sound	(1) The AC adapter may not be plugged in the way. (2) The unit may not be turned on. (3) The outlet power supply/ voltage may not meet the player power require requirements.
No sound	(1) The volume may be all the way down. (2) Earphones may be plugged into the earphone jack. (3) The mute may be enabled. (4) Verify the audio setting.
Noise and interferences	Remove nearby electronic causing equipment interferences.
Remote control unresponsive	(1) Ensure that the batteries are installed correctly. (2) The batteries may need to be replaced.Ensure to point the remote control to the infrared sensor. (3) You may be further than 19 feet from the player. (4) Remove all obstacles between the remote control and the infrared sensor.
Unresponsive controls	Disconnect the power adapter and reconnect after a few seconds. The unit may not respond due to lightning or static electricity. If you suspect this is the case, disconnect the power adapter until it is safe to reconnect.

No subtitles The language/ subtitle chosen in the menu does not correspond to the one being played by the disc	(1) The subtitles may not have been turned on Subtitles may not be supported by the disc being played. (2) The language/subtitle chosen in the menu may not be supported by the disc being played.
The unit does not recognize my USB drive	(1) The device may not be inserted properly. (2) Even though this unit has been tested with the majority of flash-drives on the market, we cannot guarantee full compatibility with all brands available on the market. (3) In case of a compatibility issue, try using a lower capacity memory card.
The player doesn't read MP4 on the USB or TF card	(1) DVD player supports MP4 files in your USB Drive/TF card, but you need to convert the formats to AVI first. (2) You can download a converter, Format Factory, to complete the conversion, Any questions please contact customer service for more help. (help@pofotovip.com)
The player can't read discs	Please clean the laser and DVDs. Ensure the disc is in the right format for our DVD player. Our player doesn't support Dolby, pirate, burnt and blu-ray DVDs. Find your product order and email to: help@pofotovip.com.

WARRANTY

Our company provides customers with a warrant of 2-YEAR from the date of purchase. Please email us at **help@pofotovip.com** to activate.

Should you experience any problems not covered by the FAQ, please don't hesitate to email us at **help@pofotovip.com**.

WARRANTY EXCLUSION

The warranty will not be valid if:

- 1.** The product has not been installed, operated or maintained in accordance with the manufacturers operating instructions provided with the product.
- 2.** The product has been used for purposes other than its intended function.
- 3.** The product has been used for purposes other than household use.
- 4.** The damage or malfunction of the product is caused by any of following conditions.
 - Incorrect voltage
 - Accidents (including liquid or moisture damage)
 - Misuse or abuse of the product
 - Faulty or improper installation
 - Mains supply problems including power spikes or lightning damage
 - Infestation by insects
 - Tampering or modification of the product by persons other than authorized service person
 - Exposure to abnormally corrosive materials
 - Insertion of foreign objects into the unit
 - Used with accessories not pre-approved.

Warning:

- **English:** Please do not expose the machine to the sun directly or close to the fire, it may change the shape of the machine and the color of the display. It is normal that the machine goes hot after using for a period of time.
- **French:** Veuillez ne pas exposer la machine directement au soleil ou près d'un feu, cela pourrait déformer la machine et altérer la couleur de l'écran. Il est normal que la machine chauffe après une certaine période d'utilisation.
- **German:** Bitte setzen Sie die Maschine nicht direktem Sonnenlicht oder Feuer aus, da dies die Form der Maschine und die Farbe des Displays verändern kann. Es ist normal, dass die Maschine nach einer gewissen Nutzungsdauer heiß wird.
- **Spanish:** Por favor, no exponga la máquina directamente al sol ni cerca del fuego, ya que podría deformarse y cambiar el color de la pantalla. Es normal que la máquina se caliente después de un tiempo de uso.
- **Italian:** Si prega di non esporre la macchina direttamente al sole o vicino al fuoco, potrebbe deformarsi e cambiare il colore del display. È normale che la macchina si riscaldi dopo un periodo di utilizzo.
- **Japanese:** 機械を直射日光や火のそばに置かないでください。機械の形状やディスプレイの色が変わる可能性があります。使用後に機械が熱くなるのは正常です。

Regulatory Notices – FCC Part 15 (Class B)

Note: This product includes a receive-only ATSC tuner and contains no intentional RF transmitters (no Wi-Fi or Bluetooth).

1. FCC Part 15 Two-Condition Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. FCC Part 15 Class B Interference Statement

NOTE: This equipment complies with the FCC Part 15 Class B limits for a digital device, which are designed to provide reasonable protection against harmful interference in a residential environment. This product generates, uses, and can radiate radio frequency (RF) energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

There is no guarantee that interference will not occur in a particular installation. If this device does cause interference to radio or television reception—confirmed by turning the device off and on—try the following:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

3. Modification Warning

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Manufacturer: HERMAN INNOVATIONS TECHNOLOGY CO., LIMITED
Address: UNIT 83, 3/F, YAU LEE CENTRE NO. 45 HOI YUEN ROAD KWUN
TONG KOWLOON. HONG KONG



HUMISS TRADING S.L.
Calle Luis Barriel 12-3A, Madrid, 28018,
Spain
eugpsres@outlook.com
+34613177772



Seo&Mew Accounting Ltd
Electric Avenue Vision 25, London,
Enfield EN3 7DD
info@seamew.net
+447399648608



FR

**Vous êtes responsable de remettre
tous les appareils électriques et
électroniques usagés à des points
de collecte correspondants.**

Pour en savoir plus :
www.quefairedemesdechets.fr



Points de collecte sur www.quefairedemesdechets.fr

Made in China

株式会社神州

POFOTO