



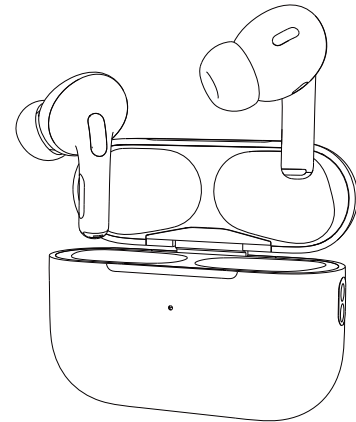

EB-PRO

user manual

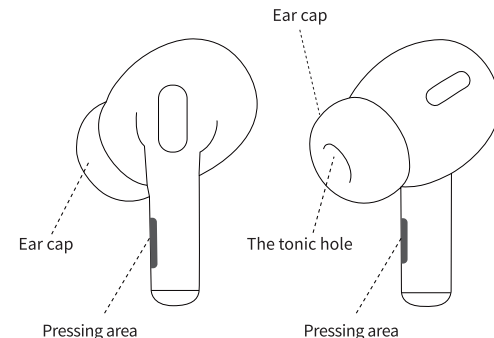

[1]

Earphones parameters

Product name: EB-PRO

Channel: Dual channel

Control mode: Touch mode

Wireless version: V5.3

Support Wireless protocols: A2DP, AVRCP, HSP, HFP

Wireless operating frequency: 2.402GHz - 2.480GHz

Receiving sensitivity: - 88dBm

Wireless distance: 10m (barrier free open space)

Horn power: 3mW

Audio signal to noise ratio: ≥ 90dB

Battery capacity: 3.7V 30mA

Charging time: About 1 hours

Music time: About 4.5 hours (80% volume)

Talk time: About 4.5 hours (80% volume)

Speaker unit: Full frequency speaker Φ 13mm

[2]

Charging box parameters

Battery type: lithium ion polymer battery

Battery capacity: 3.7 V 300mAh

Charging time: about 1.5 hours

Charging times of headphones: about 5 times

Charging input criteria: DC 5V-1A

Charging chamber power indicator: Charging chamber low power orange light, charging chamber high power green light

Close the cover to charge the headset: the green light stays on for 4 seconds and then goes out.

Press the button to pair: Press and hold the button until the green light remains on for 4 seconds and then turns off, indicating successful connection and pairing.

Wired charging of the charging chamber: The charging orange light of the charging chamber is always on for 8 seconds and then goes out.

Wireless charging of the charging chamber: Support Qi wireless charging (the charging orange light of the charging chamber is always on for 8 seconds and then goes out)

Remove/insert the earphones: The green indicator light of the charging box flashes once
Charging of the charging chamber: The charging orange light of the charging chamber is normally on for 8 seconds and then off.

[3]

Clear pairing: Open the charging compartment cover, connect the earphones to the phone, and keep the earphones inside the charging compartment. Long press the button, the white light will flash until the orange light flashes, and a beep will sound. Release the button to clear pairing.

Opening the cover of the earphones when not connected to the phone: If the earphones have not been connected to the phone, the charging case will emit a beep sound every time the cover is opened. After the earphones are connected to the phone, opening the cover will not emit a beep sound effect

Charging compartment: When the charging compartment is plugged in with a charging cable or charged wirelessly, it will emit a "ding" sound effect

Low battery in charging compartment: When the battery level in the charging compartment is low (around 30%), pressing the button will emit a "ding" prompt

Earphones' basic function

Mono earphone: Just take out one single earphone after successfully connection with the phone

Automatic back connection: Just open the cover if your phone haven't deleted the connected earphones' name, it will automatic back connection with your phone

In ear detection: Take out one earphone no matter L or R the music will pause, put on one earphone no matter L or R the music will play (Kindly note that the Android phones without this function by default)

[4]

Operating Instructions

Switch on/off: Open the cover to start the machine and close the cover to shut down the machine

Play/pause: Click the side touch key

Previous song: Triple click the left or right ear touch key

Next song: Double click the left or right ear touch key

Voice assistant: long press the side touch key for 2 seconds on, waiting for the phone to search for connection

Answer/end the call: Click the side touch key

To reject a call: Double click the left or right ear touch key

Volume up and down: Slide down to decrease the volume, and slide up to increase the volume (both ears can be used)

Considerations when connecting wirelessly

1. Please control the distance between the wireless headset and the mobile phone (or other connected equipment) within 1 meter, the closer the better;
2. You can put the earphone in the charging box and open the charging box cover to connect;
3. When the headphones are removed from the charging box and connected,

[5]

make sure that the left and right headphones are connected;
4. Do not close the charging box cover during the connection process;
5. The charging box needs to have enough power. If the headphones cannot be turned on when the cover is opened, put the headphones in the charging box, close the cover of the charging box and plug in the charger to charge for at least one hour;

Precautions

1. Never use corrosive cleaning agents to clean this product;
2. Do not allow this product to heat or come close to fire sources, such as cooking stoves;
3. Do not expose this product to direct sunlight for a long time to avoid high temperature;
4. Do not dispose of this product in fire to avoid explosion;
5. Do not try to disassemble this product to make any modifications, because it does not contain any maintenance components;
6. Do not use this product in the rain;
7. If you do not plan to use this product for a long period of time, please store it in a dry environment. And charge the headset at least once a month to extend the life and avoid extreme temperatures and dust.

[6]

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.