



G300 PRO Wi-Fi TRAIL CAMERA

QUICK GUIDE



Contact customer service for missing accessories.
Reply within 24hrs, resolution within 72hrs.

 
Start in 60 Seconds

- 1 Install AA battery**
 - Insert 8 new AA batteries into the battery pack
 - Install the battery pack into the camera.
- 2 Insert SD Card**
 - Class 10 or higher class up to 512GB max
 - Required before use
- 3 Switch to AIM**
 - Adjust settings
 - (Time / Date / Camera ID)
- 4 Switch to ON**
 - Camera starts monitoring
- 5 Install WiFi Antenna**
 - Attach the Wi-Fi antenna to the camera



Trail Camera Quick Guide

Buttons & Modes

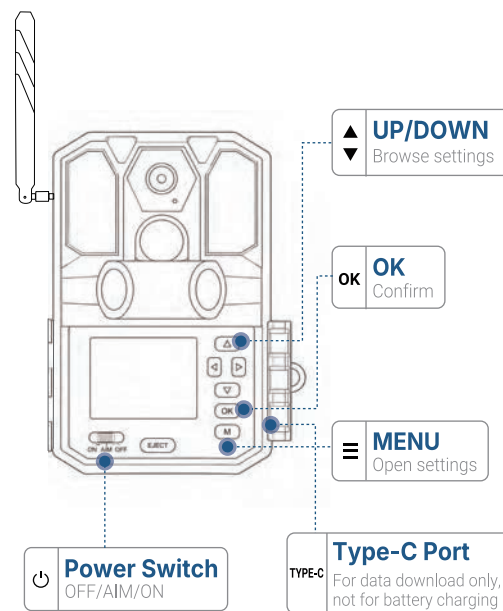

Camera Modes



Mount Your Camera

1 Mount

3.3 - 4.5 ft high

2 Aim toward

Target area

3 Avoid

• Direct sunlight

• Moving branches

• Heat sources

Wi-Fi Connection

1. Download the Wosports app & sign up for an account.



 
2. Switch the camera to **AIM mode**, press and hold the **M** button for 3 seconds to show the QR code



3. Click the "+" button and enter the AP Networking interface, scan the QR code on the camera's screen by the phone



4. After scan the QR code successfully, switch the camera to **ON mode**, click the device on the App and join the device's WiFi network

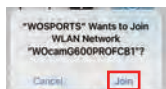

Quick Fix

Camera fails to power on



Check batteries direction Use new AA batteries

Camera fails to capture photos



Check SD card Make sure the switch is in ON mode

False trigger



Avoid moving branches Avoid heat sources

Night-Time images too dark

 


Replace batteries Move target closer

Need Help?



Scan to activate 2-year warranty

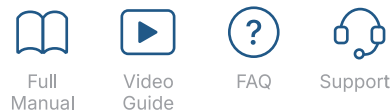

Website: www.LynHawk.net
support@lynhawk.net



FCC Caution:

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
 - Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
- If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
 - To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance 20cm between the radiator and your body: Use only the supplied antenna.

Built for the outdoors.