

# Jartoo

**Jartoo**

www.jartoo.com

**Email:** support@jartoo.com

**Manufacturer Information:**

Shenzhen Umbra Technology Co., Ltd.  
Room 702, Building 11, Tianan Yungu Industrial Park,  
Longgang District, Shenzhen, China

**US Importer:** Arknology LLC

**Address:** 30 DONOVAN IRVINE, CA, USA

**UK Importer:** CET PRODUCT SERVICE LTD. (For authorities only)

 
**Address:** Beacon House Stokenchurch Business Park, Ibstone Rd,  
Stokenchurch High Wycombe HP14 3FE, UK

**Email:** info@cetproduct.com

**EC Importer:** CET PRODUCT SERVICE SP. Z O.O.(For authorities only)

**Address:** Ul. Długa 33 102 Zgierz 95 100, Poland

**Email:** info@cetproduct.com

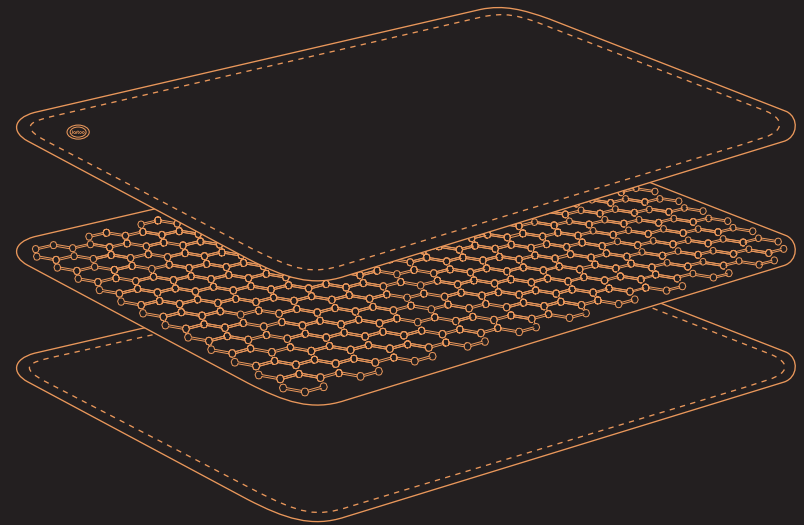

Heated Blanket FCC ID:2BF7YJT-HTB002 IC ID:33201-HTB002 HVIN:JTHTB002  
Remote Control FCC ID:2BF7YJT-HTC001 IC ID:33201-HTC001 HVIN:JTHTC001



**WARNING:**

Cancer and Reproductive Harm  
- www.P65Warnings.ca.gov.

User Manual  
Model: JT-HTB002  
Heated Blanket



Made in China

## PREFACE

Thank you for purchasing JARTOO products. For optimum experience, please read this manual carefully before using.

## PRECAUTIONS FOR USE

- Inspect the power cord and adapter before use. If damaged, do not use and contact customer support at [support@jartoo.com](mailto:support@jartoo.com).
- Use only the adapter provided with the heated blanket. Do not substitute with other adapters.
- Please cut off the power and unplug the adapter before washing.
- Keep the adapter away from water. Do not wash it.
- Ensure the blanket is completely dry before use for optimal performance.
- Do not use it together with other heating devices to avoid burns by overheating.
- Unplug when not in use to save energy.
- Machine washable, but do not dry cleaning.
- Replace the heated blanket every 5 to 6 years for best results.

 
## CONTENTS

<b>PART 1 PRODUCT DESCRIPTION</b>	01
Package Contents	01
Jartoo Heated Blanket Diagram	01
Remote Control Diagram	02
Remote Control Status Indications	02
<b>PART 2 INSTRUCTIONS FOR USE</b>	03
Getting Started	03
Pairing the Remote Control with the Heated Blanket	03
Power ON/OFF	04
Temperature Regulation	05
Timing Adjustment	06
Turn ON/OFF Indicator Light	06
Memory Function	07
Automatic Sleep Protection	07
Washing Instructions	07
Storage Instructions	08
<b>PART 3 SPECIFICATIONS</b>	09
<b>PART 4 TROUBLESHOOTING</b>	09
FAQ	09
<b>PART 5 WARRANTY &amp; SERVICE</b>	10
<b>Part 6 FCC and IC Description</b>	11

# PART 1 PRODUCT DESCRIPTION


## Package Contents

This product contains the following items:

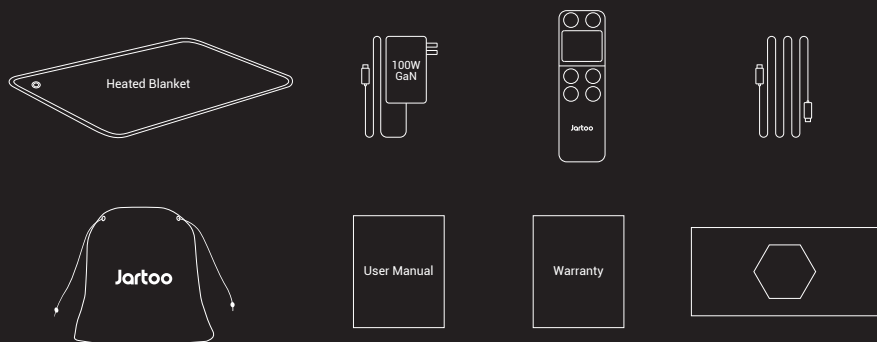


- Heated Blanket ×1
- 100W GaN Adapter ×1
- Remote Control ×1
- Remote Control Charging Cable ×1
- Storage Bag ×1
- User Manual ×1
- Warranty Card ×1
- Apalos FlexHT Heating Technology Introduction Card ×1

## Remote Control Diagram

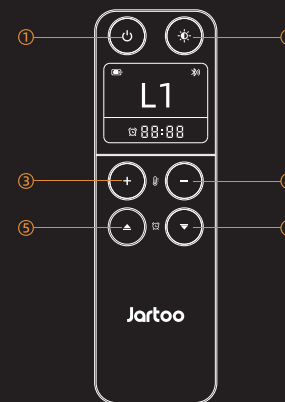 


- ① Power Switch
- ② Indicator Light Switch
- ③ Temperature "+"
- ④ Temperature "-"
- ⑤ Timer "+"
- ⑥ Timer "-"

## Jartoo Heated Blanket Diagram

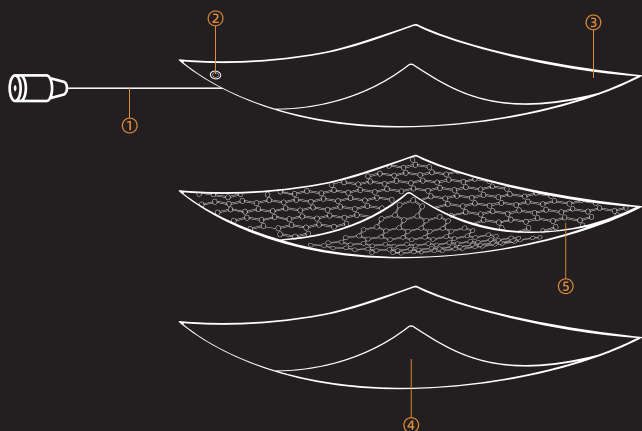 

- ① Adapter Connection Port (hidden behind zipper)
- ② Power Button
- ③ Side A: Velvet Fabric
- ④ Side B: Velvet Fabric
- ⑤ Apalos FlexHT Heating Element


## Remote Control Status Indications

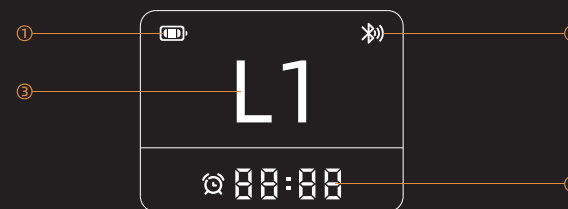 

- ① Battery Indicator
- ② Bluetooth Connection Icon
- ③ Temperature Level
- ④ Timer Countdown

## PART 2 INSTRUCTION FOR USE
 
### Getting Started

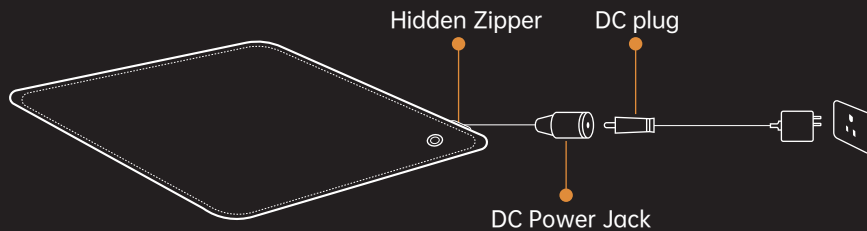


1. Open the hidden zipper to locate the DC jack port of the heating blanket;
2. Plug the DC connector into the DC power jack;
3. Connect the adapter to a 100V to 240V AC power source.

### Safety Precautions

 1. If the indicator light flashes purple after powering on, disconnect the power immediately due to a malfunction.
2. Keep the power cord away from children to prevent electric shock or injury.
3. Do not use damaged wires, which may cause overheating or fire.
4. Never try to plug in the product when it is damp or wet to avoid electrical short circuits.
5. Ensure the power plug is fully inserted into the outlet to prevent electric shock, short circuits, smoke, or fire.
6. If you notice any issues or malfunctions, stop using the product immediately and unplug it.
7. Unplug the power cord when not in use to prevent potential hazards from circuit aging, short circuits, or leakage in damp environments.

### Pairing the Remote Control with the Heated Blanket

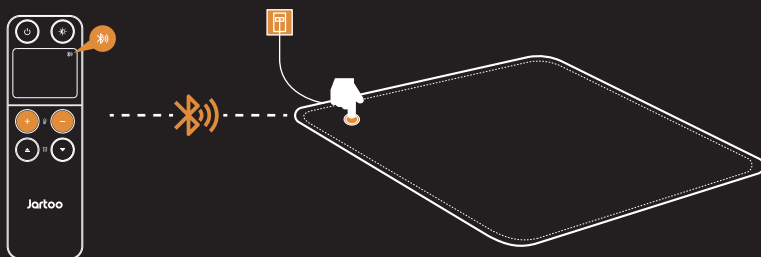

By default, the remote control has been paired with the heated blanket when manufactured.

To re-pair the remote control with the heated blanket, please follow these steps:

1. Connect the power supply and ensure the heated blanket is plugged in standby mode;
2. Press and hold the "+" and "-" temperature buttons on the remote control simultaneously for 5 seconds;
3. Wait for the heated blanket's indicator light to start flashing blue;
4. Press the button on the heated blanket;
5. The Bluetooth icon will appear on the remote control's screen, indicating successful pairing.
6. If the Bluetooth icon is not displayed, the pairing has failed. You can try pairing again or contact customer support at [support@jartoo.com](mailto:support@jartoo.com).

### Power ON/OFF



#### Method 1: Using the Remote Control

**Power On:** Press the power button on the remote control. The remote will display "L1" and the indicator light on the heated blanket will turn blue.

**Power Off:** Press the power button on the remote control again. The indicator light will turn off.

#### Method 2: Using the Heated Blanket Button

**Power On:** Press the button on the heated blanket. The indicator light will turn blue.


**Power Off:** Press and hold the button on the heated blanket for 3 seconds. The indicator light will turn off.

#### Note:

The remote control is in sleep mode by default. Press any button to wake it up before operating.

## Temperature Regulation

 **Method 1:** Adjust the temperature with the “+” and “-” buttons on the remote control;

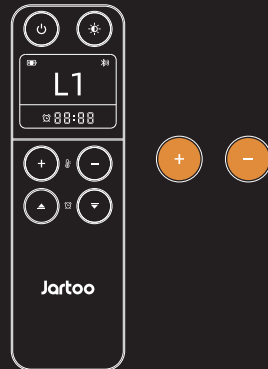

**Method 2:** Adjust the temperature by pressing the button on the blanket.



Level 1 is 95°F (35°C), the remote control displays L1, and the indicator light is blue;  
Level 2 is 102°F (39°C), the remote control displays L2, and the indicator light is green;  
Level 3 is 110°F (43°C), the remote control displays L3, and the indicator light is purple;  
Level 4 is 117°F (47°C), the remote control displays L4, and the indicator light is cyan;  
Level 5 is 124°F (51°C), the remote control displays L5, and the indicator light is orange;  
Level 6 is 131°F (55°C), the remote control displays L6, and the indicator light is red.

The temperature settings cycle through from Level 1 to Level 6 and back to Level 1.

## Timing Adjustment

Use the “▲” and “▼” buttons on the remote control to set the timer.



 
This function helps you automatically control the operating time of the heated blanket. The blanket will automatically shut off when the set time is reached. You can set the timer for 2, 4, 6, 8, or 10 hours.

## Turn ON/OFF Indicator Light

Turn Off: Press the button to turn off the indicator light on the blanket if it's on;

Turn On: Press the button to turn on the indicator light on the blanket if it's off.

This feature helps reduce the disturbance of lighting when you are resting.



### Note:

1. The indicator light can only be turned on using the remote control when it is off.
2. Pressing the button on the blanket will briefly turn the light on during operation, but it will turn off again afterward.
3. Adjusting temperature or timer settings with the remote will not turn on the indicator light if it is off.

## Memory Function

Our heated blanket retains your last set temperature level. Each time you turn it on again, it will return to the last used setting.

**Example:** If the blanket was on Level 3 when you turned it off, it will start on Level 3 when you turn it back on.

**Note:** The memory function will be reset if the power is interrupted.



Level 3



Turn Off



Turned On  
Level 3

## Automatic Sleep Protection

 
 
1. The heated blanket will enter sleep mode after two hours of inactivity.
2. If the blanket detects use while in sleep mode, it will immediately exit sleep mode and resume normal operation.

**Note:**

This feature will not activate if a timer shutdown is set.

## Washing Instructions

1. Disconnect power.
2. Unplug the adapter and place the blanket power cable into the storage bag and zip it up.
3. Wash using a standard machine wash, then hang to dry or use a dryer.

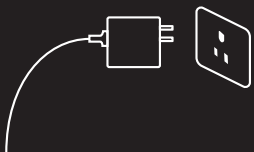

## Storage Instructions



1. Turn off the power and let the heated blanket cool down before storing.

2. Fully charge the remote control to ensure it's ready for future use.

 


1. Heated blanket ×1
2. Adapter ×1
3. Manual ×1
4. Remote control ×1



3. Place the blanket and its accessories in the provided storage bag for safekeeping.

4. Suggestion: Fold the heated blanket and store it without placing heavy items on top.

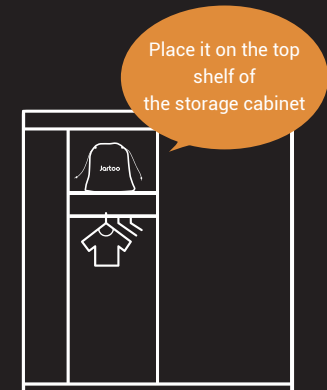

## PART 3 SPECIFICATIONS

Product Name	Heated blanket					
Model Number	JT-HTB002					
Remote Control Number	JT-HTC001					
Size	60×50 inches					
Heating Technology	Apalos FlexHT					
Rated Voltage	DC 24V					
Rated Power	70W					
Temperature Levels	Level 1	Level 2	Level 3	Level 4	Level 5	Level 6
Temperature	95°F	102°F	110°F	117°F	124°F	131°F
Control Button Indicator Color	Blue	Green	Purple	Cyan	Orange	Red

## PART 4 TROUBLESHOOTING

### FAQ

**Q:** Static electricity can be felt during use?

**A:** Static electricity can build up in dry winter conditions. Using a fabric softener during washing can help reduce static.

**Q:** The heated blanket emit radiation?

**A:** The heated blanket has a power frequency of 50HZ. According to IEC62233 "House hold appliances and similar apparatus. Measurement methods for electromagnetic fields with regard to human exposure," it is safe when the radiation amount is lower than 100 r.m.s; the value of the heated blanket measured by the authoritative testing organization SGS is 1.09 r.m.s (including the self-contained radiation value in the air), which is far lower than the safety limit.

**Q:** Can it be dried by a dryer?

**A:** Yes. However, to extend its lifespan, the drying temperature is recommended to be lower than 149°F.

**Q:** Can the heated blanket be used with other heaters?

**A:** No. Using other heaters at the same time may cause overly high temperature and pose a risk of overheating.

If the above solutions do not resolve the issue, please contact our customer service at support@jartoo.com for further assistance and solutions.

## PART 5 WARRANTY & SERVICE

### Customer Care:

1-year Limited Warranty for Jartoo products purchased from us covers defects in materials or workmanship under normal, non-commercial use.

### Warranty Coverage:

1. All labor and parts are included at no extra cost to ensure proper machine operation during the warranty period.
2. We repair or replace Jartoo heated products found defective within 1 year of purchase or delivery.
3. Covered components: controller, wiring, remote control, and the blanket.

### Exclusions:

1. Damage from abuse, accidents, or failure to follow care instructions.
2. Improper voltage /current usage or unauthorized modifications/repairs.
3. Attempts to adjust electrical/mechanical functions.

### Warranty Service:

1. Contact support@jartoo.com or visit www.jartoo.com for queries.
2. Provide model name/number, purchase date, order number, and repair request.
3. Find model number on the care label or user manual cover.
4. Keep the purchase receipt safe for necessary information; warranty service doesn't extend its term.

## PART 6 FCC AND IC DESCRIPTION

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes :

- (1) L' appareil ne doit pas produire de brouillage;
- (2) L' appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d' en compromettre le fonctionnement.