


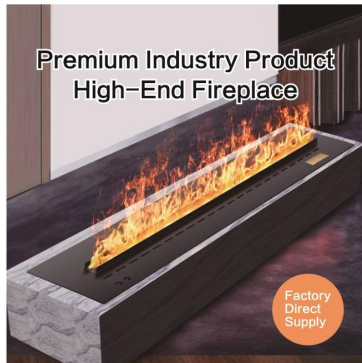

3D Mist Fireplace User Manual

Installation Instructions:

1. The 3D mist fireplace shall be installed horizontally on a stable, immovable surface with minimal air convection at the fixed location.
2. When cutting the opening for the fireplace decorative stand, a ventilation vent is recommended if conditions permit to enhance the flame effect.
3. The atomized 3D simulated flame is susceptible to external influences. It takes slightly longer for the flame to form when starting up in winter. Air currents at the installation site will also affect the flame's color and floating shape.
4. Caution when adding water: Do not spill water outside the water filling port, and strictly avoid water flowing into the interior of the product to prevent damage to internal electrical components. A full tank of water can generally be used for 8-10 hours.
5. During water refilling, please disconnect the water pipe once you hear the voice prompt indicating that refilling is complete. Failure to do so will result in overfilling, which will prevent the atomization function from working properly.
6. If the machine needs to be moved, remember to drain all water from the water tank, cut off the power supply, and then move it.
7. The 3D mist fireplace is placed flat inside the opening of the decorative stand. A three-hole socket must be reserved on the right side of the bottom of the opening. (Note: The power socket shall be flush with the inner groove of the opening during installation.)
8. This product is equipped with a built-in filtration function, so it can be used with confidence (filtered tap water or purified water can also be used, which is better for the service life of the whole machine).

Water Filling and Draining Instructions

Automatic Water Absorption Operation:


First, connect the power supply, then take the water hose out of the packaging bag. Insert one end of the hose fully into the "Automatic Water Inlet" (ensure a tight fit to prevent water leakage), and place the other end into a water bucket. Press the "Power On" button. The unit will prompt a low water level alert and then initiate automatic water absorption. The water absorption process takes approximately 5-6 minutes. During this period, the fireplace will first preheat for 1 minute, after which the simulated flame will appear. The water absorption function will stop automatically once the tank is full, and the control panel will display the normal operating status. Disconnect the water hose and store it properly. Finally, adjust the flame settings between levels 1-8 to check the flame effect.

Automatic Water Drainage Operation:

First, insert the water hose into the "Automatic Water Outlet". Then turn off the fireplace's power switch. Note: The drainage function is only activated in standby mode. Aim the remote control at the touch panel and press and hold the "Drainage Button" to start draining water.

Concise & Smart Remote Control

Crafted from the same remote control material as Xiaomi products, with an upgraded surface for a more comfortable grip.

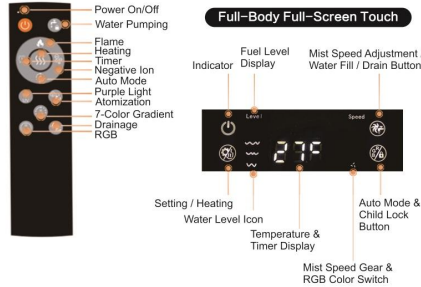

Functions of the Four Buttons on the Display Screen

Power Button: After a valid press, the main control board operates according to the default program.

Mist Speed Adjustment / Water Refill / Drainage Button: A short press enters mist speed adjustment mode, with 8 adjustable gears in total. A long press when the device is powered on initiates water refilling; a long press when the device is powered off initiates drainage.

Child Lock / RGB Color Switch Button: A short press switches the light color; a long press activates the child lock function.

Setting / Heating Button: A long press enters the temperature setting mode; a short press adjusts the heating level.

After-Sales Service Guide

- Thank you sincerely for choosing our product. As our customer, you are entitled to the premium services provided by our company. If the product malfunctions under normal use within one year from the date of purchase due to non-human factors, please contact us directly with your warranty card. We will provide free repair services for you. Do not disassemble or repair the product by yourself.
- For problems occurring beyond the warranty period or caused by improper use, our company will still be responsible for the repair, with only the necessary labor and material costs charged.

Warranty Card

Customer Name	Customer Phone Number
Customer Address	
Date of Purchase	Service Hotline
Distributor	
Repair Date	Service Technician
Cause of Malfunction	
Repair Record:	

Accessory Kit:

Remote Control, Product User Manual, Water Pipe, Certificate of Conformity

Voice Control Command Words

NO.	Command Words	Feedback Prompt Tone
1	Fireplace classmate	Hello, I'm here
2	Turn on fireplace	Fireplace has been turned on
3	switch off fireplace	Fireplace has been turned off.
4	Automatic watering	Water has been added automatically for you
5	Bigger flame Much bigger flame	Flame level one、two、three、four、five、six
6	Smaller flame	Flame level six、five、four、three、two、one
7	Higher combustion speed Much higher combustion speed	Combustion speed level one、two、three、four、five、six、seven、eight
8	Lower combustion speed	Combustion speed leveight、seven、six、five、four、three、two、one
9	Increase timing	Timing has been increased for you
10	Reduce timing	Timing has been reduced for you
11	Turn on auto mode	Auto mode has been turned on
12	switch off auto mode	Auto mode has been turned off
13	Turn on atomization function Start atomization function	Atomization function has been started
14	switch off atomization function	Atomization function has been turned off
15	Change the color Change the color again	Color changed successfully
16	Brighter light	Brightness level one、two、three、four
17	Dim the light	Brightness level four、three、two、one
18	Automatic drainage	The motor is pumping water
19	Stop	Drainage has stopped Water addition has stopped
20	Turn on ultraviolet disinfection	Disinfection mode has been turned on
21	switch off ultraviolet disinfection	Disinfection mode has been turned off
22	Turn on heating Set heating to level one	Heating has been turned on; please do not cover the air outlet
23	Set heating to the maximum Set heating to level two	Heating has been set to the maximum level
24	switch off heating	Heating has been turned off
25	Turn on gradient	Gradient has been turned on
26	switch off gradient	Gradient has been turned off
27	Turn on negative ions	Negative ions have been turned on
28	switch off negative ions	Negative ions have been turned off
29	Turn on aromatherapy function Turn on aromatherapy	Aromatherapy function has been turned on

30	switch off aromatherapy function switch off aromatherapy	Aromatherapy function has been turned off
31	Turn on cleaning function	The fireplace has activated its automatic cycle cleaning function. Please be patient and wait. During the cleaning process, please ensure that the water supply and drainage are unobstructed, thank you.
32	switch off cleaning function	Cleaning function has been turned off
33	Turn on firewood sound	Firewood sound has been turned on
34	switch off firewood sound	Firewood sound has been turned off
35	Turn on audio (External Speaker)	Audio has been turned on for you
36	switch off audio (External Speaker)	Audio has been turned off for you
37	switch off lights for heating	Okay, light haacs been turned off
38	Turn on light	Light has been turned on
39	Turn up the volume	Sound has been turned up
40	Turn down the volume	Sound has been turned down
41	Raise temperature	Temperature has been raised for you
42	Lower temperature	Temperature has been lowered for you
43	Child lock setting	Child lock has been set
44	Child lock release	Child lock has been released
45	Wireless pairing	connected successfully
46	Remote control pairing	Start pairing/ Paired successfully
47	AI Intelligence (AI Model Only)	It is equipped with AI functions such as music playback, interactive chatting, story - telling and weather forecast inquiry.

Specification Table

Material: Stainless Steel Body
Function: Decoration / Flame Viewing
Type: Smart Version
Size: Standard Size / Custom Size
Applications: Home, KTV, Bar, Reception Desk, Office, etc.

When the mist fireplace malfunctions, the following situations need to be ruled out first:

- Check if the mist fireplace is powered on properly.
- Check if there is water in the water tank; excessively high or low water levels will affect the normal operation of the atomizer.
- Check if the internal components of the fireplace (wiring assembly, light strips, water pump, fan) are functioning normally.
- Check for incorrect manual operation, such as water spilling into the product during refilling.
- Please read the product user manual carefully.

If the above steps do not resolve your issue, please contact customer service.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.