

SENCOR®

Let's live!

**BLUETOOTH SPEAKER
SSS 1200N**

**USER'S MANUAL
EN**



Table of Contents

Safety Instructions.....	2
Supply content	4
Description of the BT speaker	4
Putting into operation	5
LED indicator.....	5
Pairing devices via Bluetooth	5
TWS function.....	6
NFC feature	6
Audio AUX IN	6
Controlling the speaker during track playback.....	7
Charging.....	7
Ingression protection (IPX4)	8
Technical specifications.....	9
INSTRUCTIONS AND INFORMATION ABOUT THE DISPOSAL OF DISCARDED PACKAGE.....	10
DISPOSAL OF DISCARDED ELECTRICAL AND ELECTRONIC EQUIPMENT	10

Safety Instructions

This product has been designed with the utmost safety in mind. However, incorrect use may lead to electric shock or fire. This is why users should observe the following instructions when using this device.

This device uses a semiconductor unit and contains no user serviceable parts. Do not disassemble this device, otherwise you are exposed to the risk of electric shock. If any damage to this product occurs, please have this product repaired by a qualified service technician.

Power source

Power supply of this unit must be match the serial plate data.

Heat source

Keep this unit out of heat sources like stove or direct sunlight.

Cleaning

Prior to cleaning, please disconnect power first. For cleaning, don't use liquid detergents or caustic liquids - just clean the unit with a soft cloth.

Heavy objects

Do not place heavy objects on the unit, otherwise damage might occur.

Connecting other devices

Before connecting other devices to this unit, please make sure to disconnect power. Otherwise damage to the unit or personal injury might occur.

Faults to be repaired

If any of the following problems occurs, please disconnect power to the unit and contact a qualified service technician.

- A. Power cord or plug is damaged.
- B. Liquids or other foreign objects have penetrated inside the product.
- C. If the unit does not work even if it's being operated according to the instructions, don't press any buttons other than those described in these instructions. Otherwise, damage to this unit may occur along with a more demanding repair.
- D. This unit has fallen on the ground from a big height.
- E. Burns can be smelled from the product inside.

Maintenance

If you don't have enough technical knowledge necessary to maintain this unit, don't attempt to repair it by yourself. By removing cover, you are exposed to a risk of electric shock. If needed, please contact a qualified service technician.

Replacement of parts

If you need to replace any part of this unit, ask your service technician to make a replacement for equal spare part models. If other spare part models are used for replacement, serious damage, electric shock or shortening the unit's lifetime may occur.


Safety check

When done with the maintenance, ask your service technician to perform an on-site safety check to make sure that the unit's operation is safe.

Note:


Before using this product, read these instructions carefully and keep it well for future use.

Supply content

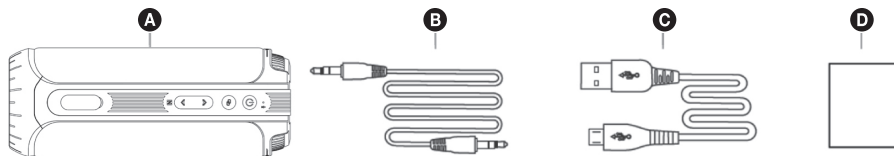

- A** BT speaker
- B** Audio jack 3.5 mm
- C** Micro USB charging cable
- D** User's manual

Description of the BT speaker

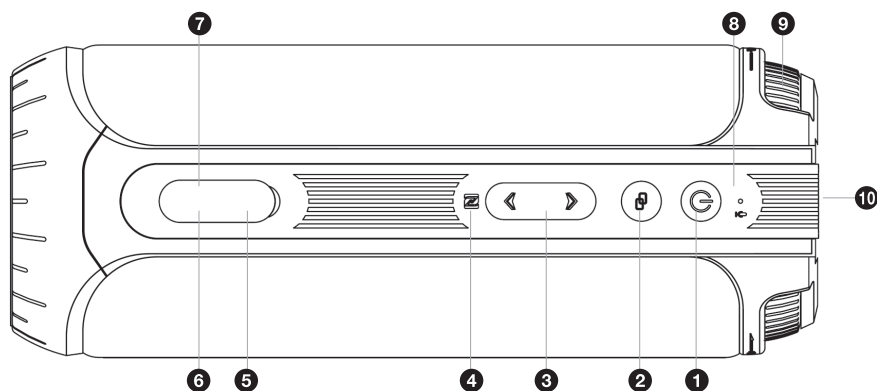

- 1** On/off button
- 2** TWS function button
- 3** Previous/next button
- 4** NFC chip
- 5** Socket for audio AUX IN mini jack (3.5 mm)
- 6** Charging socket (micro USB)
- 7** Charging progress LED indicator
- 8** Microphone
- 9** Volume level scroll bar
- 10** LED indicator

Putting into operation

Before first use, be sure to read the safety instructions contained in this user's manual carefully.

Before first use, please charge the BT speaker to a maximum level. Hold down the power On button to turn on the BT speaker. Turning on/off is indicated by a sound signal. To turn the BT speaker off, hold down the power On button.

**Caution:**

After a longer period of inactivity, the appliance will turn itself off.

LED indicator

- Blinking blue - the unit is ready to be paired via Bluetooth and the source of the audio signal is not connected
- Solid blue - the BT speaker is paired with another device via Bluetooth
- Solid green - audio jack is connected to the device
- Blinking red - the unit is discharged

Pairing devices via Bluetooth

Turn on the BT speaker and search for its Bluetooth name "SSS 1200N" in the device to which you wish to pair and start the pairing process. If you are requested to enter a pairing code while your device and the BT speaker are pairing, use the code: "0000". The BT speaker remembers the last paired unit to which it will connect upon powering up.

Note:

To ensure a stable Bluetooth connection, make sure that the distance between the BT speaker and your connected device is kept within 10m.

**Caution:**

Some connected devices support common volume setting. If some of the connected devices do not support this feature, the volume setting will operate separately on each device.

TWS function

If you buy another Bluetooth speaker („SSS 1200N“), you can pair both speakers together for optimum stereo sound. First, make sure your device is not connected to any BT speaker. Turn both BT speakers on, press their TWS buttons simultaneously and wait until they are paired together automatically. Successful pairing will be indicated by an acoustic signal.

Changing the volume level using the volume control scroll bar will take effect automatically on both paired BT speakers. Pressing and holding the TWS on one of the speakers will turn both paired speakers off (this will be simultaneously announced by an acoustic signal).

Note: If the BT speakers fail to be paired successfully to transfer stereo sound, turn all engaged units off and then on again. Do not set the Bluetooth pairing with another device until both speakers have been paired successfully using the TWS function. The TWS function is only available in the Bluetooth mode.

NFC feature

Enable your device's NFC feature, if equipped, and place your device near the NFC chip on the BT speaker. Follow the instructions on your device. If the connection is established successfully, your device and the BT speaker will be connected automatically.

Audio AUX IN

The BT speaker is equipped with a 3.5mm jack. Your device can be connected to the BT speaker via the supplied audio cable. First connect the audio plug to your device and then to the BT speaker's jack.

**Caution:**

Before connecting your device to the BT speaker, please make sure that the output signal from your device is set to its minimum (minimum output volume). This will prevent the BR speaker from damage. When the BT audio cable is connected, the speaker does not meet the IPX6 protection class and is not water-resistant.

Note:

In this mode, not all functions of the BT speaker are available. The Bluetooth function is not active if the audio jack is connected to the BT speaker.

Controlling the speaker during track playback

- Power On button - press this button briefly to start/stop the playback of tracks on the paired device. If there is an incoming call to a Bluetooth connected paired device will be accompanied by an acoustic signal interrupting the music being played back, answer/end the incoming call. To reject incoming call, long press and hold the button. Press the Power On button twice briefly to end the current Bluetooth connection to the paired device.
- Previous/next button - press the arrows on the button briefly to fast rewind to the track beginning or skip to previous/next track.
- Volume level scrollbar - turn the scroll bar clockwise to increase the volume level or turn the scrollbar anticlockwise to decrease the volume level.

Note:

The reception of the BT speaker's microphone may be attenuated due to the device's water resistance. To improve the reception, please speak loud and in the vicinity of the BT speaker.

Charging

A charged battery provides power for several hours of operation at normal volume levels. A high volume consumes more battery power; therefore, we recommend listening at normal volume levels. To charge the BT speaker, please connect the charging adapter to the mains and then to the BT speaker. The charge progress is indicated by LED (solid red). The fully charged condition during charging is indicated by solid green LED.



Caution:

For charging, use only the original accessories supplied with the appliance. To achieve the maximum battery lifetime, it is best to start charging the battery after the low battery power notification by the LED indicator. Charge continuously until fully charged. When the battery operating time becomes very short, the battery lifetime has been used up; we recommend that you have the battery replaced at your authorized centre.

Recommendation:

If the unit is not to be used for an extended period of time, we recommend to fully charge the battery once every two to three months. We recommend to store the unit with a the battery charged to prevent irreparable damage to the battery (loss of capacity).

Ingression protection (IPX4)

The unit has an increased protection class. The IPX4 protection ensures that the unit is protected against splash water.

**Caution:**

Remember to always seal the BT speaker's inputs with the original blind plug (No.4-6 in figure "description of the BT speaker") and make sure the plug is not damaged. Never charge the unit during possible contact with fluids. The unit is designed for contact with clean water only without any additives. Avoid exposing the unit to contaminated or industrially treated fluids (such as lemonade, sea/salt water, oils, etc.).

Technical specifications

SSS 1200N

Bluetooth speaker with IPX4 rating

SSS 1200N is a water-resistant speaker with 360° spatial sound. It allows you to listen to your favourite music from a smartphone or a tablet via Bluetooth wireless connection up to 15m. Powerful and clean sound is provided by two speakers with a maximum power output of 20 W and a single passive radiator. This speaker is equipped with the NFC technology that allows you to connect your smartphone easily and quickly as well as the TWS technology allowing you to connect two speakers simultaneously. This speaker is water-resistant with IPX4 rating. You don't need to worry about listening to music in bad weather or by a swimming pool. Thanks to the large built-in 4000mAh rechargeable battery, you can listen to music for up to 8 hours.

Features:

Water-resistant speaker with IPX4 rating

The speaker cover is made of premium fabric

Easy connection via NFC

TWS function (True Wireless Stereo)

Sound:

20W total power output

2 speakers + 1 passive radiator

DSP digital sound processor

Frequency response: 80Hz-16kHz

Total harmonic distortion: ≤ 1%

Inputs:

Bluetooth Audio 4.2

Connection distance: up to 15m

AUX audio input (3.5mm stereo connector)

Other:

Handsfree feature

Built-in rechargeable battery: 4,000 mAh Li-Ion

Playback time: approx. 4 hours

Micro USB charging

Max. charging time 5 hours

Accessories: USB charging cable, 3.5mm external cable (AUX), user's manual

Dimensions: 196 x 76 x 77mm

Weight: 530g

INSTRUCTIONS AND INFORMATION ABOUT THE DISPOSAL OF DISCARDED PACKAGE

Return the packaging to a collection centre for disposal.

DISPOSAL OF DISCARDED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol placed on the product, accessories or package notifies that the product must not be treated as household waste. Please dispose of this product in a collection centre designed for recycling electric and electronic equipment. In some EU or European countries, you can return your products to your local dealer when buying a new equivalent product. Proper disposal of this product helps save valuable natural resources and prevents possible adverse impacts on the environment and human health that might be caused by improper waste disposal. For further information, please contact your local authorities or the nearest waste disposal collection centre. Wrong disposal of this type of waste may be subject to a legal penalty.

For EU companies

If you need to dispose of an electric or electronic device, ask your dealer or supplier for necessary information.

Disposal in countries outside the European Union

To dispose of this product, please ask the ministry or your dealer for the necessary information on correct disposal.



FAST ČR, a.s. hereby declares that the radio device type SSS 1200N conforms to the 2014/53/EU directive. For full version of the EU declaration of conformity, please refer to www.sencor.eu website.

Changes in the text, design and technical specifications may be made without prior notice and we reserve the right to make such changes.

The original version is in Czech.

Address of the manufacturer: FAST ČR, a.s., Černokostelecká 1621, Říčany CZ-251 01,

SENCOR[®]

EN Warranty conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

This warranty is void especially if apply as follows:

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be indentified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

Authorized service centers

Visit www.sencor.eu for detailed information about authorized service centers.

Notes