 




STAND KARAOKE MACHINE

Product User Manual

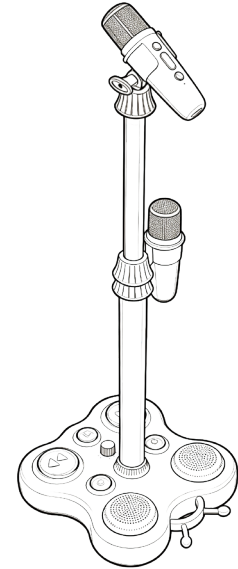

3+ Ages

  ●1. Product Appearance and Function Description

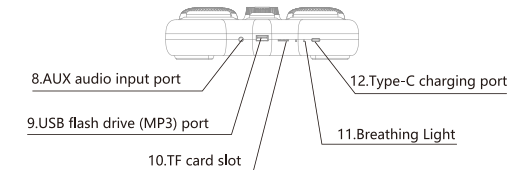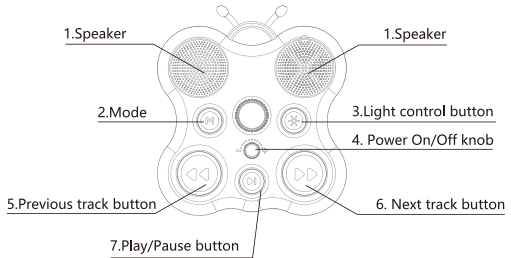


- | | |
|---|--|
| 1. Speaker | 5. Short press to switch to the previous song. |
| 2. Switch to Bluetooth mode | 8-MIC Port |
| 3. Switch light modes / Toggle ambient light on/off | 6. Short press to switch to the next song. |
| 4. Turn the knob to the right and wait for the prompt tone to power on; turn the knob to the left and wait for the prompt tone to power off. | 7. Short press to play or pause music. |
| Volume knob:
Clockwise rotation: Increase volume
Counter-clockwise rotation: Decrease volume
Note: Wait 2 seconds after powering off before turning the device on again. | 8. AUX audio input port |
| | 9. USB flash drive (MP3) port |
| | 10. TF card slot |
| | 11. Breathing Light |
| | 12. Type-C charging port |

01

●2. Assembly Steps (Vertical Stand)

 - Align the bottom of the white telescopic pole with the socket on the main unit's base and insert it vertically until it clicks into place;
- Twist the locking mechanism on the side of the pole to adjust the height to suit the child, then tighten it to secure the position;
- Snap the two wireless microphone holders into the designated slots on the pole to hold the microphones;
- Once assembled, place the unit on a flat, level surface; the widened base design ensures stability and prevents tipping.

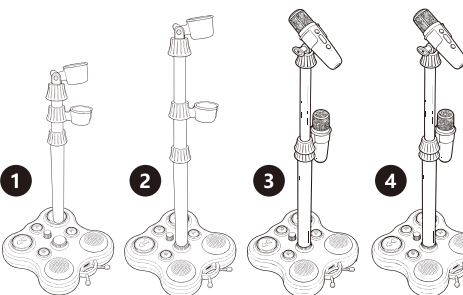

02

●3. Charging Instructions

- Take out the included Type-C charging cable; insert the small connector into the Type-C charging port on the main unit, and connect the large connector to a 5V mobile phone charger or a computer USB port.
- The indicator light on the unit turns on while charging and automatically turns off when fully charged.
- From a completely drained state, it takes 2-3 hours to fully charge; a full charge allows for approximately 4 hours of singing.
- Note: The microphone and the main unit share the same charging cable; if the microphone runs out of power, it can be charged separately by plugging in the cable.
- If the device is not used for an extended period, please charge it once a month to preserve the lithium battery's lifespan.

●4. Multi-Device Connection Instructions

- Mode 1: Bluetooth Connection (Recommended for smartphones, tablets, and computers)
Turn the knob clockwise to power on, then briefly press the MODE button to switch to Bluetooth mode; the indicator light will flash, signaling it is ready for pairing. Enable Bluetooth on your phone, search for the device name "BK06," and select it to pair. A prompt will sound upon successful connection; open a music app to start playing songs. Supports simultaneous singing with dual wireless microphones.
- Troubleshooting pairing failures: Turn the knob counter-clockwise to power off and restart, then search for the Bluetooth device again.
- Mode 2: TF Card Playback
While the device is powered off, insert a TF card containing MP3 music files into the TF card slot on the main unit. Power on the device and briefly press MODE to switch to TF mode; the music on the card will play automatically.
- Mode 3: AUX Wired Audio Input
Connect one end of a 3.5mm audio cable to the AUX port on the main unit and the other end to the headphone jack of a smartphone, computer, or TV.
- Press MODE to switch to AUX mode to play audio from the external device.
- Mode 4: Type-C Audio Input
Connect a Type-C data cable directly to your computer or smartphone for synchronized audio playback.

03

●5. Wireless Microphone User Guide

- Turning on the microphone: Press and hold the power button on the side of the microphone for 2 seconds to turn it on; it will automatically pair with the main unit—no extra steps required.
- Dual-microphone synchronization: Both microphones can be turned on simultaneously for duets, preventing arguments between children.
- Voice changing: Short press the microphone's function button to cycle through 5 fun vocal effects (Cute Girl, Deep Male Voice, Robot, Echo, and Original Voice).
- Volume: Using the + and - buttons on the microphone to adjust.
- Power off: Long press the microphone's power button for 3 seconds to turn it off.

●6. Lighting, Voice Changing, and Reverb Functions

- Ambient lighting: Short press the main unit's light control button to cycle through lighting modes: rhythmic pulse, steady on, and off. The lights flash in sync with the music rhythm.
- Echo/Reverb effect: Rotate the main unit's volume knob to adjust the vocal reverb level, creating a KTV-style singing experience.
- 5 voice-changing effects: Switch instantly using the microphone button—perfect for fun role-playing and interactive games for children.

●7. Daily Use & Feedback Prevention Tips

- Volume Adjustment: It is recommended to lower the overall volume for young children to protect their hearing.
- Feedback Prevention: Keep the microphone away from the main unit's speaker base during use and avoid pointing the microphone directly at the speaker face; doing so may cause harsh feedback (whistling).
- Portability: A concealed handle on the back allows for easy one-handed carrying—perfect for indoor use, picnics, or birthday parties.
- Foot-Controlled Song Switching: Use the foot pedal on the base to switch songs; this allows for hands-free operation while singing, ensuring a smoother performance.
- Screen-Free Eye Protection: Operates via physical buttons, helping to reduce children's screen time.

04

●Safety Precautions:

- This product is intended for children aged 3 and older. Children under 3 require constant parental supervision to prevent the accidental ingestion of small parts.
- Do not drop, throw, or apply heavy pressure to the unit; keep away from water, rain, and other liquid sources.
- Use a standard 5V safety charger; do not use high-power fast chargers for extended periods.
- Do not disassemble the internal circuitry of the main unit or microphone to avoid electric shock or damage to the lithium battery. Store the product properly after use; do not allow children to use it at high volumes for prolonged periods to protect their hearing development.
- The product is made of eco-friendly soft rubber and ABS, featuring a fully rounded design with no sharp edges.

⚠ WARNING

- This product contains a sealed rechargeable lithium battery, not user-replaceable.
- Do not disassemble, puncture, crush, heat or incinerate the battery module. Risk of fire, explosion or chemical leakage if damaged.
- Keep product away from open flame, high temperature and direct sunlight for long periods.
- Keep this product and all batteries out of reach of children under 3 years old.
- Do not charge with incompatible chargers; only use the supplied charging cable.
- Unplug charger once fully charged, do not overcharge overnight.
- If battery swells, leaks or emits odor, stop use immediately and dispose properly.

05

WARNING: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

06

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

* RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

07

Product Name : Stand Karaoke Machine
Model No. : KB06
Charging Input: DC 5V $\pm$ 1A
Battery Capacity: Base: 2000 mAh
Speaker Power: 5 W

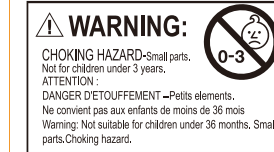

MADE IN CHINA
FABRIQUÉ EN CHINE

08

