

ECHANFIT

User Manual

Magnetic Rowing Machine

CONTENTS


Important Safety Information-----	03
Exploded Diagram-----	04
Parts List-----	05
Hardware Package-----	06
Spare Parts List-----	06
Install Instructions-----	07~10
Pedal Adjustment-----	11
Moving the Machine-----	11
Resistance and Frame Balance Adjustment -----	12
Display Manual-----	13
Storage and Maintenance -----	14

Thank you for purchasing the ECHANFIT CRW4106/4106B Magnetic Rowing Machine. Please read this user manual carefully and keep it for future reference. If you need any assistance, please contact our support team with your product model number and Amazon order number.

Package Contents

- Magnetic Rowing Machine CRW4106/4106B
- User Manual
- Toolkits

Product Diagram

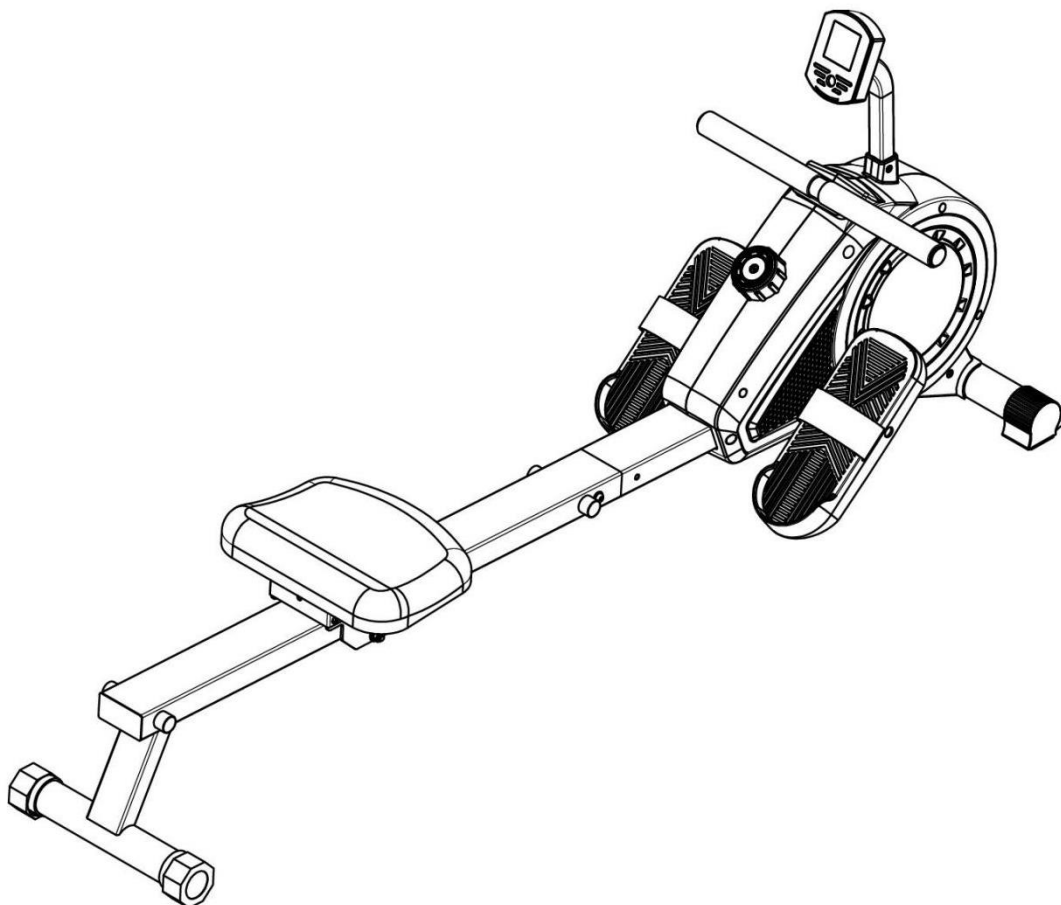

IMPORTANT! Please retain user's manual for maintenance and adjustment instructions. Your satisfaction is very important to us, please do not return until you have contacted.


IMPORTANT SAFETY INFORMATION

Thank you for choosing ECHANFIT magnetic rowing machine CRW4106/4106B.

Warning: To ensure your safety and health, please use this rowing machine correctly. It is important to read this entire manual before assembling and using the rowing machine. Safe and effective use can only be achieved if the rowing machine is assembled, maintained, and used properly. It is your responsibility to ensure that all users of the rowing machine are informed of all warnings and precautions.

1. Before starting the exercise, you should consult with your doctor to determine if your health and physical condition are adequate for using this product together. Because the bad condition of body can bring hidden trouble to your health and safety or hinder you to use this rowing machine correctly.
2. If you are taking medication that affects your heart rate or blood pressure, your doctor's advice is extremely important.
3. Always pay attention to the adverse reactions of the body. Improper and excessive use can damage your body. If you notice any of the following symptoms, stop exercising immediately: Chest pain and chest tightness, abnormal heartbeat, shortness of breath, lightheadedness, dizzy or nauseous. If any of these symptoms occur during exercise, be sure to consult your doctor before continuing exercise.
4. Keep children and pets away from rowing machine. This rowing machine is only suitable for adults!
5. Please place the rowing machine on a firm, flat horizontal surface with soft materials to protect your ground and carpets. Keep at least 0.6m of open space around the rowing machine!
6. Please make sure all screws and nuts are locked before using the rowing machine.
7. Use the rowing machine correctly according to the rowing machine label. When parts are found to be defective during assembly or inspection of the appliance, or when you hear abnormal sound from the device, please stop using it immediately. Never continue to use the rowing machine until the problem is solved.
8. Please wear suitable clothes when you exercise. Avoid loose clothing during exercise, such clothes are easy to hang on or limit movement.
9. This rowing machine is only for indoor use, max user weight 264LB.
10. Please be careful not to sprain your back when moving or uplift this rowing machine.
11. This rowing machine is not suitable for medical rehabilitation.
12. Please properly keep the instruction manual and assembly tools for emergency use.




EXPLODED DIAGRAM

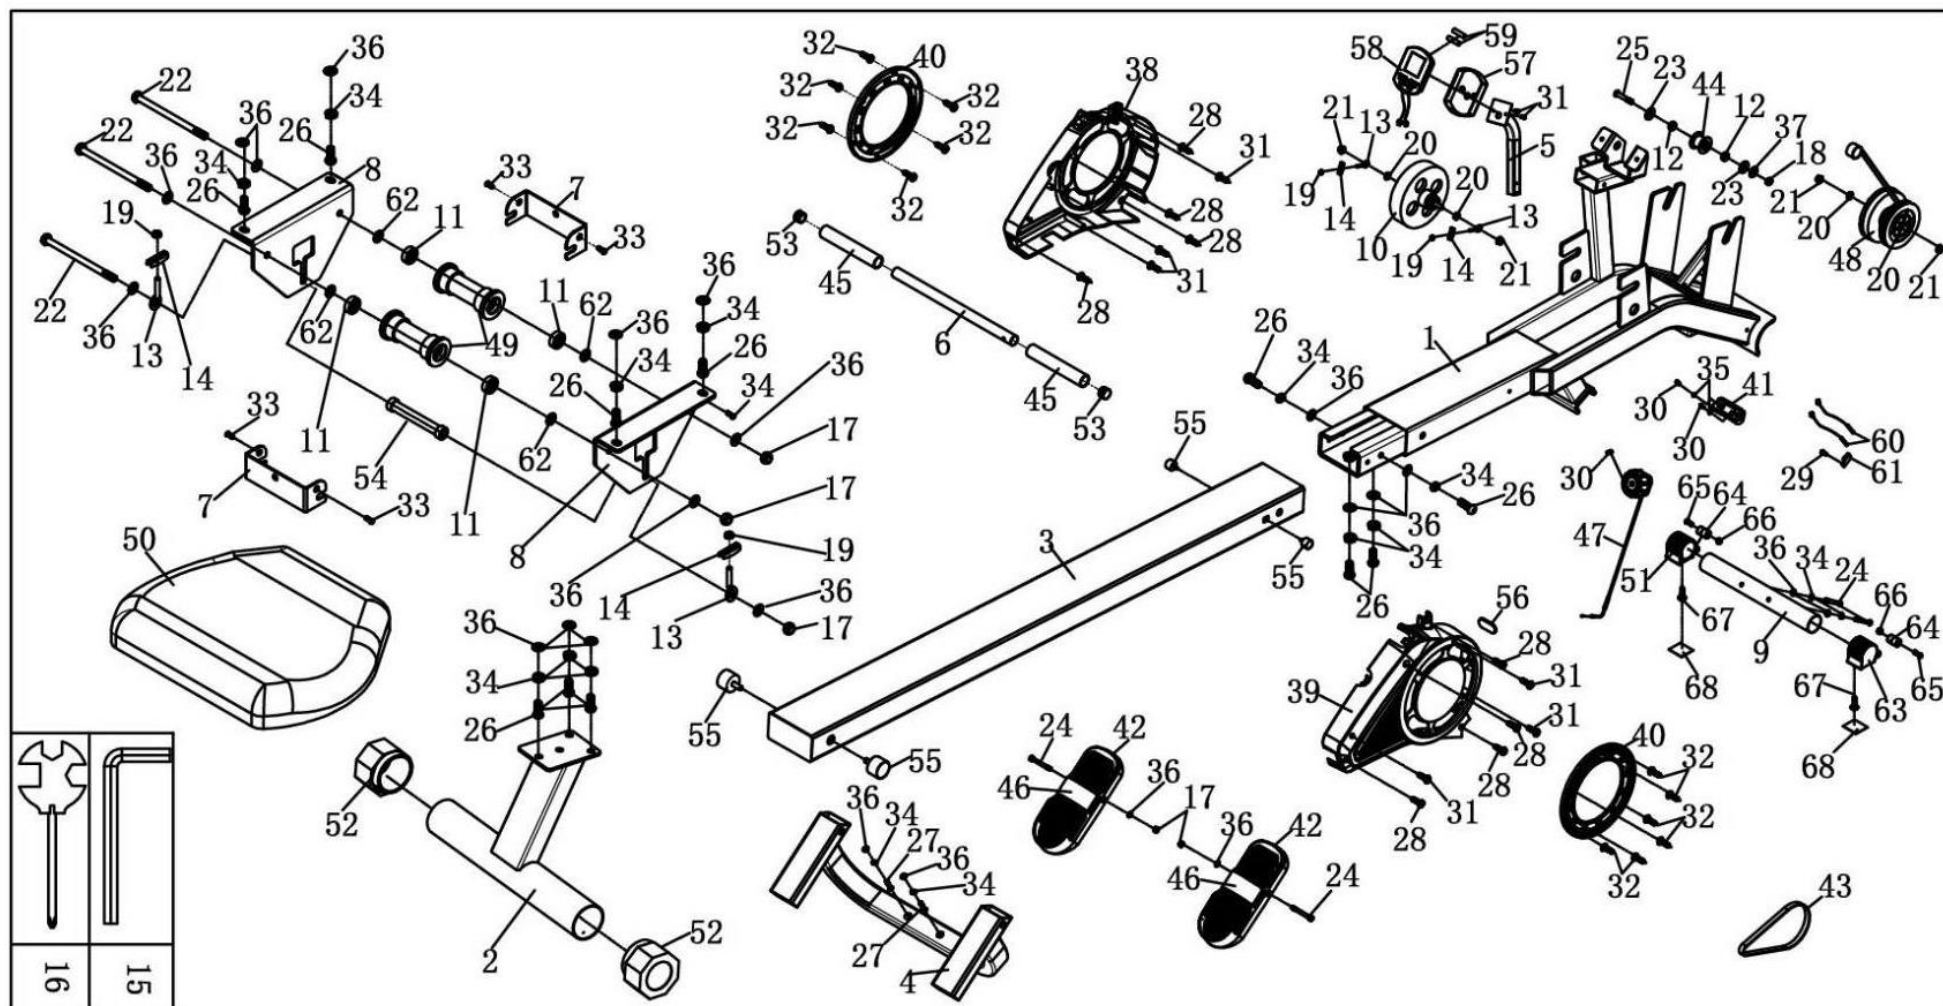

PARTS LIST

No.	Description	Qty	No.	Description	Qty
1	Main frame	1	35	Flat washer 5	2
2	Rear foot tube frame	1	36	Flat washer 8	23
3	Slide tube frame	1	37	Flat washer 10	1
4	Foot pedal tube assembly	1	38	Left protective cover	1
5	Computer bracket	1	39	Right protective cover	1
6	Tension tube	1	40	Decorative cover	2
7	Seat cushion limiting plate	2	41	Armrest fixing pad	1
8	Seat cushion mounting plate	2	42	Foot pedal	2
9	Front foot tube	1	43	Belt PJ660/260J	1
10	Magnetic wheel	1	44	Ribbon pulley $\Phi 45 \times 35$	1
11	Deep groove ball bearing 608-2RS	4	45	Foam L=210mm	2
12	Deep groove ball bearing 6000-2RS	2	46	Foot pedal adjusting belt	2
13	Pull rod	4	47	resistance knob (assembly)	1
14	Pull rod limiting plate	4	48	Pullback device	1
15	Allen wrench	1	49	Seat cushion wheel	2
16	Wrench with screw driver	1	50	Seat cushion	1
17	Lock nut M8	5	51	Left front cover	1
18	Lock nut M10	1	52	Eccentric foot cover	2
19	Nut M8	4	53	Circular tube plug	2
20	Nut M10*1.0	4	54	Limit sleeve	1
21	Nut M10*1.0	4	55	Cushion pad	4
22	Bolt M8*125	3	56	Non-slip mat	1
23	Isolation nylon pad $\Phi 23 \times \Phi 10.5 \times 2$	2	57	Computer back cover	1
24	Bolt M8*65	4	58	Computer up cover	1
25	Bolt M10*55	1	59	Dry battery	2
26	Bolt M8*20	11	60	Bottom wire L=500m	2
27	Bolt M8*40	2	61	Induction bar clamp	1
28	Screw ST4.2*12	8	62	Roller spacing	4
29	Screw ST4.2*9.5	1	63	Right front cover	1
30	Bolt M5*10	3	64	Seat cushion wheel	2
31	Bolt ST4.2*13	8	65	Bolt M6*50	2
32	Screw ST4.2*9	12	66	Nut M6	2
33	Bolt M6*8	4	67	Screw ST4.2*19	2
34	Spring washer 8	15	68	Anti-slipped pad A	2

   HARDWARE PACKAGE

					
1	2	3	4	5	9
					
42	50	15	34	16	55
					
58	24	26	36	28	59
					
17	27	31			

SPARE PARTS LIST

No.	Description	Spec.	Qty.	No.	Description	Spec.	Qty.
1	Main frame		1	58	Computer		1
2	Rear foot tube frame		1	24	Bolt	M8*65	4
3	Slide tube frame		1	26	Bolt	M8*20	7
4	Foot pedal tube assembly		1	36	Flat washer	Φ8	13
5	Computer bracket		1	28	Screw	ST4.2*12	2
9	Front foot tube		1	34	Spring washer	8	11
42	Foot pedal		2	50	Seat cushion		1
15	Allen wrench	S=5	1	55	Cushion pad	Φ25*18	2
16	Wrench with screw driver	S13、14、15	1	59	Dry battery		2
17	Lock nut	M8	2	27	Bolt	M8*40	2
31	Screw	ST4.2*13	2				


Install Tool:

#15 Allen Wrench S=5 1PC

#16 Wrench with screw driver S13、14、15 1PC


INSTALL INSTRUCTIONS

STEP 1:

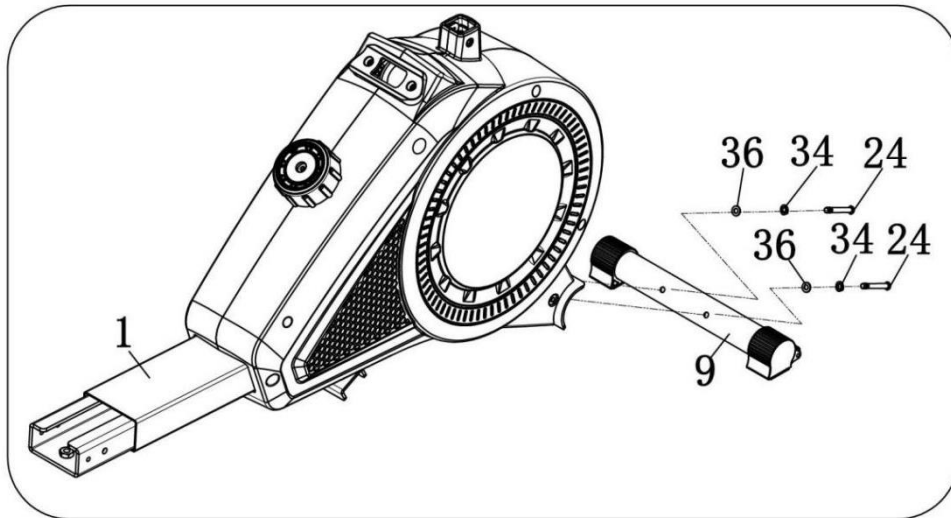


Use the Allen wrench (15) lock the Front foot tube frame (9) onto the Main frame (1) with Bolt (24), Washer (36), Spring washer (34).

STEP 2:

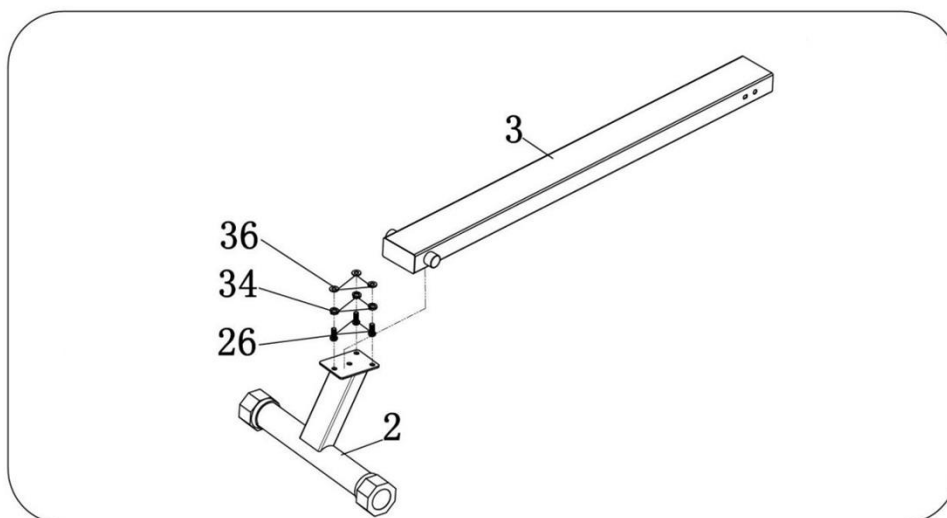


Use the Bolt (26), Flat washer (36), and Spring washer (34) to lock the Rear foot tube frame (2) on the Slide tube frame (3).

STEP 3:

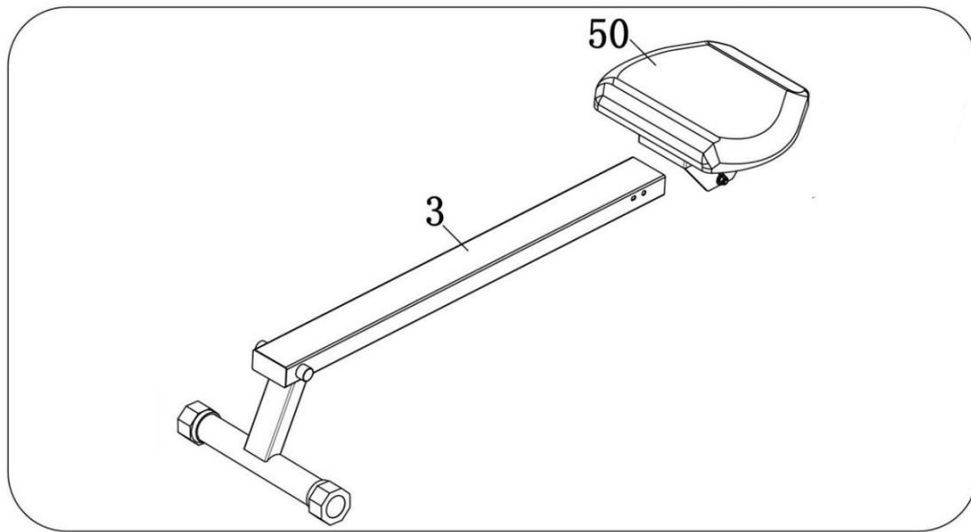


Install the Seat cushion (50) into the Slide tube frame (3).

STEP 4:

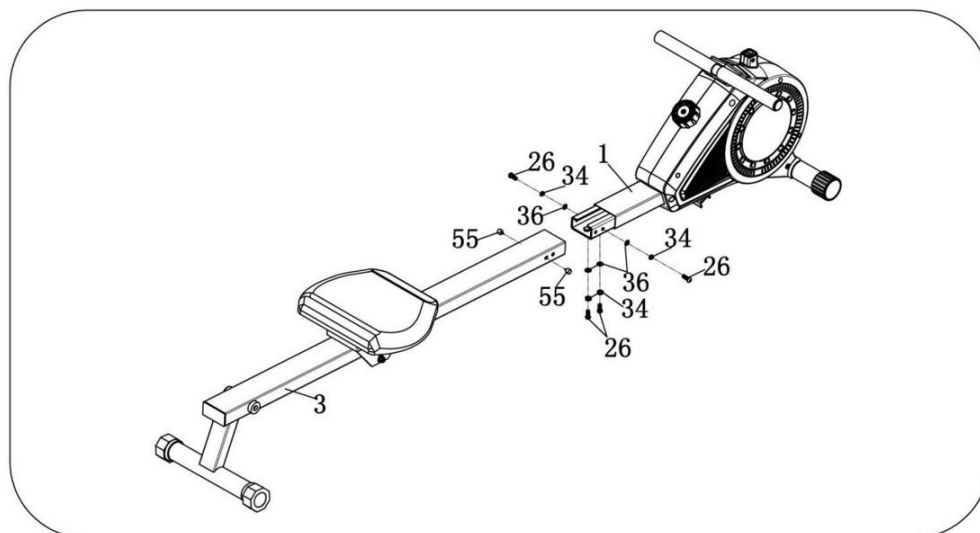


1. Use Bolt (26), Spring washers (34), and Flat washers (36) to lock the Slide tube frame (3) on the Main frame (1).
2. Screw the Cushion pad (55) into the Main frame (1).

STEP 5:

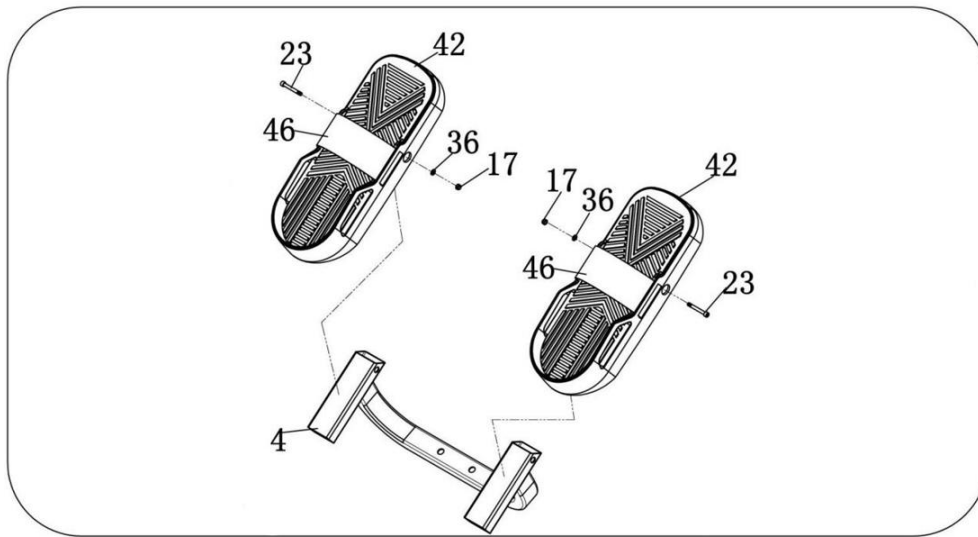


Lock the Foot pedal (42) to the Foot pedal tube assembly (4) with Bolt (23), Flat washer (36) and Lock nut (17).

STEP 6:

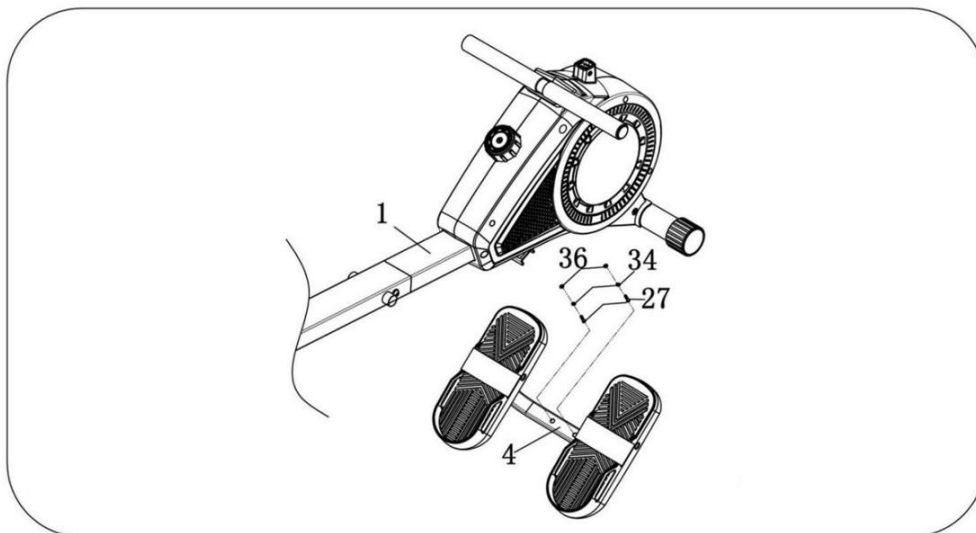


Use Bolt (27), Spring washer (34), and Flat washer (36) to lock the Foot pedal tube assembly (4) to the Main frame (1).

STEP 7:

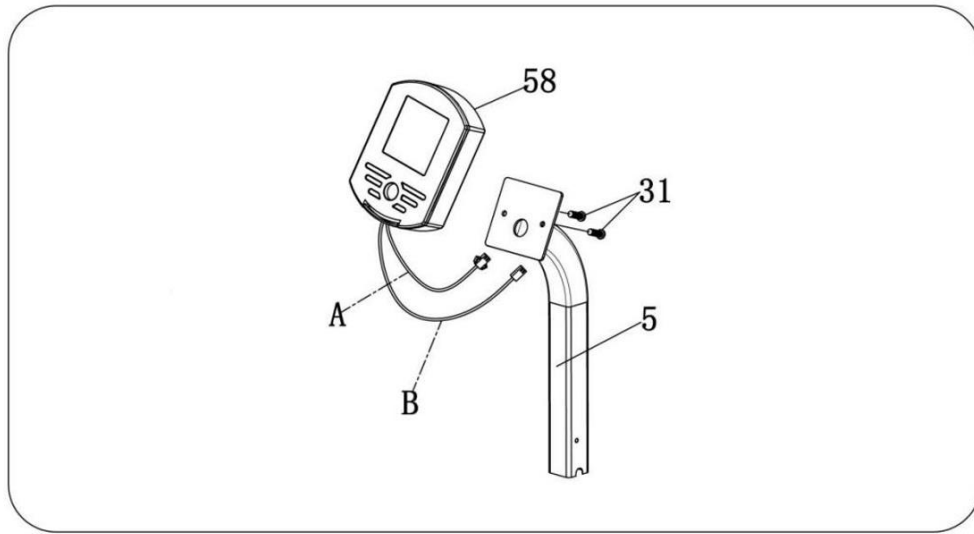


Insert the Sensor cable A and B into the Computer bracket (5), and then lock the screw (31) into the Computer (58).

STEP 8:

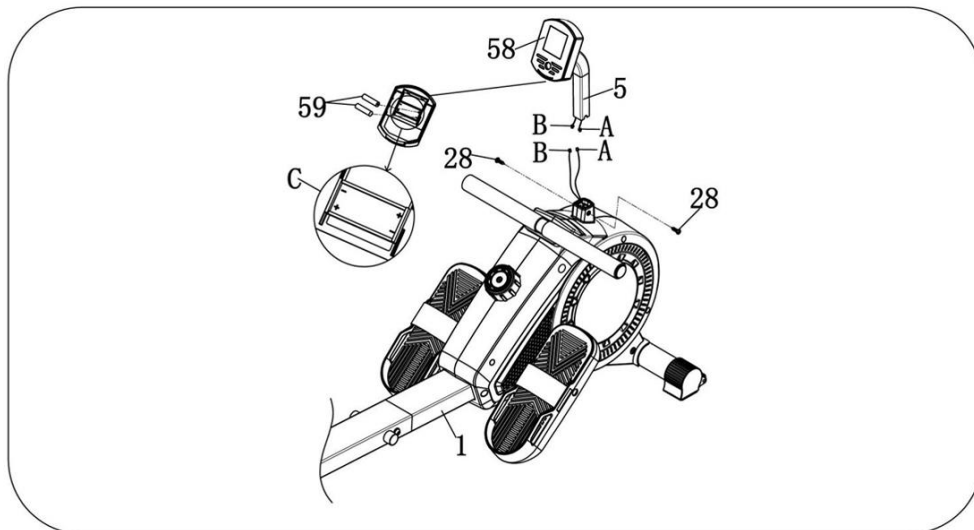

1. Take out the Computer up cover (58), and then put the Dry battery (59) into the Computer up cover (58) as shown in C in the figure;
2. Connect the Sensor cable as shown in the figure A and B, to connect the Sensor cable A with A and B with B;
3. Insert the Computer bracket (5) into the Main frame (1) and fix it with the Screw (28).

PEDAL ADJUSTMENT

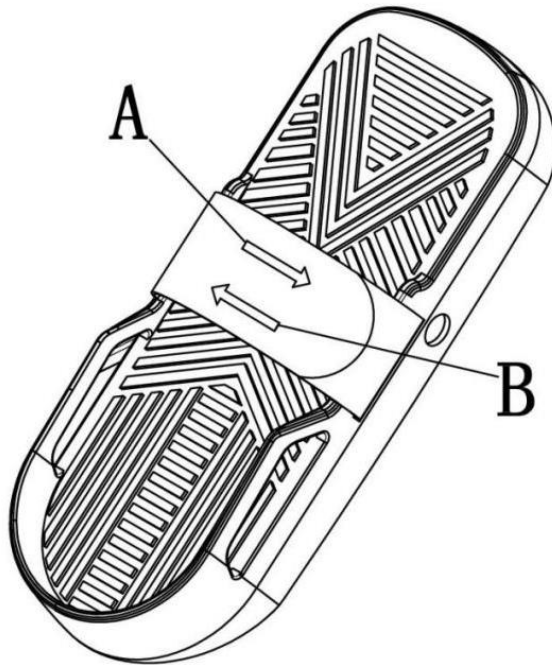


According to the size of feet the pedal strap is adjustable. The specific tightness adjustment method is shown in the left figure. A direction is tense, B direction is loose.

MOVING THE MACHINE


Frame Movement:

The front foot tube frame have transport wheel in the front, lift up the rear foot tube frame, you can move the frame to the position you want.

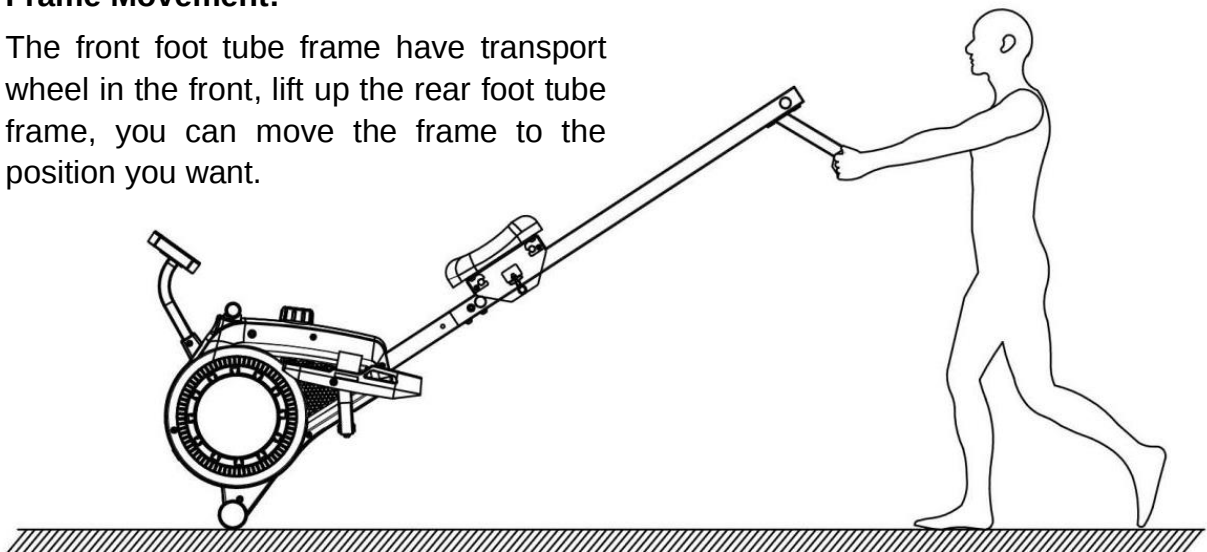

RESISTANCE AND FRAME BALANCE

ADJUSTMENT

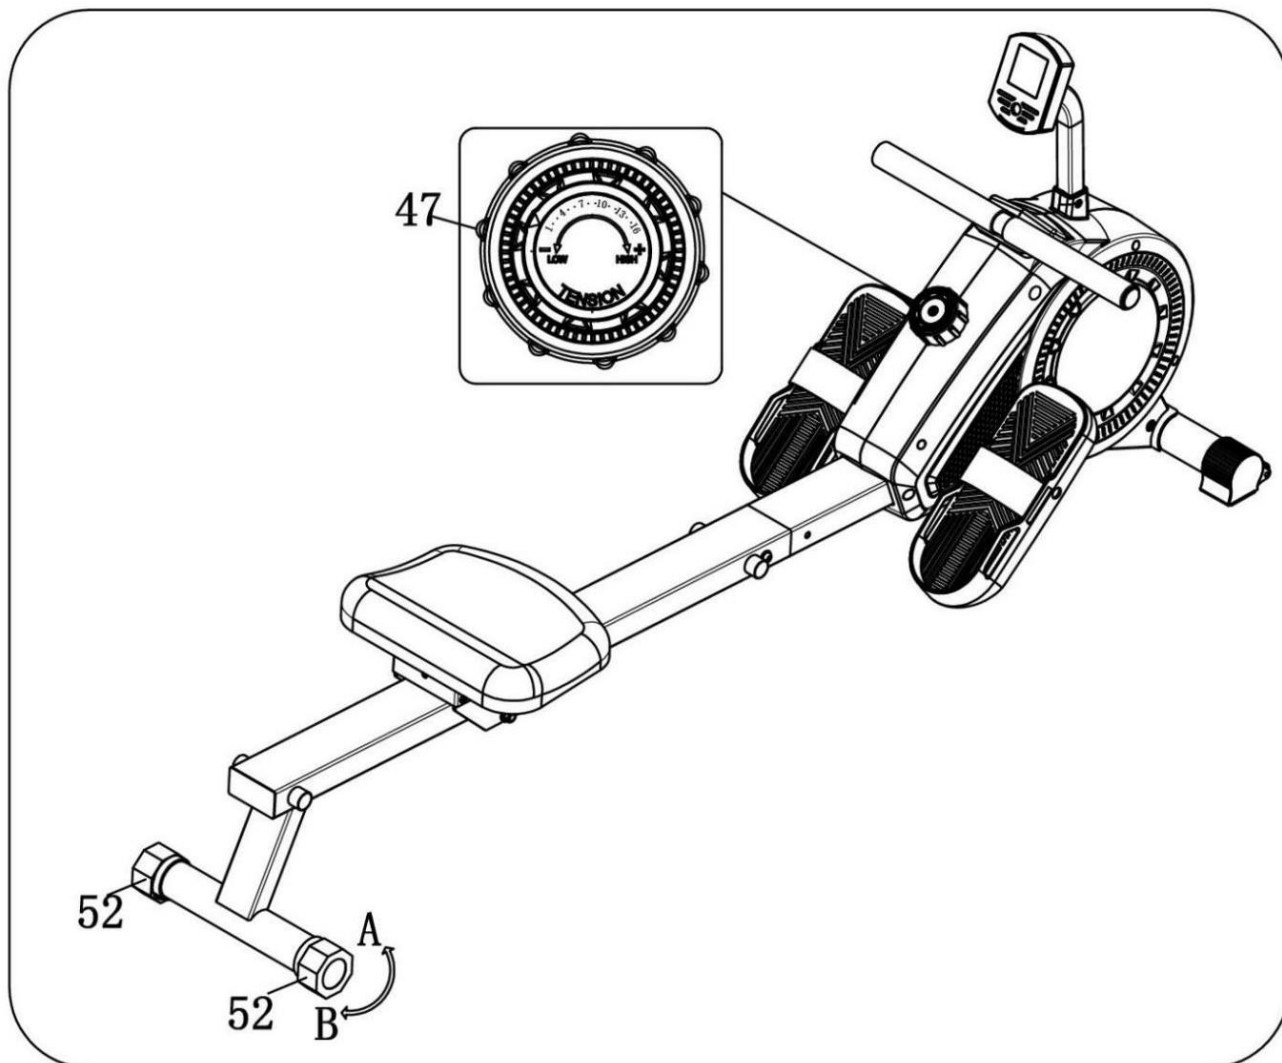

Resistance Adjustment:

Adjust the resistance knob (47) clockwise to increase the resistance and counter clockwise to reduce the resistance.

Frame Horizontal Regulation:

If the ground is uneven, the rear foot cover (52) can be adjusted according to the arrow direction A or B in the figure to make the frame level.

DISPLAY MANUAL

Button Function:

MODE: press this button to select the function.

----Keep pressing this button for 3 seconds to clear all data, included time, times, calories burned, total count, distance and scan (all of the above).



Functional Operation:

1. SCAN: press the MODE button into scan state, the computer will automatically scan, time, times, calories, total number of times, and every scan interval is 6 seconds.

2. TIME: show the time from the computer start to the end.

3. COUNT (Times Count): show the number of times from the computer start to the end.

4. CALORIE: show the total calories from the computer start to the end.

5. TOTAL COUNT (Total Number of Times): count all times after installing the battery.

If there is without any movement signal, the computer display will close automatically after 4 minutes, and will wake up when there is movement signal or any button is operated.

6. REPS/MIN (Average Speed): show the average number of movements per minute.

Scope Description:

Function	Scanning interval	Every 6 seconds
	Time (minutes)	0:00—99:59
	Times count	0—9999 times
	Calories	0:0—999.9 CAL
	Total number of times	0—9999 times
Battery		2 piece of battery
Working temperature		0—40 degree
Storage temperature		-0 degree—+60 degree

STORAGE AND MAINTENANCE

1. Keep the rowing machine in a clean and dry place.
2. Grasp the frame to move the rowing machine. Do not use the seat to move it. The seat will move and it may hurt your hand and fingers.
3. Remove the battery before storing the machine for a long time.
4. Clean the Seat Rail with an absorbent cloth.
5. Always make sure all the nuts and bolts are properly tightened.
6. Regular inspection is required. Replace any worn or damaged parts immediately.

Warranty and Customer Support

For questions, support, or warranty claims, contact us at the address below that corresponds with your region. Please include your Amazon order number and product model number.

Amazon US Orders: service@camelonfit.com

Please note, ECHANFIT can only provide after sales service for products purchased directly from ECHANFIT. If you have purchased from a different seller, please contact them directly for service or warranty issues.

Model: CRW4106/4106B

XIAMEN CAMELON TECHNOLOGY CO., LTD.

<https://www.amazon.com/echanfit> | service@camelonfit.com