 
 


User Manual For Caregiver Pager

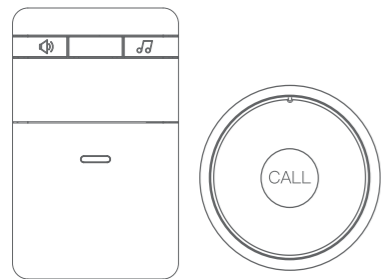

Product Introduction

Wireless Caregiver Pager, integrating with 58 songs, adopts advanced wireless transceiver technology, strong microcomputer control system and high-quality voiceprocessing technology with stable and reliable performance. Receivers and transmitters are paired wirelessly by codes. Easy to use (plug and play) plug the receiver into a power outlet. The call light reminds people with hearing impairments, especially the elderly, to take care of each other.

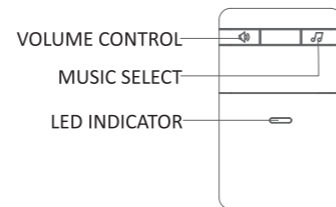


Features

1. 58 available tones
2. 5 adjustable volume levels (Including Mute Mode)
3. Memory function to retain settings when receiver is unplugged or off
4. Different tones can be set to different transmitters

Method 1: Hang on neck as Pendant



 Method 2: Fixed with double-sided tape

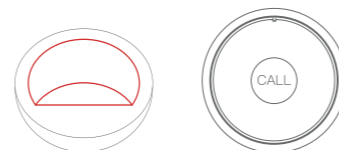

Operating Instructions

GETTING STARTED

Plug the receiver into the AC outlet . The receiver will beep once and LED light will flash in each color circularly to indicate ready to use.

A . Select the receiver ring tone:

- 1 . Cycle FORWARD through the tones-short press [MUSIC SELECT] button repeatedly to choose desired ringtone
- 2 . Cycle REVERSE through the tones-long press [MUSIC SELECT] button for 3 seconds ,until you hear a shortbeep sound and the tones will now cycle in reverseorder Press [MUSIC SELECT] button repeatedly to choose desired ringtone

B. Setting the Volume:

Press [VOLUME CONTROL] button repeatedly to cycle through 5 volume settings (Note: The volume changes to the largest automatically every time the receiver power on).

C. Pairing Additional Transmitters/ Accessories

1. There are two options in pairing your receivers atransmitters/accessories.VARIABLE mode and FIXED mode.(Note: Caregiver Pager have been paired and set to default chime (Ding Dong) before leaving factory)

FIXED MODE: Adding a transmitter/ accessory With a FIXED receiver ringtone:

1. First, select the desired tone by following above operating instruction A . Select the receiver ring tone. Next, press and hold [MUSIC SELECT] and [VOLUME CONTROL] buttons simultaneously on the plugged in receiver. The receiver will beep once and the LED light will light up- this indicates the receiver is in pairing mode and ready to pair with a transmitter or accessory

2. Next, short press the button to pair and trigger a transmitter to send a signal to the receiver. And you will hear and see:

① The receiver beeps twice and the LED light flashes twice , showing the transmitter is added successfully

② The receiver beeps once and the LED light flashes once, showing the transmitter has been added before

③ The receiver beeps three times and the LED light flashes three times , indicating no transmitters can be added any more. **Note:** There is a limit of up to 30 transmitters/ accessories that can be paired to a receiver

3. Next, press the receiver button [VOLUME CONTROL] to exit out of pairing mode.(Note: The receiver will automatically exit the pairing status of adding transmitters if no pairing is taken in 20s.)

4. The ringtone is now FIXED. Now even if you change the receiver ring-tones- you will always have the desired ringtone with the transmitter.

Return to Default Ringtone(Ding Dong)

1. First unplug the receiver
2. Next, press and hold [MUSIC SELECT] buttons then plug in the outlet
3. Keep on pressing and holding the [MUSIC SELECT] button while the receiver is plugged in- you will start to hear continuous beeping and the LED light will flash 5 times. The receiver is now reset to the first" ding dong" ringtone and the volume will be reset to the largest volume

Clear All Settings- Unpair all transmitters/ accessories from receiver

1. First unplug the receiver.
2. Next, press and hold [VOLUME CONTROL] buttons then plug in the outlet
3. Keep on pressing and holding the [VOLUME CONTROL] button while the receiver is plugged in- you will start to hear continuous beeping and the LED light will flash ten times. Keep on pressing and holding the [VOLUME CONTROL] button until the receiver gives a series of fast beeps and the LED light will give fast flashes as well.

When there is no more sound and light, the receiver and transmitters are now all reset. All transmitters and accessories are now unpaired

Technical Parameters

Power: 100 240V 50~60HZ AC
Standby current: < 3MA(220V AC)
Working current: < 11MA(220V AC)
Radio Frequency: 433MHz
Transmitter button battery: 3V CR2032
Operation range: ≤1000 feet(in open area)
Working temperature : -20° + 60°
Working Humidity: ≤85 %

Contents

Receivers(s)
Transmitter(s)
Double Sided Adhesive Tapes
User Manual
Silicone Protective Shell
Lanyard, CR2032 battery inside transmitter

Precautions

1. Do not operate product with damaged cord or plug
2. Do not operate product if it has been damaged in any way
3. Do not throw or shake the product
4. Keep the product away from fire or explosion may occur
5. Before using the product, read all instructions and caution markings on the product, accessories and device using our product
6. Operating range will become shorter and the indicator quick flashes several times if battery in transmitter is at low power. Please try to change the transmitter battery . Battery type is CR2032 battery.

Warranty

1. Our company provides 18 months of free warranty and lifetime maintenance services for the products, and guarantees 24-hour online service. Within 18 months from the date of purchase, damages caused by poor material or design defects of the product can be replaced or repaired free of charge. Repairs and replacements performed after 18 months will be charged the product cost
2. Information to be provided when contacting the seller for warranty:
 - (1) Product name
 - (2) Order number
 - (3) Fault description

