

SENCOR®

SSI 0890BZ



VACUUM GARMENT STEAMER

 
 
Translation of the original manual




SENCOR®

SSI 0890BZ




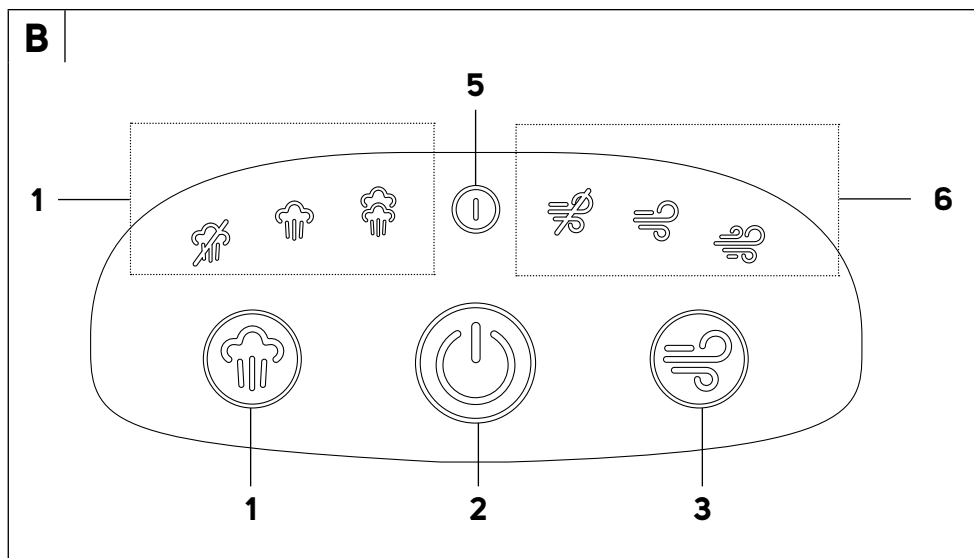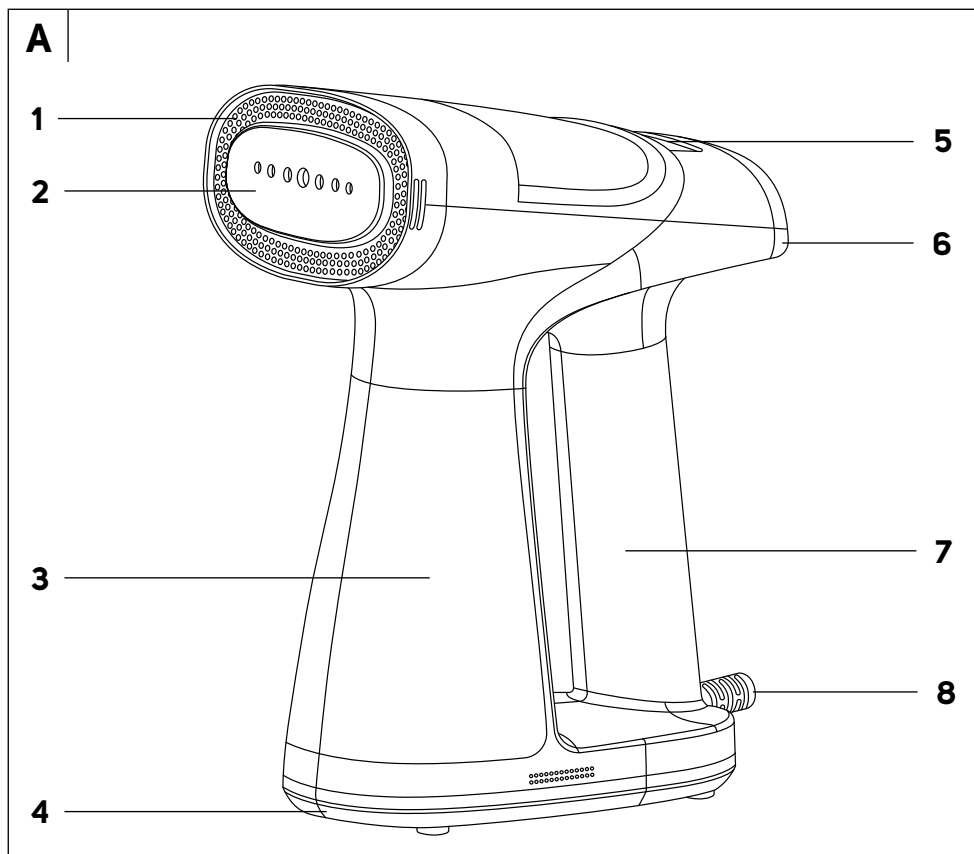


C1

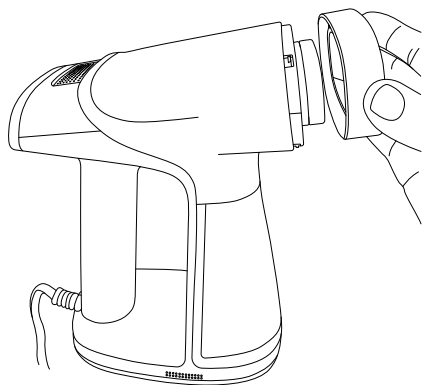 

C2

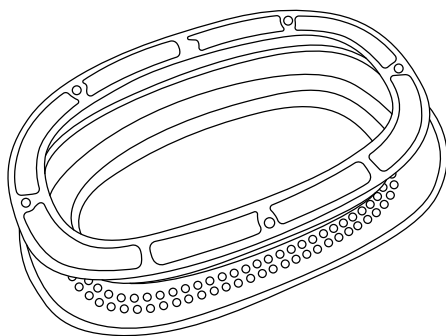 

C3

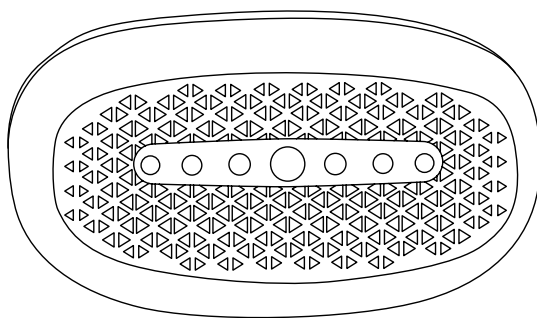 

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be only used by children aged 8 years and older and by persons with physical, sensory or mental impairments or lack of experience and knowledge, if they are supervised or have been instructed on the safe use of the appliance and understand the potential hazards.
- Children must not play with the appliance. Cleaning and maintenance must not be performed by children without supervision.
- If the mains cable is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. Never use the appliance if the power cable is damaged.
- The appliance must not be left unattended when connected to a power socket.
- The plug must be pulled out of the socket before filling the water tank or cleaning.
- The water tank must not be removed from the body of the appliance during use.
- The appliance must be used and placed on a flat and stable surface.
- When placing the appliance on the stand, ensure that the surface on which the stand is located is stable.

- The appliance must not be used if it has been dropped, if there are visible signs of damage, or if it leaks. Do not leave the appliance and its power supply within reach of children under 8 years of age when powered or cooling down.



Caution: Hot Surface

Surfaces may become hot during use.

Additional Important Safety Instructions for Use of the Appliance

- Pay extra attention to the appliance as it produces steam.
- Before connecting the appliance to the mains socket, ensure that the voltage stated on its rating plate matches the voltage in the socket.
- Connect the appliance only to a properly earthed socket. Do not use an extension cord.
- Do not touch the appliance with wet or moist hands when connected to the power socket.
- To prevent the risk of electric shock, do not rinse the appliance under running water, spray it with water, or immerse it in water or any other liquid.
- Ensure that the power cable does not come into contact with water, moisture or a heated surface.
- Do not place heavy objects on the power cord. Ensure that the power cord does not hang over the edge of the table or touch hot surfaces or sharp objects.
- Disconnect the appliance from the mains socket by pulling the plug of the power cable, not the cable itself. Otherwise, you may damage the mains cable or the socket.
- Do not pull or carry the appliance by the power cable.
- To avoid the risk of electric shock, do not repair and/or make any adjustments to the appliance by yourselves. All repairs should be carried out by an authorised service centre. By interfering with the product, you risk losing the legal right to defective performance or warranty for quality.
- The appliance is intended for domestic and indoor use only. Do not use it in industrial surroundings or outdoors.
- The appliance is designed for steaming and ironing laundry and fabrics that are suitable for ironing. Do not use the appliance for purposes other than those for which it was designed. Do not modify the appliance for any other use.
- Do not place the appliance on or near an electric or gas stove or other sources of heat.
- Do not use the appliance in damp or dusty environments. Do not expose the appliance to direct sunlight.
- Never iron clothes while wearing them.
- Do not touch the hot soleplate. Otherwise, burns may occur.
- Ironed clothes may be hot immediately after removing the steamer. Take extra care to avoid burns.
- Never fill the water tank directly under the tap. Always use a suitable container for filling the tank. Do not add vinegar, descalers, or other additives to the tank.
- Before cleaning or any other handling of the appliance that you have disconnected from the power socket, allow the soleplate to cool down.
- This appliance is not intended for operation through an external timer switch or a remote control.
- When cleaning, follow the instructions in this manual.
- Do not repair the appliance by yourselves. It does not contain user serviceable parts. All repairs should be carried out only by an authorised service centre.

EXPLANATION OF SYMBOLS PLACED ON THE PRODUCT OR IN THE ACCOMPANYING DOCUMENTATION



The product meets all the basic requirements of the applicable EU directives.



This symbol on products or accompanying documents means that used electric or electronic products must not be added to ordinary municipal waste.

- Thank you for purchasing our SENCOR product; we hope it will serve to your satisfaction.
- Prior to using this appliance, please read the user manual thoroughly, even in cases when you are already familiar with the use of similar types of appliances. Use the appliance only as described in this user manual. Keep the manual for future reference. If you pass the appliance on to another person, ensure that this user manual is included.
- Carefully unpack the appliance and make sure not to discard any part of the packaging material until you have removed all its components. It is recommended that you keep the original packaging, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right to file a defect claim or the quality warranty. When transporting the appliance, we recommend repackaging it in the original box provided by the manufacturer.

DESCRIPTION OF THE STEAMER

A1 Air inlet dust chamber	A5 Output opening
A2 Steam surface	A6 Control panel
A3 Water tank	A7 Handle
A4 Steamer base	A8 Power cord end

DESCRIPTION OF THE CONTROL CABLE

B1  button to adjust steam intensity	 – high steam release intensity
B2  button to switch the steamer on/off	B5 Warm-up indicator
B3  button to adjust suction speed	B6 Suction intensity icons
B4 Steam intensity icons	 – no suction
 – without steam	 – low suction intensity
 – low steam release intensity	 – high suction intensity

INTENDED USE

- The garment steamer is intended for vertical ironing of clothes (hanging on a hanger), fabrics, or materials specifically designed for ironing. Refer to the information label.
- It can also be used for horizontal ironing.

BEFORE FIRST USE

- Before first use, remove the appliance and its accessories from the packaging and discard all promotional labels and tags. Check that neither the appliance nor any of its components is damaged.
- Wipe the soleplate with a lightly damp cloth and then dry it. Also, wipe the outer parts of the steamer with a dry or lightly damp cloth and dry them thoroughly.
- Fill the tank with clean water and then empty it. This removes any dirt in the tank.

PREPARATION FOR USE

Filling the water tank



Warning:

Always ensure that the steamer is turned off and the power cable is disconnected from the power socket before filling the tank. We recommend using only distilled or demineralised water.

1. Grasp the steamer by the handle with one hand, the water tank with the other, and pull away from the steamer body.
2. Open the water tank lid and pour water into it up to the MAX mark on the tank.
3. Close the tank lid.
4. Insert the tank back into the steamer body. Push gently so that the tank is properly inserted.



Warning:

Never fill the tank with hot or boiling water, service water or any other liquid. Do not add water softener, vinegar, starch, descaling agent, perfume mixes, or other additives.

First Use of the Steamer

- Before the first use of the steamer, we recommend setting a high steam and suction intensity and ironing a small damp cloth or kitchen towel to remove any possible residues on the steam plate.
- You may notice a strange smell during the first use. This is normal. It disappears with use.
- During the first use of the steamer, small particles or impurities may come out of the holes on the soleplate. Do not be surprised or disturbed by this. This does not affect the proper functioning of the steamer.



Note:

During the heating process of the soleplate, a small amount of water may flow from the holes on the soleplate. This is normal.

USING THE STEAMER

1. Place the steamer in a vertical position on the base.
2. Make sure that the tank is filled with water up to MAX line, especially if you will be using the steam function.
3. Unwind the power cord completely and plug the power cord plug into a properly grounded power socket.
4. The control panel lights up briefly and then goes out. The steamer has switched to standby mode.
5. Press the  button to switch the steamer on. The warm-up indicator light will flash.
6. When the indicator light stops flashing and lights up, the steamer is ready for use. The default mode is steam-free and suction-free ironing.
7. Press the  button repeatedly to adjust the steam release intensity:
 -  – without steam
 -  – low steam release intensity
 -  – high steam release intensity
8. Press the  button repeatedly to set the suction intensity:
 -  – no suction

-  – low suction intensity
 – high suction intensity

9. Bring the steamer closer to the hanging garment or fabric and move it from top to bottom to steam it. We recommend holding the garment or fabric in the bottom part to straighten the garment or fabric.
10. After use, press the  button to switch off the steamer. The steamer switches to standby mode. Unplug the power cord from the mains socket and allow the steamer to cool completely before cleaning it.



Warning:

HOT SURFACE AND HOT STEAM!

Take extra care when using and handling the steamer. The soleplate is very hot and the steam temperature is high. Serious injury and burns can occur with improper handling.
 Never touch the soleplate with your hands!
 Do not steam clothes directly on yourself or on others!



Warning:

Never fill the tank with hot or boiling water, service water or any other liquid. Do not add water softener, vinegar, starch, descaling agent, perfume mixes, or other additives.



Note:

We recommend using the suction function for vertical ironing.

Setting the Steamer Aside During Use

- Always place the steamer in a vertical position on the base, on the heat-insulated pad of the ironing board, or in a safe place.
- To avoid tipping over, do not place the steamer on an uneven surface.

Automatic Shut-off

- This steamer is equipped with an automatic power-off function: Lightly touching any button will reset it.
1. In dry mode, the steamer will power off after 8 minutes (when neither steam nor suction).
 2. When using the suction function alone, the steamer will power off after 8 minutes.
 3. When using steam alone, the steamer will wait until the water tank is emptied. Once the pump starts running dry, the pump will stop working and the unit will enter dry-burn mode, followed by an automatic power-off after 8 minutes.
 4. When using steam and the suction together, the steamer will wait until the water tank is emptied. Once the pump runs dry, both the pump and the suction will stop working, and the unit will enter dry mode, followed by an automatic power-off after 8 minutes.
- After the steamer enters the automatic power-off mode, if no button is pressed within 20 minutes to reset it, the steamer will fully shut down and the power indicator will turn off. The power button must be pressed again to restart it.

IRONING TIPS AND TRICKS

- Follow the care instructions for each garment. Iron only solid-coloured and heat-resistant fabrics. We recommend ironing the printed clothes inside out.
- Never iron over areas with sweat stains or other stains. High heat will set the stain making it difficult to remove.
- To prevent silk, wool, and synthetic fabrics from becoming shiny after ironing, iron them inside out.
- Some materials are easier to iron when lightly damp.
- For fine fabrics, sprinkle water before ironing.
- Iron heavily wrinkled garments with a high steam intensity and a high suction intensity.
- Avoid ironing zips, studs or other decorative parts of clothing. This could damage the soleplate.

CLEANING AND MAINTENANCE

- Before cleaning the steamer, unplug the power cord from the mains socket and allow the appliance to cool completely.



Caution:

Do not use abrasive cleaning agents, solvents, etc. to clean any parts of the appliance, as these could damage the surface.



Warning:

To prevent the risk of electric shock, do not immerse the appliance, power cable, or plug into water or any other liquid.

Cleaning the Steamer

- Wipe the steaming surface and the outer surface of the appliance with a slightly damp cloth and dry it.

Cleaning the water tank

- Empty the water tank after each use. Do not leave water in it.
1. Grasp the steamer by the handle with one hand, the water tank with the other, and pull away from the steamer body.
 2. Open the water tank lid and pour out the water.
 3. Leave the lid open to allow the tank to dry.



Caution:

Do not allow the tank to dry in direct sunlight or place it on or near a heat source (e.g. heating).

Removing Lime Scale Deposits

- To remove water scale deposits, it is recommended to use a solution of white vinegar and water in a ratio of 1 : 3.
- Pour the solution into the tank and allow it to act for a while. Then pour the solution out and pour clean water into the tank.
- Repeat the procedure if needed.
- After descaling, turn the steamer back on and heat it briefly to evaporate any remaining water inside the steam chamber.

Cleaning the Dust Chamber (Fig. C)

- We recommend cleaning the dust chamber after each use.
 - Before cleaning the dust chamber regularly, always unplug the appliance and make sure it has cooled down completely to avoid burns. After cleaning, plug the appliance back in to use it again.
1. Switch off the steamer and let it cool down.
 2. Grab the chamber with your hand and remove it from the steamer.
 3. Remove dust and dirt from the fine filter on the inside of the dust compartment and sponge filter using a dry cloth.
 4. Put the box back on the steamer.



Caution:

Do not wash the dust chamber in water.



Caution:

Before using the steamer, check that the dust chamber is in place. Do not use the steamer without a properly installed dust chamber.

Storage

- If you do not use the steamer, turn it off, unplug it from the mains socket, and let it cool down completely. Empty the water tank.
- Store the steamer in a dry, clean, and well-ventilated place away from extreme temperatures and out of the reach of children or pets.

.....

TECHNICAL SPECIFICATIONS

Rated voltage range.....	220–240 V~
Rated frequency.....	50/60 Hz
Rated power input.....	1300–1550 W
Water tank capacity.....	180 ml
Continuous steam output (low steam intensity).....	15–25 g/min

.....

**INSTRUCTIONS AND INFORMATION ON
DISPOSAL OF USED PACKAGING MATERIAL**

Dispose of used packaging material at the designated municipal waste disposal site.

.....

**DISPOSAL OF USED ELECTRICAL AND
ELECTRONIC EQUIPMENT**

Used electrical and electronic products must not be disposed of in ordinary municipal waste. To enable the proper disposal, renewal and recycling of these products, deliver them to the designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. By disposing of this product correctly, you help to conserve valuable natural resources and prevent any potential adverse impact on the environment and human health that could result from improper waste disposal. For more details, contact your local authority or nearest collection point. Fines may be imposed for the improper disposal of this type of waste as per national regulations.

For business entities in European Union States

If you wish to dispose of electrical and electronic equipment, please request the necessary information from your retailer or supplier.

Disposal in other countries outside the European Union

To dispose of this product elsewhere, request the necessary information on the correct disposal method from local authorities or your retailer.

.....

Changes to text and technical parameters are reserved.



FAST ČR, a.s.
U Sanitasu 1621
CZ-251 01 Říčany
www.sencor.com
info@sencor.cz