 


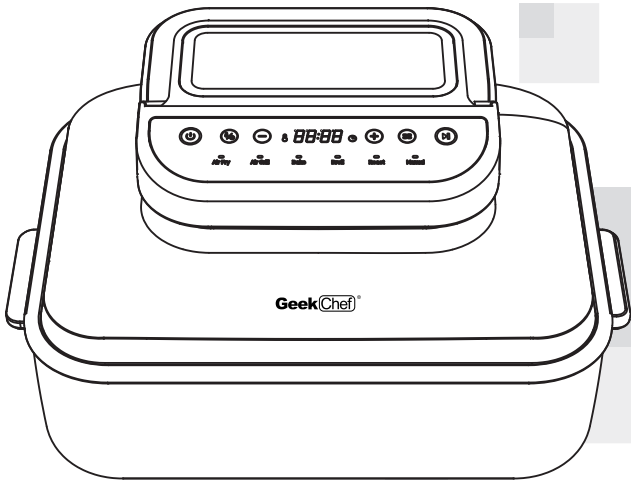

AIR FRYER GRILL

User Manual

Model No.: GFG06



Toll Free: 1-844-801-8880

IMPORTANT: Read the instructions carefully before operating the appliance and keep them for future reference.

TABLE OF CONTENTS

Safety Instructions	2
Product Components	4
How To Use	5
Cleaning And Maintenance	11
Troubleshooting	12
Limited Warranty	13

TECHNICAL SPECIFICATIONS

Model No.:	GFG06
Power :	1500 W
Voltage:	120 V
Frequency:	60 Hz



Scan the QR code for more assistance and support

SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:



1. Read all the safety and operating instructions carefully and retain them for future reference.
2. This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
3. Keep the appliance and its cord out of reach of children. **DO NOT** allow the appliance to be used by children. Close supervision is necessary when used near children.
4. This appliance is for household use only. **DO NOT** use this appliance for anything other than its intended use. **DO NOT** use in moving vehicles or boats. **DO NOT** use outdoors. Misuse may cause injury.
5. Ensure the surface is level, clean and dry. **DO NOT** place the appliance near the edge of a countertop during operation.
6. **ALWAYS** ensure the appliance is properly assembled before use.
7. When using this appliance, provide at least 6 inches (15.25 cm) of space above and on all sides for air circulation.
8. **DO NOT** use an extension cord. A short power-supply cord is used to reduce the risk of children grabbing the cord or becoming entangled and to reduce the risk of people tripping over a longer cord.
9. To protect against electrical shock. **DO NOT** immerse cord, plugs, or main unit housing in water or other liquid.
10. **DO NOT** use the appliance if there is damage to the power cord or plug. Regularly inspect the appliance and power cord. If the appliance malfunctions or has been damaged in any way, immediately stop use and call Customer Service.
11. **NEVER** use outlet below countertop surface.
12. **DO NOT** place appliance and let cord hang over edges of tables, counters or touch hot surfaces.
13. Only use recommended accessories included with this appliance. The use of accessories or attachments not recommended may cause a risk of fire or injury.
14. Before placing any accessory into the cooker, ensure they are clean and dry.
15. **DO NOT** move the appliance when in use.
16. **DO NOT** cover the air intake vent or air outlet vent while unit is operating. Doing so will prevent even cooking and may damage the unit or cause it to overheat.

SAFETY INSTRUCTIONS

17. **DO NOT** touch hot surfaces. Appliance surfaces are hot during and after operation. To prevent burns or personal injury, **ALWAYS** use protective hot pads or insulated oven mitts and use available handles and knobs.
18. **DO NOT** touch accessories during or immediately after cooking. The accessories becomes extremely hot during the cooking process. Avoid physical contact while removing the accessory from the appliance. **DO NOT** use this appliance for deep-frying.
19. Should a grease fire occur or the unit emits black smoke, unplug immediately. Wait for smoking to stop before removing any cooking accessories.
20. Please refer to the Cleaning & Maintenance section for regular maintenance of the appliance.
21. To disconnect, turn off, then unplug from socket when not in use and before cleaning.
22. Allow to cool before cleaning, disassembly, putting in or taking off parts and storage.
23. **DO NOT** clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
24. Cleaning and user maintenance shall not be made by children.
25. **DO NOT** place on or near a hot gas or electric burner, or in a heated oven.
26. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
27. Use extreme caution when removing tray or disposing of hot grease.
28. **DO NOT** clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.

SAVE THESE INSTRUCTIONS!
HOUSEHOLD USE ONLY

PRODUCT COMPONENTS

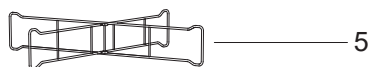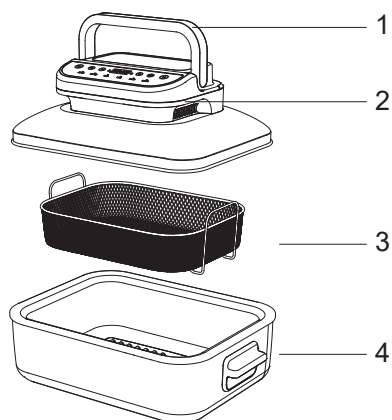

1. Handle

2. Main Unit

3. Air Fry Basket

 
4. Cooking Pot

5. Unit Holder

6. Detachable Power Cord

HOW TO USE

CONTROL PANEL

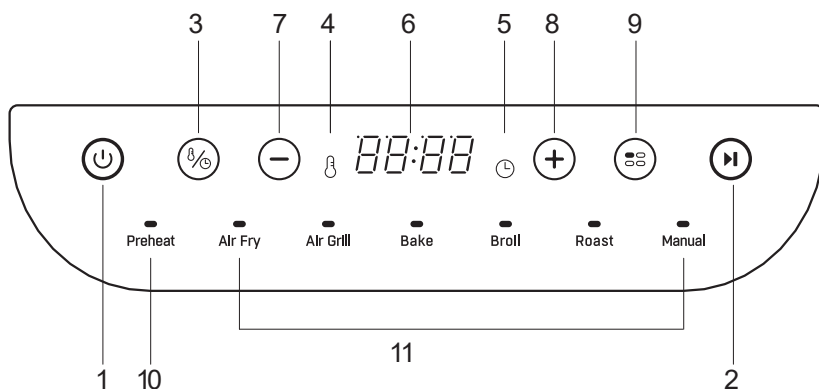

1. Power button

Plug in the unit, the power indicator turns on, displays "OFF". Press power button to enter into standby mode, press power button again to turn off.

2. Start/Stop button

Press it to start or pause the cooking process at any time.



Note:

When take out the main unit during cooking process to check or add food ingredients, the unit will stop cooking automatically. Put the main unit at cooking pot in place again, lay down the handle, press Start/Stop button to go on the cooking process.

3. Time / Temperature button

Allow you to override preset times or temperatures. Time or temperature can be adjusted by pressing this button entering into adjusting mode, the Time or Temperature indicator will turn on, then press "-" or "+" button to adjust the time or temperature.

4. Temperature setting indicator

5. Time setting indicator

6. Display

Displays cooking time or setting temperature.

HOW TO USE

7. “-”Decrease button

Decrease the time or temperature, long press for fast decrease.

8. “+”Increase button

Increase the time or temperature, long press for fast increase.

9. Preset functions

Press it to select the preset functions:

Air fryer, Air grill, Bake, Broil, Roast, and Manual.

10. Preheat indicator

The machine has a preheat function, when the cooking function start, the Preheat indicator will turn on, after the unit approach the preheat temperature, Preheat indicator will turn off and unit start beeping, display flashing, it is to remind placing food, then you can add food ingredients into the cooking pot (it depends on different recipes)



Note:

After food is placed well and evenly, cover back main unit and lay down handle, press Start/Stop button to start cooking and timer countdown.

11. Preset functions indicators

The related indicator will turn on when function selected.


Preset Functions Chart

Presets	Defaulted Time (Minutes)	Defaulted Temperature (°F)	Time Range (Minutes)	Temperature Range (°F)
Air Fry	15	400	1-60	140-450
Air Grill	12	450	1-40	140-500
Bake	35	360	1-60	140-400
Broil	8	450	1-40	140-500
Roast	35	350	1-120(2hrs)	140-450
Manual	10	140	1-360(6hrs)	140-400

HOW TO USE


BEFORE FIRST USE

 1. Remove and discard any packaging material, promotional labels, and tape from the unit.
2. Remove all accessories from the package and read this manual carefully. Please pay particular attention to operational instructions, warnings, and important safeguards to avoid any injury or property damage.
3. Take out main unit from cooking pot. Wash the air fry basket, cooking pot and unit holder in warm, soapy water, then rinse and dry thoroughly. NEVER clean the main unit in the water or dishwasher.

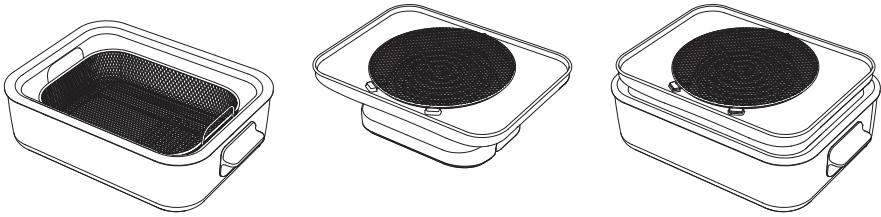


Note: The main unit is separated from cooking pot, the pot is also used as a cooking base.

4. Insert the detachable power cord into main unit. The power cord is detachable from main unit, it can be removed and stored separately.

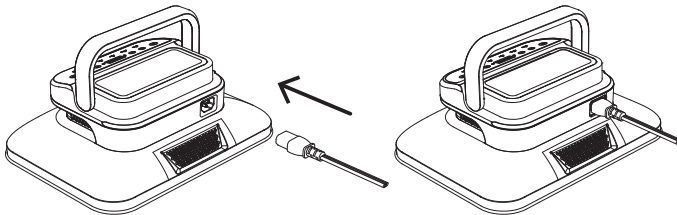



HOW TO USE

5. Place the main unit onto cooking pot. Plug in the power cord.


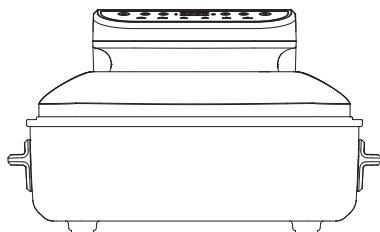


Note:

1. For your convenience to lift and move the main unit, a handle is designed on top of unit.
2. For safety, a micro-switch is built inside handle, micro-switch would not be activated if handle lifted or leave from its desired position, and machine does not work. Only the handle lay down at desired place with required position, micro-switch can be activated to let unit work.

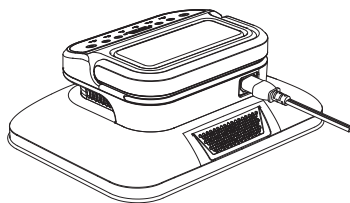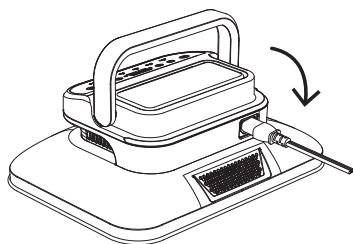

How to use cooking pot

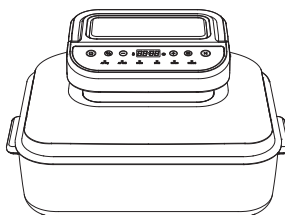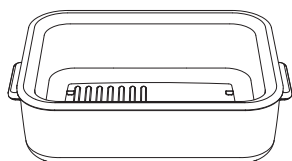 

HOW TO USE




The cooking pot is also a main unit base, put food ingredients into cooking pot, then place main unit onto cooking pot, lay down handle, then start to cook.
The bottom of cooking pot could be used as frying pan.



Caution :

Do not touch the hot metal surface of main unit and cooking pot during cooking or after cooking directly, its hot surface might cause scald. Use the handles to carry the unit.

How to use the air fry basket

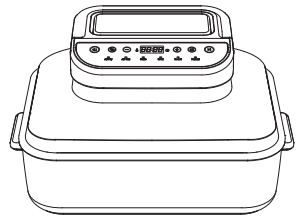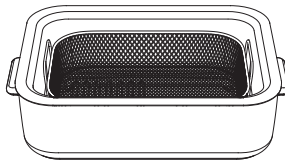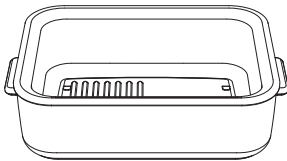

Air fry basket is used for air fry function, put food ingredients into air fry basket, put the basket into cooking pot, then place main unit onto cooking pot, lay down handle, then start to cook.




Caution :

Do not touch the hot air fry basket and cooking pot during cooking or after cooking directly, its hot surface might cause scald. Use oven gloves to take out the air fry basket

How to use unit holder

For convenience on using this air fryer grill, a main unit holder is designed. If you want to take a look on cooking performance or add some ingredients during cooking, take the main unit from cooking pot, then place it on this holder. This is to avoid main unit to dirty the countertop surface. As bellow images show.

HOW TO USE

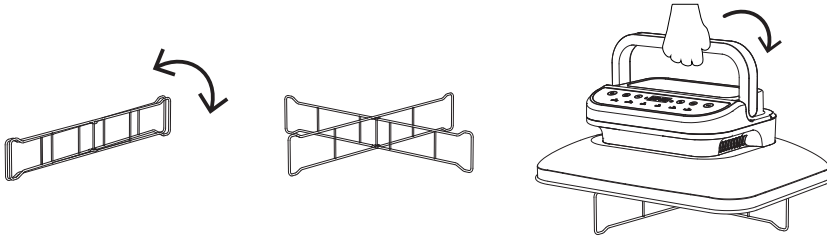**Note:**

Always put the hot main unit onto the unit holder when take it off from cooking pot, it can help the main unit cool down and protect your countertop surface.

**Caution :**

Do not touch the hot metal surface of main unit and cooking pot during cooking or after cooking directly, its hot surface might cause scald.

CLEANING THE STEAM WAND

1. Unplug the unit from the outlet and allow it to completely cool before cleaning.
2. Do not use abrasive cleaners, as they will damage the finish. Simply wipe the exterior with a clean, damp cloth and dry thoroughly. Do not use excess pressure when cleaning the area of the control panel as it could cause the text to be removed over time.
3. To clean the interior walls use a damp soapy cloth or sponge. Never use harsh abrasives or corrosive products including oven cleaner sprays. These could damage the grill surface. Never use steel wool pads on the Air Fryer Grill or accessories.
4. Always clean the Removable parts after each use. Excess food particles could cause smoking and will be hard to remove.
5. Only the cooking pot is dishwasher safe. **DO NOT** immerse the main unit in water.

TROUBLESHOOTING

PROBLEM	POSSIBLE SOLUTION
The unit will not turn on.	Make sure the detachable power cord insert to the main unit in place.
	Make sure the unit is plugged in.
	There is a micro-switch built into the handle, ensure handle must be placed to desired place to activate the switch.
The main unit is a removable connecting with cooking pot.	To sake convenience for customer using, a unit holder is designed, always ensure the main unit is place on holder when remove from cooking pot.
Foods are not completely cooked.	Increase cooking temperature or time.
Foods are overcooked or burned.	Decrease cooking temperature or time.
	Make sure food items are not too large and are not touching the heating elements
Foods are cooked unevenly.	Preheat the unit.
	Make sure food items are not too closely packed into cooking pot.
White smoke is coming out of the air fryer grill.	The unit may produce some white smoke when you use it for the first time. This is normal.
	Excess oil or fatty foods may produce white smoke. Make sure the inside of the grill is cleaned properly and not greasy.

LIMITED WARRANTY

LIMITED WARRANTY

Geek Technology Ltd. warrants to the original consumer or purchaser this Geek Chef Air Fryer Grill is free from defects in material or workmanship for a period of One (1) year from the date of purchase. If any such defect is discovered within the warranty period, Geek Technology Ltd. at its discretion, will repair or replace the Product at no cost. This limited warranty is good only to the original purchaser of the product and effective only when used in United States.

For warranty or repair service: Call 1-844-801-8880 and choose the appropriate prompt, or email info@geektechnology.com. Please have your Product's model number, date code (on rating label), your name, address, city, state, zip code and phone number ready.

NO OTHER WARRANTY IS APPLICABLE TO THIS PRODUCT. THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, EXPRESS OR IMPLIED. INCLUDING WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT ANY IMPLIED WARRANTY IS REQUIRED BY LAW. IT IS LIMITED IN DURATION TO THE EXPRESS WARRANTY PERIOD ABOVE. NEITHER THE MANUFACTURER NOR ITS U.S. DISTRIBUTOR SHALL BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY NATURE. INCLUDING WITHOUT LIMITATION. LOST REVENUES OR PROFITS, OR ANY OTHER DAMAGE WHETHER BASED IN CONTRACT, TORT, OR OTHERWISE, SOME STATES AND/OR TERRITORIES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS. SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU, THE ORIGINAL PURCHASER, SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR TERRITORY TO TERRITORY.

THIS LIMITED WARRANTY DOES NOT APPLY TO :

1. Failure of product to perform during power failures and interruptions or inadequate electrical service.
2. Damage caused by transportation or handling.
3. Damage caused to the product by accident, vermin, lightning, winds, fire, floods, or acts of God.
4. Damage resulting from accident, alteration, misuse, abuse, or improper installation, repair, or maintenance. Improper use includes using an external device that alters or converts the voltage or frequency of electricity.
5. Any unauthorized product modification, repair by unauthorized repair center, or use of non-approved replacement parts.
6. Abnormal cleaning and maintenance as described in the user's manual.
7. Use of accessories or components that are not compatible with this product.



Geek Technology Ltd.
1275 Bloomfield Ave
Fairfield, NJ 07004
Toll Free 1-844-801-8880

Version: --2021.5.0