



5-Cup Coffee Maker



Customer Assistance:
1-888-778-8525

Model: MS-202390CN

Table of Contents

IMPORTANT SAFEGUARDS	3
ADDITIONAL SAFEGUARDS	4
Cord plug	4
Line Cord Safety Tips	4
BEFORE FIRST USE	5
Unpacking	5
Cleaning the Coffee Maker	5
PARTS	6
BREWING COFFEE	6
Keep Warm	7
Second Pot	7
Pause and Serve	7
USER MAINTENANCE INSTRUCTIONS	7
To Clean	7
To Store	8
Placement and Removal of Carafe Lid	9
TECHNICAL DATA	9
ONE YEAR LIMITED WARRANTY	10

IMPORTANT SAFEGUARDS

When using electrical appliances especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

Read all instructions before use.

1. Do not touch hot surfaces. Use any handles or knobs.
2. To protect against fire, electrical shock, and injury to persons do not place cord, plug or appliance in water or other liquids.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
5. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to an authorized service facility for examination, repair or adjustment.
6. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
7. Do not use outdoors.
8. Do not let cord hang over edge of table or counter or touch hot surfaces.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. Extreme caution must be used when moving an appliance containing hot food, water or other hot liquids.
11. Do not use appliance for other than intended use.
12. The glass container is designed for use with this appliance. It must never be used on a range top. Do not set a hot container on a wet or cold surface. Do not use a cracked container or a container having a loose or weakened handle. Do not clean container with cleaners, steel wool pads or other abrasive materials. Do not place in microwave oven.
13. To disconnect turn switch to Off, then remove plug from outlet.
14. The lid on the glass carafe must be closed for brewing. See illustration on page 9 for instructions on placement and removal of the carafe lid.
15. Fill the water reservoir of this appliance with cool water only. Do not fill with other liquids or foods.
16. Scalding may occur if the lid is removed during the brewing cycle.
17. The coffee maker shall not be placed in a cabinet when in use.
18. This appliance is not intended for use by children or by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge. Close supervision is necessary when the appliance is used near children. Children should be supervised to ensure that they do not play with the appliance.

SAVE THESE INSTRUCTIONS!

ADDITIONAL SAFEGUARDS

This appliance is for **HOUSEHOLD USE ONLY**. It may be plugged into an AC electrical outlet (ordinary household current). Do not use any other electrical outlet.

DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE, OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

A short power-supply cord is to be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply cord or extension cord is used:

- The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance, and;
- The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

CORD PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

LINE CORD SAFETY TIPS

1. Never pull or yank on cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet. Do not pull on the line cord.
4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the line cord replaced.
5. Never wrap the cord tightly around the appliance, as this could place undo stress on the cord where it enters the appliance and cause it to fray and break.

IMPORTANT

During the first few minutes of initial use, you may notice smoke and/or a slight odor. This is normal and should quickly disappear. It will not recur after appliance has been used a few more times.

WARNING: To reduce the risk of fire or electric shock, do not remove the bottom cover. No user serviceable parts inside. Repair should be done by authorized service personnel only.

BEFORE FIRST USE

Unpacking:

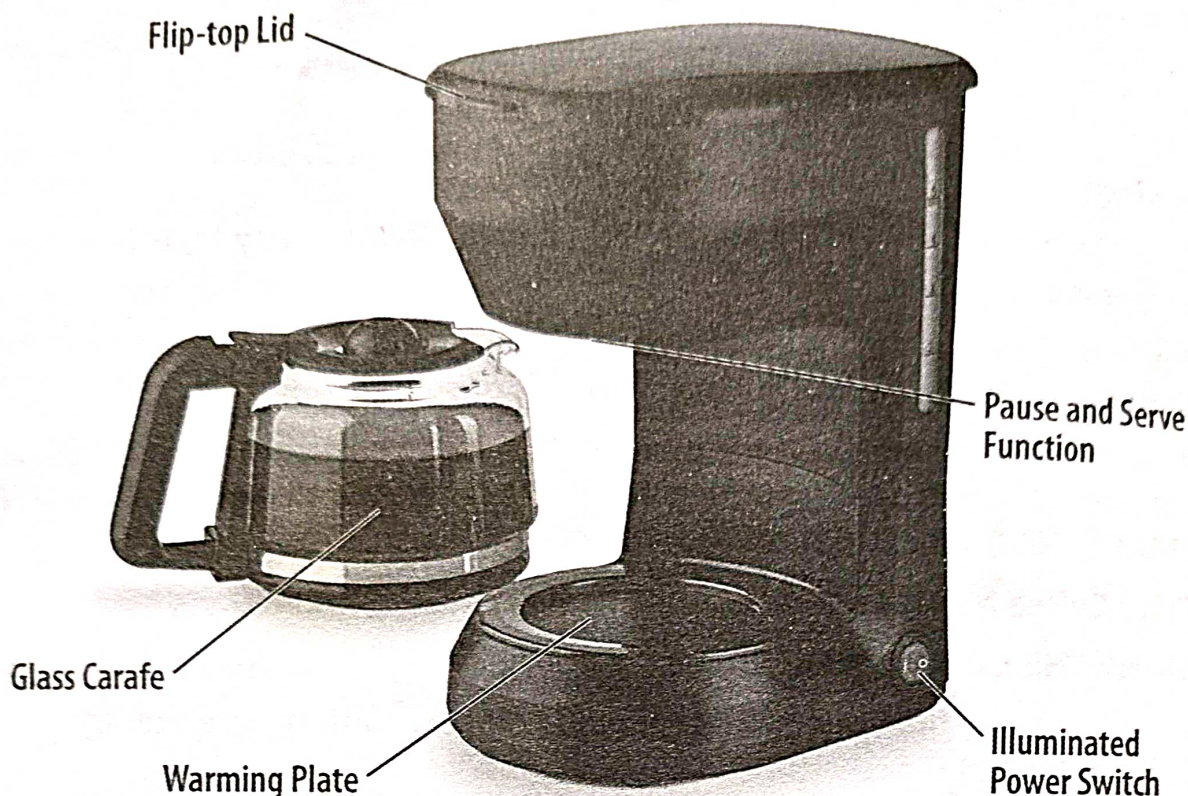 
1. Carefully unpack the Coffee Maker and all parts. Remove any tape, labels or packaging materials.
2. Wash the glass carafe and carafe lid in warm, soapy water, rinse well and dry thoroughly, then wipe unit with a soft cloth or sponge.
3. Wipe exterior surfaces of the product with a soft, moist cloth to remove dust particles collected during packing and handling. **NEVER IMMERSE THE COFFEE MAKER, CORD OR PLUG IN WATER OR ANY OTHER LIQUID.**
4. Place Coffee Maker on a solid, level, heat-resistant surface.

CLEANING THE COFFEE MAKER:

Before the first use, the Coffee Maker should be rinsed with clean water by running a brew cycle.

1. Fill the glass carafe to **MAXIMUM FILL LINE**, which is 5 cups, with cool water and pour it into the water reservoir.
2. Open the flip-top brew chamber and make sure the tabs align with the openings on the brew basket. Once brew basket is placed within the chamber, close the flip-top lid again. The lid will not close unless the basket is properly aligned in the chamber.
3. Place carafe on the warming plate and plug the Coffee Maker into an electrical outlet. Ideally, the Coffee Maker should be operated on its own circuit, separate from other appliances.
4. Push the Illuminated Power Switch to the **ON** position. Allow water to cycle through without coffee or paper filter; this will clean the water reservoir and brew chamber prior to use. Discard water in glass carafe once cycle is complete.
5. After the cycle is complete, push the Illuminated Power Switch to the **OFF** position.
6. The Coffee Maker is now ready for use.

PARTS



BREWING COFFEE

1. Make sure the Coffee Maker is on a dry, level, heat-resistant surface.
2. With power switched OFF and using carafe markings as a guide, lift the lid and pour desired amount of cold water into the reservoir. Markings on water level indicator inside will measure capacity.
3. Place a #2 Size Cupcake paper coffee filter in holder, and add 1 level tablespoon of coffee for each cup desired. Do not overfill. If using a scoop, use one scoop (equivalent to two tablespoons) for every two cups, increasing or decreasing amount to suit individual taste. Gently shake filter to spread coffee evenly.
4. Make sure the flip-top brew chamber lid is properly closed.
5. Place carafe on warming plate, plug in, and simply press the power switch to the ON(I) position and the brew cycle will begin.
6. After the brew cycle is complete, push the Illuminated Power switch to the OFF(O) position. **NOTE: If the Illuminated Power switch is pressed to the OFF(O) position while the Coffee Maker is in the process of brewing, this will cancel the brew cycle. To restart, empty the carafe and insert a new paper filter with ground coffee. Check the water level in the**

water reservoir for any remaining water to prevent over-filling on the next brew cycle.

KEEP WARM

After brewing the Coffee Maker will switch to a keep warm function. During this function, the warming plate stays hot to keep the brewed coffee at a suitable serving temperature.

NOTE: There is no Automatic Off setting for this Coffee Maker. To turn off the coffee maker, the Illuminated Power switch must be pushed to the OFF(O) position. When the power light is no longer illuminated, the coffee maker is off. Do not operate with an empty carafe.

FOR A SECOND POT

Turn the unit off and allow to cool for 10 minutes before brewing a second pot of coffee. If you wait less than 10 minutes, hot water left in the tubes could splash out. To avoid this, rinse carafe, replace filter and add fresh coffee. Place carafe on warming plate and use another container to pour cold water into water reservoir. Use the water level indicator to determine water level.

PAUSE AND SERVE

This feature ensures that coffee will not drip for 30 seconds if carafe is removed from warming plate to serve a cup of coffee while it is brewing. To use this feature, be sure carafe is properly positioned on warming plate, and allow it to fill with at least one or two cups of freshly brewed coffee before removing. After pouring, immediately replace carafe on warming plate.

WARNING: TO AVOID DAMAGE TO THE UNIT, SPILLS OR BURNS, USE THE PAUSE AND SERVE FEATURE ONLY AS DIRECTED. DO NOT PLACE A MUG OR CUP DIRECTLY UNDERNEATH THE WATER OUTLET.

USER MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance. To reduce the risk of electric shock, do not open or remove the bottom cover of unit. It contains no user serviceable parts. Do not try to repair it yourself. Refer it to qualified personnel if servicing is needed.

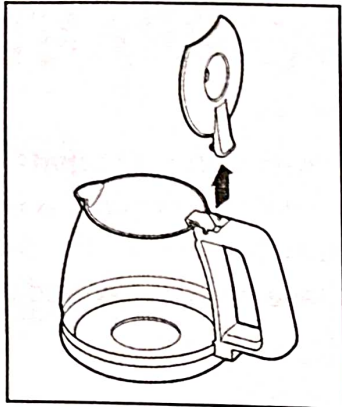 
TO CLEAN:

- Remove paper filter and coffee grounds from the brew basket.
- Fill the glass carafe with cool water and pour into the water reservoir.
- Press the Illuminated Power Switch to run a brew cycle with only clean water.

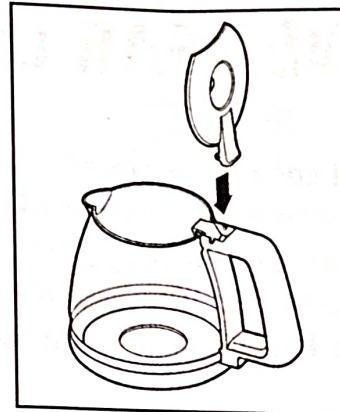 
- Turn off the Coffee Maker and unplug from the wall outlet.
- Wipe down the outside surfaces of the Coffee Maker with a damp cloth and dry thoroughly. **NEVER** use harsh chemicals or abrasive cleaning pads. **NEVER** immerse the Coffee Maker in water or any other liquid and **NEVER** place the appliance under running water.
- Remove the brew basket, and glass carafe and wash in warm soapy water. Do not use harsh chemicals or abrasive cleaners. Dry thoroughly prior to use.
- **FOR A MORE THOROUGH CLEANING**, pour one cup of white vinegar into carafe. Add cold water until carafe is filled to the MAX marking. Pour water and vinegar mixture into water reservoir. Place a filter in the brew basket and place the carafe on the warming plate and press the Illuminated Power Switch button. Allow to steam and drip until carafe is half full. Turn Coffee Maker off, remove carafe from warming plate and let it sit for 15 minutes.
- When carafe is cool, pour liquid back into water reservoir, place carafe back on warming plate, and press the illuminated power switch again. Allow all liquid to drip into carafe. Turn Coffee Maker OFF, and discard the liquid in the carafe.
- Allow Coffee Maker to cool for 10 minutes; then rinse by filling the water reservoir with clean, cold water, inserting a new filter and allowing water to drip into carafe. Turn Coffee Maker OFF and discard water. Wash and dry carafe and brew basket. When Coffee Maker has cooled, wipe with a dry cloth.
- The carafe, brew basket and carafe lid may be washed in warm, soapy water or on the top rack of dishwasher. The unit can be wiped with a soft, slightly damp cloth and dried. Never use abrasive scouring pads or cleanser. Never immerse unit in water or any other liquid.

TO STORE:

- Be sure all parts are clean and dry before storing. Store appliance in its box or in a clean, dry place. Never store it while it is hot or wet or still plugged in. Never wrap cord tightly around the appliance.
- **ALWAYS** store the Coffee Maker in an upright position.

PLACEMENT AND REMOVAL OF CARAFE LID:**To remove the carafe lid:**

1. Open the lid to the vertical position.
2. Gently pull the lid upward to allow the tabs on the carafe lid to release from the notches on the carafe handle.

**To replace the carafe lid:**

1. Align the tabs on the lid with the notches on the carafe handle.
2. Gently press the lid down until the tabs on the carafe lid engage with the notches on the carafe handle.

TECHNICAL DATA

Rated voltage: 120V~ 60Hz

Rated power output: 650W

If additional assistance is needed, please contact our Customer Assistance at 1-888-778-8525.

ONE YEAR LIMITED WARRANTY

This product carries a warranty that it will be free from defects in material and workmanship for a period of one year from the date of original purchase or date of delivery, **whichever is later**. This warranty is valid for the original retail purchaser from the date of initial retail purchase or delivery and is not transferable. Keep your original sales receipt.

IMPORTANT: This warranty does not cover damages resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachments not provided with the product, loss of parts, or subjecting the appliance to any but the specified voltage.

(Read directions carefully.)

If service is required during the warranty period, properly pack your unit. We recommend using the original carton and packing materials. Return the product to your nearest Wal-Mart store with the sales receipt. A replacement or refund may be offered at the discretion of Wal-Mart. If additional assistance is needed, please contact customer assistance at: 1-888-778-8525.

Wal-Mart expressly disclaims all responsibility for consequential damages or incidental losses caused by use of the appliance. Some states do not allow this exclusion or limitation of incidental or consequential losses so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

SAVE THIS FOR YOUR RECORDS

Mainstays logo is a registered trademark of Wal-Mart Stores, Inc. Bentonville, AR 72716

Made in China