

EN

gorenje

INSTRUCTION MANUAL FOR UPRIGHT FREEZER



www.gorenje.com

We thank you for the confidence you have shown by purchasing our appliance that is designed to simplify your life. To make the use of the product easier, we have supplied detailed instructions for use, as well as installation instructions supplied on a separate sheet. These instructions should allow you to learn about your new appliance as quickly as possible.

We wish you find a lot of pleasure in its use.

The appliance is intended solely for household use.

The freezer is intended for freezing fresh food and for long-term storage of frozen food (up to one year, depending on the type of food).

Please visit our website where you can enter your appliance model number, indicated on the rating plate or the warranty sheet, to find a detailed description of your appliance, tips on use, troubleshooting, service information, instructions for use etc.



<http://www.gorenje.com>



Important safety warning

CONTENTS

4 IMPORTANT NOTES AND PRECAUTIONS 4 SAFETY INFORMATION AND WARNINGS	INTRODUCTION
11 INSTALLING YOUR NEW APPLIANCE 14 APPLIANCE DESCRIPTION 15 CHANGING THE DOOR OPENING DIRECTION 21 OPERATING THE APPLIANCE 24 USING YOUR APPLIANCE	APPLIANCE DESCRIPTION
25 HELPFUL HINTS AND TIPS 26 CLEANING AND CARE	DEFROSTING AND CLEANING THE APPLIANCE
28 TROUBLESHOOTING 30 DISPOSAL OF THE APPLIANCE	MISCELLANEOUS

IMPORTANT NOTES AND PRECAUTIONS



SAFETY INFORMATION AND WARNINGS

For your safety and correct use, carefully read this user manual, including its hints and warnings, before installing and using the appliance for the first time. To avoid unnecessary mistakes and accidents, it is important to make sure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and be sure that they remain with the appliance if it is moved or sold, so that anyone using it throughout its life is properly informed about its use and safety notices. For the safety of life and property, observe the precautions in these user's instructions as the manufacturer shall not be responsible for any damage caused by failure to do so.

Safety of children and others who are vulnerable people

According to EN standard

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory ,or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.

According to IEC standard

This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Keep all packaging away from children as there is risk of suffocation.
- If you are discarding the appliance, pull the plug out of the socket, cut the power cord (connection cable) (as close to the appliance as you can) and remove the door to prevent children playing with the appliance from suffering an electric shock or from closing themselves inside it.
- If this appliance, featuring a magnetic door seal, is to replace an older appliance with a spring lock (latch) on the door or lid, be sure to make the spring lock unusable before you discard the old appliance. This will prevent it from becoming a death trap for a child.



General safety

- **WARNING** —This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices, and other working environments;
 - farmhouses and by clients in hotels, motels, and other residential type environments;
 - bed and breakfast type environments;
 - catering and similar non-retail applications.

- WARNING — Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- WARNING — If the power cord is damaged, it must be replaced by the manufacturer, his service agent, or a similarly qualified person in order to avoid a hazard.
- WARNING — Keep ventilation openings in the appliance enclosure or in the cabinet the appliance is built into clear of obstruction.
- WARNING — Do not use mechanical devices or other means to accelerate the defrosting process, except for those recommended by the manufacturer.
- WARNING — Do not damage the refrigerant circuit.
- WARNING — Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- WARNING — The refrigerant and insulation blowing agent (gas) are flammable. When disposing of the appliance, do
 - so only at an authorized waste disposal centre. Do not expose to flame.
- WARNING — When positioning the appliance, ensure the supply cord is not trapped or damaged.
- WARNING — Make sure there is not a power strip or a portable power supply behind the appliance.

Replacing the LED

- WARNING — The LED light must not be replaced by the user! If the LED light is damaged, contact the customer helpline for assistance.

Refrigerant

The refrigerant isobutene (R600a) is contained within the refrigerant circuit of the appliance. It is a natural gas

with a high level of environmental compatibility, which is nevertheless flammable.

During transportation and installation of the appliance, make sure that none of the components of the refrigerant circuit are damaged.

The refrigerant (R600a) is flammable.

- **WARNING** — Refrigerators contain refrigerant, and gases in the insulation. Refrigerant and gases must be disposed of professionally as they may cause eye injuries or ignition. Ensure that refrigerant circuit tubing is not damaged prior to proper disposal.



WARNING! Risk of fire/flammable materials.

If the refrigerant circuit is damaged:

- Avoid opening flames and sources of ignition.
- Thoroughly ventilate the room in which the appliance is located.

It is dangerous to alter the specifications or modify this product in any way.

Any damage to the cord may cause a short circuit, fire, and/or electric shock.



Electrical safety

- The power cord must not be lengthened.
- Make sure that the power plug is not crushed or damaged. A crushed or damaged power plug may overheat and cause a fire.
- Make sure that you can access the mains plug of the appliance.
- Do not pull the mains cable.

- If the mains socket is loose, do not insert the power plug. There is a risk of electric shock or fire.
- Do not operate the appliance if the interior lighting lamp cover is not in place.
- The fridge may only be connected to single-phase power supply alternating current at 220-240 V/50 Hz. If fluctuation of voltage in the user's district is so high that the voltage exceeds the above range, for safety reasons, be sure to install an AC automatic voltage regulator with a rating of more than 350 W on the fridge power supply line. The fridge must employ a special power socket instead of common one with other electric appliances. Its plug must match the socket with ground wire.

Daily use

- Do not store flammable gases or liquids in the appliance. There is a risk of an explosion.
- Do not operate any electrical appliances in the appliance (e.g., electric ice cream makers, mixers etc.).
- When unplugging, always pull the plug from the mains socket; do not pull on the power cord.
- Do not place hot items near the plastic components of this appliance.
- Do not place food products directly against the air outlet on the rear wall.
- Store pre-packed frozen food in accordance with the frozen food manufacturer's instructions.
- The appliances manufacturer's storage recommendations should be strictly complied with. Refer to relevant instructions for storage.
- Do not place carbonated or fizzy drinks in the freezer compartment. The increased pressure in the container may cause it to explode, resulting in damage to the appliance.
- Frozen food can cause ice burns (frostbite) if consumed straight from the freezer compartment.

- Do not place the appliance in direct sunlight.
- Keep burning candles, lamps, and other items with naked flames away from the appliance to avoid setting the appliance on fire.
- The appliance is intended for keeping food and/ or beverages in normal household, as explained in this instruction booklet. The appliance is heavy. Care should be taken when moving it.
- Do not remove nor touch any items from the freezer compartment if your hands are damp or wet as this could cause skin abrasions or ice burns (frostbite).
- Never stand on the base, drawers, doors etc. or use them as supports.
- Frozen food must not be refrozen once it has been thawed.
- Do not consume ice popsicles or ice cubes straight from the freezer as this can cause ice burns (frostbite) to the mouth and lips.
- To prevent items from falling and causing injury or damage to the appliance, do not overload the door racks or put too much food in the crisper drawers.
- WARNING - Food must be packed into bags before it is put into the refrigerator. Liquids must be stored in bottles or capped containers to avoid spilling. Due to its design and structure, the product is not easy to clean.

Caution!

Care and cleaning

- Before maintenance, switch off the appliance and disconnect the mains plug from the mains socket.
- Do not clean the appliance with metal objects, steam cleaner, essential oils, organic solvents, or abrasive cleansers.
- Do not use sharp objects to remove frost from the appliance. Use a plastic scraper.

Important notes regarding installation!

- When connecting the appliance to power supply, carefully follow the instructions in this manual.
- Unpack the appliance and check for any damage. Do not connect the appliance if it is damaged. Report any damage immediately to the place where you bought the appliance. In this case, retain the packaging.
- It is advisable to wait at least four hours before connecting the appliance to allow the oil to flow back into the compressor.
- Ensure adequate air circulation around the appliance. Lack of air circulation could lead to overheating. To achieve sufficient ventilation, follow the installation instructions. Wherever possible, the back of the product should not be too close to a wall to avoid touching or catching warm parts (compressor, condenser) and therefore to prevent a risk of fire. Follow the installation instructions.
- The appliance must not be located close to radiators or cookers.
- Make sure that the mains plug is accessible after the appliance is installed.

Service


- Any electrical work required as part of servicing of the appliance should be carried out by a qualified electrician or a similarly competent person.
- This product must be serviced by an authorized Service Centre, and only genuine spare parts must be used.
 - 1) If the appliance is Frost Free.
 - 2) If the appliance contains freezer compartment.

INSTALLING YOUR NEW APPLIANCE

- Before using the appliance for the first time, please review the following tips.

Warning!


For proper installation, this freezer must be placed on a level surface of hard material that is the same height as the rest of the flooring. This surface should be strong enough to support a fully loaded freezer. The rollers, which are not castors, should be only used for forward or backward movement. Moving the freezer sideways may damage your floor and the rollers.

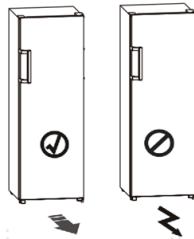

Ventilation of appliance

In order to improve efficiency of the cooling system and save energy, it is necessary to maintain good ventilation around the appliance to allow dissipation of heat. For this reason, there should be sufficient clearance around the refrigerator.

Suggestion: It is advisable to leave 50–75 mm of space from the back to the wall, at least 100 mm above the appliance, at least 100 mm from its sides to the wall, and to leave a clear space in front of the appliance to allow the doors to open to a 130° angle. Please see the following diagrams.

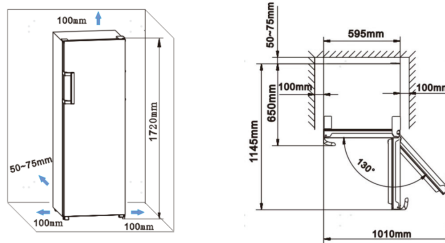

Note:


- This appliance performs well in the climate class from SN to T. It may not work properly if it is left at a temperature above or below the indicated range for a long period.

Class	Temperature
SN	from +10 °C to +32 °C
N	from +16 °C to +32 °C
ST	from +16 °C to +38 °C
T	from +16 °C to +43 °C

- Stand you appliance in a dry place to avoid damage due to excessive moisture or humidity.
- Keep the appliance out of direct sunlight, rain, or frost. Stand the appliance away from heat sources such as stoves, fires, or heaters.

Levelling of the appliance


- For levelling and sufficient air circulation in the lower rear section of the appliance, the bottom feet may need to be adjusted. You can adjust them by hand or using a suitable spanner.
- To allow the door to self-close, tilt back the top backwards by 10-15mm.

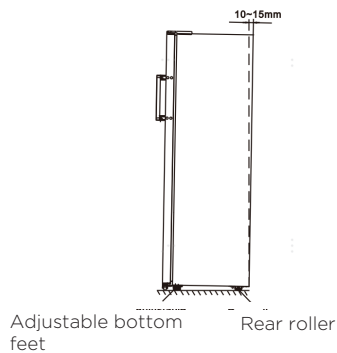


Installing the door handles

For the convenience of transportation, the door handles are separately provided in a plastic bag, you can install the door handles as follows.

1. Lever screw covers on the left side of the door, and then put them back to the plastic bag.
2. Match the handle on the left side of the door, keeping axes of the screw holes in the handle and the door in a line, as the picture shows.
3. Fix the handle with the special screws provided in the plastic bag.

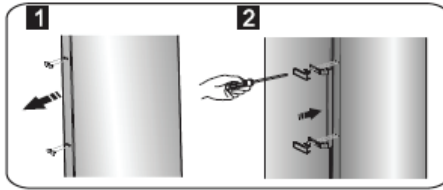

APPLIANCE DESCRIPTION

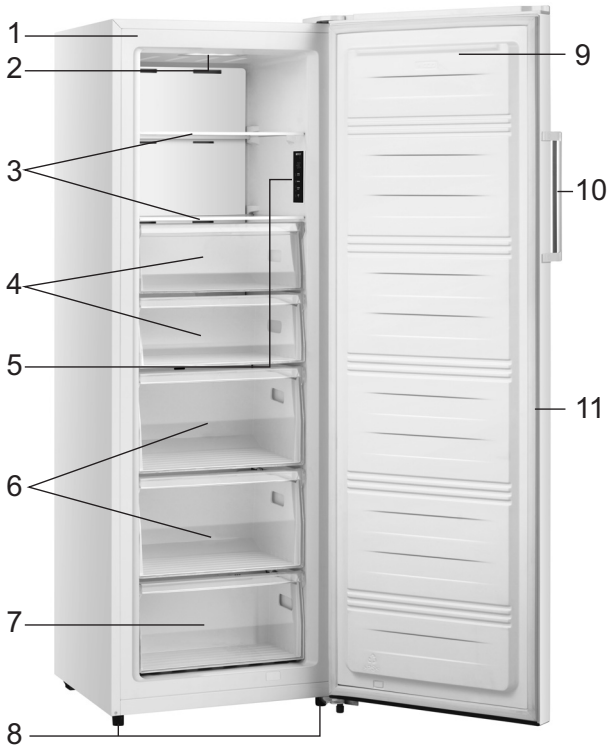

1. Cabinet
2. LED light
3. Glass shelf
4. Upper drawer parts
5. Display
6. Middle drawer parts

7. Lower drawer part
8. Adjustable bottom feet
9. Freezer door
10. Handle (optional)
11. Freezer gasket










Note:

- Due to unceasing modification of our products, your freezer may be slightly different from this instruction manual, but its functions and using methods remain the same.
- To get the best energy efficiency of this product, please place all shelves, drawers and baskets on their original position as the illustration above.

CHANGING THE DOOR OPENING DIRECTION


The side in which the door opens can be changed from the right side (as supplied) to the left side, if the installation site allows for it.

Tools you will need:


Not provided		
		
8mm socket wrench	Thin-blade screwdriver	Putty knife
		
Cross-shaped screwdriver	Monkey wrench	8mm wrench
Additional parts (in the plastic bag)		
		Left Hinge
		Left Hinge Cover
		Right Screw Cover

Note: Before you start lay the freezer on it's back in order to gain access to the base, you should rest it on soft foam packaging or similar material to avoid damaging the backboard of the freezer. To reverse the door. The following steps are generally recommended.


1. Stand the freezer upright. Remove the screw hole cover and upper hinge cover (right) as follow diagram.

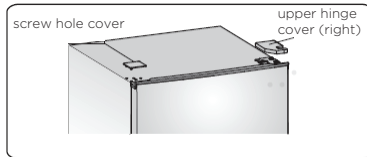


2. Remove the three screws as follow diagram. Lift the right upper hinge part.

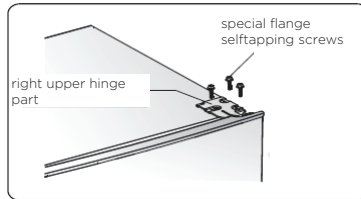


3. Lift the door and place it on a padded surface to prevent scratching.

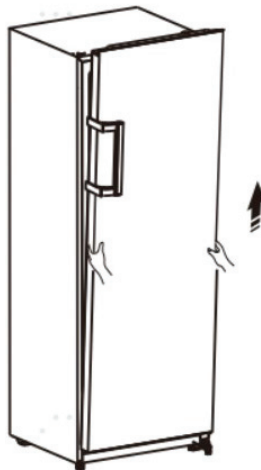


4. Loosen screws (3), remove part (1) and part (2), then replace them to the left side and tighten securely with screws (3).

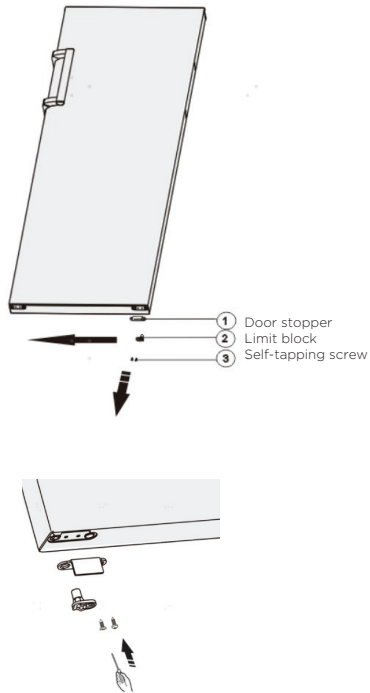


5. Lay the freezer on soft foam packaging or similar material. Remove part (1) part (2), and part (3) by unscrewing the screws (4).

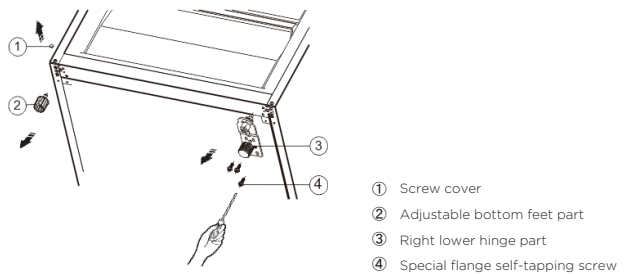


6. Replace part (3) to the left side and fixing it with the screws (4). Replace part (1) and part (2) to another side and fixing it.

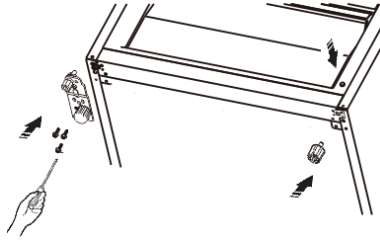


Note: 1. You need move hinge axis from hole (1) to (2) , move adjustable bottom feet part from hole (3) to (4) before transfer.

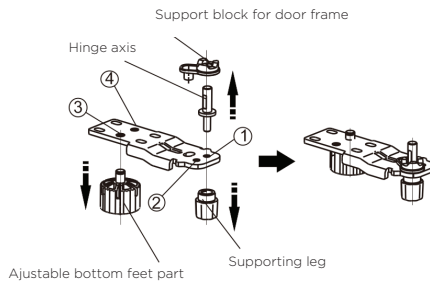


7. Set the door into its new place making sure the pin enters the bushing at the lower frame section.

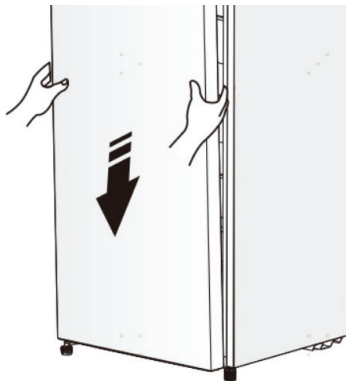


8. Replace the lid by fitting the upper hinge core into the upper door's hole, securing it with the 3 screws.

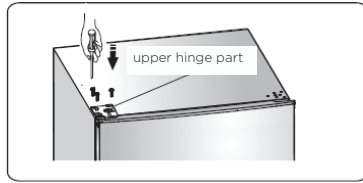

9. Put the screw hole cover and upper hinge cover (left) as follow diagram.

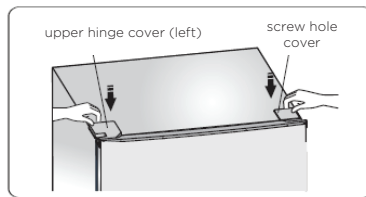


10. Switch the handles from the left to the right (only for the model with handles).

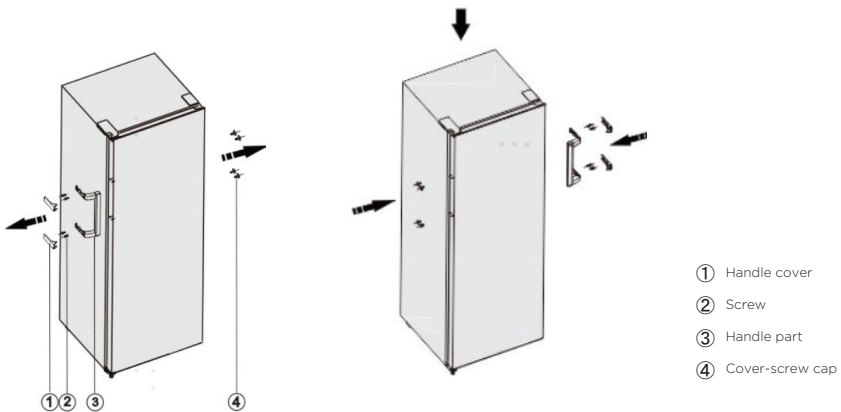

Note!

Due to unceasing modification of our products, handle may be slightly different from this instruction manual, but its functions and using methods remain the same. Switch the handles from the left to the right as follow diagram.

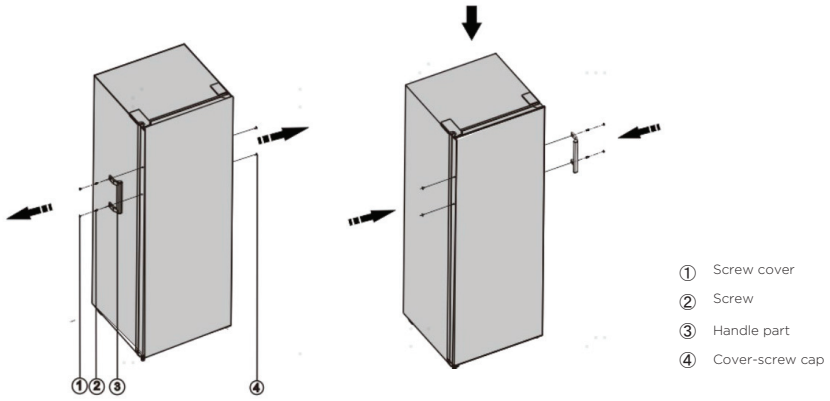



Warning!

When changing the side at which the door opens, the appliance must not be connected to the mains. Remove plug from the mains beforehand.

OPERATING THE APPLIANCE

Use your appliance according to the following control regulations, your appliance has the corresponding functions and modes as the control panels showed in the pictures below. When the appliance is powered on for the first time, the backlighting of the icons on display panel starts working. If no buttons have been pressed and the doors are closed, the backlighting will turn off.

Display panel inside

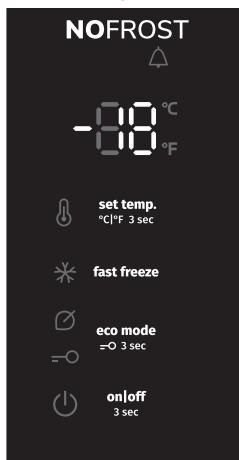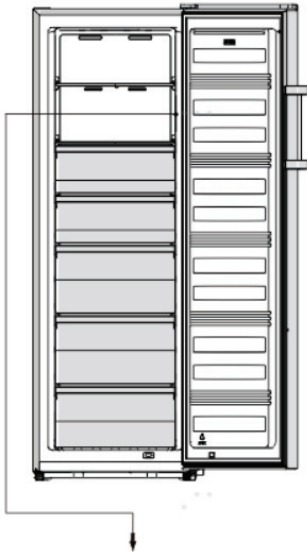

Controlling the temperature



For optimum food preservation, We recommend that when you start your freezer for the first time, the temperature for the freezer is set to -18°C (0°F), if you want to change the temperature, follow the instructions below.


Caution!

When you set temperature, you set an average temperature for the whole freezer cabinet. Temperature inside each compartment may vary from the temperature values displayed on the panel, depending on how much food you store and where you place them. Ambient temperature may also affect the actual temperature inside the appliance.


Note: High temperature setting will accelerate food waste.

1. Temp

In the unlocked state, you can switch the display mode from °C to °F by press the  button for 3 seconds. In the unlocked state, press  button, when the °C light is on, the freezer set temperature is cyclically adjusted between -14°C and -24°C.

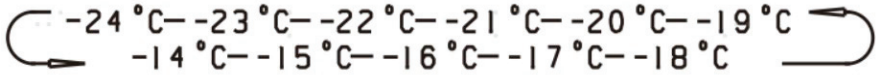 -24 °C - -23 °C - -22 °C - -21 °C - -20 °C - -19 °C
-14 °C - -15 °C - -16 °C - -17 °C - -18 °C


When the °F light is on, the freezer set temperature is cyclically adjusted between 7°F and -11°F.

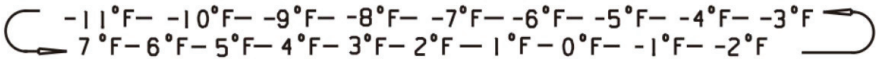
 -11 °F - -10 °F - -9 °F - -8 °F - -7 °F - -6 °F - -5 °F - -4 °F - -3 °F
7 °F - 6 °F - 5 °F - 4 °F - 3 °F - 2 °F - 1 °F - 0 °F - -1 °F - -2 °F

2. Super Freeze

Super Freeze will quickly lower the temperature within the freezer so food will freeze faster. This feature also helps to keep the vitamins and nutrition of fresh food for longer period.



- In the unlocked state, press  button to enter the Super Freeze mode, the Super Freeze icon is lit and the temperature is set to -24°C(-11°F).

 To freeze fresh food activate the Super Freeze function at least 24 hours before placing the food to complete prefreezing.





- Super Freeze mode automatically exits after about 52 hours.
- When Super Freeze function is on, in the unlocked state, you can switch it off by pressing  button and the freezer temperature setting will revert back to the previous setting.

3. Eco

If you are going to be away for a long period of time, you can turn it to Eco mode to save on electricity.

- In the unlocked state, press  button to enter the Eco mode, the Eco icon is lit and the temperature is set to -17°C (1°F).
- When the Eco function is on, in the unlocked state, you can switch it off by pressing  button. The freezer temperature setting will revert back to the previous setting.


4. Child Lock

- When the  light is on the freezer is locked. Press and hold the  button for 3 seconds, the  light is off, the freezer is in the unlocked state. It can perform other button operation.
- If no button have been press for 20 seconds, the  light will be on.


5. Alarm





In case of alarm,  icon will be flashing and there will be buzzing sound.

Door Alarm

- When the door is open for over 2 minutes, the door alarm will sound, meanwhile the display panel show “dr”. In case of door alarm, buzzer will sound 3 times every 1 min.
- After the door alarm time exceeds more than 10 minutes, the buzzer stops beeping, the  icon is off, and the display screen shows normal. The door alarm can also be cleared by closing the door.
- To save energy, please avoid keeping the door open for a long time when using the appliance.

6. Power

Pressing and hold the  button for 3 seconds to turn the power function on or off.

- When the freezer is working, in the unlocked state, you can switch the appliance off by pressing  button for 3 seconds, the  light is on, meanwhile the display panel show“- -”. Important (Do not store any food in the freezer during this time.
- When the freezer is in standby mode and unlocked, press the  button for 3 seconds, the  light is off, the freezer will turn on and the display will shows normal.


Note: The display control only can be setted in the unlocked state.

USING YOUR APPLIANCE

Accessories


Movable shelves/trays

- Various glass or plastic storage shelves or wire trays are included with your appliance - different models have different combinations and different models have different features.
- The walls of the refrigerator are equipped with a series of runners so that the shelves can be positioned as desired.
- There are shelves in freezer chamber and they can be taken out to be cleaned.

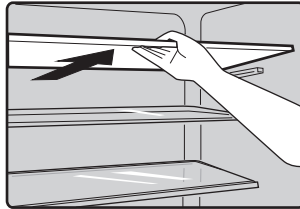


Freezer Drawer

- It is used to store food which needs to be frozen, including meat, fish, ice cream, etc.

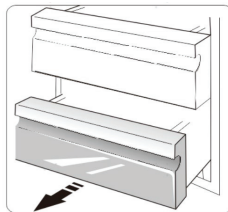

Installing refrigerators in pairs

- Your freezer can be installed with fridge in pairs.
- It can be installed by installation pairs supplied like this, but the energy consumption will increase slightly.

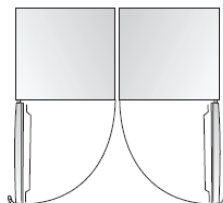

HELPFUL HINTS AND TIPS

Energy saving tips

We recommend that you heed the tips below to save energy.

- Try to avoid keeping the door open for long periods.
- Ensure the appliance is away from any sources of heat (direct sunlight, electric oven, or cooker etc.)
- Don't set the temperature colder than necessary.
- Don't store warm food or evaporating liquid in the appliance.
- Place the appliance in a well ventilated room with low humidity. Please refer to chapter »Installing your new appliance«.
- The diagram shows the optimum combination for the drawers, crisper, and shelves. Unless necessary, do not adjust the combination as this is the most energy-efficient configuration.

Hints for freezing

- When first starting up or after a period out of use: before putting the food in the compartment, let the appliance operate for at least 2 hours at a higher setting.
- Prepare food in small portions to allow rapid and complete freezing, and to allow thawing only the quantity required.
- Wrap the food in aluminium foil or cling film and make sure that the packages are airtight.
- Do not allow fresh unfrozen food to touch the food that is already frozen as this would lead to rise in the temperature of the latter.
- Consuming frozen products immediately after removal from the freezer compartment could cause ice burns (frostbite).
- It is recommended to label and date each frozen package to keep track of the storage time.

Hints for storing frozen food

- Make sure that commercially frozen food was properly stored by the retailer.
- Once defrosted, food deteriorates rapidly and cannot be re-frozen.
- Do not exceed the storage period indicated by the food manufacturer.
Note: if the appliance contains related accessories and functions.

Switching off your appliance

If the appliance needs to be switched off for an extended period, the following steps should be taken prevent mould on the appliance.

1. Remove all food.
2. Remove the power plug from the mains socket.
3. Clean and dry the interior thoroughly.
4. Ensure that all the doors are wedged open slightly to allow air to circulate.

CLEANING AND CARE

For hygienic reasons, the appliance interior, including interior accessories, should be cleaned regularly. The appliance should be cleaned and maintained at least every two months.

Warning!

The appliance should not be connected to the main power supply during cleaning. Before cleaning, switch off the appliance and remove the plug from the mains socket, or switch off/shut off the circuit breaker, or remove the fuse.

Notice!

- Remove the food from the appliance before cleaning. Store it in a cool place and keep well covered.
 - Never clean the appliance with a steam cleaner. Moisture could accumulate in electrical components.
 - Hot vapours can damage the plastic parts.
 - Essential oils and organic solvents can damage plastic parts, e.g., lemon juice or oils from an orange peel, butyric acid, or cleaners that contain acetic acid.
 - Do not use any abrasive cleaners.
 - Clean the appliance and the interior accessories with a cloth and lukewarm water. Commercially available dishwashing detergents may also be used.
 - After cleaning, wipe with fresh water and a clean dish cloth.
 - Accumulation of dust on the condenser unit increases energy consumption; clean the condenser at the back of the appliance once a year with a soft brush or a vacuum cleaner. (Only for models with an outside/exterior condenser.)
 - Check the water drain hole on the rear wall of the refrigerator compartment.
 - Clear a blocked drain hole with a straw or a similar object, but be careful not to damage the cabinet with any sharp objects.
- After everything is dry, put the appliance back into service.

Defrosting

Defrosting the fresh food storage compartment

- The fresh food storage compartment will be defrosted automatically. Water will be drained through a drainpipe at the back of the appliance onto a drip tray.

Defrosting the frozen food storage compartment

- The freezer chamber must be defrosted manually. Before defrosting, remove the food from the compartment.
- Remove the ice tray and drawers or put them into the fresh food compartment temporarily.
- Set the knob of the temperature regulator to "0" (where the compressor will stop operating) and leave the door of the refrigerator open until ice and frost melt completely and accumulate at the bottom of the freezer chamber. Wipe out the water with a soft cloth.

- To speed up the defrosting process, you may put a bowl of warm water (about 50 °C) into the freezer chamber and scrape away the ice and frost with a defrosting spatula. After doing so, be sure to set the knob of the temperature regulator back to the original position.
- It is not advisable to heat the freezer chamber directly with hot water or a hair dryer while defrosting as this could cause deformation of the inner case.
- It is also not advisable to scrape off ice and frost or separate foods from the containers which have been congealed together with the food, using sharp tools or wooden bars, so as not to damage the inner casing or the surface of the evaporator.

Warning! To switch off the appliance before defrosting, turn the temperature regulator to the “0” position.

Notice! The appliance should be defrosted at least once a month. If the door is opened frequently or if the appliance is used in a place with extremely high humidity, we recommend defrosting every two weeks.

Door seals cleaning

Take care to keep door seals clean. Sticky food and drinks can cause seals to stick to the cabinet and tear when you open the door. Wash seal with a mild detergent and warm water. Rinse and dry it thoroughly after cleaning.

Replacing the LED light:

This product contains a light source of energy efficiency class F.

Warning:

The LED light should be replaced by a competent person. If the LED light is damaged, contact the customer helpline for assistance. To replace the LED light, the below steps can be followed:

1. Unplug your appliance.
2. Remove light cover by pushing up and out.
3. Detach the LED and pull it while pressing the connector latch.
4. Replace LED light and snap it correctly in place.

Taking the appliance out of service

- Empty the appliance.
- Pull out the power plug.
- Clean thoroughly (see section: Cleaning and Care).
- Leave the door open to prevent odours.

TROUBLESHOOTING

If you experience a problem with your appliance or are concerned that the appliance is not functioning correctly, you can carry out some easy checks before calling for service; please see below. You can carry out some easy checks according to this section before calling for service.

Warning! Don't try to repair the appliance yourself. If the problem persists after you have made the checks mentioned below, contact a qualified electrician, authorized service engineer, or the shop where you purchased the product.

Problem:	Possible cause & solution
Appliance is not working correctly	<ul style="list-style-type: none">• Check whether the power cord is plugged into the power outlet properly.• Check the fuse or circuit of your power supply; replace if necessary.• The ambient temperature is too low. Try setting the chamber temperature to a colder level to solve this problem.• It is normal that the freezer is not operating during the automatic defrost cycle, or for a short time after the appliance is switched on, to protect the compressor.
Odours from the compartments	<ul style="list-style-type: none">• The interior may need to be cleaned.• Some food, containers, or wrapping is causing odours.
Noise from the appliance	<p>The sounds below are quite normal:</p> <ul style="list-style-type: none">• Compressor running noises.• Air movement noise from the small fan motor in the freezer compartment or other compartments.• Gurgling sound similar to water boiling.• Popping noise during automatic defrosting.• Clicking noise before the compressor starts. <p>Other unusual noises are due to the reasons below and may need you to check and take action:</p> <ul style="list-style-type: none">• The cabinet is not level.• The back of appliance is touching the wall.• Bottles or containers are knocking against each other.

Problem:	Possible cause & solution
The motor runs continuously	<p>It is normal to frequently hear the motor. It will need to run more under the following circumstances:</p> <ul style="list-style-type: none"> • Temperature setting is set colder than necessary. • Large quantity of warm food has recently been stored in the appliance. • The temperature outside the appliance is too high. • Doors are opened too often or kept open too long. • After you have installed the appliance or after it has been switched off for a long time.
A layer of frost occurs in the compartment	<ul style="list-style-type: none"> • Check that the air outlets are not blocked by food and make sure the food is placed in the appliance to allow sufficient ventilation. Ensure the door can be fully closed. To remove the frost, please refer to the chapter on cleaning and care.
Temperature inside is too warm	<ul style="list-style-type: none"> • You may have opened the door too frequently or left the door open too long; or the door is kept open by some obstacle; or the clearance at the sides, back and top of the appliance is insufficient.
Temperature inside is too cold	<ul style="list-style-type: none"> • Increase the temperature as described in the chapter "Display controls".
Doors can't be closed easily	<ul style="list-style-type: none"> • Check whether the top of the refrigerator is tilted back by 10–15 mm to allow the doors to self-close. Also, check if something inside the compartment is preventing the door from closing.

DISPOSAL OF THE APPLIANCE

It is prohibited to dispose of this appliance as household waste.


Packaging materials

Packaging materials with the recycle symbol are recyclable. Dispose of the packaging in a suitable waste collection container for recycling.

Before disposal of the appliance

1. Pull out the mains plug from the mains socket.
2. Cut off the power cord and discard with the mains plug

Warning! Refrigerators contain refrigerant and gases in the insulation. Refrigerant and gases must be disposed of professionally as they may cause eye injuries or ignition. Ensure that the refrigerant circuit tubing is not damaged prior to proper disposal.

	CORRECT DISPOSAL OF THIS PRODUCT
	The symbol on the product or its packaging indicates that the product should not be treated as normal household waste. The product should be taken to an authorized collection centre for waste electric and electronic equipment processing. Correct disposal of the product will help prevent any negative effects on the environment and health of people which could occur in case of incorrect product removal. For detailed information on removal and processing of the product, please contact the relevant municipal body in charge of waste management, your waste disposal service, or the store where you bought the product.

Gorenje, d.o.o.

Partizanska 12

SI - 3320 Velenje, Slovenija

info@gorenje.com

www.gorenje.com