 


H1-C Automatic Pet Feeder **with Camera**

Model: PF11

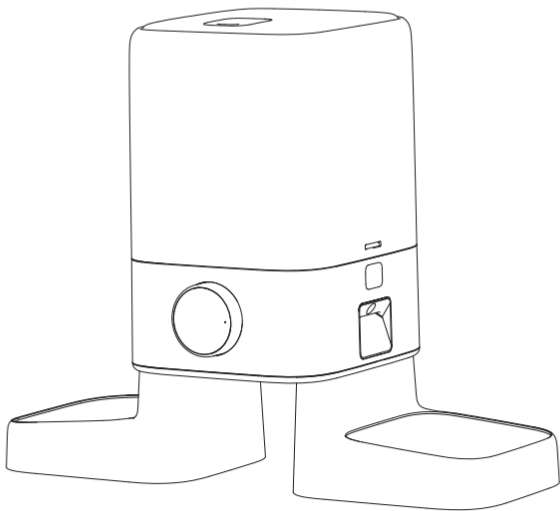

User Manual
ON-D177




Contents

Safety Warning	01
Product Overview	02
In the Package	03
Specifications	03
Assemble the Feeder	04
Icon Introduction	06
Connect to APP	08
The Desired Amount of Kibbles	11
Troubleshooting	13
Warranty Information	14
GPSR Product Information	15
FCC Statement	16


Safety Warning

1. Select a stable and firm location to install the feeder to avoid it from shaking or toppling over.
2. Ensure that the installation environment is dry and away from water sources and damp areas.
3. Before adding pet food, check if the food is suitable for feeding to avoid using deteriorated or unsuitable food.
4. Set an appropriate feeding amount and time, and do not overfeed to prevent pet obesity or indigestion.
5. Observe the pet's eating situation regularly and adjust in time if there is any abnormality.
6. Clean the feeder regularly to keep it clean and hygienic and prevent the growth of bacteria.
7. Pay attention to keeping the battery fully charged or the power connection normal.
8. These packaging bags may cause suffocation. Keep them away from children and pets.
9. Do not use the feeder when the pet cannot reach the food plate or has any physical disability.
10. Do not put your fingers into the food outlet or let your fingers touch the rotor.
11. Do not immerse the base part in water at any time, otherwise it may damage electronic components, such as the control panel.
12. Please use the power adapter provided with the device. Non-original adapters cannot guarantee the normal operation of the device.
13. Please read the user privacy agreement for the camera in the APP.

   Product Overview

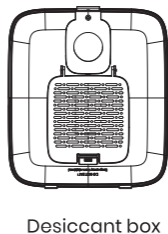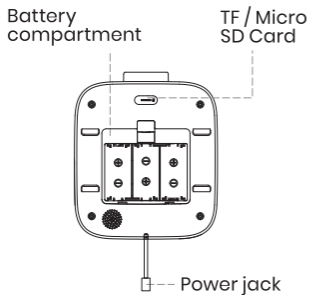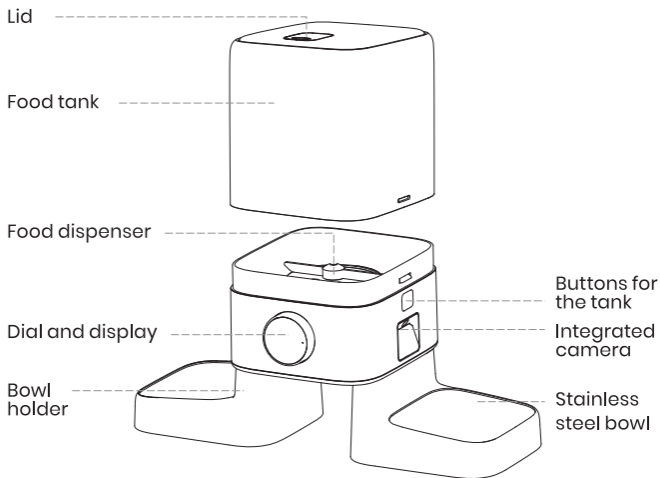


In the Package

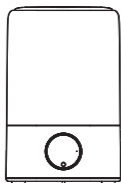 

1x Automatic
Pet Feeder



 2x Stainless Steel
Bowl and Holder

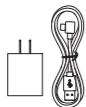

1x Power
Cord with Adapter



1x Desiccant
Bag




1x User Manual

Specifications


Product Name:	Oneisall HI-C Automatic Pet Feeder with Camera
Model:	PF11
Size:	17.24*8.35*13.31 inches (438*212.2*338mm)
Rated Voltage/Current:	5V \equiv 2A
Material:	SUS 304 Stainless Steel+ ABS
Battery Type:	3 D batteries

Assemble the Feeder

 
1. Press on the button of both sides to open the food tank, and take out the bowl and accessories.

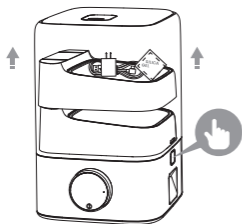

 2. Lift the machine. Insert the plastic bowl holder into the slot at the bottom of the machine until you hear a clicking sound, indicating that it is installed properly.

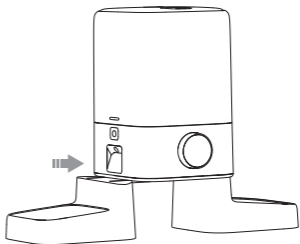


 3. Place the machine on its side, insert the power cord into the external extension cord.

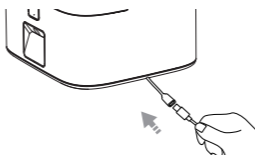

4. Lay the machine on its side, open the battery compartment, install 3 D batteries.

 Note: The back-up batteries are not included in the package.

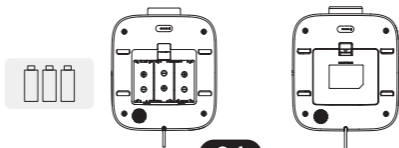


5. Insert a TF card

Note:

① Use a new or formatted TF card (up to 128 GB).

 ② TF card works only with adapter power.

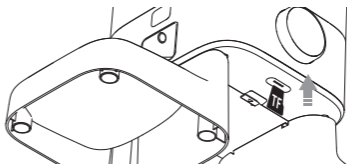


6. Fill the tank with pet dry food.



Note:

Kibble size allowed: 2-18 mm/0.07-0.7 inch in diameter.

 Do not use it for canned food or wet food.

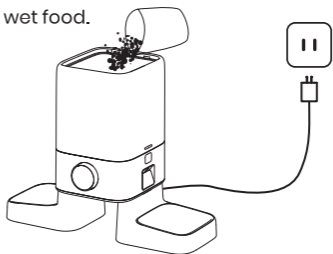

  7. Put the desiccant bag into the desiccant box and put the stainless steel bowl on the bowl holder.

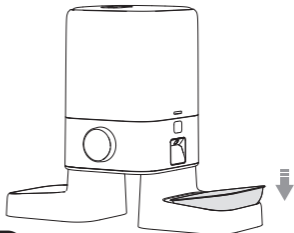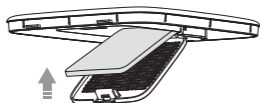





Icon Introduction



Operating Guide

Unlock the Feeder:	Press and hold the dial for 3 seconds
Menu Selection/Adjust Numbers:	Rotate the dial
Setting Confirmation:	Click the dial
Back to Previous Menu:	Double click on the dial


Icon Description

Feed	Manual feeding. The maximum setting is 12 servings of cat food.
Time	Set the clock time of the feeder device.
Plan	Set the feeding plan for the feeder. The maximum setting is 10 plans.
Mic	When the icon is flashing, press and hold the button to record sound. Do Not support to record a calling message via APP currently.
Wifi	In the case of flashing icon, the feeder can search for and connect to Wi-Fi.
Reset	Clear the device's feeding plan and restart the device.
	3 D batteries installed.
	When the battery power is low, the device emits a beeping alarm sound.
	Displays when a TF card is inserted and recognized. Not shown if no TF card is inserted or when operating on battery only.
	Displays when the power adapter is connected. Not shown when the unit is not connected to external power.

  Lock

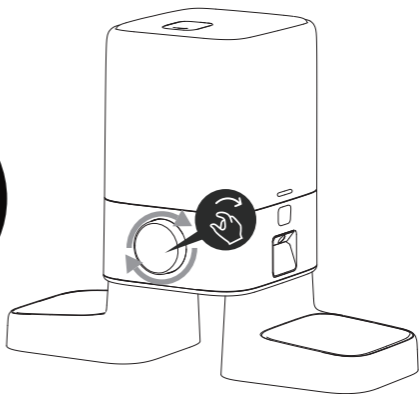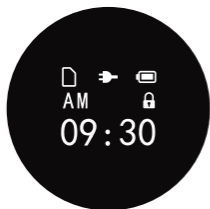


Manual Feeding

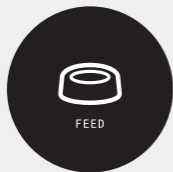 

Time Setting



 
Feeding Plan Setting

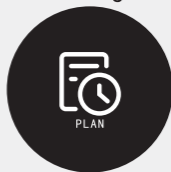


Wi-Fi Connecting



 Voice Recording

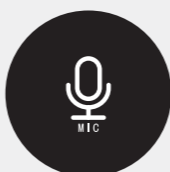

Clean Feeding Schedule

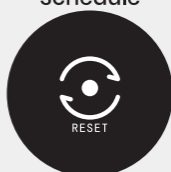 

Connect to APP

1. Download and install the Oneisall APP.

 
 


Oneisall APP


2. Plug in the device and wait for the "ding-dong" sound (about 1 minute), indicating pairing mode is activated.

Important:


If no sound is heard, rotate the knob to Wi-Fi mode and press the button below. Wait until the Wi-Fi icon starts flashing, then wait for the "ding-dong" sound. Note: Ensure the "ding-dong" sound is heard before proceeding to the next step.

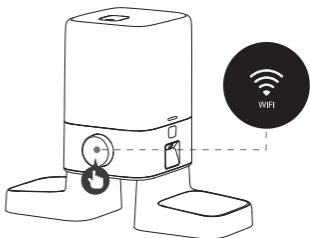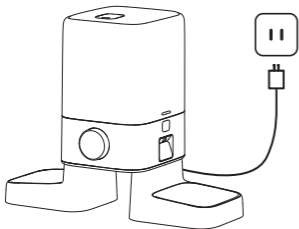

 
3. Open the App and tap Add Device.

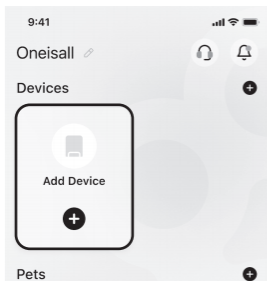

 4. The device will appear via Bluetooth search. Tap the device to start pairing.

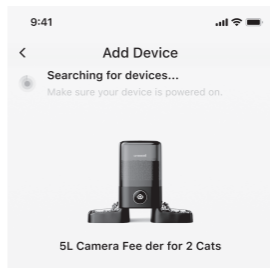

 Note: If the device is not found, choose "Add Manually" below and select the corresponding device to continue pairing.

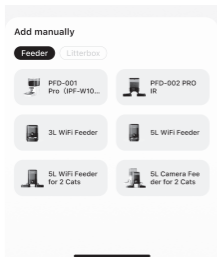


Program the feeder manually




Program the feeder on the APP

5. Enter Wi-Fi password to connect.


 
Note: Use the same Wi-Fi for pairing as your phone.

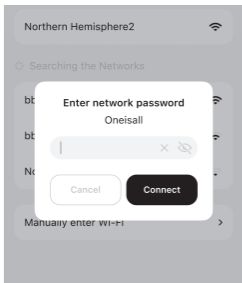

 6. After successful connection, set the device name (default: 5L Camera Feeder for 2 Cats).

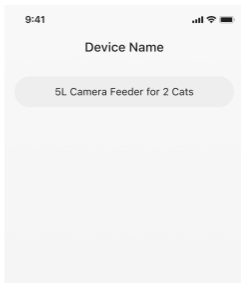

  7. If you have any questions, please tap Customer Service for support.

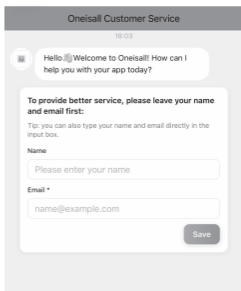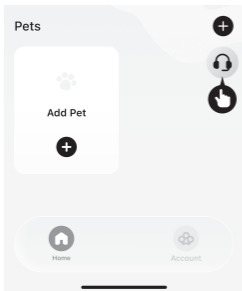

The Desired Amount of Kibbles

Note:

The amount of every portion is not adjustable. Pet owners should adjust the number of portions based on their pet's daily meals and appropriate amount per meal.

The size of the kibble we used in our lab: 0.4 inch. Here's the data from our experiment.



Cup	Portion	Gram
1/8	2	15
1/4	4	29
1/3	6	44
1/2	9	58
1	18	130

- The amount for each bowl

This data is for reference only. You need to test out the right amount for your pet, based on the dry food you used.


Here are the steps:

  1. For example, 1/4 cup equals to 4 portions, so 1/8 cup would equal to 2 portions.

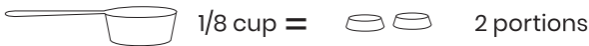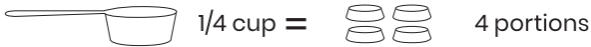


2. The PORTION number shown on the display means the amount for each bowl. For example, Set the portion number to 4, the feeder will dispense 4 portions from both its left and right feeding bowls.

 3. Measure the delivered kibbles. If the kibbles are measured as the amount you need, it means this setting is OK.

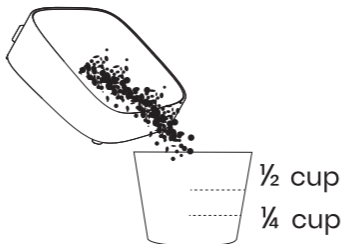

 4. Otherwise, adjust the portion number to let it get close to the desired amount.

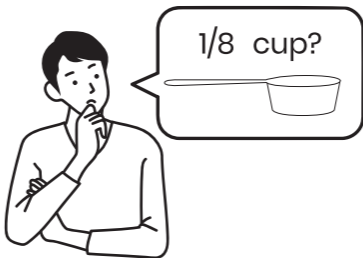

Troubleshooting

Please attach your troubleshooting and order ID, contact us via email support@oneisall.com.

We would help you solve the problem fast.

Problems	Solutions
The feeder can not work	Do not use batteries, use another type-C charging cord to see if the feeder works.
	Unplug the cord and use new batteries to see if it works.
	Check if the cord is connected well.
Desiccant Replacement	Email us: support@oneisall.com
The dial does not work	Try to press and hold it for 3 seconds to unlock the feeder.
Food stuck	Make sure the kibble size is less than 0.7 inch in diameter.
	If the food stop in the outlet, clean it.
Lens blurry	If the camera lens appears blurry, clean it with soft cloth.

Warranty Information

Oneisall offers a standard 2-year warranty. If you have any issues with your Oneisall product, please do not hesitate to contact us. Be sure to include your proof of purchase, model number, and any relevant photos or videos in your message to expedite the process. Our Oneisall support team is available 7 days a week and will respond to your inquiry within 24 hours. Thank you for choosing Oneisall.

Please note that the Oneisall warranty does not apply to used products or purchases made from unauthorized sellers. It's important to be aware that the warranty also does not cover consumable parts such as blades, guards, filters, brushes, and similar items. These parts may require regular replacement or maintenance.

✉ support@oneisall.com

☎ +1877-522-8578(US) Mon-Fri 8am-5pm(PST)

🌐 www.oneisall.com

 


Oneisall support



@Oneisall Official

GPSR Product Information

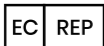

Name : Apex CE Specialists GmbH
Add : Grafenberger Allee 277-287,40237 Düsseldorf,DE
Contact Person: Wells Yan
Zip Code: 40237
E-Mail : Info@apex-ce.de



Name: APEX CE SPECIALISTS LIMITED
Add: 6f East Union Street, Manchester, England, M16 9AE
Contact: Wells
Tel: +441616371080
E-Mail: Info@apex-ce.com

Product Name: Oneisall HI-C Automatic Pet Feeder with Camera
Brand: Oneisall
Product Model: PF11
Input: 5V = 2A

GPSR Manufacturer Information

Business Name: Shenzhenbenfendianzishangwuyouxiangongsi
Manufacturer's address: CN, 518000, GuangDong Sheng, Shenzhen, Longhua District, Minxin Community Bishui Longting Building 6 Unit, 7B
Tel: +86 185 6587 6424
E-Mail: topservice4u@hotmail.com



Made in China

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

MODIFICATION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.

This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.



Any problem you have, please contact us:
support@oneisall.com



Oneisall
support

ON-D177