


earfun

EarFun Free

True Wireless Earbuds

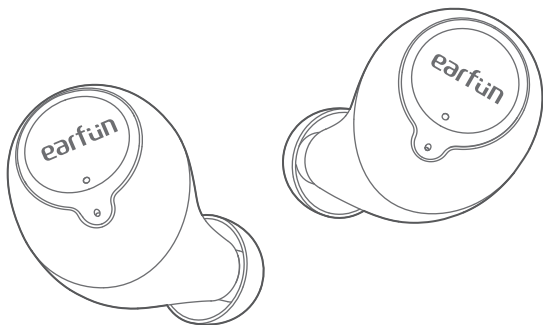

User Manual



1 What's in the Box

EarFun Free



Charging Case



Ear Tips(S,M,L)






Type-C USB Cable



User Manual




2 Product Diagram

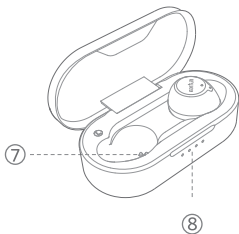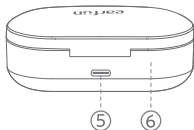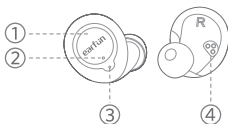


- ① Multifunction Control
- ② LED Indicator
- ③ Microphone
- ④ Charging Contactor
- ⑤ USB-C Charging Port
- ⑥ Charging Case
- ⑦ Charging Dock
- ⑧ Charging Case Indicator

3 Buttons and LEDs

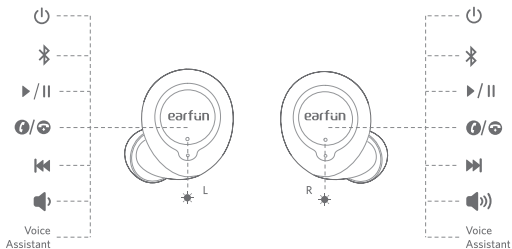


4 Charging

 Earbuds automatically charge in case



Connect USB cable for charging

 


Wireless charging (Not included)

5 Specifications

Input	DC 5V/1A
Bluetooth Version	V5.0
Bluetooth Profile	A2DP,AVRCP, HFP, HSP
Maximum Working Range	15m(without obstacle)
Earbuds battery life	Up to 6 hours(various by volume and audio content)
Earbud Charging Time	About 1.5 hours
Earbud Battery Capacity	50mAh
Charging Case Battery Capacity	500mAh
Case Charging Time	Type-C bout 2 hours; wireless charging about 3.5 hours
Charging Case Recharge Earbuds	4 times
Product Weight	60g

6 How to fit

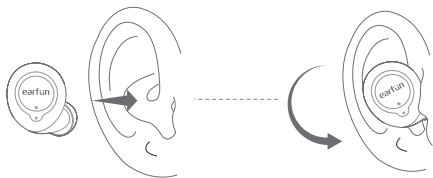

1. Identify the left and right earbuds.
2. Rotate the earbuds, and adjust to find the best angle.
3. Make sure the ear tip seals in the ear canal.


7 Pairing Your Earbuds

First time pairing with device

Step 1: Remove the both earbuds from the case simultaneously and the earbuds will enter into pairing mode.

Step 2: Activate Bluetooth on your Bluetooth-enabled device and search for other Bluetooth devices.

Step 3: Select "EarFun Free" from the list of Bluetooth devices shown (if a password is needed, type '0000').

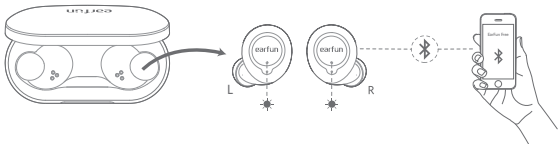

Note:

- The earbuds will automatically connect with the device they were last paired with when the earbuds are taken out of the case.
- Each earbud could be used independently.

8 Connect to a new device

Option A :

Step 1. Unpair the earbud from the bluetooth-enabled device when it's connected. The earbud will lose bluetooth connection to the current device and enter into pairing mode.

Step2. Search on the new device and connect.

Option B :

Step 1. Triple press the L/R earbud when it's connected and the music's off. The earbud will lose bluetooth connection to the current device and enter into pairing mode.

Step 2. Search on the new device and connect.

Option C :


Step 1. Double press the L/R earbud when it's on and not connecting to any device.

The earbud will enter into pairing mode.

Step 2. Search on the new device and connect.


9 Functions

Power On

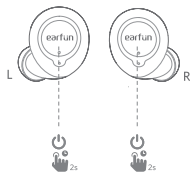


Power Off


Place earbuds in case to automatically power off and charge

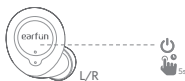

Playing Music

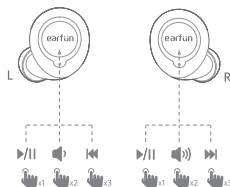


Hands-free Conversation

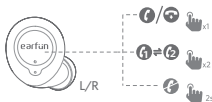

Note:

For Android devices, the volume unsyncs between the device and earbuds. Even turned up to its highest, it still might be insufficient. You may double press the R or L to increase or reduce it respectively.

Voice-Assistant

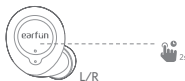

10 Earbuds LED Indicator

Power On	Blue indicator flashes 1 second
Power Off	Red indicator flashes 1 second
Pairing Mode	Either indicator flashes blue quickly
Re-pairing Mode	Blue indicator flashes quickly
Successfully Connected	Indicator goes out
Charging (earbuds)	Indicator flashes red once every 5 seconds
Fully Charged	Indicator turns off
Factory Reset	Indicator flashes purple quickly

11 Reset and reconnecting

If you fail to build connection between two earbuds, or between earbuds and Bluetooth device, please try the following steps:

Step 1: Unpair EarFun Free from your Bluetooth-enabled device and delete the old connection on your device.

Step 2: Pick up the earbuds from the case and press the buttons for 2s at least to power off until they flash in red.

Step 3: Press and hold the button on each earbud for at least 8s until they flash in purple

(Do press until they flash in purple. If not, they aren't reset successfully.)

Step 4: Place them back into the case and remove it again to start reconnecting.



12 Troubleshooting

Q: Can I use both earphones separately?

A: Yes, each earbud could be used independently.

Q: The earphones are turning on, but it doesn't connect to my device?

A: To connect the earbuds to your device, please check if the Bluetooth of the device is on at first, then select 'EarFun Free' on the Bluetooth list to get paired. If the earbuds still can't connect to your device, please try to reset it, or contact our customer support.

Q: Why the connection is not stable and cuts out intermittently?

A: Please make sure there are no objects between the earphones and your Bluetooth device, and make sure there is no radio or WIFI interference nearby.

Q: What is the range of Bluetooth earphones?

A: Bluetooth earphones have maximum range of 49 feet (15m, no obstacle). However, the actual range will depend on usage and environment.

Q: Is there volume control on the earphones?

A: Yes. Double pressing the L earbud decreases the volume while double pressing the R could increase it.

Q: My earphones will not switch on.

A: Please recharge it and make sure it has enough battery power. If it is fully charged and still nothing happens or if you are not able to charge the unit, please contact our customer support for warranty cover.

Q: Is the charging case waterproof?

A: No, the earbuds are IPX7 sweat & waterproof, but the charging case is not waterproof.

Q: Will the earbuds shut off automatically?

A: The earbuds will remain on as long as they are connected to a device. If no audio is in use, they will enter power-saving mode and wake up once audio is played. If the earbuds are not connected with any devices, they will automatically shut off in 10 minutes.

Customer Service

18-month limited warranty

For FAQs and more information

Please Email to: service@myearfun.com

www.myearfun.com



Facebook