




# INSTRUCTION MANUAL

STICK VACUUM CLEANER

MODEL: SZ-V07

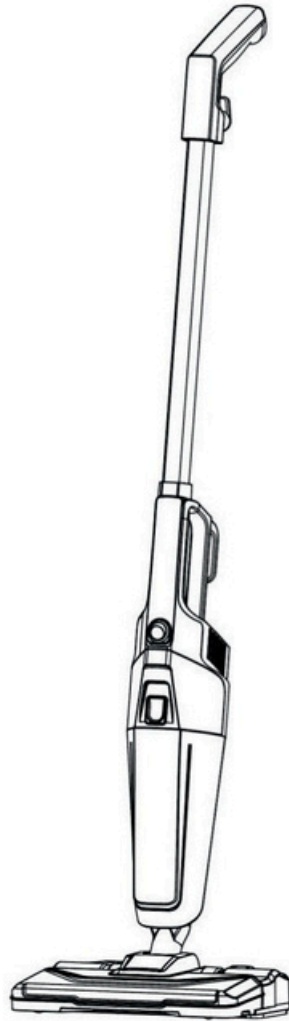

PLEASE READ THIS MANUAL BEFORE USING THIS PRODUCT.



**RECOMMENDED  
SCAN FOR EASY  
VIDEO  
INSTRUCTIONS**

## IMPORTANT SAFETY INSTRUCTIONS

When using your BAGLESS CONVERTIBLE STICK VACUUM basic safety precautions should always be observed, including the following: **Read all instructions before using your BAGLESS CONVERTIBLE STICK VACUUM**


WARNING - To reduce the risk of fire, electric shock, or injury:

- ⊠ Use the system only for its intended use.
- ⊠ To protect against a risk of electric shock, do not immerse any part of the system in water or other liquids.
- ⊠ Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
- ⊠ Do not allow cord to touch hot surfaces.
- ⊠ Do not run appliance over cord.
- ⊠ Do not operate the system with a damaged cord or plug, or if the appliance or any other part of the system has been dropped or damaged. To avoid the risk of electric shock, do not disassemble or attempt to repair the BAGLESS CONVERTIBLE STICK VACUUM.
- ⊠ Return the unit for examination and repair.
- ⊠ Incorrect re-assembly or repair can cause a risk of electrical shock or injury to persons when the BAGLESS CONVERTIBLE STICK VACUUM is used.
- ⊠ Close supervision is necessary for any appliance being used by or near children. Do not leave the system unattended while connected.
- ⊠ Keep hair, loose clothing, fingers and all parts of body away from opening and moving parts.
- ⊠ Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
- ⊠ Do not pick up anything that is burning or smoking such as cigarettes, matches or hot ashes.
- ⊠ Use extra care when cleaning on stairs.
- ⊠ Do not use the vacuum without the dust cup filter in place.
- ⊠ This appliance is intended only for household use. Follow all user

instructions in this manual.

- ⊠ Do not leave the BAGLESS CONVERTIBLE STICK VACUUM plugged in when un-attended. Unplug the electrical cord when not in use and before servicing.
- ⊠ Do not allow to be used as a toy. Close attention is necessary when used by or near children, pets or plants.
- ⊠ Use only as described in this manual. Use only manufacturer's recommended accessories.
- ⊠ Do not pull cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.
- ⊠ Turn off all controls as applicable before unplugging from electrical outlet.
- ⊠ Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- ⊠ Do not handle plug or vacuum with wet hands or operate without shoes.
- ⊠ Do not put any objects into openings. Do not use with any opening blocked. Keep free of dust, lint, hair and anything else that may reduce air flow.
- ⊠ Store your appliance indoors in a cool, dry area.
- ⊠ Keep your work area well lit.
- ⊠ Do not immerse the vacuum into water or other liquids.
- ⊠ Keep end of hose, wands and other openings away from your face and body.
- ⊠ Use only on dry surfaces.
- ⊠ Using improper voltage may result in damage to the motor and possible injury to the user. Correct voltage is listed on rating label.
- ⊠ This appliance is provided with double insulation. Use only identical replacement parts. See instructions for Servicing of Double-Insulated Appliances.
- ⊠ This appliance may be normal used under 50Hz or 60Hz power supply input, no adjusted need to do.

- ⊠ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
- ⊠ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Correct Disposal of this product	
	<p>This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems of contact the retailer where the product was purchased. They can take this product for environmental safe recycling.</p>


# KNOW YOUR VACUUM CLEANER




Hepa



T-brush

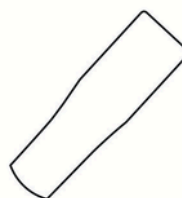

Connector

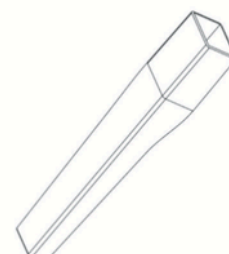


Crevice tool

## PRODUCT SPECIFICAIONS

Model No.	SZ-V07		
Voltage	220-240 V~	Frequency	50/60 Hz
Power	600 W	Noise level	≤79 dB
Product N.W.	1.75 kg	Dust Cup Capacity	0.6 L
Suction	≥20 kPa		


# INSTALLATION AND USE

## Hand Vacuum use :

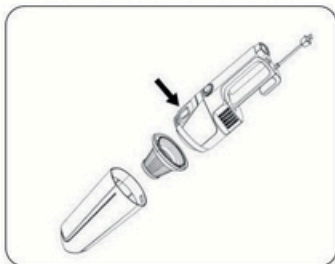


### Check before use

Before used, press the release button, open the dust tank, confirm HEPA installed inside, then put the dust tank back.

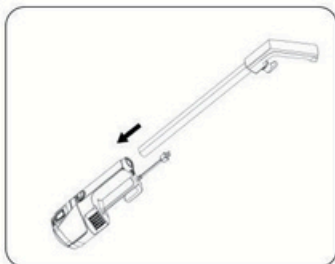


### Handle install

Align the metal tube with the hole in the middle of the handle and drive it through.

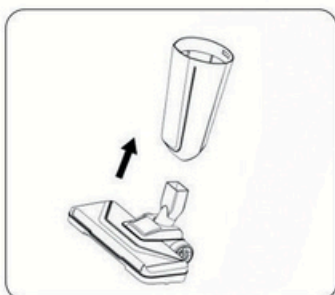

### Brush install

Insert the brush forcefully into the suction inlet of the dust cup and make sure the connection is firm

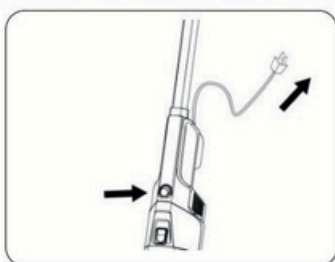

### Turn on

Insert the power plug into the socket, set the power switch of the body to "1" (ON), then vacuum cleaner starts to work



### Storage


Unplug the power, put the fuselage power switch to "0" (OFF), the vacuum cleaner stops working. Wrap the power cord around the two cord hooks and place it in the storage area.

## Hand vacuum cleaner use




### Disassembly

Press the metal tube release button and remove the metal tube.  
Remove the brush.

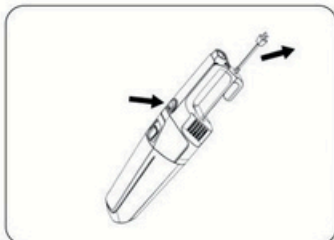

### Turn on

Insert the plug into the socket, set the power switch of the body to "1" (ON), then vacuum cleaner starts to work.

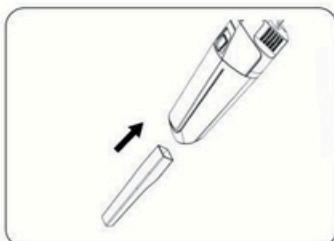


### Install crevice tool

Cleaning the gap and other parts, Please inserted crevice tool into the suction inlet.


**Caution:** The suction hole opening must be open and free of any obstructions at all times. Otherwise, the motor will overheat and could become damaged.

### Install T-Brush

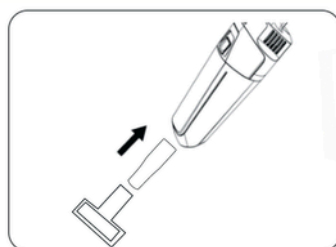


Connect the Snapfit connector to the vacuum cleaner, then attach the T-brush to the other end of the connector.

## Mopping Brush Usage

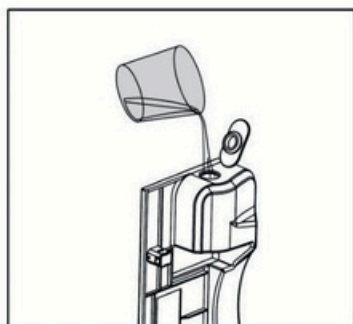

Open the seal cover, fill up the tank, then close the seal cover.

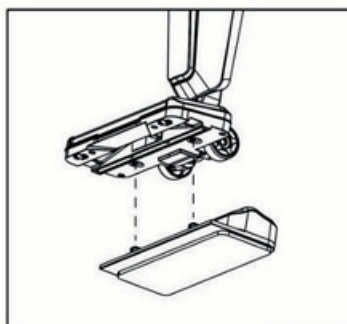

Insert the hole at the bottom of the floor brush into the tank and attach the mop.



The water will automatically drain when in use.

Attention : This vacuum cleaner can't vacuum plenty of water.

Note: When using the mopping brush, there are two modes to choose from:


1. When filling with water, the mopping brush will soak part of the mop cloth and you can mop the floor immediately.
2. While filling the water, press the water outlet with your fingers to prevent the mop from getting wet. Simply step on the water tank to mop the floor when needed.

How the water tank works

When a water source is present in the tank and it is used:

1. When this product is used normally, pushing back and forth will continuously squeeze the bottom pressure pad, causing it to increase pressure inside the originally sealed water tank, causing the water source to continue to flow out.
2. When the water outflow rate is not enough, you can lightly step on the water tank to speed up the water seepage.

# Cleaning & Changing the Dust Cup Filter

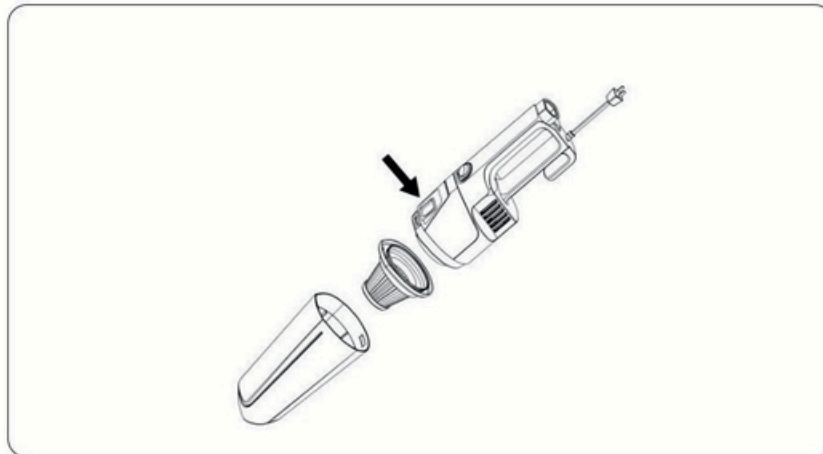

## Changing and Cleaning the Dust Cup Filter

In order to achieve the best performance, empty the dust cup container and clean the dust cup filter after each use.

- 1.To remove the dust cup container, press down on the dust cup container release button and separate the dust cup container from the main unit.
- 2.Pull out the dust cup filter.
- 3.Empty the dust from the dust cup container.
- 4.Rinse the dust cup filter in cold water, and then let it air dry for 24 hours before replacing it back in the dust cup container.

## Important Note:

- 1.DO NOT use a washing machine to clean the dust cup filter.
- 2.Do not use a hair dryer to dry it. AIR DRY ONLY.
- 3.Replace the dust cup filter carefully into the dust cup compartment. NEVER operate the stick vac without the dust cup filter in place.
- 4.Attach the dust cup container to the main body of the unit.

Note: It is recommended that the dust cup filter be replaced every three (3) months (depending on usage) to ensure peak performance of the unit.

## Error detection

Before you contact our service center, please check the following:

Problem	Possible reason	Advice
Motor does not start	-Power cord not firmly plugged into outlet. -Outlet damaged. -Cleaner not switched on.	-Plug unit firmly. -Check the Outlet. -Switch on the appliance
Suction power is weaker	-Unit clogged -Paper filter needs replace	-Remove the blockage. -Replace the paper filter.

### **Guarantee:**

This product is guaranteed for a period of one year from the date of purchase. During this period we will remedy all defects free of charge, which can be demonstrably attributed to material or manufacturing defects, by repair or exchange.

This guarantee is only valid if the appliance has been used in accordance with the instructions and provided that it has not been modified, repaired or interfered with, by any unauthorized person, or damaged through misuse.

# FAQ & TROUBLESHOOTING

## **1. What is the wattage of the motor?**

A. The vacuum cleaner is equipped with a powerful 600-watt motor, providing strong suction for efficient and effective cleaning.

## **2. How much is the suction power of the vacuum cleaner?**

A. The vacuum cleaner delivers a strong suction power of 20,000 Pa (20 kPa), which allows it to pick up fine dust, pet hair, and debris with ease. This high suction performance is ideal for deep cleaning across different surfaces like floors, carpets, and upholstery.

## **3. Can we vacuum and mop at the same time?**

A. Yes, the vacuum cleaner supports simultaneous vacuuming and mopping. Simply attach the provided water tank to the base, and it will mop the floor while vacuuming, saving you time and effort in one go.

## **4. Can we use it only for vacuuming?**

A. Yes, you can use it solely for vacuuming. Just remove the water tank, and the vacuum will function as a powerful dry vacuum cleaner for regular cleaning tasks.

## **5. What is the cord length of the vacuum cleaner?**

A. The vacuum comes with an extended 18-foot power cord, giving you a wide cleaning radius without frequently changing power sockets. This long reach makes it highly convenient for cleaning larger rooms, proving its edge over most compact vacuums.

**6. What is the height of the vacuum cleaner after full assembly? Is it suitable for seniors and tall individuals?**

A. The fully assembled vacuum cleaner stands at 42 inches tall, offering an ergonomic design that's comfortable for both seniors and tall users. Its upright height minimizes bending, making cleaning easier and more back-friendly than many compact or stick models.

**7. What is the length of the extension handle?**

A. The vacuum cleaner includes a 24-inch extension handle, allowing you to clean under furniture and reach ceilings or corners with ease. This thoughtful design makes it a versatile tool, far more adaptable than standard handheld vacuums.

**8. How much electricity does the vacuum cleaner consume?**

A. With a 600W motor, it consumes around 9 units per month with daily 30-minute use—making it an energy-efficient choice for regular cleaning.

**9. What amp plug should be used for the vacuum cleaner?**

A. 16 amp plug is preferable for optimal performance, but it can also run safely on a 5 amp socket, making it compatible with most standard household outlets.

**10. Does the suction power reduce over time?**

A. HEPA filter clogging over time can lead to reduced suction power. To maintain strong and consistent performance, it's recommended to replace the HEPA filter every 3 months, especially with regular use.

**11. Is the HEPA filter washable?**

A. Yes, the HEPA filter is washable. For deep cleaning, soak it in a mild detergent for about an hour, rinse thoroughly, and ensure it is completely dry before reusing. This helps maintain strong suction and extends the filter's life.

**12. Are the mopping pads washable?**

A. Yes, the mopping pads are washable and can even be machine washed. Dry completely before using them.

### **13. What types of flooring can the vacuum cleaner be used on?**

A. The vacuum cleaner is perfect for a variety of surfaces, including tiles, cemented smooth floors, wooden floors, carpets, rugs, and marble—ensuring deep cleaning across all types of flooring.

### **14. Can it clean thin carpets?**

A. No, the vacuum cleaner is not suitable for cleaning thin carpets due to its high suction power, which can cause the vacuum to get stuck or not function effectively on delicate, low-pile surfaces.

### **15. Can it suck up water splashes on the floor?**

A. Yes, the vacuum cleaner can handle small water splashes. However, be cautious not to suck up too much water, as it can fill the dust tank quickly and affect the HEPA filter or the motor. It's important to empty the tank regularly to maintain optimal performance.

### **16. Can we clean sofas, upholstery, window grills, spider nets, etc.?**

A. Yes, with SEZNIK extra vacuum cleaner accessories, you can easily clean sofas, upholstery, window grills, spider nets, and other hard-to-reach areas, making your cleaning tasks more efficient.

### **17. What is the capacity of the dust tank?**

A. The dust tank has a capacity of 600ml, allowing you to clean more without frequent emptying, providing a convenient and efficient cleaning experience.

### **18. What is the capacity of the water tank?**

The water tank has a capacity of 200ml, perfect for mopping and cleaning without the need for constant refills during your cleaning sessions.

### **19. What is the angle of tilt?**

A. The vacuum cleaner has a tilt angle of 90 degrees, which is perfect for cleaning under sofas and other low furniture, allowing you to reach tight spaces with ease.

## 20. What is the use of the winding hook?

A. The winding hook is used to wind the long wire, allowing for compact and organized storage, keeping your space neat and free of tangled cords.

## 21. How much noise does the vacuum cleaner make?

A. The vacuum cleaner operates at a noise level of less than 79 dB.

## 22. Can I add disinfectant in the water tank?

A. Yes, you can add disinfectants like Dettol, Lysol, or similar products to the water tank. Just ensure to dilute them properly and avoid overusing, as it can help maintain hygiene while cleaning.

## 23. Is it easy to assemble?

A. Yes, the vacuum cleaner is very easy to assemble, with clear instructions that make the setup quick and hassle-free.

## 24. What is the motor winding made of ?

A. The motor winding is made of high-quality copper, ensuring better conductivity, durability, and efficient performance for long-lasting use.

## 25. Is the motor BLDC?

A. Yes, the vacuum cleaner is equipped with a BLDC (Brushless DC) motor, offering higher efficiency, lower maintenance, and a quieter operation compared to traditional motors.

## 26. What issues can occur and how can I avoid them?

**A. A: Motor damage:** This can happen due to low-quality electrical grids at home. To avoid this, ensure you use the vacuum cleaner with a stable, high-quality power supply.

**Breakage of parts:** Avoid handling the vacuum cleaner harshly to prevent damage to its components.

**Clogging of dirt:** Make sure to clean the dust tank and filter frequently to maintain optimal suction power and avoid blockages.

**27. Does the water tank need an electric supply to function?**

- A. No, the water tank does not require an electric supply to function. It operates independently, simply adding water for mopping purposes.

**28. How does the mopping function work?**

- A. The mopping function uses drip technology. The water tank has a pinhole and two pumps next to it. When you use the vacuum cleaner and perform the vacuuming action, the pumps are pressed due to gravity, causing water to drip onto the floor. The water only drips when the vacuum cleaner is in use, ensuring no leakage when idle. This makes mopping easier and more efficient.

**29. What is the weight of the vacuum cleaner?**

- A. The vacuum cleaner weighs just 1.75 kg, making it light enough for teenagers to handle easily and also suitable for senior citizens.

**30. What is included in the package?**

- A. The package includes everything you need to get started: a Warranty Card & User Guide, a Water Tank with Mop, the Vacuum Cleaner, a Crevice Tool, a Mop Handle, and a HEPA Filter.

**31. What is the warranty?**

- A. The vacuum cleaner comes with a 1-year warranty, ensuring quality and reliability. For any issues, you can contact our support team via call or WhatsApp at 8237869618.

**32. If there is an issue with the product, how can I reach you and what will be the process?**

- A. If you encounter any issues with the product, you can contact us via call or WhatsApp at 8237869618. We offer free pickup and drop service—just let us know, and we will arrange to collect the product. After inspection and repair at our headquarters, we will send it back to you. The shipping and service spare parts are free of charge for the first year.

### 33. How can I extend the warranty?

A. You can extend the brand warranty by reaching out to our customer support team. Contact us via call or WhatsApp at 8237869618 for more details on extending your warranty.

### 35. Where can I get extra accessories for the vacuum cleaner?

A. You can directly purchase them from Amazon by searching "**SEZNIK vacuum cleaner accessories.**" Alternatively, you can contact us via call or **WhatsApp at 8237869618** – just send a message saying "vacuum cleaner extra accessories", and our team will assist you.

### 36. What is covered under the warranty?

A. The warranty covers electronic issues and manufacturing defects only. Physical damage due to misuse is not covered under warranty.

### 37. Are spare parts available?

A. Yes, every spare part is available. You can purchase them directly from Amazon or contact us via call or WhatsApp at 8237869618 for assistance.

## Scan To Know About Vacuum Cleaner Accessories



# Scan For Quick Video Instructions



# Scan To Reach Customer Support.



  **+91 8237869618**  
 **SUPPORT@SEZNIK.IN**  
 **www.seznik.in**

# Unlock the World of SEZNIK Scan the Code & Explore!

Find More Smart Picks from SEZNIK



 [www.sezNIK.in](http://www.sezNIK.in)