



ONNAIS Biometric Trigger Lock with Vertical Gun Wall Mount



Model: GL-001

For any assistance, please contact us at:

✉ support@onnaisafe.com

QUICK START GUIDE VIDEO



OR

<https://onnaisafe.com/pages/installation-guide>

 
Follow Onnais on Instagram & Facebook for faster help.



@Onnaisofficial



@Onnais

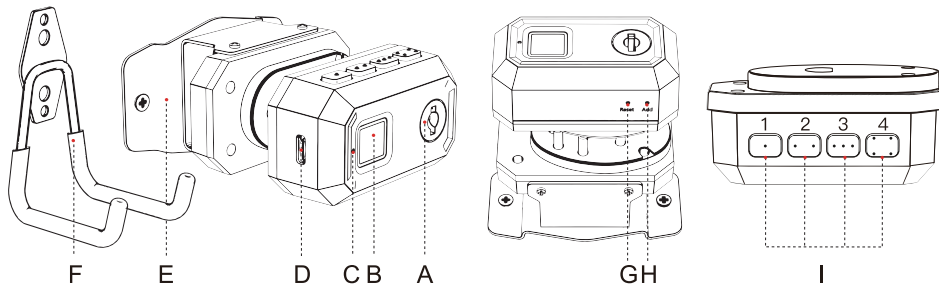

A. Keyhole

B. Fingerprint Sensor

C. Power Indicator Light

D. USB-C Charging Port

E. Wall Mount

F. Gun Hook

G. Reset Button

H. Add Button

 
I. Password Keypad

Assembly and Setup Guide

Step 1: Charge the Trigger Lock


Plug the included USB-C cable into the charging port.
Charge the trigger lock for 4 hours before first use.

⚠ Low battery warning: Beeps 4 times and the indicator light flashes red 4 times.

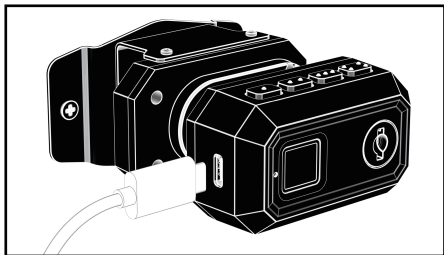



Step 2: Set Your Unlock Password

 Set your unlock password before first use. See Page 4 for detailed instructions.

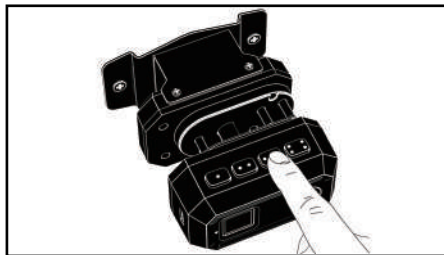

Step 3: Install the Trigger Lock

  Use the included screws to secure the wall mount and gun support hook to your desired location.

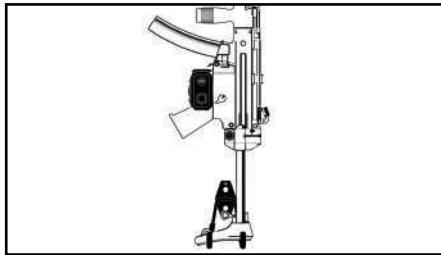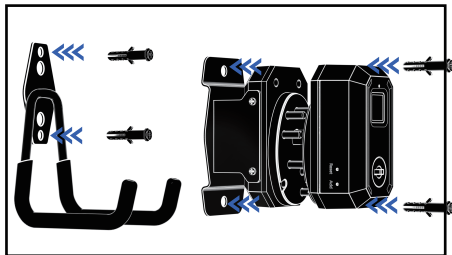

Note: For convenient charging, we recommend installing the gun lock near a power outlet.

Trigger Lock Quick Setup



Please use the included "Pin" on the cover page to press "**Reset**" and "**Add**"

Password Setting

Enter default password "**12341**"



Press "**Add**" within 60s (Indicator starts flashing **blue**)



Enter a 5-10 digit password



Press "**Reset**" (Indicator turns **green** with a long beep, then remains flashing **blue**)



Re-enter the same password



Press "**Reset**" again (Indicator turns **green** with two long beeps)

 


Setup complete

Note: If the indicator turns red, setup has failed. Please restart the setup process from the beginning.

⚠ To change the password, the trigger lock must first be reset. See page 6 for instructions.


Fingerprint Setting

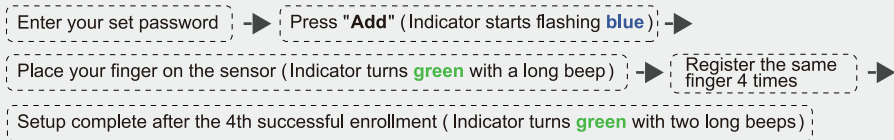

Note: If the indicator turns red, setup has failed. Please restart the fingerprint entry process.

⚠ To add more fingerprints, repeat the steps above. Up to 100 fingerprints can be enrolled.

Toggle Silent Mode

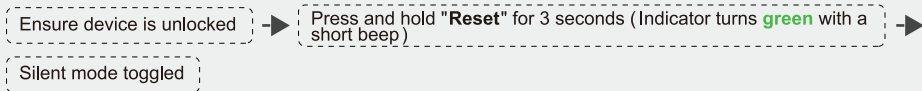

Reset the Trigger Lock

- Ensure device is unlocked → Press "**Reset**" 3 times within 60s (Indicator turns **green** with a long beep)
- Factory reset complete → To set up a new password or fingerprint, please refer to the instructions on page 4-5

Delete Fingerprint

- Ensure device is unlocked → Press and hold "**Add**" for 3 seconds (Indicator starts flashing **red**) →
- Place the finger to be deleted on the scanner (Indicator turns **green** with a short beep) →
- Fingerprint deletion complete

Note: A flashing red power indicator light during any of the above setup procedures indicates that the setup has failed. Please try again.

Trigger Lock Installation Demonstration

For a secure fit on more firearms, this trigger lock features multiple steel pins. Simply adjust the lock's position to match the shape of your firearm's trigger guard and trigger.

- Key Position: Contact Point with the Trigger
- Auxiliary Position: Contact Point with the Trigger Guard

Pistol Models Referenced



92FS



CZ75



P320



P226



TP9



SP5K

Rifle Models Referenced



Shotgun Models Referenced



Note: Firearms shown are examples only. ONNAIS Trigger Lock fits most handguns, rifles, and shotguns.

Q & A

Q: How long does the battery last in standby mode?

A: The battery lasts about 3 to 5 months in standby mode, or up to 2,000 unlocks. We recommend charging the battery every 2 months.

Q: Why can't my fingerprints be recognized?

A: Before enrolling fingerprints, it is necessary to set a password first. Additionally, please ensure that your fingers are clean and free of dirt or moisture, as these may affect fingerprint recognition.

Q: What should I do if I lose my key?

A: For security reasons, replacement keys are not available. Please store your keys in a safe and secure location.

Disclaimer

To the maximum extent permitted by law, Dongguan Huaxun Plastic Technology Co., Ltd is not responsible for indirect or consequential damages resulting from misuse, unauthorized modification, failure to follow instructions, or use with incompatible adapters, cables, or devices.