 


20V MAX* CORDLESS HEDGE TRIMMER

SEYVUM

INSTRUCTION MANUAL

MODEL: DCHT2006

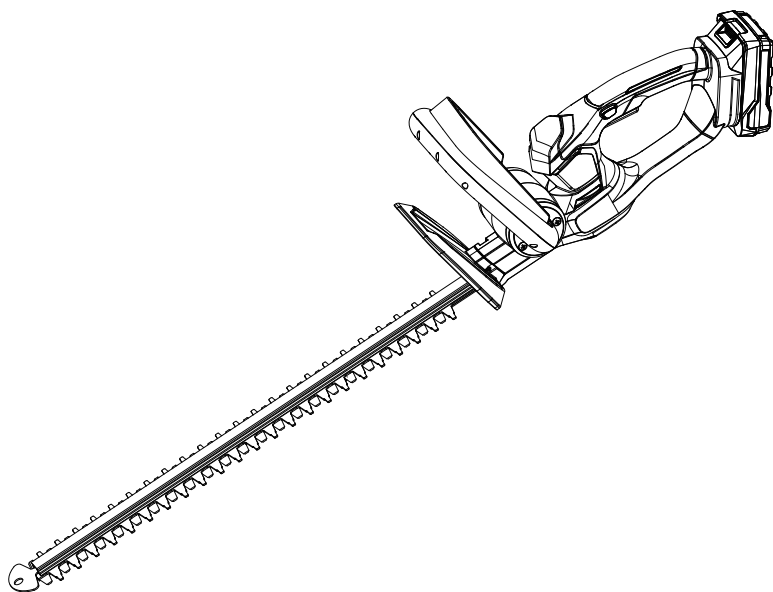

Website: www.seyvumtools.com
Email: support@seyvumtools.com

SAVE THIS MANUAL FOR FUTURE REFERENCE.

*Maximum initial battery pack voltage (measured without a workload) is 20 volts.
Measured under a workload, nominal voltage is 18.

Catalog

SAFETY GUIDELINES DEFINITIONS	1
1. Symbols	1
GENERAL POWER TOOL SAFETY WARNINGS	2
1. Work area safety	2
2. Personal safety	2
3. Power tools use and care	2
BATTERY CHARGER	3
1. Important safety instructions for battery charger	3
2. Battery charger storage	4
BATTERY PACKS	4
1. Important safety instructions for battery packs	4
2. Battery protection system	5
3. Battery storage suggestion	5
4. Important charging notes	5
ASSEMBLY	6
1. Functional description	6
2. Technical data	7
3. Battery pack installing and removing	7
4. Power display for the battery	8
5. Charger quick guide	9
HEDGE TRIMMER SAFETY WARNINGS AND INSTRUCTIONS	9
1. Operating environment	9
2. About battery and charger	10
3. Important details before using the Hedge Trimmer	10
4. Protection system	11
5. Instructions for use	11
6. Important warnings while using the Hedge Trimmer	14
MAINTAINANCE	15
1. Clean and oil	15
2. Tips for Blade sheath	15
3. Clean	15
3. Tips for maintaining maximum battery life	16
HELPS	17

SAFETY GUIDELINES DEFINITIONS

The information it contains relates to protecting your safety and preventing problems.
The symbols below are used to help you recognize this information.

-  **DANGER:** Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury.
-  **WARNING:** Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury.
-  **CAUTION:** Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury.
-  **NOTICE:** Used without the safety alert symbol indicates a potentially hazardous situation that, if not avoided, may result in property damage.

-  Read instruction manual before using the tool.
-  Wear eye protection before using the tool.
-  Wear dust mask before using the tool.
-  Wear gloves before using the tool.
-  Do not expose power tools to rain or wet conditions.

1. Symbols

The label on your tool may include the following symbols. The symbols and their definitions are as follows:

V.....	volts
A.....	amperes
Hz.....	hertz
min.....	minutes
~or AC.....	alternating current
or DC.....	direct current
△	safety alert symbol
.../min or rpm.....	revolutions or reciprocation per minute



GENERAL POWER TOOL SAFETY WARNINGS



CAUTION: TO REDUCE RISK OF INJURY

- Before any use, be sure everyone using this unit reads and understands all safety instructions and other information contained in this manual.
- Save this manual and review frequently before using and instructing others.
- **DO NOT** point unit discharge at self or bystanders.



WARNING:

When using an electric tool, basic safety precautions should always be followed to reduce risk of fire, electric shock, and personal injury.



WARNING:

Some dust created by power sanding, sawing, grinding, drilling and other construction activities contains chemicals known to the state of California to cause cancer, birth defects, or other reproductive harm. Some examples of these chemicals are Lead from lead-based paint, crystalline silica from bricks and cement and other masonry products, and arsenic and chromium from chemically treated lumber. **To reduce your exposure to these chemicals, wear approved safety equipment such as dust masks that are specially designed to filter out microscopic particles.**

1. Work area safety

- **Operate the power tool in well-ventilated areas only.**
- Keep work area clean and well lit. Cluttered or dark areas invite accidents.
- **Do not** operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- **DO NOT** immerse any part of the unit in liquid.
- **DO NOT** handle charger, including charger plug, and charger terminals with wet hands.
- **KEEP CHILDREN, BYSTANDERS AND ANIMALS AWAY** from the work area a minimum of 30 feet (10 meters) when starting or operating the unit.
- **INSPECT THE AREA before using the unit.** Remove all debris and hard objects such as rocks, glass, wire, etc. that can be kickback, be

thrown, or otherwise cause injury or damage during operation.

2. Personal safety

- **Use personal protective equipment. ALWAYS wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection use a for appropriate conditions will reduce personal injuries.
- **Dress properly. Do not** wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.
- **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. **Use of dust collection can reduce dust-related hazards.**
- **Do not let familiarity gained from frequent using of tools allow you to become complacent and ignore tool safety principles and the instruction manual.** A careless action could cause severe injury within a fraction of a second.

3. Power tools use and care

- **USE ONLY** as described in this manual. **USE ONLY** manufacturer's recommended attachments. **USE ONLY** charger supplied by the manufacturer to recharge.
- **DO NOT CHARGE** the unit outdoors.
- **USE BATTERY-DRIVEN TOOLS ONLY** with specifically designated battery pack. Using any other batteries may create a risk of fire.
- **EXTRAORDINARILY CARE** in handling batteries in order not to short out the battery with conducting materials such as rings, bracelets and keys. **The battery or conductor may overheat and cause burns.**
- **DO NOT OPEN OR MUTILATE** the batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
- **AVOID DANGEROUS ENVIRONMENTAL CONDITIONS** – **DO NOT** use electric units in damp or wet locations. Don't use the unit in the rain.

- **AVOID** body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- **AVOID** accidental starting. Ensure the switch is in the off position before connecting to power source and/or battery pack, picking up or carrying the tool.
- **DO NOT** use unit if switch does not turn it on or off. A unit that cannot be controlled with the switch is dangerous and must be repaired.
- **Hold the power tool tightly when using it.**
- **DISCONNECT** battery pack from unit or place the switch in the locked or off position before making any adjustments, changing accessories, or storing the unit.
- **DON'T OVERREACH.** Always keep proper footing and balance. This enables better control of the power tool in unexpected situations.
- Before turning the power tool on, remove any adjusting key or wrench. **A wrench or a key left attached to a rotating part of the power tool may result in personal injury.**
- **ACCURATELY USE UNIT** – DO NOT use this unit for any job except that for which it is intended.
- **DO NOT** allow to be used as a toy. **Close attention is necessary when used by or near children. Not recommended for use by children.**
- **STAY ALERT** – Watch what you are doing. Use common sense.
- **DO NOT** operate unit when you are tired. Keep handles and grasping surface dry, clean and free from oil and grease. Slippery handle and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.
- **DO NOT** attempt to repair the power tools. To assure product safety and reliability, repairs, maintenance, and adjustments should be performed by pro-workers.
- **MAINTAIN UNIT WITH CARE.** Keep unit clean for best and safest performance.
- **STORE IDLE UNITS.** When not in use, the power tool should be stored in a dry, high or locked-up place, out of reach of children.

BATTERY CHARGER

1. Important safety instructions for battery charger

SAVE THESE INSTRUCTIONS:

This manual contains important safety instructions for battery chargers. Before using the charger, read all instructions and cautionary markings on the charger. Before using the battery pack and charger, read the safety instructions below. Then follow the charging procedures outlined.

WARNING:

Shock hazard. **DO NOT** allow any liquid to get inside charger.

CAUTION:

Burn hazard. To reduce the risk of injury, charge only designated batteries. Other types of batteries may burst to cause personal injury and damage.

CAUTION:

Under certain conditions, with the charger plugged into the power supply, the charger can be shorted by foreign material. Foreign materials of a conductive nature such as, but not limited to, steel wool, aluminum foil, or any buildup of metallic particles should be kept away from charger cavities. Always unplug the charger from the power supply when there is no battery pack in the cavity. Unplug the charger before attempting to clean.

- **DO NOT** attempt to charge the battery pack with any chargers other than the ones in this manual. The charger and battery pack are specifically designed to work together.
- These chargers are not intended for any uses other than charging designated rechargeable batteries. Any other uses may result in a risk of fire, electric shock, or electrocution.
- **DO NOT** expose the charger to rain or snow.
- Pull by plug rather than cord when disconnecting charger. This will reduce the risk of damage to the electric plug and cord.
- Make sure that the cord of charger is located suitably so that it will not be stepped on, tripped over, or otherwise subjected to damage or stress.

- **DO NOT** use an extension cord. Use of improper extension cord could result in a risk of fire, electric shock, or electrocution.
- **DO NOT** operate chargers with damaged cords or plugs — have them replaced immediately.
- **DO NOT** operate the charger if it has received a sharp blow, been dropped, or otherwise damaged in any way. If the above problem occurs, please contact us at: support@seyvum-tools.com.
- **DO NOT disassemble charger, incorrect reassembly may result in a risk of electric shock, electrocution or fire.** When service or repair is required, contact us at: support@seyvumtools.com.
- Disconnect the charger from the outlet before attempting any cleaning. This will reduce the risk of electric shock. Removing the battery pack will not reduce this risk.
- **NEVER** attempt to connect two chargers together.
- The charger is designed to operate on standard household electrical power (120 Volts). **DO NOT** attempt to use it on any other voltage.
- **DO NOT** incinerate the battery pack even if it is severely damaged or is completely worn out. The battery pack could explode in fire. Toxic fumes and materials are created when battery packs are burned.
- **DO NOT** place the battery pack in water or let it get wet in the rain. Short circuit of battery will generate large current due to overheating and may cause fire or even breakdown.
- **DO NOT** charge or use the battery in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust. Inserting or removing the battery from the charger may ignite dust or fumes.
- Charge the battery pack timely before it is completely exhausted. When the power of the equipment is found to be low, please stop using and charge the battery pack.
- Please charge the hot battery pack only after cooling it down.
- **DO NOT** recharge the battery pack that fully charges already. Overcharging will cut down its service life.
- **Under abusive conditions, liquid may overflow in the battery. Please avoid contact. If battery contents encounter the skin, immediately wash the area with mild soap and water.** If battery liquid gets into the eyes, flush your eyes with water for 15 minutes or until irritation ceases. If medical attention is needed, the battery electrolyte for Lithium-Ion batteries is composed of a mixture of liquid organic carbonates and lithium salts.

2. Battery charger storage

- Put the charger in the room where the temperature is between 10 °C and 22 °C.
- The battery charger should be stored in a dry environment, and prevent any possible moisture from entering.

BATTERY PACKS

1. Important safety instructions for battery packs

This manual contains important safety instructions for battery packs.

Before using the charger, read all instructions and cautionary markings on the battery pack. Before using the battery pack and charger, read the safety instructions below. Then follow the charging procedures outlined.

- **Use equipment only with specifically designated battery packs. Use of any other battery packs may cause a risk of injury and fire.**
- **Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery pack may cause a risk of fire when used with another battery pack.
- **DO NOT** attempt to repair the damaged battery packs or the battery charger. Service of battery packs should only be performed by authorized service provider (support@seyvum-tools.com).
- **When not using the battery pack, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects.** That can make a connection from one terminal to another. These objects may create short-circuit for the battery terminals causing burning or fire.

2. Battery protection system

- The battery pack is equipped with a tool/battery protection system that automatically cuts off the output power of the motor to extend the tool and battery life.
- While working, the tool may stop running when the tool and/or battery are in the following conditions. This is due to the activation of the protection system, not a tool failure.
- When the tool is overloaded: At this time, please release the trigger switch and remove the overload fault. When the tool does not work even after releasing the trigger switch, it is due to the automatic battery power stop function. Please charge the battery pack before use.
- When the remaining power of the battery becomes low: Please charge the battery pack.



WARNING: Burn hazard

Battery liquid may be flammable if exposed to spark or flame.

- Charge the battery packs only with the charger specified by the manufacturer.
- DO NOT splash or immerse in water or other liquids.
- DO NOT store or use the tool and battery pack in locations where the temperature may reach or exceed 105°F (40 °C) (such as outside sheds or metal buildings in summer).



WARNING: Fire hazard

DO NOT store or carry batteries in the condition that exposed battery terminals could contact metal objects.

For example, do not place batteries in aprons, pockets, toolboxes, product kit boxes, drawers, etc., with loose nails, screws, keys, etc.

Transporting batteries can possibly cause fire if the battery terminals inadvertently encounter conductive materials such as keys, coins, hand tools. The US Department of Transportation Hazardous Material Regulations (HMR) prohibits transporting batteries in commerce or on airplanes (i.e., packed in suitcases and carry-on luggage). UNLESS they are properly protected from short circuits.

Hence, when transporting individual batteries, make sure that the battery terminals are protected and well insulated from materials that could contact them and cause a short circuit.



NOTICE:

Lithium-Ion batteries should not be put in checked baggage.



WARNING:

Never attempt to open the battery pack for any reason

- DO NOT crush, drop or damage the battery pack.
- If the battery pack case is cracked or damaged, do not insert it into the charger.
- DO NOT use the battery pack or charger that have been received a hard crush, been dropped, or damaged in any way (i.e., pierced with a nail, hit with a hammer, stepped on). If your batteries are damaged, contact us at: support@seyvumtools.com.

3. Battery storage suggestion

- The best storage place is one that is cool and dry, away from direct sunlight and excess heat or cold.
- Long-term storage will not harm the battery pack or charger.



NOTICE:

Lithium-ion battery packs should not be constantly kept in the state that power is exhausted. When you don't use your batteries very often, charge the battery to approximately 50% capacity at least once every six months.

4. Important charging notes

- Longest life and best performance can be obtained if the battery pack is charged when the air temperature is between 65°F and 75°F (18°- 24°C). DO NOT charge the battery pack in an air temperature below +40°F (+4.5°C), or above +105°F (+40.5°C). This is important and will prevent serious damage to the battery pack.
- The charger and battery pack may become warm to the touch while charging. This is a normal condition and does not indicate a problem.
- To facilitate the cooling of the battery pack after use, avoid placing the charger or battery pack in a warm environment such as in a metal shed, or an uninsulated trailer.

- **If the battery pack does not charge properly:**

1. Check the current in the outlet by plugging in other appliance, for example a lamp.
2. Move charger and battery pack to a location where the surrounding air temperature is approximately 65°F-75°F (18°-24°C).
3. If charging problems persist, contact us at: support@seyvumtools.com. **The battery pack should be recharged when it fails to produce sufficient power on jobs that were easily done previously.** Follow the charging procedure. You may also charge a partially used pack whenever you desire with no adverse effect on the battery pack.

 


WARNING: Shock Hazard

DO NOT allow any liquid to get inside the charger. Never attempt to open the battery pack for any reason.

ASSEMBLY

1. Functional description

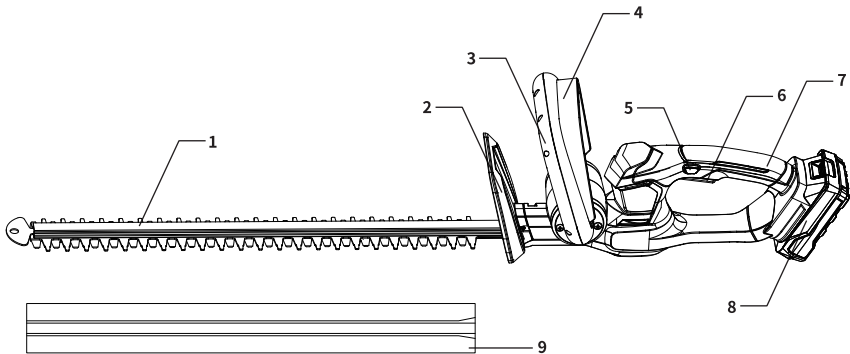


1. Blade
2. Safety guard
3. Front handle
4. Front switch lever (all around the Front handle)
5. Lock-off switch
6. Trigger switch
7. Rear handle
8. Battery
9. Blade sheath

2. Technical data

MODEL	DCHT2006
Power	20V Max
Blade length	22"
Cutting capacity	5/8"

Voltage measured without workload. Initial battery voltage reaches maximum of 20 volts. Nominal voltage is 18 volts.

 3. Battery pack installing and removing

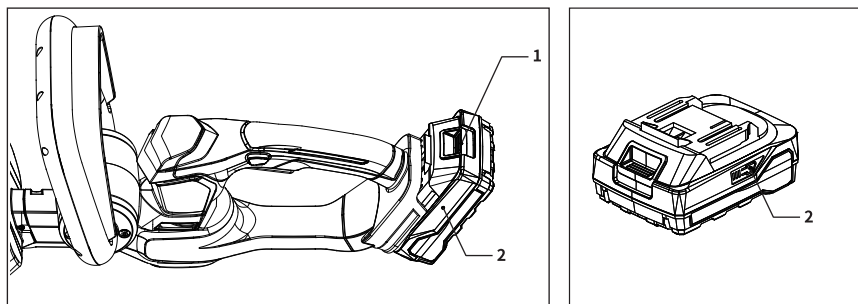

► 1. Button 2. Battery pack

- To remove the battery pack, slide it away from the tool while pressing the button on the front of the pack.
- To install the battery pack, align the tongue on the battery pack with the groove in the housing and slip it into place. Insert it all the way until it locks in place with a little click.

CAUTION:

Always install the battery pack fully until the click-lock cannot be seen. If not, it may accidentally fall out of the tool, causing injury to you or someone around you.

 
CAUTION:

Do not install the battery pack forcibly. If the pack does not slide in easily, it is not being inserted correctly.

4. Power display for the battery

When the tool automatically stopped frequently, please check the remaining battery capacity and charge the battery.

Indicating the remaining battery capacity (on battery)

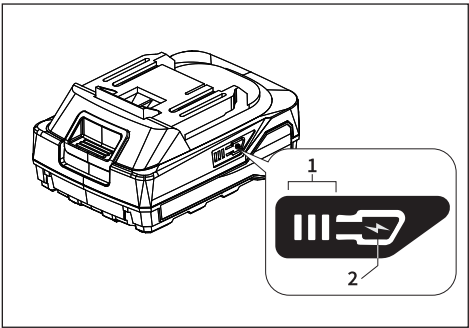

► 1. Indicating LEDs 2. Check button

Press the check button on the battery pack to indicate the remaining battery capacity. The indicating LEDs light up for a few seconds.


Indicating LEDs		Remaining capacity
 Lighted	 Off	
		75% to 100%
		50% to 75%
		0% to 50%

NOTE:

Depending on the conditions of use and the ambient temperature, the indication may differ slightly from the actual capacity.

5. Charger quick guide

 Red: charging / Green: fully charged

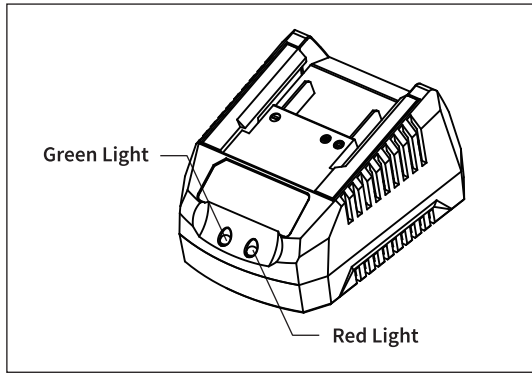

1. Plug the charger into an appropriate outlet before inserting the battery pack.
2. Insert charging cable into port of the battery pack.
3. The red LED will be indicated that the battery is being charged.
4. The completion of the charge is indicated by the green LED remaining on continuously.

NOTE:

- Recharge discharged batteries as soon as possible after use, or the battery life may be greatly diminished. For the longest battery life, do not discharge batteries fully.
- Continuously charging the battery that is fully charged will affect the life of the battery pack, so the battery should be removed when the battery is fully charged.

HEDGE TRIMMER SAFETY WARNINGS AND INSTRUCTIONS

CAUTION:

Read all warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury. AND DO NOT allow persons unfamiliar with the equipment or these instructions to operate the equipment. The equipment is dangerous by untrained users.

1. Operating environment

- Operate the Hedge Trimmer in well-ventilated areas only.
- AVOID DANGEROUS ENVIRONMENTAL CONDITIONS – DO NOT use the Hedge Trimmer in the rain or any wet environment, never let water and any liquid get inside the Hedge Trimmer.
- AVOID body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- Keep work area clean and well. Cluttered or dark areas invite accidents.
- DO NOT operate Hedge Trimmer in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. The equipment may create sparks which may ignite the dust and fumes.

2. About battery and charger

- **USE THE Hedge Trimmer ONLY** as described in this manual. **USE ONLY** manufacturer's recommended attachments of the Hedge Trimmer. **USE ONLY** charger supplied by the manufacturer to recharge, and **DO NOT CHARGE** Hedge Trimmer's battery outdoors.
- **USE BATTERY OPERATED UNIT ONLY** with **specifically designated battery pack**. Use of any other batteries may create a risk of fire.
- **EXERCISE CARE** in handling batteries in order not to short the battery with conducting materials such as rings, bracelets and keys. The battery or conductor may overheat and cause burns.
- **DO NOT OPEN OR MUTILATE** the batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.

3. Important details before using the Hedge Trimmer

- **DO NOT** use the hedge trimmer with any type of accessory or attachment. Such usage might be hazardous.
- **Wear safety glasses and hearing protection.** Further protective equipment for head, hands, legs and feet is recommended. Adequate protective clothing will reduce personal injury by flying debris or accidental contact with the blade.
- **Always keep proper footing and operate the Hedge Trimmer only when standing on fixed, secure and level surface.** Slippery or unstable surfaces may cause a loss of balance or control of the Hedge Trimmer.
- **Before turning the Hedge Trimmer on, remove any adjusting key or wrench.** A wrench or a key left attached to a rotating part of the Hedge Trimmer may result in personal injury.
- **Keep all parts of the body away from the blade or sandpaper when the Hedge Trimmer is operating.** Before you start the Hedge Trimmer, make sure the blade or sandpaper is not contacting anything.
- **AVOID** accidental starting. **DO NOT** push any switch the of the Hedge Trimmer before connecting the battery pack.
- **Check for misalignment or binding of moving parts, breakage of parts and any other condition** may affect the equipment's operation. **If damaged, contact us (support@seyvumtools.com) before use.**
- **DO NOT** allow to be used as a toy. **Close attention is necessary when used by or near children. Not recommended for use by children.**
- **STAY ALERT, watch what you are doing.** Use common sense.
- **DO NOT** operate Hedge Trimmer when you are tired.
- **Keep handles and grasping surface dry, clean and free from oil and grease.** Slippery handle and grasping surfaces do not allow for safe handling and control of the Hedge Trimmer in unexpected situations.
- Before inserting the battery pack into the tool, always check that the Trigger switch can be pulled freely and will return to its original position when released, please check that the hedge trimmer is in good and safe working condition, make sure the Safety guard and the Front handle is in place, and do not use the Hedge Trimmer until it is fully installed.

WARNING:

- **DO NOT attempt to modify this Hedge Trimmer or create accessories not recommended for use with this Hedge Trimmer.** Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious injury.
- **To prevent accidental starting that could cause serious personal injury, always remove the battery pack from the Hedge Trimmer when assembling parts, making adjustments, or cleaning the tool.**
- Operate the tool only by grasping the insulated handle, because the blade may come into contact with hidden wires. When the blade comes into contact with a live wire, exposed metal parts of the power tool may also become live and shock the operator.
- **Keep all parts of the body at a certain distance from the blade. Do not remove the cutting material or hold down the material while the blade is moving.**
- **Make sure the switch is off when removing jammed material, distraction during operation of the hedge trimmer can result in serious personal injury.**

4. Protection system

The tool is equipped with a tool/battery protection system. This system automatically cuts off power to the motor to extend tool and battery life. The tool will automatically stop during operation.

OVERLOAD PROTECTION

When the tool is operated in a manner that causes it to draw an abnormally high current, the tool automatically stops without any indication. In this situation, turn the tool off and stop the application that caused the tool to become overloaded. Then turn the tool on to restart.

OVERHEAT PROTECTION

Continuous operation of the tool will cause the battery temperature to rise and heat up. The tool will automatically stop without any instructions. In this case, the battery activates the temperature protection and will reboot after tool and battery cool down.

 
LOW POWER PROTECTION

When the battery capacity is not enough, the tool stops automatically. In this case, remove the battery from the tool and charge the battery.

5. Instructions for use

(1) Working position

Hold the unit firmly in both hands and turn the unit on.

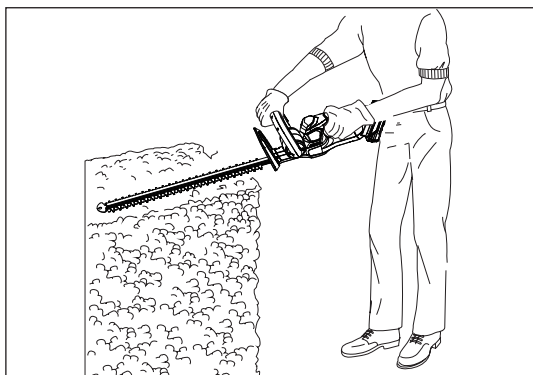


Always hold the trimmer as shown in the above figure, with one hand on the Front handle and one hand on the Rear handle. **Never hold the unit by the Safety guard.**

(2) Turn the unit on

For your personal safety, the tool is equipped with a double switch system.

 To turn the unit on, push the Lock-off switch [A] on, then squeeze the Trigger switch [B] and push the Front switch lever [C] simultaneously.

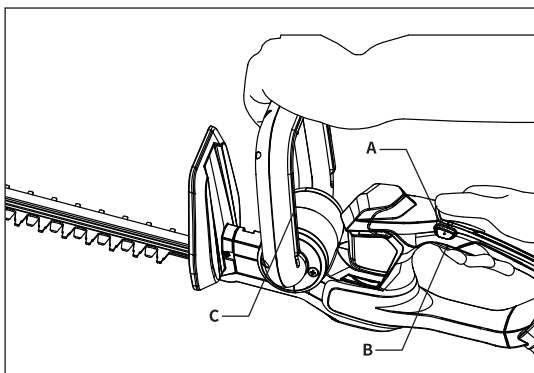

A: Lock-off switch
B: Trigger switch
C: Front switch lever

 
NOTE:

After starting the unit, you can release Lock-off switch [A], the machine will continue running.

In order to keep the unit running, you must continuously squeeze the Trigger switch [B] and Front switch lever [C]. To turn the unit off, just release these two switches.


(3) Trimming suggestion: trimming new growth

Using a wide, sweeping motion, feeding the blade teeth through the twigs, is most effective. A slight tilt of the blade in the direction of motion gives the best cutting.

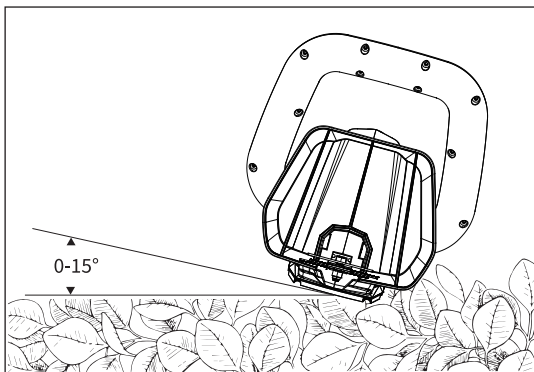


(4) Trimming suggestion: side trimming hedges

 Orient the trimmer as shown and begin at the bottom and sweep up.

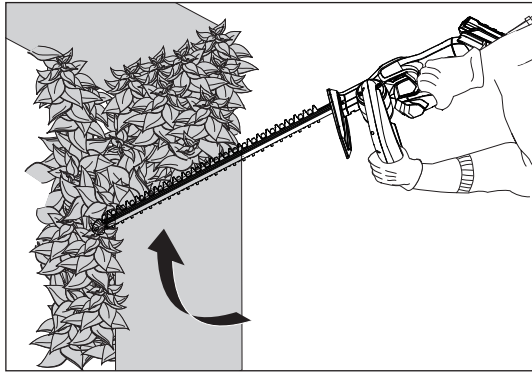

(5) Trimming suggestion: level hedges

 To obtain exceptionally level hedges a piece of string can be stretched along the length of the hedge as a guide.

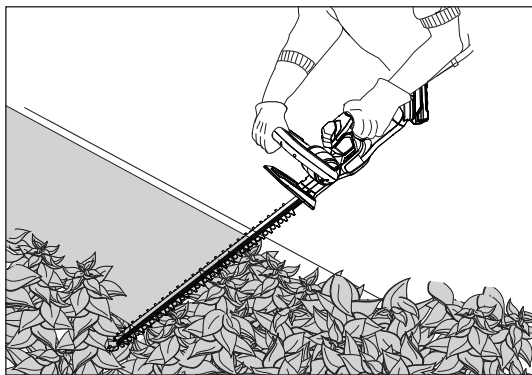

WARNING:

- READ INSTRUCTION MANUAL BEFORE USING, SAVE INSTRUCTION MANUAL.
- Check the hedge for potential dangerous objects such as wires or fences before each use.
- KEEP HANDS ON HANDLES. DON'T OVERREACH.

WARNING:

- DO NOT USE UNDER WET CONDITIONS. Short circuit of battery will generate large current due to overheating and may cause fire or even breakdown.
- While operating, keep the blade avoiding barbed wire, stones, glass, or other hard objects, which may damage the machine and lead an injury to you.

6. Important warnings while using the Hedge Trimmer

- For all accessories, work with the accessory away from the body. Never position hand near or directly in front of working area. Always hold the tool with both hands and **MUST WEAR PROTECTIVE GLOVES.**
- **Trimming wood and trees only.** DO NOT use Hedge Trimmer for purposes not intended. **For example: do not use Hedge Trimmer for cutting metal, plastic, masonry or non-wood building materials.** Use of the Hedge Trimmer for operations different than intended could result in a hazardous situation.
- DO not cut dead trees or similar hard objects, which may damage the tool.
- Do not cut stems greater than 5/8 inch (16 mm). Use the trimmer only for cutting normal shrubbery around houses and buildings.
- Use the Front handle and the Rear handle to carry the hedge trimmer when the blade stops running. When transporting or storing the hedge trimmer, be sure to cover the cutting device cover. Proper operation of the hedge will reduce the possibility of personal injury from the blade.
- **Disconnect the battery pack from the equipment before making any adjustment** intended could result in a hazardous situation or storing the equipment. Such preventive safety measures reduce the risk of starting the equipment accidentally.

WARNING:

After each use, to prevent accidental start, please ensure that the battery on the Hedge Trimmer has been pulled out. And to prevent accidental cuts, please wear protective gloves.

MAINTAINANCE

Check for misalignment or binding of moving parts, breakage of parts and any other condition may affect the equipment's operation. **If damaged, contact us (support@seyvumtools.com) before using.** Many accidents are caused by poorly maintained equipment.



WARNING:

Before performing any maintenance, switch off tool and remove battery, and always put on gloves.

 
1. Clean and maintenance

- Remove the battery first.
- Use **only a dry cloth** to remove the dust on both sides of the saw blade. **NEVER let any liquid get inside the unit, and NEVER immerse any part of the unit into a liquid.** NEVER use gasoline, benzene, thinner, alcohol, or similar items to clean the tool, as this may cause the tool to become discolored, deformed, or cracked.
- Then apply a film of light machine oil after cleaning.

NOTE:

Prevent the blades from rusting by applying a film of light machine oil after cleaning

2. Tips for Blade sheath

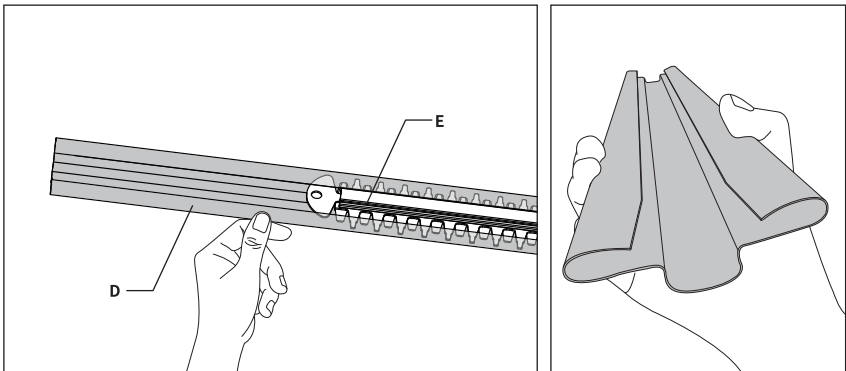

D: Blade sheath
E: Guide bar

- Keeping your hands away from the blade, slide the Blade sheath [D] over the blade until it snaps into place.
- **NOTICE** the correct direction of installing Blade sheath, the groove side should be facing upwards while sliding the blade into sheath. Otherwise, the Blade sheath cannot be installed properly.

3. Tips for maintaining maximum battery life

- Charge the battery pack in time before it is completely drained out. When you find that the power of the tool is low, stop the tool operation and charge the battery pack.
- **DO NOT** recharge a fully charged battery pack. Overcharging will shorten the life of the battery.
- Longest life and best performance can be obtained if the battery pack is charged when the air temperature is between 65 °F and 75 °F (18 °C - 24 °C).

HELPS

- If the Hedge Trimmer will not start

- Probable reasons & suggested method:

- Check if the battery is installed correctly.
- Read again the battery charging requirements and check for an error.
- Check if the Lock-off switch is fully pressed prior to squeezing the Trigger switch, and read again the operating instruction.
- If the machine still won't start, contact us at: support@seyvumtools.com

- If the Hedge Trimmer shuts down in use

- Probable reasons & suggested method:

- Check the battery's state of charge. If the battery is running out, please charge it. If not, it is probably because continuous use has triggered the over-temperature protection, please let the Hedge Trimmer cool down and then restart.
- It is probably because the tool has been forced. Restart and apply appropriate pressure.

- If the battery won't charge

- Probable reasons & suggested method:

- Insert battery into charger until red charging light illuminates. Charge up to 8 hours if battery is totally drained.
- Check the current in the outlet by plugging in other appliance, for example a lamp.
- Connect the charger to a normally functioning outlet, and charging another battery, refer to Important charging notes for more details. Check if this battery could be charge properly.
- Install the battery into another SEYVUM tool and check if the tool works properly.
- If you just ran out of the battery, charge the battery after it cooling down.
- Move charger and battery to a surrounding air temperature of 18 C - 24 C .

- If the Hedge trimmer couldn't trim anything

- Probable reasons & suggested method:

- Check if the screws on the blade is loose, if the blade still could not trim anything after tightening the screws, please contact us at: support@seyvumtools.com
- Refer to Instruction for use section. Consider whether the operating pressure you applied is suitable or not.
- Check if the blade is dull and needs maintenance. To ensure consistent cutting performance, regularly sharpening the blade is recommended. Please have the cutting blades resharpend by professional sharpening services near you.

If you have any other questions or suggestions about

- Anything about battery and charging
- Anything about the Accessory
- Any doubt about using the tool

Please contact us at:
support@seyvumtools.com

www.seyvumtools.com

SEYVUM

✉ support@seyvumtools.com

🌐 www.seyvumtools.com