

Universal version user manual

Please read the instruction manual carefully before using this product.
The manual is for reference only. The specific operation shall be subject to the actual product.

7. Reset button

When the machine has a distorted screen or freezes abnormally, you can force it to shut down by briefly poking it with a pinhole-shaped object.

Note: Do not remove or insert the card during video/photo/recording/playback mode!

8.USB interface

- Interface type: Type-C;
- Used to connect an external power source to charge the battery or provide working power ;
- Used to connect to the PC to perform 'storage/video mode' operations.

3.Basic operating instructions

1. Power on and off

Push the power button down to turn on the device, and push it up to turn off the device. (This button has no effect when the USB is powered)

2. Video recording mode

- In the off state, push the 'power button' to turn on the device and enter the video recording mode (when the device is powered on with a memory card, it will automatically record when powered on) ;
- Press the 'OK button' to start recording, press again to stop recording and save automatically ; long press to call up the settings menu, long press again to exit the menu and return to the recording mode;
- Press the 'up/down key' to reduce or enlarge the focal length; long press the 'up key' to turn on the WiFi mode, long press again to exit the WiFi mode and return to the video mode; long press the 'down key' to turn on the infrared light, long press again to turn it off ;
- Press the 'Mode Key' to switch to photo/recording mode; long press to flip the lens display ;



Please download WiFi products
(No download required for non WiFi)
Press and hold the key to open
the hot spot of the machine

Connection steps:


- After the device is turned on, press and hold the "up button" to turn on the WiFi. The screen will display the device WiFi name and password to indicate that the WiFi is turned on;
- Click on the downloaded APP, find "Add device" - enter the WiFi settings, find the WiFi name displayed on the device and enter the password to successfully connect.
- Turn off WiFi: After turning on the WiFi function , long press the 'up button' to turn off WiFi.

4. Product parameters and specifications

Hardware Specifications	
Master control chip	HX02
storage method	TF card, supporting up to 1024GB
Display screen size	0.96inch
display screen pixels	160*80/IPS
Camera physical pixel	30万
era chip	1/10 inch CMOS
camera model	0A09

1.Product Structure

Product Description

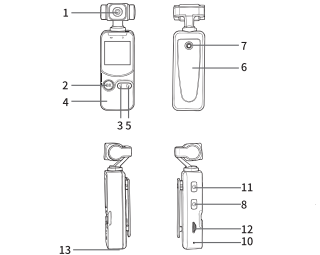

- | | | |
|-------------------|-------------------|-------------------------|
| 1)Lens | 2)OK key/Menu key | 3)Up key |
| 4)Speaker | 5)Down button | 6)Shoulder armor buckle |
| 7) Bracket hole | 8) Mode button | 9) Playback button |
| 10) Reset hole | 11) Power button | 12) TF card slot |
| 13) Charging port | | |

2.Key and interface function introduction

1.Power button

- Press the 'playback button' to enter playback mode, press once to record the audio file, press twice to record the video file, and press 3 times to return to recording mode; long press to turn off the screen, press any button (except the power button) to turn on the screen.

3. Photo mode

- In the off state, press the 'Power button' to turn on the device, and press the 'Mode button' once to enter the photo mode ;
- Press the 'OK button' to take a photo and save it automatically ; long press to bring up the settings menu, long press again to exit the menu and return to photo mode;
- Press the 'up/down key' to reduce or enlarge the focal length; long press the 'up key' to turn on the WiFi mode, long press again to exit the WiFi mode and return to the photo mode; long press the 'down key' to turn on the infrared light, long press again to turn it off ;
- Press the 'Mode Key' to switch to recording/video recording mode; long press to flip the lens display ;
- Press the 'playback button' to enter playback mode, press once to record a file, press twice to take a photo, and press 3 times to return to photo mode; long press to turn off the screen, press any button (except the power button) to turn on the screen.

4. Recording mode

- In the off state, press the 'Power button' to turn on the device, and press the 'Mode button' twice to enter the recording mode ;
- Press the 'OK button' to start recording, press again to stop recording and save automatically ; long press to r up the settings menu, long press again to exit the menu and return to recording mode;
- Long press the 'up button' to turn on WiFi mode, and long press again to exit WiFi mode and return to recording mode;
- Press the 'Mode Key' to switch to video/photo mode;

- Push it upward to shut down;
- Push down to turn on the device. (Pushing the button down will not work when charging)

2.OK/Menu key

- Photo, video and audio recording modes: tap to take photo/video/audio recording ;
- Press and hold to bring up the settings menu, and press and hold again to exit;
- In playback mode, click to pause/play the video file;
- In the settings menu, tap to confirm.

3.Mode key

- Tap to switch modes (photo, video, audio)
- In photo and video modes, long press to flip the lens display.

4. Up key

- In the photo, video or audio recording modes, long press to turn on the WiFi mode, and long press again to turn it off ;
- In photo or video mode, tap to reduce the focus ;
- In the setting menu, press as the up selection key ;
- In playback mode, tap to view the previous file.

5. Down key

- In photo and video recording mode, tap to zoom in, and long press to turn on/off the infrared light ;
- In the settings menu, press as the down selection key ;
- In playback mode, click to view the next file.

6. Playback button

- Click to jump to playback mode;
- In the photo, video or audio recording interface, long press to turn the screen off/on.

- Press the 'playback button' to enter playback mode, press once to record a file, press twice to take a photo or record a video, and press 3 times to return to recording mode; long press to turn off the screen, press any button (except the power button) to turn on the screen.

5. Playback Mode

- In the off state, push the 'Power button' to turn on the device, and tap the 'Playback button' to enter the playback mode ; (tap once for recording files, tap twice for video/photo files, and tap 3 times to return to the previous mode)
- Press the 'Up/Down Key' to switch files in the mode;
- Press the 'OK button' to 'play' or 'pause' the audio/video file; long press to bring up the delete menu;
- Press the 'Mode Key' to switch modes ;
- Long press the 'playback button' to turn off the screen, and press any button (except the power button) to turn on the screen.

6. USB Mode

The device is connected to the computer using USB data. After the device automatically turns on, the screen displays two options: 'Storage/Video Mode'.

Storage: In this mode, you can access and view videos, photos , and audio files ; Video mode: Only used for the computer to power the device.

7. WiFi Mode

- Turn on WiFi:** In the photo/video/record interface, long press the 'up button' to turn on WiFi;
- Install and use WiFi:** "Wind Recorder" app on your smartphone.
Note: For Android, please scan the QR code below; for iOS, you can search for "Wind Recorder" in the Apple Store to download.

photo resolution	2M
screen saver	2 minutes
photo format	JPG
multiple languages	English

Note: This product reserves the right to change design and specifications without prior notice.

camera angle	70-90 degrees
Battery model/capacity	Polymer 502020, capacity 180mAh
horn	8 ohms 0.5 watts
fill light	support
shell	ABS heat-resistant material
Optional colors for the shell	Pink, white, black

Power Information	
charging port	TYPE-C USB
charging input	5V-1A
polymer battery	502020 Rated capacity - 180mAh
	Standard voltage - 3.7V
	Charging limit voltage -4.2V
	Discharge limit voltage -3.6V
Operating temperature	-10°C ~ 65°C

Functional Description	
Photographing/ video recording function	filter support
Number of photos taken by this device	23 sheets
Local music	MP3 audio playback (not supported)
video resolution	1440*1080 (1080P)
video format	AVI, M-JPEG
Loop recording time	3 minutes