




2BUL4-NA-P01

[EN/nelna pencil] User Guide

Nelna Pencil — crafted for refined design and detailed note-taking.

To help you use it more comfortably, here's a quick user guide. 

Product Overview

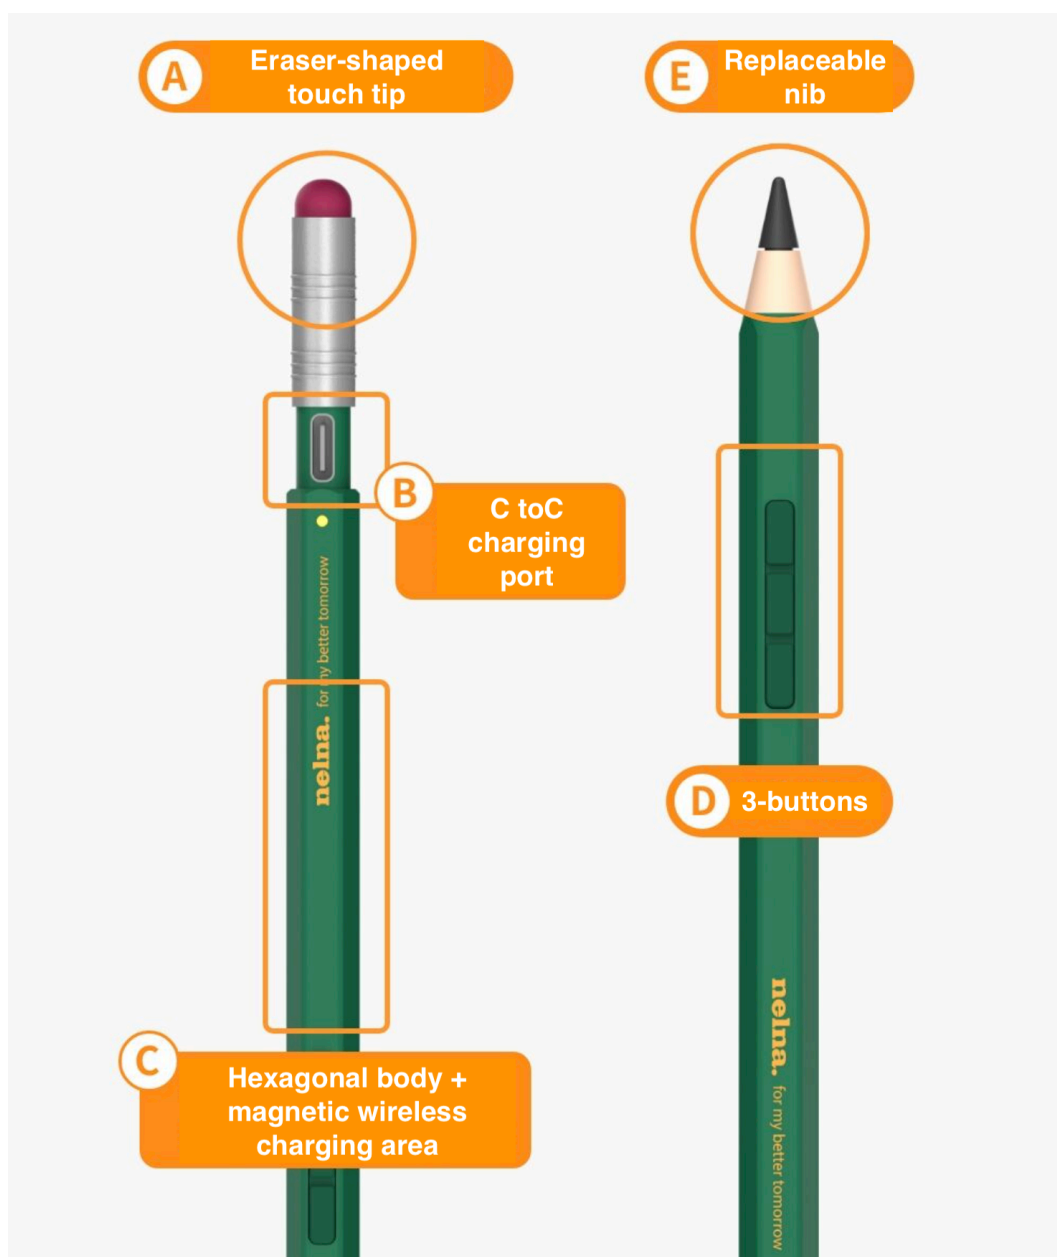

FCC Information

FCC ID : 2BUL4-NA-P01

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This Device may not cause harmful interference, and
- (2) This Device must accept any interference received, including interference that may cause undesired operation.

! Note : This equipment has been tested and found to comply with the limits for CLASS B digital device, pursuant to Part 15 FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try correct the interference by one or more of the following measures ;

- 1.1. Reorient or relocate the receiving antenna.
- 1.2. Increase the separation between the equipment and receiver.
- 1.3. Connect the equipment into an outlet on a circuit different from that to which receiver is connected.
- 1.4. Consult the dealer or experienced radio/TV technician for help.

WARNING

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

How to Use

 **Before first use, please fully charge your Nelna Pencil.**


! In this guide, click the ► arrow to expand and see more details.

▼  Click the arrow next to it.

It will expand like this, and you'll be able to see the details! 🤔

Power On / Power Off

- **Press and hold the middle (②) button among the three buttons.** When the light at the tip turns on, the Pencil is **ON**. Press and hold it again to turn it **OFF**.

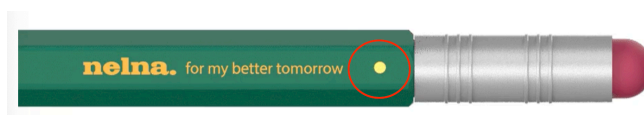

Pairing

If there is no stylus currently connected to your iPad (first-time pairing)

Settings → Bluetooth → Select **nelna pencil** → Pairing complete

If another stylus is already connected to your iPad

Settings → Bluetooth → Tap **Apple Pencil** → **Forget This Device** →

Turn **ON** the Nelna Pencil → Select **nelna pencil** → Pairing complete

! Notes

- **If another stylus is paired, the Nelna Pencil may not pair.** Please unpair the existing stylus first. *(Only one stylus can be paired per device.)*
- Even if pairing is not completed, the Pencil may still work for drawing/writing.
- If you used the Nelna Pencil on **Device A** and want to pair it with **Device B**, **remove (forget) the Nelna Pencil from Device A first.**
- If pairing fails, make sure your iPad is running **iOS 12.2 or later.**

- If you experience disconnects or lag, update **iOS** and your **note-taking app** to the latest version.
 - This product is **for iPad only** and is not compatible with other tablets (e.g., Galaxy Tab, Xiaomi Pad, etc.).
-

Charging

Nelna Pencil supports both **wired** and **wireless** charging.

However, **wireless charging is only available on certain models**, so please make sure to check whether your model supports it.

- **Indicator light**
 - **Low battery** → The light flashes **quickly**.
 - **Charging** → The light flashes **slowly**.
 - **Fully charged** → The light stays **ON for 30 seconds**, then turns **OFF**.
- **Wired charging**

Gently pull up the **ferrule** part of the Nelna Pencil to reveal the **USB-C charging port**.

Connect the charging cable to charge the Pencil.



Wired Charging

- **Wireless charging**

Place the Pencil with the **nelna logo facing up**, then attach it to the **magnetic charging area**.



Wireless charging


🔍 Wireless Charging Compatible Models

iPad Air		Model NO.	Wire-less Charge	iPad		Model NO.	Wire-less Charge
10.5”	3rd gen	A2152 / A2123 / A2153		9.7”	6th gen	A1893 / A1954	
10.9”	4th gen	A2316 / A2324 / A2325 / A2072	O	10.2”	7th gen	A2197 / A2198 / A2200	
	5th gen	A2588 / A2589 / A2591	O		8th gen	A2270 / A2428 / A2429 / A2430	
11”	3rd gen(M2)	A2902 / A2903			9th gen	A2602 / A2604	
13”	4th gen(M2)	A2898 / A2899		10.9/11”	10th gen	A2696 / A2757	
11”	4th gen(M3)	A3266 / A3267		10.9/11”	11th gen(A16)	A3354 / A3355 / A3356	
13”	5th gen(M3)	A2898 / A2899					
iPad mini		Model NO.	Wire-less Charge	iPad Pro		Model NO.	Wire-less Charge
7.9”	5th gen(M3)	A2133 / A2124 / A2126 / A2125		11”	1st gen	A1980 / A2013 / A1934 / A1979	O
					2nd	A2228 / A2068 / A2230 / A2231	O
8.3”	6th gen	A2567 / A2568	O		3rd gen	A2377 / A2459 / A2301	O
	7th gen(A17)	A2993 / A2995		12.9”	3rd gen	A1876 / A2014 / A1895	O
				11”	4th gen	A2759 / A2761 / A2435	O
				12.9”	4th gen	A2229 / A2069 / A2232	O
					5th gen	A2378 / A2461 / A2379	O
					6th gen	A2436 / A2437 / A2764	O
				11”	7th gen(M4)	A2836 / A2837	
				13”	7th gen(M4)	A2925 / A2926	

Button Functions

- We've built in key features optimized for note-taking apps like **GoodNotes** and **Flexcil**. The buttons work **like keyboard shortcuts**—they simply **trigger shortcut commands** for you.

Because button behavior can vary by app, please check which button functions are available in the app you use.

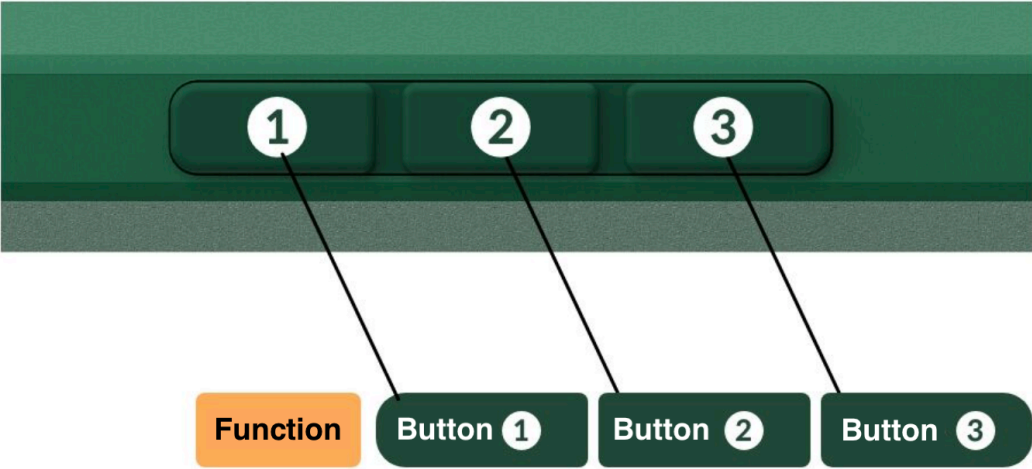

	Function	Button 1	Button 2	Button 3
iPAD	Hold	Switch Apps	Turn OFF	Screen OFF
 Goodnotes	Click	Pen	Eraser	Highlighter
	Dobule Click	Lasso Select	Undo	Insert Image
	Hold	Switch Apps	Turn OFF	Screen OFF
 Flexcil	Click	Pen	Eraser	Highlighter
	Dobule Click	Lasso Select	Undo	Pen/Gesture
	Hold	Switch Apps	Turn OFF	Screen OFF
 Procreate	Click	Pain	Eraser	Color
	Dobule Click	Layer	Undo	×
	Hold	Switch Apps	Turn OFF	Screen OFF



Other Apps

- Compatible Apps: Noteful, Clip Studio Paint

1) Noteful

- **Middle button — single click:** Select **Eraser** tool
- **Top button — single click:** Select **Hand** tool (move/pan the screen)
- **Middle button — double click:** **Undo**

2) Clip Studio Paint

- **Bottom button — single click:** Select **Pen** tool
- **Middle button — single click:** Select **Eraser** tool
- **Top button — single click:** Select **Color Switch** (Previous color ↔ Transparent/eraser color)
- **Bottom button — double click:** Select **Pen** tool
- **Middle button — double click:** **Undo**
- **Top button — double click:** Open the **Reference Point Selection** window

- Partially Compatible Apps: Notability, Margin Note, Notesshelf, iPhone Notes, Nebo

In these apps, **double-clicking the middle button only supports undoing one stroke at a time.**

- **Margin Note exception:** Undo works by **unit**, not always by a single stroke.
 - Example: If you write **1, 2, 3** separately and press Undo, it cancels **one number at a time.**
 - If you write **123** continuously and press Undo, **"123" may be recognized as one unit** and deleted all at once.

Not Compatible: Note Plus, CollaNote, Free Notes

Show the On-Screen Keyboard

Because Nelna Pencil's physical button shortcuts work on the **same principle as a Bluetooth keyboard**, your iPad may recognize the Pencil as a keyboard—so the **on-screen keyboard may automatically disappear** while you're using it.

When you need the keyboard in a text field, please use **one of the methods below**:

1. (Video 1:00~) Use the Nelna Pencil to **write by hand** (handwriting input).
2. (Video 11:00~) **Enable the keyboard pop-up** to bring back the on-screen keyboard.

[attachment:ea6ddba4-ab19-45e2-b45d-c6a1efb08b9c:넬나펜슬_키보드.mp4](#)

Replacing the Nib

- Nelna Pencil comes with a **pre-installed nib (core tip)**, so you can use it right away.

If the nib wears down, replace it with one of the spare nibs included in the package. *(Compatible with all Nelna nibs.)*

To replace the nib, **twist to remove** the old nib, then **twist to install** the new one.

(A small gap after installation is normal.)



How to remove the nib

How to install the nib

FAQ

Q. Can I customize each button?

A. The buttons on the Nelna Pencil act as **shortcuts that trigger preset functions**. Unfortunately, you can't turn off all button functions system-wide, nor can you assign different functions to each button individually.

Since button behavior can vary depending on the app you use (e.g., GoodNotes, Flexcil), please check the app compatibility details listed on the product page.

Q. Does it support pressure sensitivity or hover?

A. Unfortunately, **pressure sensitivity and hover are Apple-exclusive technologies**, so they are not supported on the Nelna Pencil.

Nelna Pencil focuses on essential writing features—delivering a pencil-like feel and an intuitive, comfortable writing experience.

Q. Can I pair it with multiple devices and use them at the same time?

A. The Nelna Pencil can be paired with **only one device at a time**, so simultaneous pairing and use across multiple devices is not supported.

Even without pairing, your iPad may still recognize the Pencil for writing/drawing. However, **button functions won't work unless it's paired**.

Q. What is the eraser for?

A. The eraser on the Nelna Pencil is **for touch input only**. It does **not** function as an actual eraser in apps.

Precautions

Usage & Environment

- Do not press or bend the Pencil with excessive force. This may deform the nib or damage internal sensors.
- Do not drop the Pencil or expose it to strong impacts. This may cause malfunction.
- Clean with a soft, dry cloth. Using alcohol wipes may cause the coating/paint to peel off.
- Do not disassemble or modify the Pencil. This may damage internal components.
- Do not use or store the Pencil in places with high humidity or dust, or in extremely low/high temperatures.

Battery & Charging

- Please charge the Pencil before the battery is completely depleted.
- Do not use old or defective chargers.

Nib Care

- All nibs are consumable parts and should be replaced when worn out.
- When replacing the nib, do not use excessive force and follow the recommended replacement method.

Warranty Period & After-Sales Service (A/S)

- **Warranty period:** Up to **1 year from the delivery completion date**
- Due to its structural design, this product is a **non-disassemblable, all-in-one unit** and cannot be repaired part by part.

If an issue occurs during use, A/S will be provided through **full product replacement rather than repair**.

(However, damage caused by customer fault or misuse may be subject to a paid service or may not be eligible for replacement.)

If you have any questions about using the product or need assistance, please feel free to contact the **Nelna Shop Customer Support Center** anytime.

We know you put a lot of thought into your purchase, and we'll be happy to help—wholeheartedly—so you can use it with confidence!