

*Sunbeam*

# Quantum Thick & Thin

Instruction Booklet

This book covers the use and care of the following Sunbeam Toasters:

TA4200 Quantum Thick & Thin - 2 slice toaster

TA4400 Quantum Thick & Thin - 4 slice toaster

Please read these instructions carefully  
and retain for future reference.



# Contents

<b>Sunbeam's Safety Precautions</b>	<b>1</b>
<b>Features of your Quantum Toaster</b>	<b>2</b>
<b>Using your Quantum Toaster</b>	<b>4</b>
<b>Quantum Toaster Functions</b>	<b>5</b>
<b>Care and Cleaning</b>	<b>6</b>

## Important instructions – retain for future use.

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich, dass die obenstehenden Sicherheitsmaßnahmen verstanden werden

Βεβαιώστε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید کہ احتیاط‌های بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşıldığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

# Sunbeam's Safety Precautions

## SAFETY PRECAUTIONS FOR YOUR TOASTER.

- Do not place any objects such as toast on top of your toaster when in use.
- Operate the toaster on a flat level surface.
- Use your toaster well away from walls and curtains.
- Do not leave your toaster unattended when in use.
- Do not allow crumbs to accumulate in the crumb tray.
- Do not toast stale bread, rice crackers or similar on a high setting as they may catch fire.
- **WARNING:** Never attempt to extract jammed toast, crumpets or muffins with a knife or any other object, as contact with the live element may cause electrocution.

---

**Sunbeam is very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:**

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The temperature of accessible surfaces may be high when the appliance is operating.
- Never leave an appliance unattended while in use.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven.
- Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.
- Appliances are not intended to be operated by means of an external timer or separate remote control system.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.

If you have any concerns regarding the performance and use of your appliance, please visit [www.sunbeam.com.au](http://www.sunbeam.com.au) or contact the Sunbeam Consumer Service Line.

Ensure the above safety precautions are understood.

# Features of your Quantum Thick & Thin Toaster

## Self-centring bread slots

Whether you are toasting thick or thin bread, your bread will always be held in the centre of the slot to ensure even toasting.

## Unique wipe clean design

The smooth contoured surface simply wipes clean.

## Cool touch exterior


Remains cool to touch, preventing burns and plastic wrappers clinging to the side of your toaster.


## Removable crumb tray

Pulls out from underneath your toaster for easy removal of crumbs.

## Tidy cord storage

The cord can be wrapped neatly underneath for safe convenient storage.

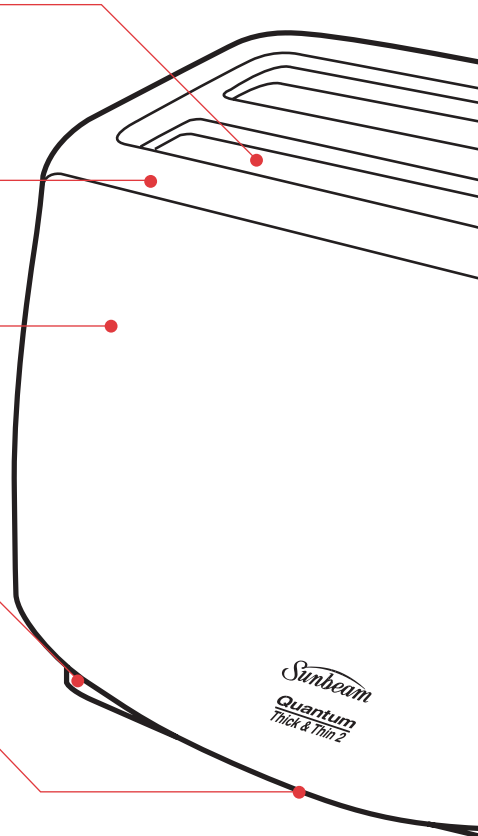

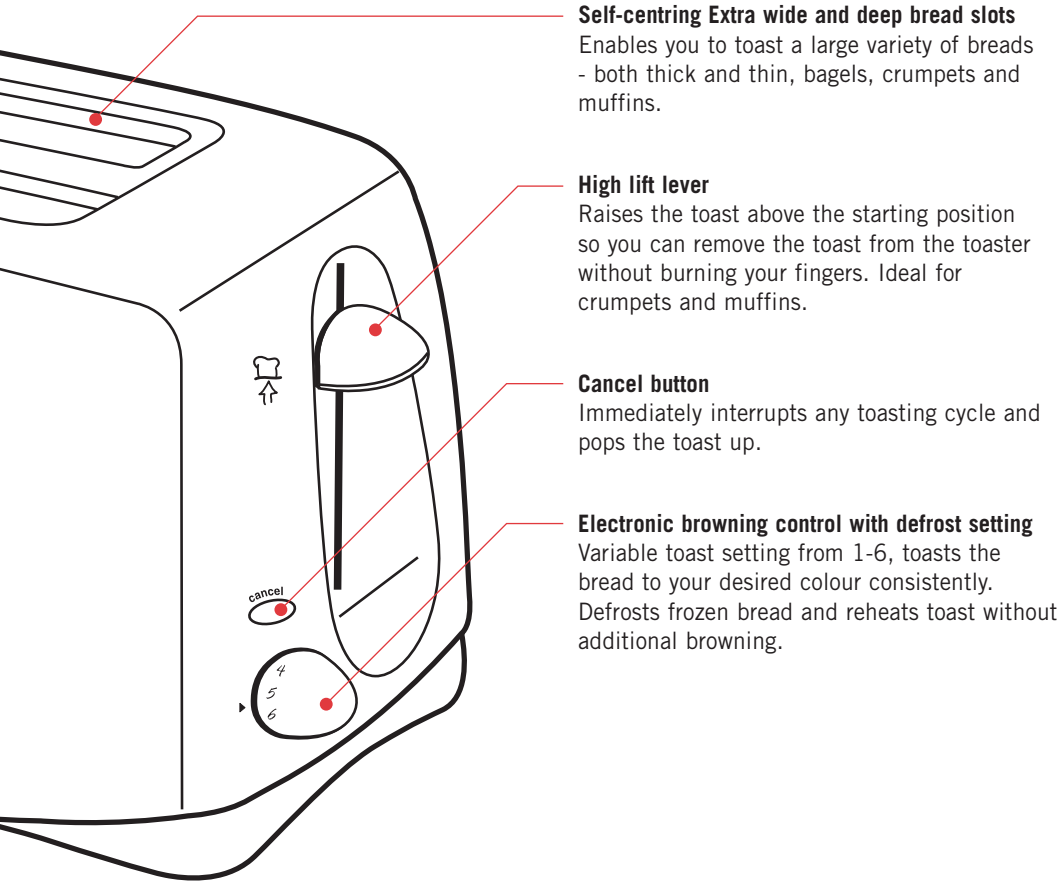

**Self-centring Extra wide and deep bread slots**

Enables you to toast a large variety of breads - both thick and thin, bagels, crumpets and muffins.

**High lift lever**

Raises the toast above the starting position so you can remove the toast from the toaster without burning your fingers. Ideal for crumpets and muffins.

**Cancel button**

Immediately interrupts any toasting cycle and pops the toast up.

**Electronic browning control with defrost setting**

Variable toast setting from 1-6, toasts the bread to your desired colour consistently. Defrosts frozen bread and reheats toast without additional browning.

# Using your Quantum Thick & Thin Toaster

Plug the toaster into a 230-240 volt AC power outlet and switch the power on.

## **Toasting Bread**

1. Position the bread in the bread slot.
2. Select the desired colour setting on the Electronic Browning Control.

**NOTE:** Select the Defrost setting to defrost frozen bread or reheat toast without additional browning.

**IMPORTANT:** Do not toast stale bread, rice crackers or similar on a high setting as they may catch fire.

3. Push the toaster lever down to commence the toasting cycle.

4. When the colour is achieved, the toaster will automatically turn off and raise the toast. If you need to remove the toast before the cycle is complete then press the Cancel button to raise the toast. The Cancel button will immediately interrupt the toasting cycle and pop the toast up.
5. To remove small pieces of toast or crumpets, use the High Lift lever to lift the toast above the starting position. This will prevent burning your fingers as you remove the toast.

# Quantum Toaster Functions

## **Cancel button**

The Cancel button immediately stops any of the toasting cycles. As a consequence of this the toast will pop up.

## **Defrost setting**

To toast frozen bread, place your bread into the slot, turn the Electronic Browning Control to the Defrost setting and push the Lever down to start the toasting cycle. This setting extends the toasting time to allow for the defrosting of the bread before toasting.

## **High lift lever**

When toasting small pieces of bread or crumpets and muffins we recommend using the High Lift Lever to prevent burning your fingers.

## **Toasting one or two pieces in your Quantum Thick & Thin 4**

Position the bread in the middle of either of the bread slots. When toasting two pieces, position one piece in the centre of each bread slot.

## **Toasting muffins or bagels**

Ensure muffins or bagels are cut into even halves and fit freely into the bread slot. Do not force them into the toaster. If your bread jams in the toaster, switch the power off, remove the plug and ease the bread out of the toaster.

**WARNING: Never attempt to extract jammed toast, muffins, bagels or crumpets with a knife or any other metal object, as contact with the live element may cause electrocution.**

# Care and Cleaning

Always switch the power off and remove the plug before cleaning your toaster. Wipe the outside with a slightly dampened cloth and wipe dry.

For stubborn dirt, wipe with a cloth dampened with a mild detergent.

## **Emptying the Removable Crumb Tray**

To remove the crumbs, simply slide out the tray, empty and place it back in the toaster

Clean the crumb tray regularly. Do not allow crumbs to accumulate, as they will accumulate and may cause a potential fire hazard.

We recommend cleaning the inside of your toaster fortnightly. Simply unplug the appliance, turn it upside down and shake all the crumbs out.

# Notes

# Notes

# 12 Month Replacement Guarantee

In the unlikely event that this appliance develops any malfunction within 12 months of purchase (3 months commercial use) due to faulty materials or manufacture, we will replace it for you free of charge.

Should you experience any difficulties with your appliance, please phone our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand. Alternatively, you can send a written claim to Sunbeam at the address listed below. On receipt of your claim, Sunbeam will seek to resolve your difficulties or, if the appliance is defective, advise you on how to obtain a replacement or refund.

Your Sunbeam 12 Month Replacement Guarantee naturally does not cover misuse or negligent handling and normal wear and tear.

Similarly your 12 Month Replacement Guarantee does not cover freight or any other costs incurred in making a claim. Please retain your receipt as proof of purchase.

The benefits given to you by this guarantee are in addition to your other rights and remedies under any laws which relate to the appliance.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law and under the New Zealand Consumer Guarantees Act.

In Australia you are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Should your appliance require repair or service after the guarantee period, contact your nearest Sunbeam service centre.

For a complete list of Sunbeam's authorised service centres visit our website or call:

## **Australia**

[www.sunbeam.com.au](http://www.sunbeam.com.au)

**1300 881 861**

Units 5 & 6, 13 Lord Street  
Botany NSW 2019 Australia

## **New Zealand**

[www.sunbeam.co.nz](http://www.sunbeam.co.nz)

**0800 786 232**

26 Vestey Drive, Mt Wellington  
Auckland, New Zealand

## Need help with your appliance?

Contact our customer service team or visit our website for information and tips on getting the most from your appliance.

### In Australia


Visit [www.sunbeam.com.au](http://www.sunbeam.com.au)

Or call 1300 881 861

### In New Zealand

Visit [www.sunbeam.co.nz](http://www.sunbeam.co.nz)

Or call 0800 786 232

 is a registered trademark.

'Quantum' is a trademark of Sunbeam Corporation.

Made in China.

Due to minor changes in design or otherwise, the product may differ from the one shown in this leaflet.

© Copyright. Sunbeam Corporation Limited 2006.

ABN 45 000 006 771

Units 5 & 6, 13 Lord Street  
Botany NSW 2019 Australia

Unit 3, Building D  
26 Vestey Drive  
Mt Wellington Auckland  
New Zealand

Sunbeam Corporation is a division of GUD Holdings Ltd.