 
 


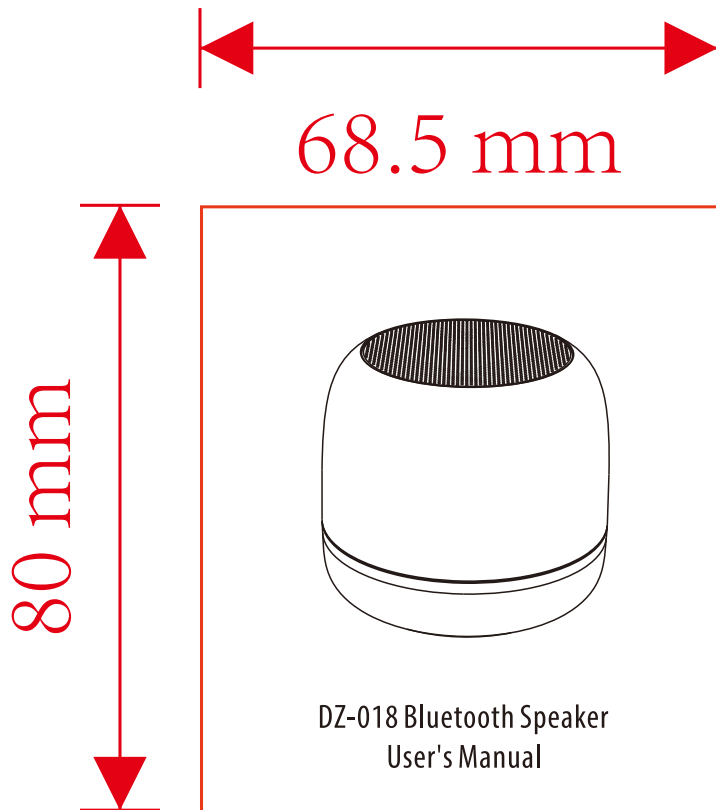

Packing List


Bluetooth speaker *1
Type-C Charging Cable *1
User manual *1



(Note: Please check if the Bluetooth speaker has power before use.)

Product Introduction

Power on/off
Volume up / Previous track
Volume down / Next track
FM mode
Light mode switch
Type-C charging cable
TF function card
Speaker connectivity

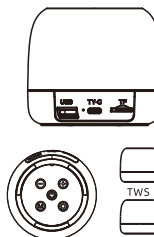

Product specifications

Model:DZ-018
Product dimensions:94*94*82mm
Product weight:266.7g
Bluetooth version:V5.3
Speaker power:5w
Battery capacity:800mAh
Charging time:2H
Transmission range(unobstructed):≤10m

Feature introduction

Bluetooth Connection

Step 1 - Press and hold the power button(approximately 4 seconds) to power on. The LED lights will illuminate, and you will hear a voice prompt: "Power on Bluetooth mode." [If the speaker is not connected to your device for more than 5 minutes, it will automatically power off.]

Step 2 - Open your phone's Bluetooth settings, search for and select "DZ-018" to connect. After the connection is established, you will hear a voice prompt saying "Connected".

By default, the last paired device will automatically reconnect to the speaker

Play music:

Short press the "-" button for the next track, long press to decrease the volume.

Short press the "+" button for the previous track, long press to increase the volume.

FM Mode Button

- 1.Press the "M" button briefly to enter/exit FM radio mode.
- 2.After entering the mode, press the power button briefly to auto-scan for radiostations.
- 3.Once the stations are auto-scanned, press the volume "+" or "-" button briefly to switch between stations. Press and hold the volume "+" or "-" button to increase or decrease the volume.

(Note: Before using this feature, connect the charging cable to the TYPE-C port to enhance the signal as an antenna.)

Light Button:

Press the light button briefly to switch between light effect modes, with a total of 7 modes. (Note: Light effect modes 2 and 3 will change the lighting according to the rhythm of the music.)

Speaker Connectivity Feature:

To pair two speakers of the same model, turn on both speakers at the same time. After powering them on, press the power button on one of the speakers twice in quick succession. Once you hear the prompt sound, the pairing is successful, and both speakers will synchronize for music playback and light effects.

Charging

When you insert the Type-C charging cable, the speaker enters charging mode. If the speaker is turned off during charging, the power button will light up red. If the speaker is turned on during charging, the light will be blue and red.

Insert the USB drive while the speaker is turned off, and then turn it on. The speaker will automatically prioritize playing music from the USB drive upon startup. (Note: The maximum supported memory is 32GB, and the audio file formats supported are MP3 and WAV.)

Insert the TF card while the speaker is turned off, and then turn it on. The speaker will automatically play the audio from the TF card upon startup. (Note: The maximum supported memory is 32GB, and the supported audio file formats are MP3 and WAV.)

Friendly reminder

Please do not use the speaker during thunderstorms.

Avoid dropping or subjecting the speaker to severe impact.

Please keep the speaker away from a heat source during use.

Question and Answer

Question and Answer

Frequently Asked Questions

Why is the music cutting in and out?

First, please ensure that the distance between these speakers and your phone does not exceed 15 meters (unobstructed).

If the distance is less than 15 meters, please turn off the speaker, delete the connection records between your phone and the speaker. Wait for one minute and connect your mobile phone again.

Are these speakers sweatproof and waterproof?


These speakers are sweatproof and have slight water resistance. However, for electronic products, we do not recommend immersing them in water.

For more detailed product FAQs, please contact our.

Activation and Warranty

We provide a 30-day unconditional return and exchange service, as well as a 24-hour after-sales service within 180 days.

Please activate within 15 days by contacting us at Prscfurniture@hotmail.com.

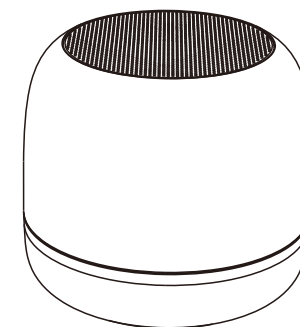

DZ-018 Bluetooth Speaker
User's Manual