


Topcat

Instructional Audio System

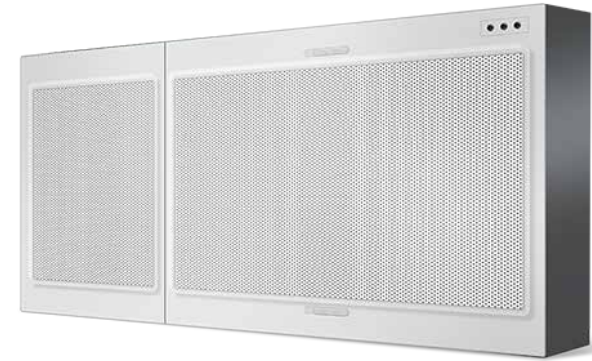

User Manual



Table of Contents

OVERVIEW

- 3** Important Safety Instructions
- 5** System Components and Unpacking
- 6** Optional Components
- 7** Topcat Controls
- 8** T25 Controls and Indicators
- 10** Clearmike Controls and Connections
- 13** Microphone Cradle Charger

SET-UP & OPERATION

- 14** Charging the Clearmike
- 15** Setting Up the Clearmike
- 17** Pairing your Clearmike
- 18** Using Your Microphone as a Wireless Audio Link
- 19** Audio Integration
- 20** Analog Control Features

OPTIONAL ACCESSORIES

- 22** Sharemike Controls and Connections
- 24** Sharemike: Initial Set-Up
- 25** Pairing your Sharemike
- 26** Media Connector Controls and Indicators
- 28** Media Connector Set Up and Operation
- 29** Connecting Media Connector to Audio
- 30** Output Audio to Assistive Listening Device (ALD)
- 31** Pairing Topcat to Media Connector
- 32** Media Connector: Audio Integration
- 33** Activate System with Pods
- 34** Wall Plate

MAINTENANCE & TROUBLESHOOTING

- 35** Clearmike Battery Replacement
- 36** Sharemike Battery Replacement
- 37** Troubleshooting
- 38** Tips for Optimum Audio Performance

WARRANTY, SAFETY & SPECIFICATIONS

- 39** Five-Year Limited Warranty
- 40** Safety Warnings and Certifications
- 46** System Components
- 47** System Specifications



Important Safety Instructions

1. Do not use the apparatus near water.
2. Clean only with dry cloth.
3. Do not block any ventilation openings.
4. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
5. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the outlet.
6. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
7. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
8. When the mains plug or appliance coupler is used as the disconnect device, it shall remain readily operable after installation.
 Lorsque la fiche secteur ou le coupleur de l'appareil est utilisé comme dispositif de déconnexion, il doit rester facilement utilisable après l'installation.

9. When installing via direct wiring to AC mains, an appropriate disconnect device shall be incorporated in the electrical installation of the building in accordance with local building codes.



Lors de l'installation via un câblage direct sur le secteur CA, un dispositif de déconnexion approprié doit être intégré à l'installation électrique du bâtiment conformément aux codes du bâtiment locaux.

10. Please keep the unit in a good ventilation environment.
11. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. AVERTISSEMENT: Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil à la pluie ou à l'humidité.
12. WARNING: Battery pack shall not be exposed to excessive heat such as sunshine, fire or the like. (1) The battery pack is not serviceable. Do not open, disassemble, or service any battery pack. (2) Do not crush or cut or puncture the internal battery cell. (3) Do not short-circuit the battery, or expose it to water or other liquids. (4) Do not touch the internal battery cell for any reason. (5) Keep the battery away from fire or a hot oven. Do not dispose of the battery into fire or a hot oven. (6) Keep the product with battery away from extremely low air pressure or high temperature surrounding environment. Battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas. (7) Stop using the battery pack if it is damaged, or if you notice any discharge or the buildup of foreign materials on the battery contacts. (8) Do not put the battery in trash that is disposed of in landfills. When disposing of the battery pack, comply with local ordinances or regulations.
13. CAUTION: Risk of explosion if battery is replaced by any battery other than Lightspeed Part # L3.7V



Important Safety Instructions (cont.)

To avoid potential equipment damage and/or serious injury, READ AND FOLLOW all safety precautions when installing Topcat Cascadia. WARNINGS are included throughout the procedural steps in this guide, and are repeated below for emphasis.

- **USE A LICENSED ELECTRICIAN FOR POWER CONNECTIONS.** Topcat system uses standard 100 – 240VAC power. Obtain the services of a licensed electrician when supplying and connecting power to the ceiling enclosure. BE SURE electrical installation complies with local building codes. Improperly installing and/or connecting power to the system may result in EQUIPMENT DAMAGE, serious INJURY and/or DEATH.
- **DO NOT INSTALL ALONE.** The ceiling enclosure weighs approximately 20 lbs (9 kg), and requires at least two people to install. DO NOT install alone.
- **USE SUITABLE LADDERS.** Use proper ladders or support platforms when installing Topcat enclosure. DO NOT stand on chairs, tables, or other unsuitable surfaces.
- **SUPPORT THE CEILING ENCLOSURE PROPERLY. DO NOT** allow the full weight of the ceiling enclosure to rest on the tile grid of the ceiling. The ceiling enclosure is designed to be suspended at TWO POINTS by suspension wires (secured to rafters or other suitable building structure) and to rest LIGHTLY on the tile grid.
- **ATTENTION INSTALLER:** Attach supplied safety cable in accordance with state and local building code requirements.
NOTE: *Wiring to these terminals should follow the Class 2 wiring methods as outlined in the National Electric Code. Le câblage vers ces bornes doit suivre les méthodes de câblage de classe 2 décrites dans le Code national de l'électricité.*



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure, that may be sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



Suitable for use in environmental air spaces (plenums) in accordance with Section 300.22 (C) of the National Electrical Code, and Sections 12-128, 12-010(3) and 12-100 of the Canadian Electrical Code.




Peut être utilisé dans des gaines transportant de l'air traité, conformément à la section 300-22(C) du National Electrical Code et aux articles 2-128, 12-010(3) et 12-100 du Code Canadien de l'électricité, Première partie, C22.1.



OVERVIEW

System Components and Unpacking

The standard configuration of the Topcat system includes:

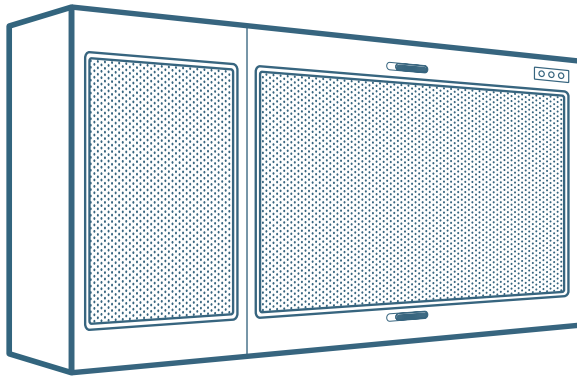


Topcat

Instructional Audio System



Clearmike

Teacher Microphone

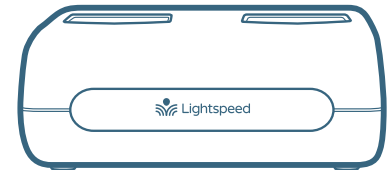

Microphone Cradle Charger

and Power Supply




NOTE ON PAIRING: Topcat and any wireless components (microphones, Media Connector) are pre-paired at the Lightspeed factory as required for proper operation. If paired components are separated and swapped during the installation process, they must be re-paired.




Optional Components

Optional equipment which may be part of your Topcat system

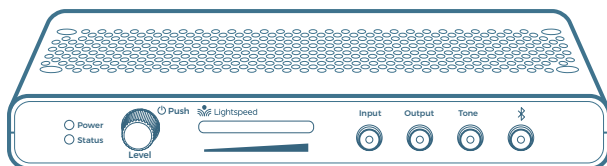

Media Connector

and Power Adapter

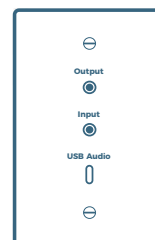

Wallplate



ShareMike

Student Microphone



Topcat Controls

(Inside Speaker Door)



Mounted inside the Topcat is a T25.

To access the controls and connections of the T25 system, push the two sliders to the unlocked position and open the speaker door.

Cables can be connected to the T25 using pass through ports in the metal housing.

Door panel latches must be locked in place when unit is in operation.





Monté à l'intérieur du Topcat se trouve un T25.



Pour accéder aux commandes et aux connexions du système T25, poussez les deux curseurs en position déverrouillée et ouvrez la porte du haut-parleur.

Les câbles peuvent être connectés au T25 à l'aide de ports traversants dans le boîtier métallique.

Les loquets du panneau de porte doivent être verrouillés en place lorsque l'appareil est en fonctionnement.

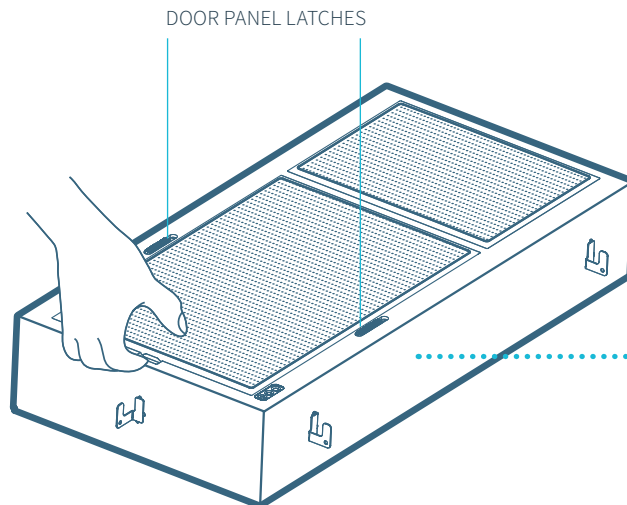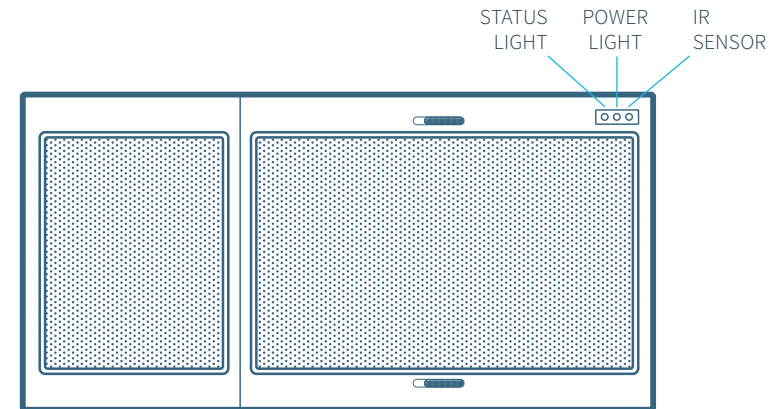

LIFT PANEL TO
OPEN SPEAKER DOOR

 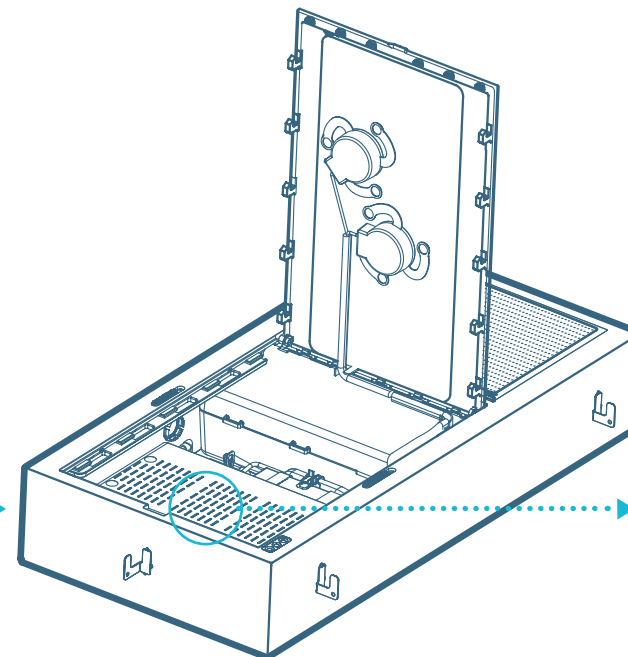


T25 MOUNTED INSIDE OF TOPCAT



T25 Controls and Indicators

FRONT PANEL

1. **POWER LIGHT**
White light: Power on
2. **STATUS LIGHT:** Microphone link and pair indicators.
Blue light: Microphone(s) is/are connected to the system
Off: Microphone(s) is/are not connected to the system
3. **POWER BUTTON / VOLUME ADJUSTMENT:** Press and hold this button for one second to turn the system power on or off. This also functions as an adjustment knob for the volume and tone depending on the mode selected (see 4,5,6 below).
4. **AUDIO INPUT VOLUME SELECTOR:** Selects Audio Input as the mode for the adjustment knob (3) for the audio sources connected to the audio inputs on the back of the T25.
5. **AUDIO OUTPUT VOLUME SELECTOR:** Selects Audio Output as the mode for the adjustment knob (3) for the audio device connected to the audio output jack on the back of the T25.
6. **TONE SELECTOR:** Selects Tone as the mode for the adjustment knob (3) for the microphone. This adjusts the bass or treble that is heard through the speaker output.
7. **IR RECEIVER:** For pairing to microphone.

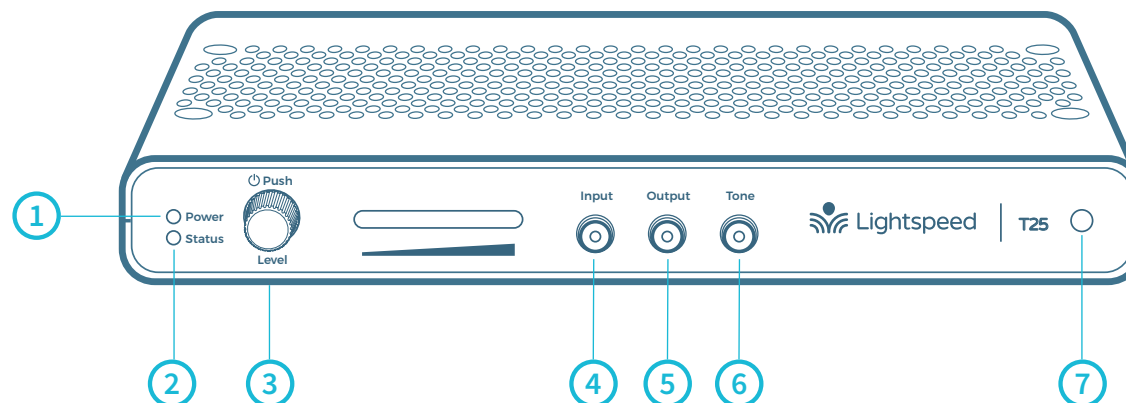




T25 Controls and Connections

BACK PANEL

1. **REMOTE LED:** Connection for external LED and IR sensor when T25 is installed in a Topcat Cascadia
2. **SPEAKER OUTPUTS:** This Euroblock connector is used to connect the T25 to the loudspeaker(s). Up to two 8-ohm speakers can be connected to each output.
NOTE: Wiring to these terminals should follow the Class 2 wiring methods as outlined in the National Electric Code.
3.  **RJ45 for Wallplate:** Cat5e cable (24AWG) to optional Wall Plate. **RJ45 pour plaque murale:** câble Cat5e (24AWG) vers plaque murale en option.
NOTE: Wall Plate (WPT) is designed/suitable for use only with UL Listed AV/ICT equipment only.
4. **AUDIO INPUTS:** 3.5mm stereo connectors for connecting classroom audio sources to be played through audio system.
5. **INPUT PRIORITY:** Additional 3.5 mm stereo connector that automatically mutes other audio inputs when a signal is detected.
6. **AUDIO OUTPUT:** 3.5mm stereo connector for connecting

to an assisted listening device (ALD) or to a computer for recording.


7. **S/PDIF RCA:** Digital Audio Input and Output to connect one T25 to another.
8. **PAGEFIRST INPUT:** Connect the input from the optional PageFirst sensor here when interfacing with a building's paging system to mute the T25 during a page.
9. **RELAY INPUT:** Senses external relay closure to mute T25 audio when a signal from a fire alarm, paging system or other device is detected.
10. **CONTACT CLOSURE:** Internal relay contact closure to provide signal to notify external system based on user input.
11. **DC POWER:** Plug the power supply (24V/2.5A) into this jack.

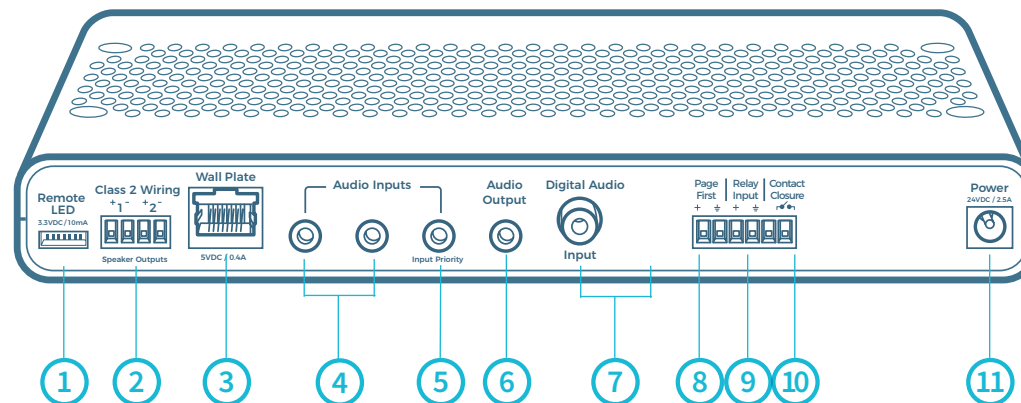




Clearmike Controls and Connections

1. **POWER/MUTE BUTTON:** Press and hold 1 second to power on. Press and hold for 2 seconds to power off. Tap to mute or talk. Press and hold for 5 seconds to initiate pairing.
2. **IR TRANSMITTER:** For pairing to base unit.
3. **TALK/MUTE LIGHT:** See page 10 for light color descriptions.
4. **POWER STATUS LIGHT:** See page 10 for light color descriptions.
5. **EMERGENCY ALERT BUTTON:** Press and hold 2 seconds to activate alert.
6. **MICROPHONE VOLUME UP/DOWN**
7. **EARBUD/MIC CONNECTION:** For use with optional EMA (earset) or LMA (lapel) microphones.
8. **LANYARD INTERFACE:** Insert the lanyard into this hook to wear the Clearmike.
9. **BATTERY:** Rechargeable battery pack can be replaced by the user.
10. **USB INPUT:** Connect audio source to send to T25. USB input can also be used for charging.

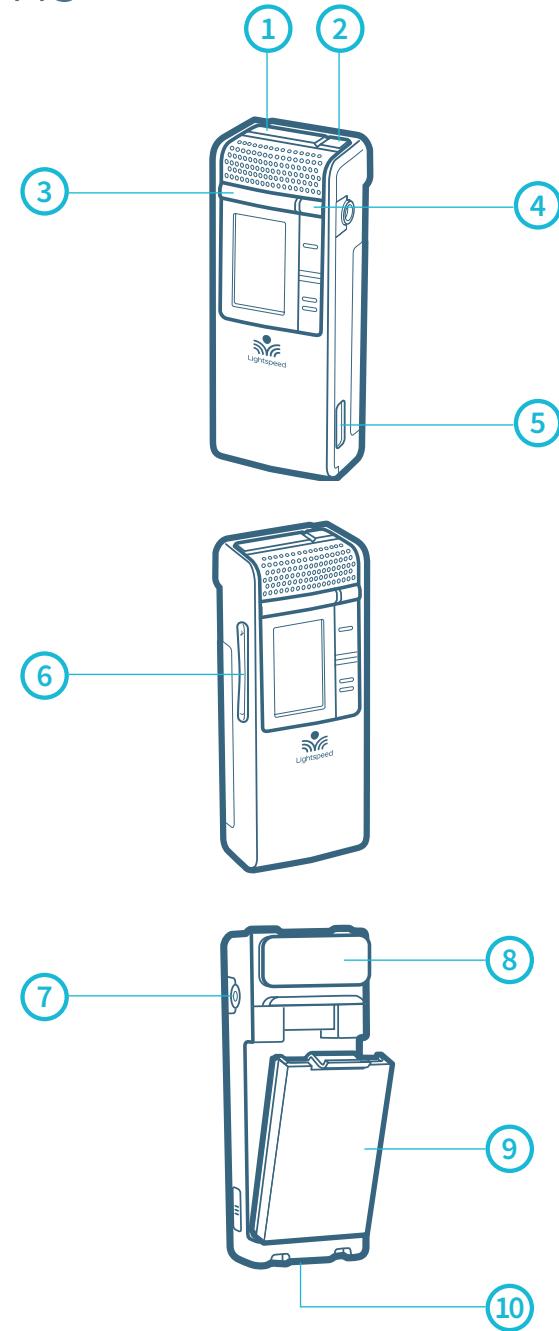



Microphone Lights

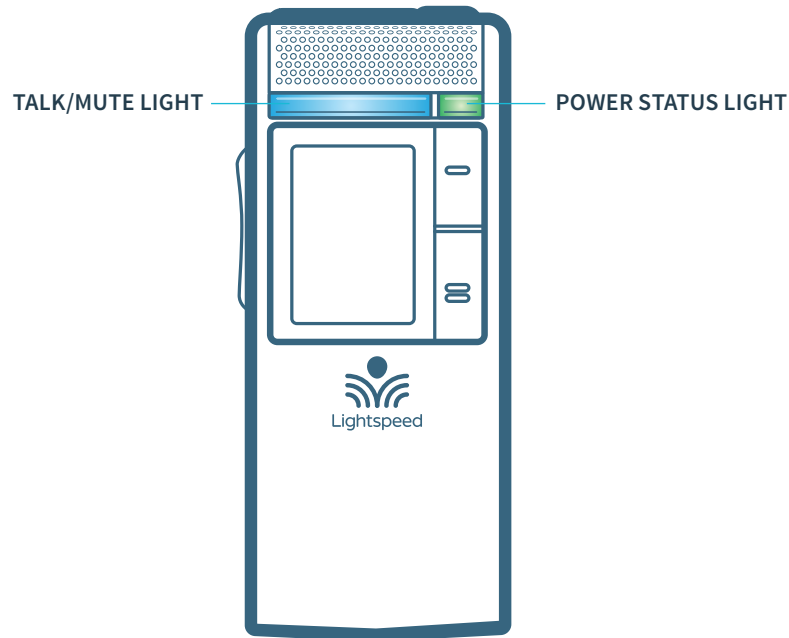

LEFT LIGHT / RIGHT LIGHT



OFF / OFF: Mic off or no live link with base



SOLID WHITE / OFF: Mute, live link with base



SOLID BLUE / OFF: Talk



ANY COLOR / BLINKING RED: Low Battery



BLUE/WHITE ALTERNATING / OFF: Pairing



OFF / BLINKING ORANGE: Firmware update in progress

In Charger:



OFF / SOLID RED: Charging



OFF / SOLID GREEN: Charged

Plugged into USB:



SOLID BLUE / SOLID RED: Charging



SOLID BLUE / SOLID GREEN: Charged



Clearmike Display

BATTERY INDICATOR

(Full, half, empty)

MUTE INDICATOR/ VOLUME


MIC NUMBER (M1 OR M2)

EXTERNAL MIC DETECTION

The 3.5mm audio jack on the microphone can be used with an earbud or an external microphone.


Plugging in an external mic will disable the internal microphone on the Clearmike

DEFAULT SCREEN

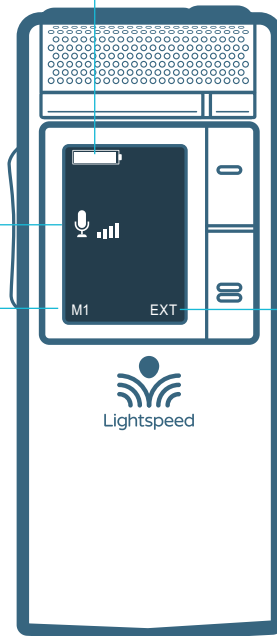




Microphone Cradle Charger

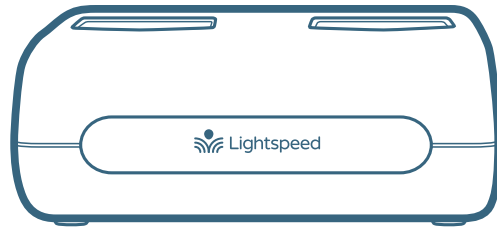

DC POWER PORT: Connect the 5V/1.0A DC power cord

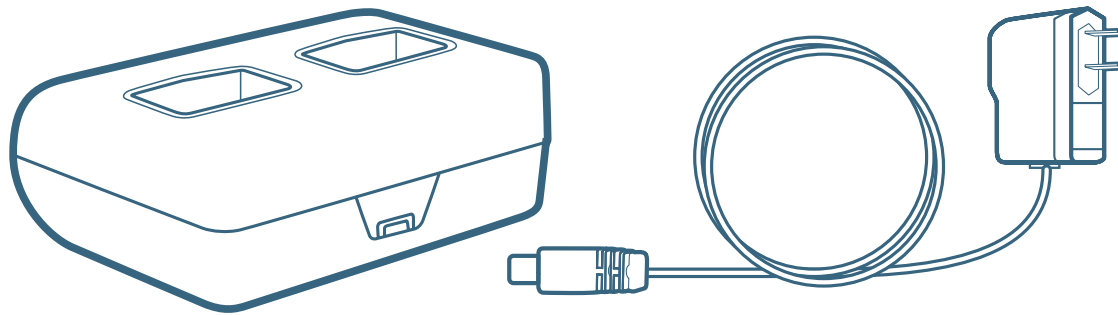




SET-UP & OPERATION

Charging the Clearmike

BEFORE USE, THE CLEARMIKE SHOULD BE CHARGED


It will take 5-6 hours for the Clearmike to obtain a full charge. A fully charged Clearmike will last for up to 8 hours of use. If microphones are used daily, they should be charged each night.

Replacement lithium polymer battery packs may only be purchased through Lightspeed (part # L3.7V).

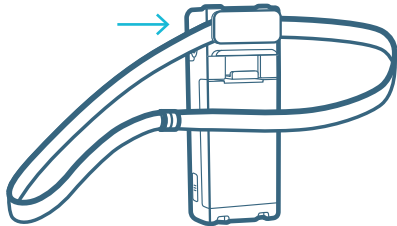


ATTACH LANYARD

Hang the Clearmike on the lanyard opposite the magnetic clasp.

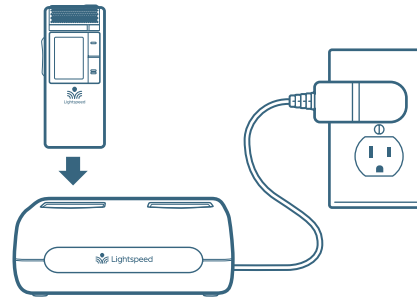

CONNECT CRADLE CHARGER

Plug power cord into the cradle charger and then plug the AC end into an electrical outlet.

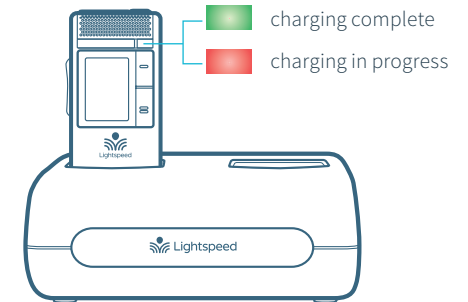

CHARGE CLEARMIKE

Place the microphones into the cradle charger. The power status light will glow red when it is charging. When charging is complete, the power status light will glow green.

It takes about 5-6 hours to fully charge the microphone battery.





Setting Up the Clearmike

Once the Clearmike is charged, follow these steps for use.

1. Remove the Clearmike from the charger and put it on by connecting the magnetic clasps behind your neck. Adjust the lanyard so that the top of the Clearmike aligns with the collarbone.
2. The Clearmike will automatically power on and mute when it is removed from the charger.
3. The microphone volume on the Clearmike is set at the factory to the midpoint. It is adjusted by the up/ down buttons on the side of the mic. The volume can only be adjusted while the microphone is in talk mode.
4. While speaking in a normal voice, fine tune the microphone volume. Proper volume level should be as follows:
 - Your voice should be clearly heard by another person on the other side of the room.
 - You should barely be able to hear your own voice.
 - There should not be any audio “feedback” or squealing unless you are too close to a speaker (2-3 feet). If there is, turn the volume down slightly.

REMEMBER: This equipment supplements the user’s voice so they are able to speak in a conversational tone. Having the volume set too high will result in feedback and listener fatigue.

- Once initial volume level is set, walk around the room and listen for overall audio quality.
- If further fine tuning is required, you may need to adjust the Tone Control on the front of the T25. If a Media Connector is paired with the system, it can also be used to adjust the Tone Control.

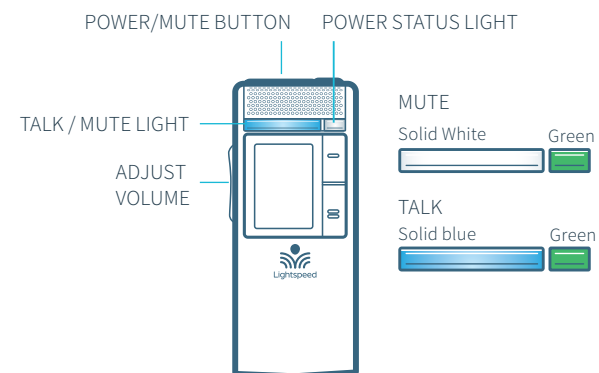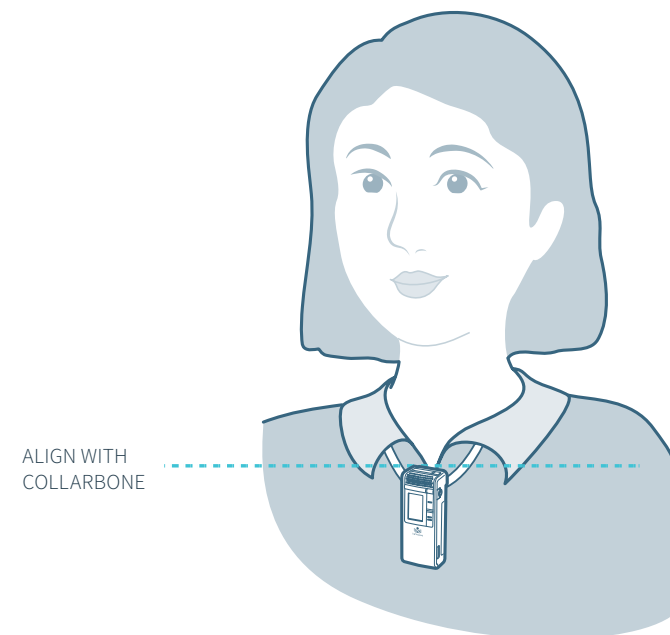



Daily Use of the Clearmike

1. AT THE START OF THE DAY, REMOVE CLEARMIKE FROM THE CHARGER


- The microphone will default to the Mute state, the Talk/Mute light will turn to white.
- Place the microphone around your neck.
- Press the power/mute button. The Talk/Mute light will turn blue, indicating the microphone is active and ready to use.
- Adjust volume with the UP/DOWN buttons if necessary. The volume can only be changed when the microphone is in the Talk state.
- If Clearmike needs to be powered down for some time, press and hold the power button for 2 seconds and release. To power Clearmike again, press and hold the power button until the Talk/Mute light turns white.

2. PRIVATE CONVERSATIONS

- Mute the Clearmike during private conversations by momentarily pressing the power button. When muted, the blue light turns white.
- When conversation is over, momentarily press the power button again to unmute the Clearmike.


3. END OF DAY

- Place the Clearmike into the cradle charger and make sure the power supply is plugged in to an electrical outlet.
- Topcat will not power down if it has a live link to a microphone. After 60 minutes of audio inactivity, the T25 will automatically power down.
- When Clearmike is removed from charging cradle the next day, it will automatically power on the T25.

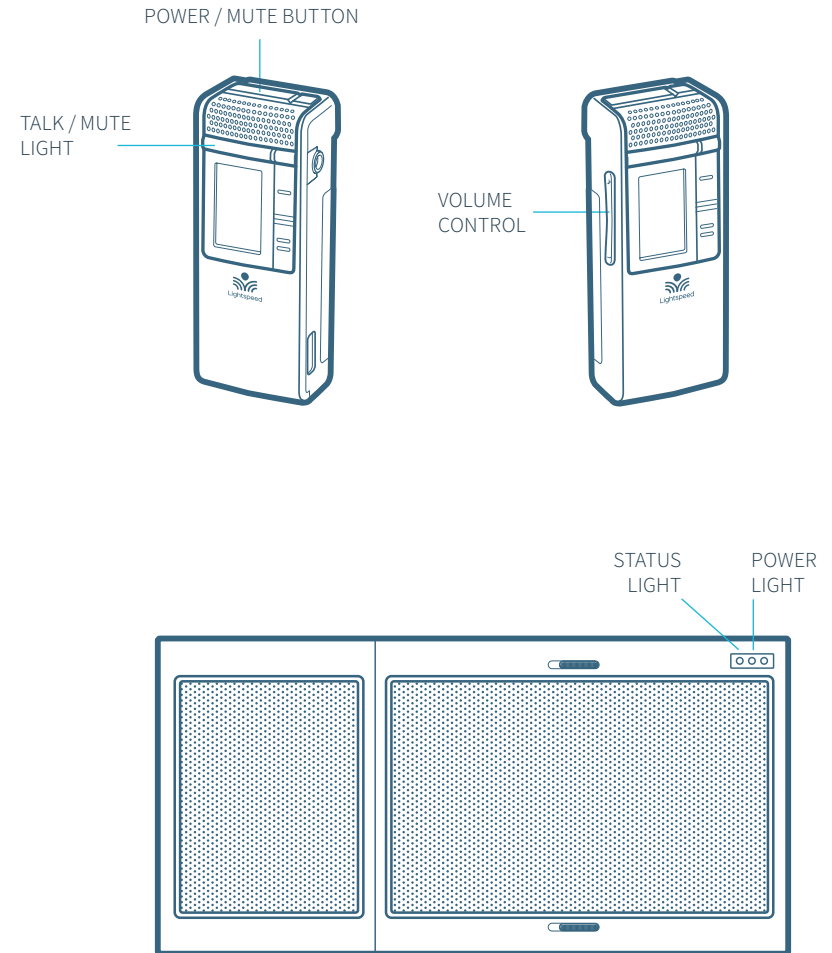




Pairing your Clearmike

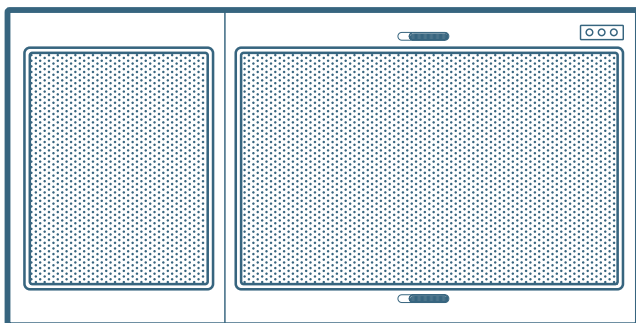

1

With the Clearmike powered off, point the IR transmitter lens toward the Topcat.

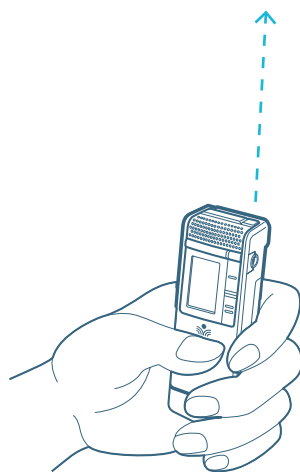

Your system is shipped with microphones and base units pre-paired for quick and easy use. If for any reason you need to pair new components, follow this pairing process:


PLEASE NOTE: All microphones must be out of the charger while pairing.

2

Press and hold the Power/Mute button for 5 seconds until the Talk/Mute light starts flashing blue and white. The Status light on the Topcat will also start flashing green and white.

3

When complete, the Status light on the Topcat will turn green, the Talk/Mute light on the microphone will be white, and the display on the microphone will say "Pair Success".

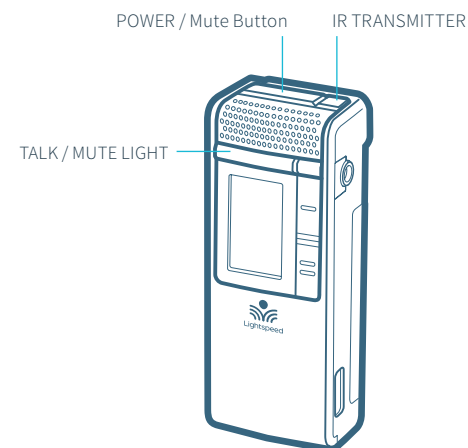




Using Your Microphone as a Wireless Audio Link

You can connect your 2nd microphone to your computer's USB port to enable a wireless 2-way audio link.

SEND AUDIO FROM THE COMPUTER to the Topcat to ensure all audio from the computer (videos, video conferencing, audio books, music, etc) can be played through the Lightspeed Topcat system and speakers.

SEND AUDIO TO THE COMPUTER from the Topcat to ensure the teacher's Clearmike and any student microphones are clearly picked up by a video conferencing solution.


1. With a USB-C cable connect your microphone to your computer's USB port.
This will also power/charge your microphone.
2. Open sound settings on your computer:
 - Select Lightspeed Audio as the Output source to send all computer audio to the T25 system
 - Select Lightspeed Audio as the Input source to use the Lightspeed microphones as the computer microphone audio for video conferencing and recording applications.
3. You may also need to select Lightspeed Audio as the speaker and microphone audio in your video conferencing application the first time you use it.

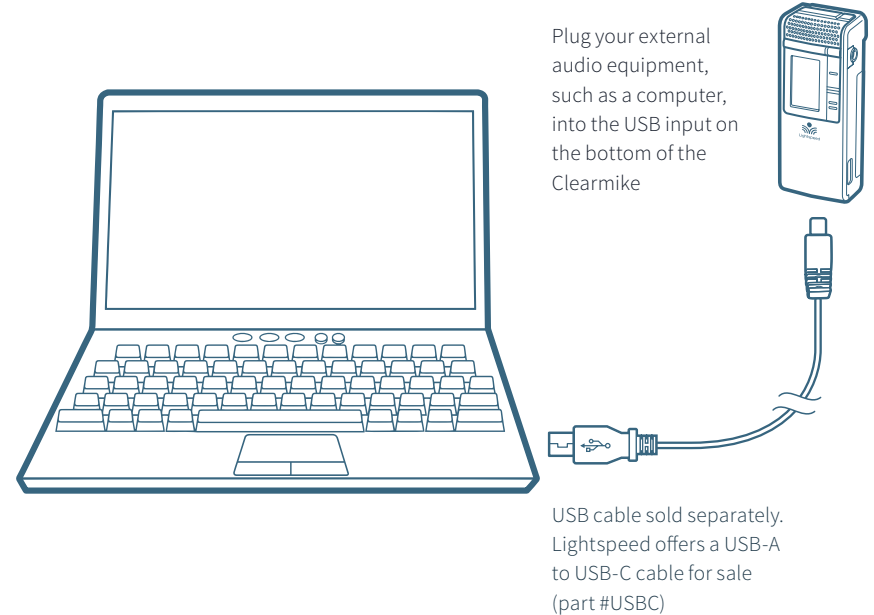

TIP: If your system includes two Clearmikes, you can use one mic for instruction and the second mic to transmit audio through the system.



Audio Integration

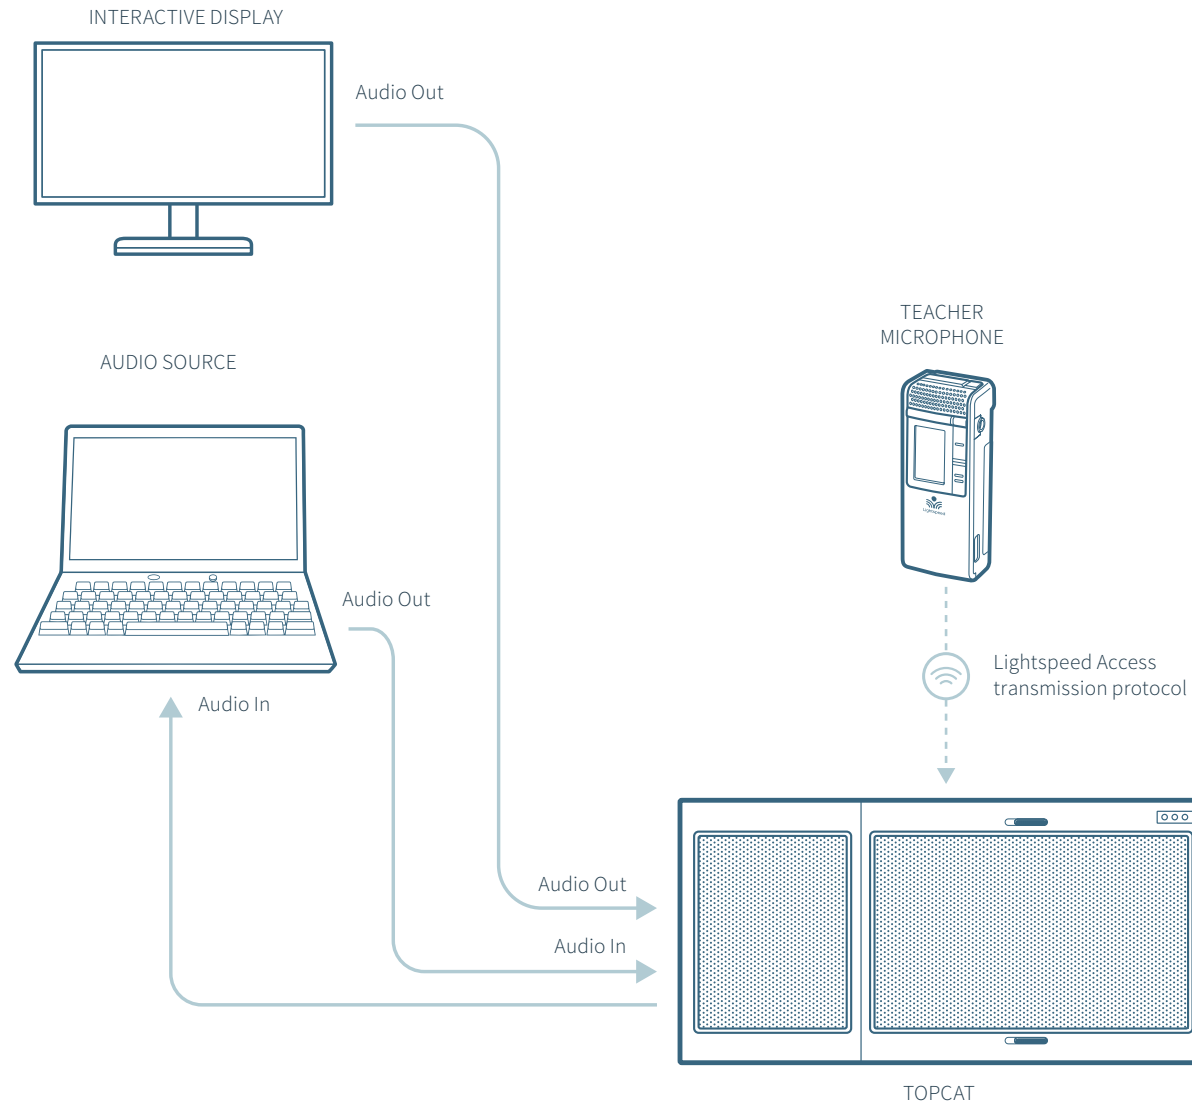



Analog Control Features

The T25 connects and responds to several important third-party life safety solutions.



1. Input Priority

MUTES CLASSROOM AUDIO SYSTEM

When an audio source is connected to the Input Priority jack, an audio signal from that source will automatically mute all other audio inputs to allow it to be heard without interference. The T25 is shipped with a removable plug inserted into the Input Priority jack to ensure that the connection to an audio source is intentional.



2. PageFirst

MUTES CLASSROOM AUDIO SYSTEM

When the PageFirst sensor clip is connected to an external paging source, all audio signal are muted to ensure paging is heard clearly.

See page 34 for installation details



3. Relay Input

MUTES CLASSROOM AUDIO SYSTEM

When the T25 is connected to a fire alarm, audio signals going through the unit are muted when the fire alarm is activated to minimize distractions from the sound of the alarm.




4. Alert Notification

INITIATES ALERT WITH CLEARMIKE

If your building is equipped with an alert notification system, the T25 and Clearmike can be programmed to initiate a contact closure function. Press and hold the emergency alert button on the side of the Clearmike for two seconds to activates the contact closure. External systems sense this contact closure to perform a prescribed action, notifying the appropriate parties of a classroom alert.

See page 21 for details

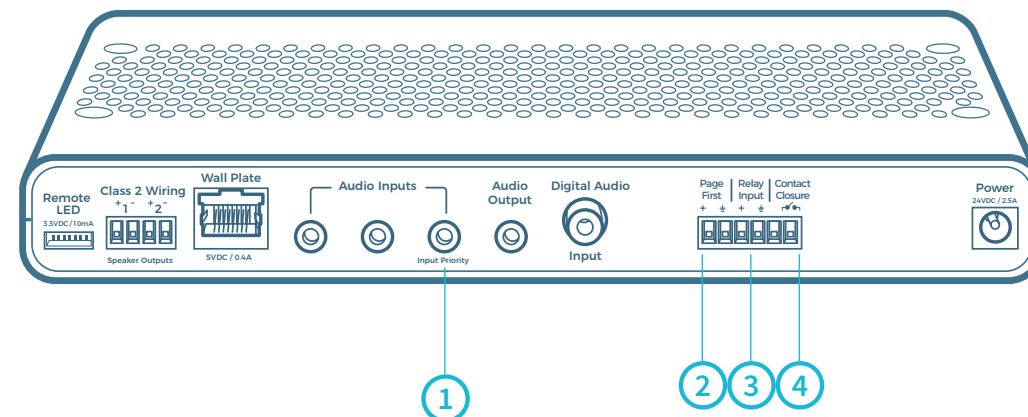




Installing PageFirst Sensor *(optional)*

This T25 can interface with an independent classroom paging system.

When a page is broadcast, all audio from the system is muted, ensuring important school-wide messages are not missed. Please note that PageFirst is not compatible with telephone or IP-based paging systems.

How it works:

1. PageFirst sensor clip is hung around a lead wire attached to the classroom paging speaker.
2. The clip is hard-wired to the T25.
3. As a page is broadcast, the sensor clip detects the audio signal through induction and immediately mutes the amplifier.
4. When the page is over, the audio from the amplifier returns to normal volume level.

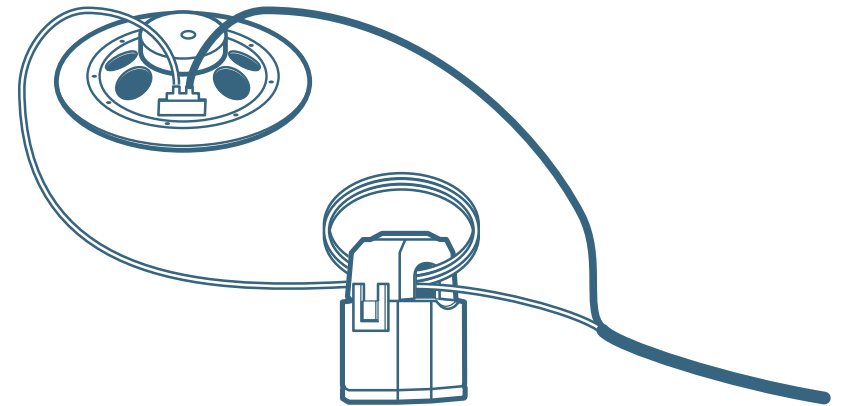

USING ALERT NOTIFICATION

If your building is equipped with an alert notification system, you can use the Clearmike to send an alert. This activates the contact closure function on the T25, which external systems use to perform a prescribed action, such as notifying the appropriate parties of a classroom alert.



Press and hold the emergency alert button on the side of the Clearmike for two seconds to activate the contact closure.



OPTIONAL ACCESSORIES

ShareMike Controls and Connections

1. MUTE/TALK STATUS LIGHT

Blue: solid = Talk

White: solid = Mute

Blue/White alternating = Pairing in process

2. POWER STATUS LIGHT

Blinking red light: During operation, turns red to indicate low battery.

Green light: Normal operation, microphone is powered on.

WHEN CHARGING IN CRADLE CHARGER:

Red light: Charging

Green light: Charging complete

3. MIC 1 STATUS:

Lighted to indicate microphone is registered as Mic 1

4. MIC 2 STATUS:

Lighted to indicate microphone is registered as Mic 2

5. POWER BUTTON

6. MICROPHONE VOLUME UP/DOWN

7. USB INPUT:

Connect audio source to send to TCT.

USB input can also be used for charging.

8. IR TRANSMITTER:


For pairing to base unit

9. AUDIO INPUT:

Plug a laptop or other audio device into this jack to wirelessly transmit the audio signal to be played through the system.

10. VOLUME LOCK:


Disables volume controls.

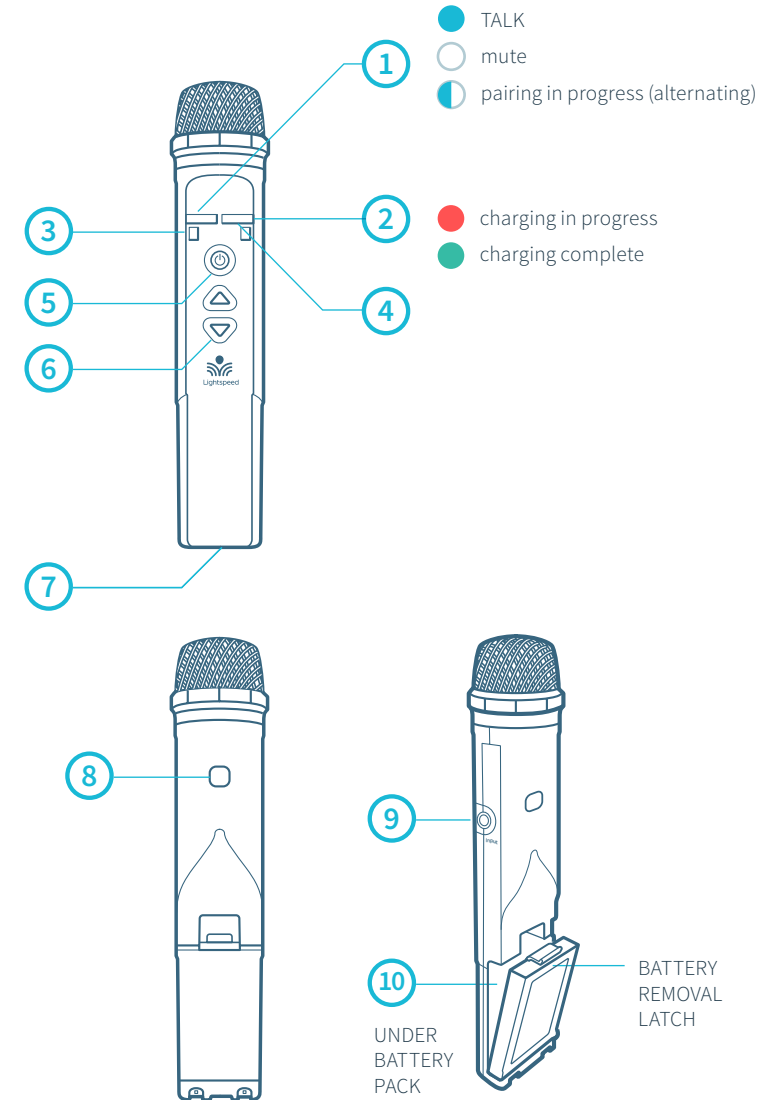



ShareMike: Charging

1. Make sure the charger is plugged into a wall outlet.
2. The power status light on the microphone will glow red to indicate charging.
3. Leave the ShareMike in the charger overnight to obtain a full charge. It takes 5-6 hours to fully charge the battery. The light will turn green when charging is complete.

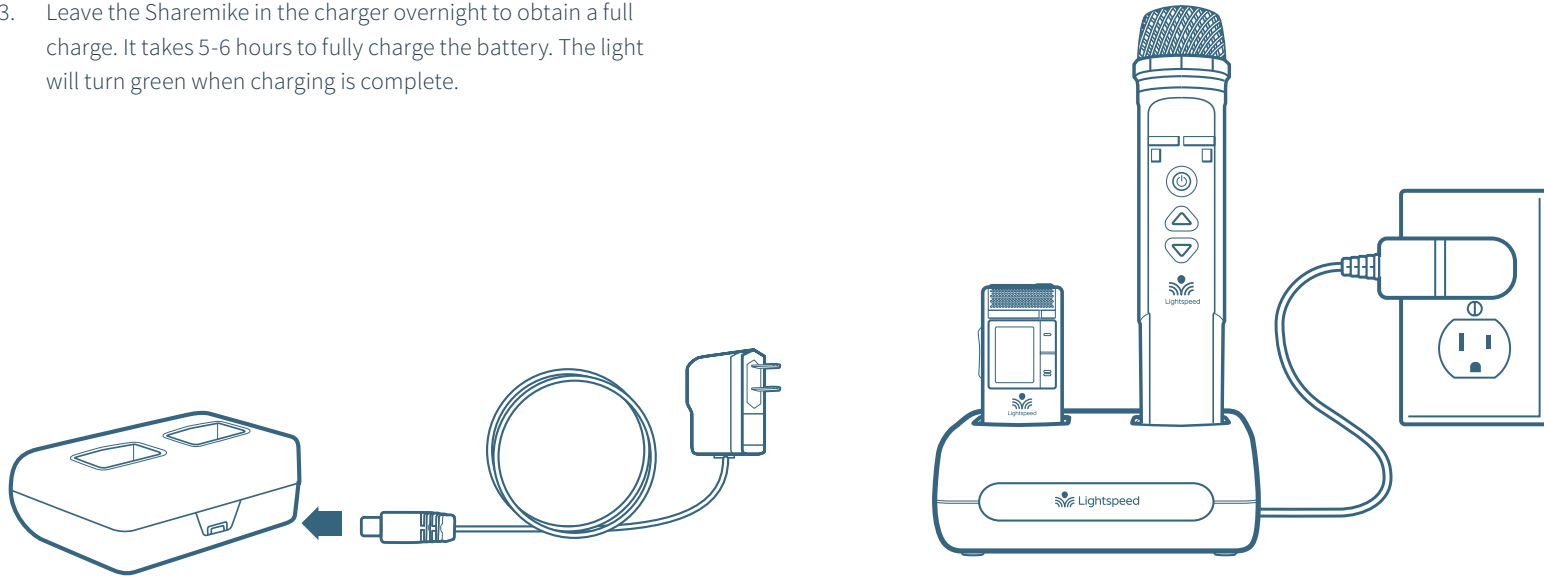


PLEASE NOTE: Topcat and microphone(s) are paired together at the factory and all components should be kept together as a system. Moving them from one system, or room, to another will result in the need to re-pair.



ShareMike: Initial Set-Up


ENSURE TOPCAT IS POWERED ON

The white light on the speaker panel of Topcat will glow.

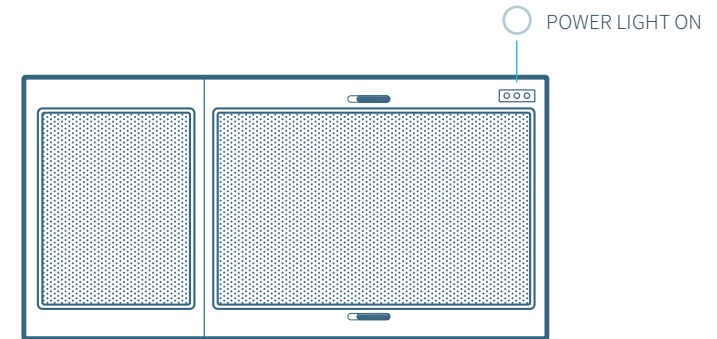

TURN ON THE SHAREMIKE

- Press and hold the power button until the LED lights.
- While speaking in a normal voice, increase the volume using the Activate Volume button or the Media Connector Microphone Volume knob until your voice is barely audible.

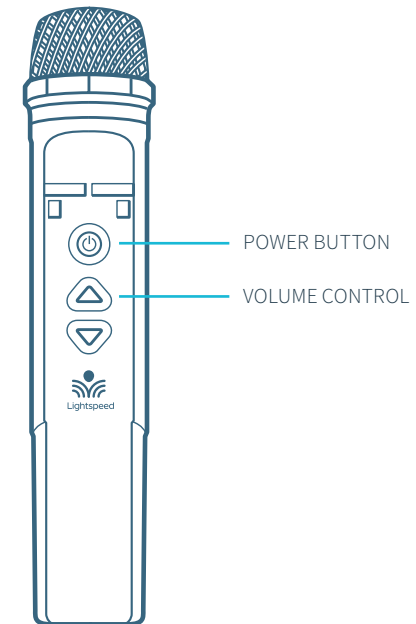

PLEASE NOTE: This equipment is designed to supplement and distribute the user's voice so they are able to speak in a conversational tone. Having the volume set too high will result in feedback and listener fatigue.





Pairing your ShareMike



Your system is shipped with microphones and base units pre-paired for quick and easy use.

If for any reason you need to pair new components, follow this pairing process:

PLEASE NOTE: All microphones should be out of the charger while pairing.

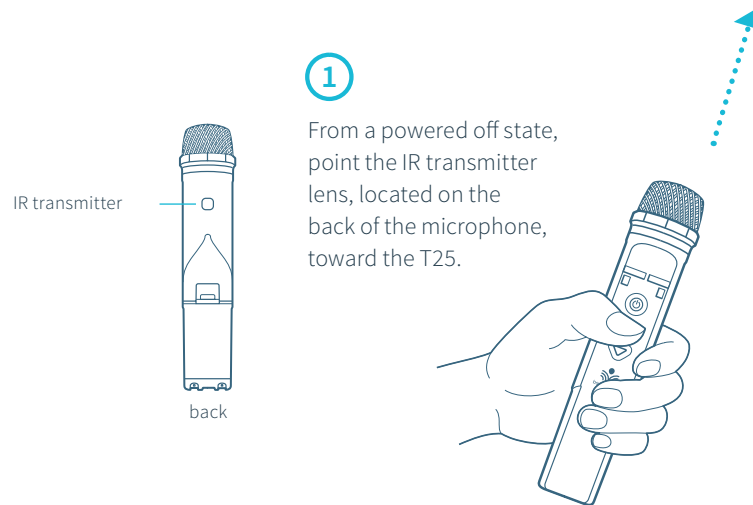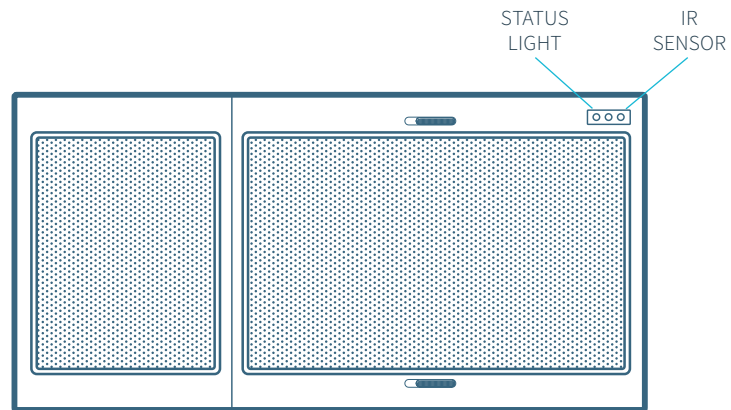

1

From a powered off state, point the IR transmitter lens, located on the back of the microphone, toward the T25.

2

Press and hold the power button for 5 seconds until the mic 1 and mic 2 lights start flashing, then release the button and let the pairing process finish.

3

The Status light on the base unit will light up indicating the pairing process is complete. The mic 1 or mic 2 light on the microphone will stay illuminated.






Media Connector Controls and Indicators

FRONT PANEL

1. **POWER LIGHT**
White light: Power on
2. **STATUS LIGHT:** Media Connector link and pair indicators.
Solid white: Media Connector is paired to the system
Off: Media Connector is not paired to the system
3. **POWER BUTTON / VOLUME ADJUSTMENT:** Press and hold this button to turn the system power on or off. This also functions as an adjustment knob for the volume and tone of the paired TCC depending on the mode selected (see 4, 5, 6 below)
4. **AUDIO INPUT VOLUME SELECTOR:** Selects Audio Input as the mode for the adjustment knob (2) for the audio sources connected to the audio inputs on the back of the Media Connector.
5. **AUDIO OUTPUT VOLUME SELECTOR:** Selects Audio Output as the mode for the adjustment knob (3) for the audio devices connected to the audio outputs on the back of the Media Connector.
6. **TONE SELECTOR:** Selects Tone as the mode for the adjustment knob (2) for the microphone. This adjusts the bass or treble that is heard through the classroom speaker.
7. **BLUETOOTH:** Press and hold button for 5 seconds to initiate Bluetooth pairing. While paired, the button light will glow blue.

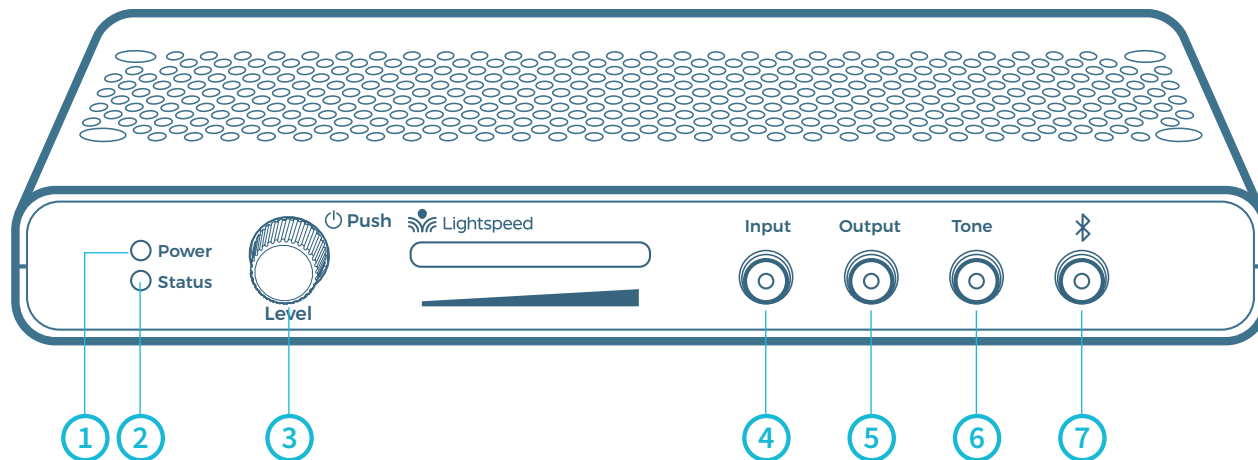




Media Connector Controls and Indicators (Optional)

BACK PANEL

1. **AUDIO INPUTS:** Three analog 3.5mm stereo connectors and one digital optical connector for connecting classroom audio sources to be played through audio system.
2. **AUDIO OUTPUTS:** 3.5mm stereo connectors for connecting to an assisted listening device (ALD) or to a computer for recording.
3. **USB INPUT:** Plug the USB-C end of the power cable into this USB port on the Media Connector.
 - The USB port supplies power to Media Connector when connected to the Media Connector power supply, or from a laptop.
 - It also acts as an input for a digital audio when connected to an audio source. Note that when the USB is used for audio input, the other four audio input jacks are not operational.

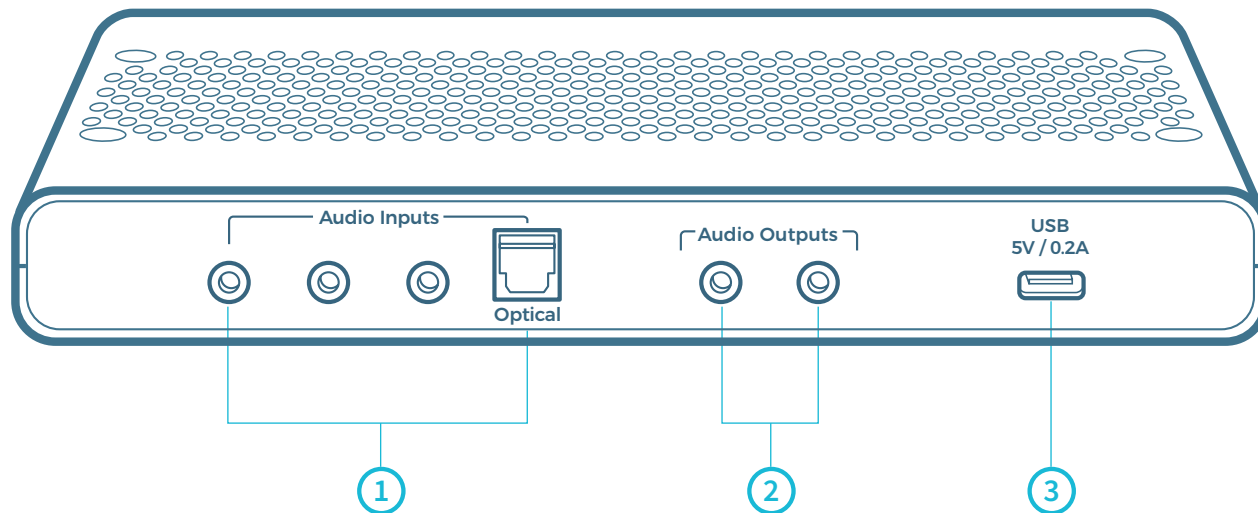



Media Connector Set Up and Operation

DETERMINE LOCATION

Media Connector is designed to be connected to the primary media source in the classroom, usually the computer or display panel.

WALL MOUNT OR DESKTOP

The Media Connector can be placed on a table surface or wall-mounted.

- Choose a location that is convenient to the classroom audio sources and power supply.
- It should be located 3-6 feet off of the floor to allow for good transmission.
- Do not enclose in a metal cabinet or in a location where the signal will be obstructed.

NOTE: The Media Connector does not require a direct line of sight to Topcat. However it functions best when no obstructions are between the two devices.




CONNECT TO POWER

Connect the USB power cord to a computer. Plug the USB cable into the USB input on the back of the Media Connector.

or

Use the USB power adapter to plug into a wall outlet.

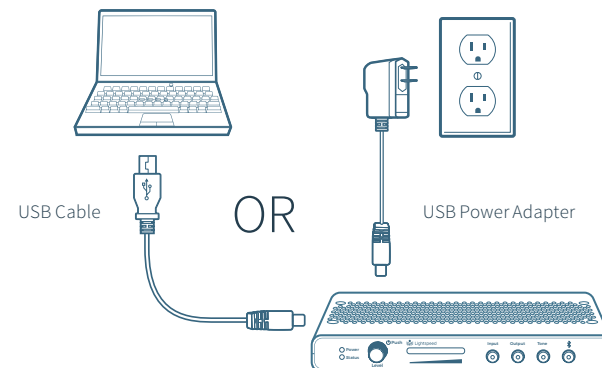



Connecting Media Connector to Audio


Audio can be connected using either a digital 2-way USB audio or analog audio:

USB Audio

USB audio enables a 2-way audio link to:

Send audio from the computer to TCT to ensure all audio can be played through the system speaker.


Send audio to the computer from TCT to ensure the teacher's Clearmike and any student microphones are clearly picked up by a video conferencing solution.

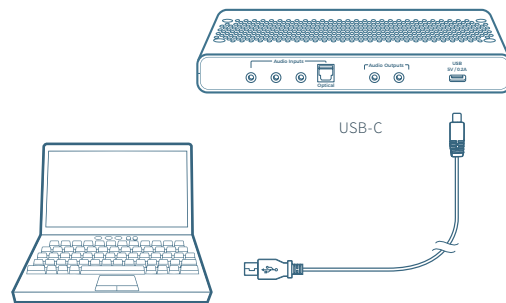

Analog Audio

Plug your external audio equipment (e.g., video display) into one of the Audio input jacks.

Adjust the volume as needed by pressing the Audio Input selector and adjusting the level knob as needed.

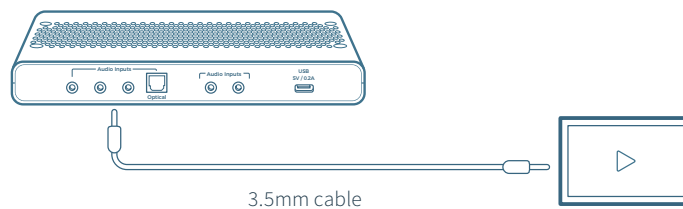


Computer settings

Once connected, open computer sound setting to select "Lightspeed Audio" as the microphone and speaker.

SETTING THE VOLUME LEVELS

For recording, or to interface with an Assistive Listening Device, connect a 3.5mm cable to the Audio Output of the Media Connector to the microphone input on the device. Press the button for the desired level adjustment.

- Turn the knob to adjust volumes up or down for Audio Input/Output
- To adjust the Tone (bass/treble) of the speaker, press Tone and use the adjustment knob to turn the bass up and down

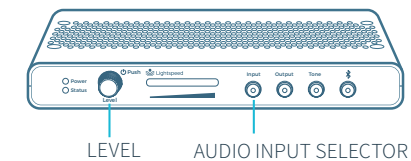

BLUETOOTH PAIRING TO CONNECT TO OTHER AUDIO SOURCES


- On your personal device, make sure your bluetooth setting is on and in the search mode.
- Press and hold Bluetooth button on the Media Connector for 3-5 seconds until status light starts blinking blue to be discovered by your personal device.
- Locate LS_MCT on your personal device and complete pairing process.





Output Audio to Assistive Listening Device (ALD)

1. Press the Audio Output Selector first, then turn the volume control on the front panel all the way down (fully counterclockwise).
2. Determine the type of audio input jack on the ALD as manufacturers' products differ in connector size and shape. Many require a 3.5 mm to 3.5 mm patch cable (part# MSC3535, not included).
3. Connect a patch cable from the ALD microphone jack or AUX input to AUDIO OUT jack on the back of the Media Connector.
4. With the Media Connector and ALD turned on, speak into the Clearmike and slowly adjust the corresponding volume control on the Media Connector until the appropriate audio level is obtained in the ALD.
5. It may be necessary to adjust the volume on the ALD to achieve appropriate volume level.

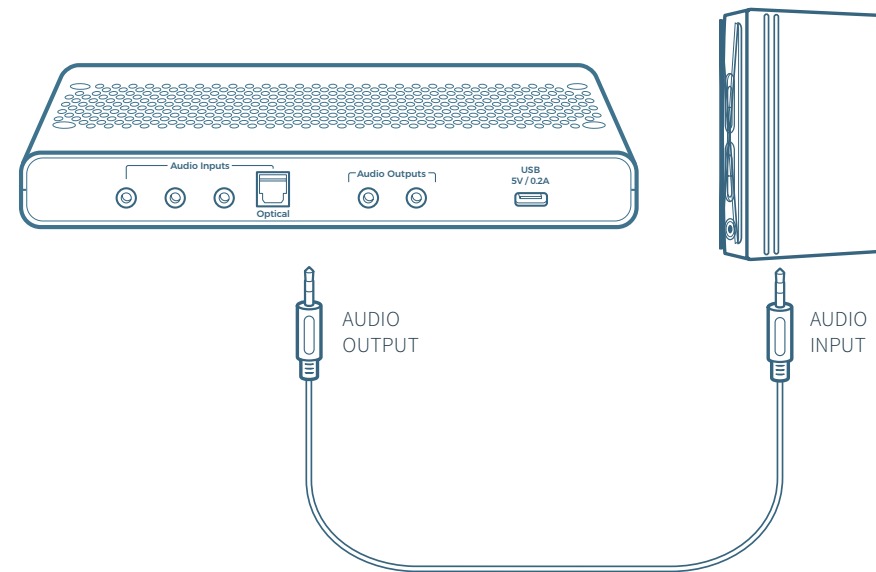



Pairing Topcat to Media Connector (Optional)



Your system is shipped with microphones and base units pre-paired for quick and easy use. If, for any reason, you need to pair new components, follow the pairing process below.
NOTE: Microphones should be out of the charger while pairing.

1

From a powered off state, point the IR transmitter lens toward the Topcat (for ShareMike, the transmitter lens is located on the back of the microphone).

2

Press and hold the Clearmike power button for 5 seconds until the status light on the Topcat starts flashing, then release the button. At this point, the status light on Topcat will blink for 30 seconds.


If after 30 seconds the status light blinks rapidly, you will need to start the pairing process again.

3


With the Media Connector powered off, press and hold the tone selector button for 5 seconds to put it into pairing mode.

When the status lights are solid on both Topcat and Media Connector, pairing is successful.


TOPCAT

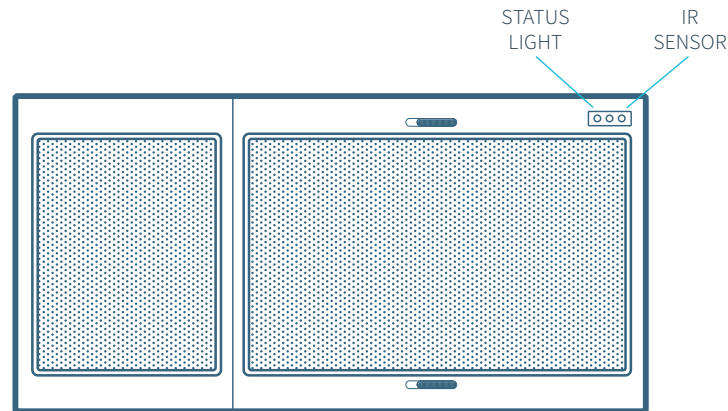


MEDIA CONNECTOR

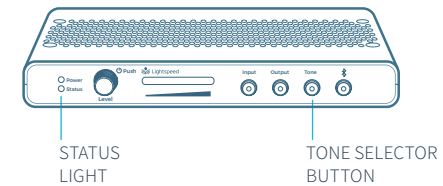

CLEARMIKE

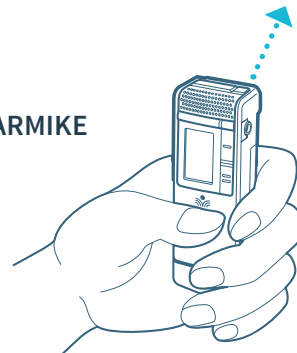


POWER / MUTE IR TRANSMITTER

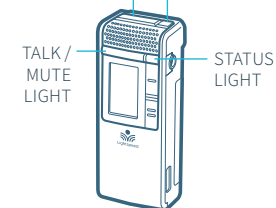




Media Connector: Audio Integration

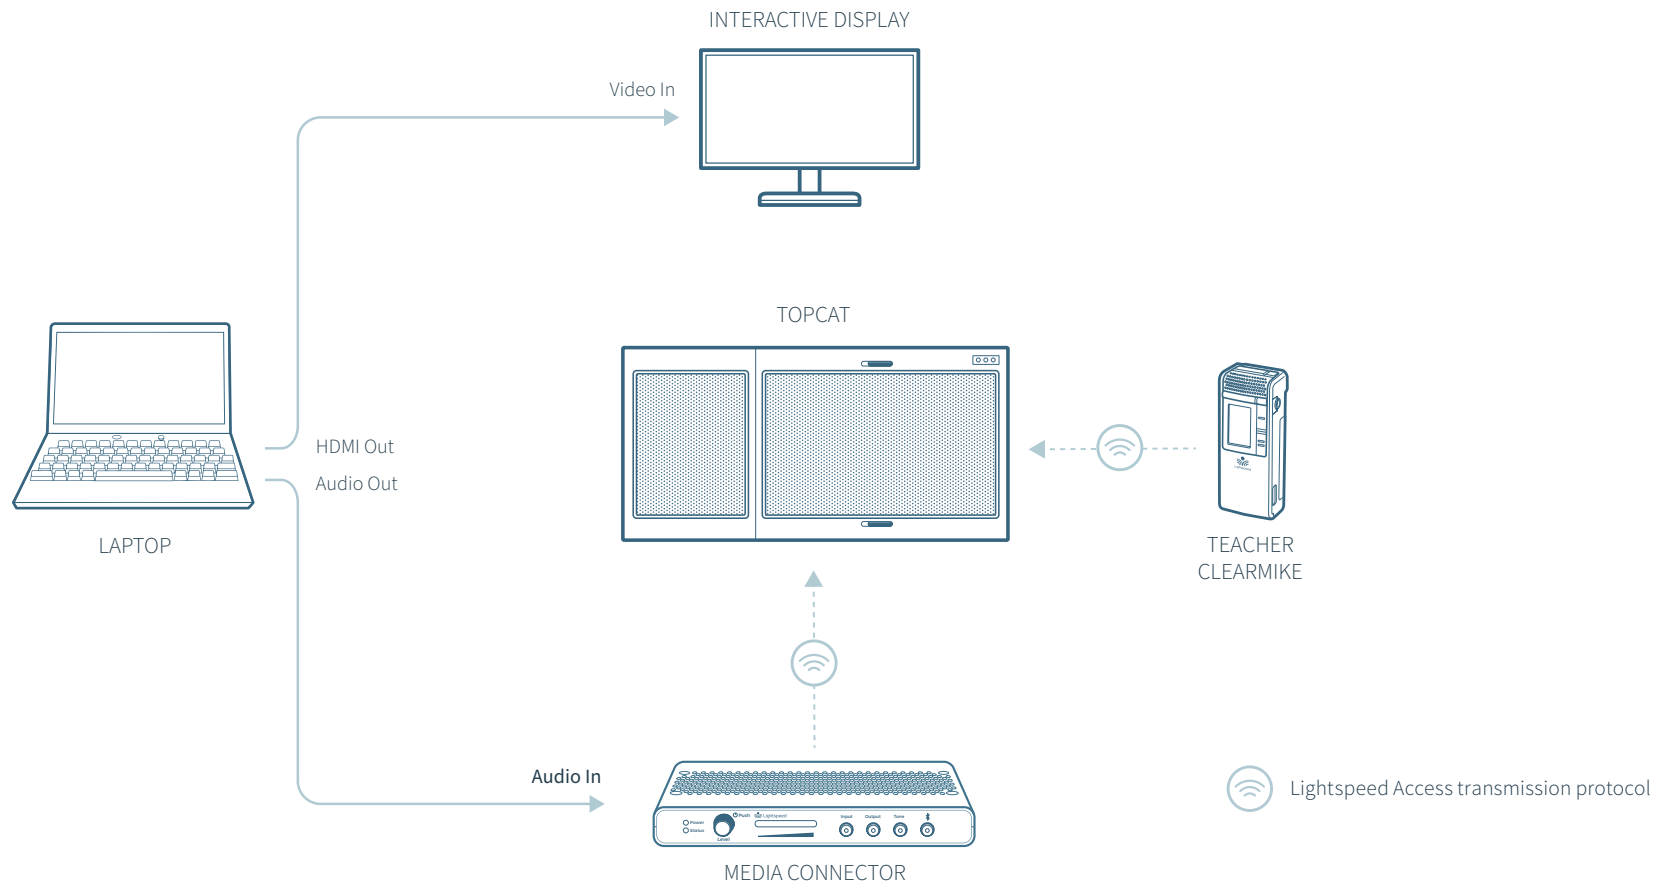



Wall Plate

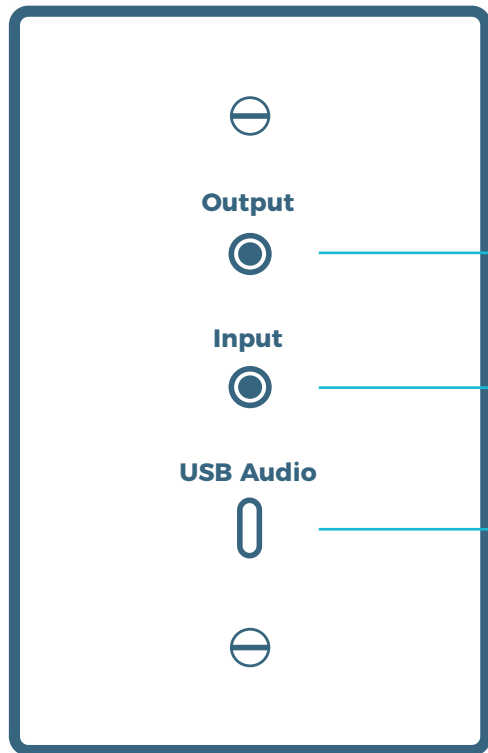

AUDIO INPUT

- 3.5mm stereo connector for connecting classroom audio sources to be played through audio system.

AUDIO OUTPUT

- Audio Output: 3.5mm stereo connector for connecting to an assisted listening device (ALD) or to a computer for recording.

USB-C

- For playing USB audio.



MAINTENANCE & TROUBLESHOOTING



Clearmike Battery Replacement

Battery part #L3.7V

1. Push down on the latch and carefully pull the battery pack away from the Clearmike.
2. Insert new battery pack as shown and make sure the latch is secure.
3. Place the Clearmike in a cradle charger to charge the battery pack.

NOTE: Lithium-ion batteries should not go in household garbage or recycling bins.

Lithium-ion batteries should be taken to separate recycling or household hazardous waste collection points.

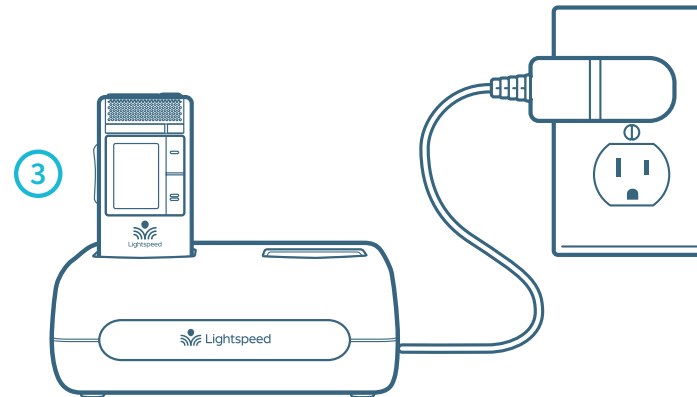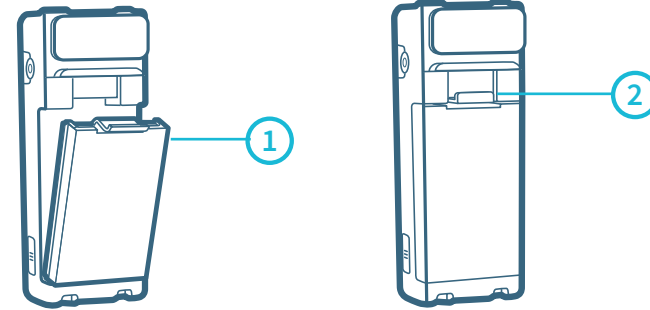




ShareMike Battery Replacement

Battery part #L3.7V

1. Push down on the latch and carefully pull the battery pack away from the ShareMike.
2. Insert new battery pack as shown and make sure the latch is secure.
3. Place the ShareMike in a cradle charger to charge the battery pack.

NOTE: Lithium-ion batteries should not go in household garbage or recycling bins.

Lithium-ion batteries should be taken to separate recycling or household hazardous waste collection points.

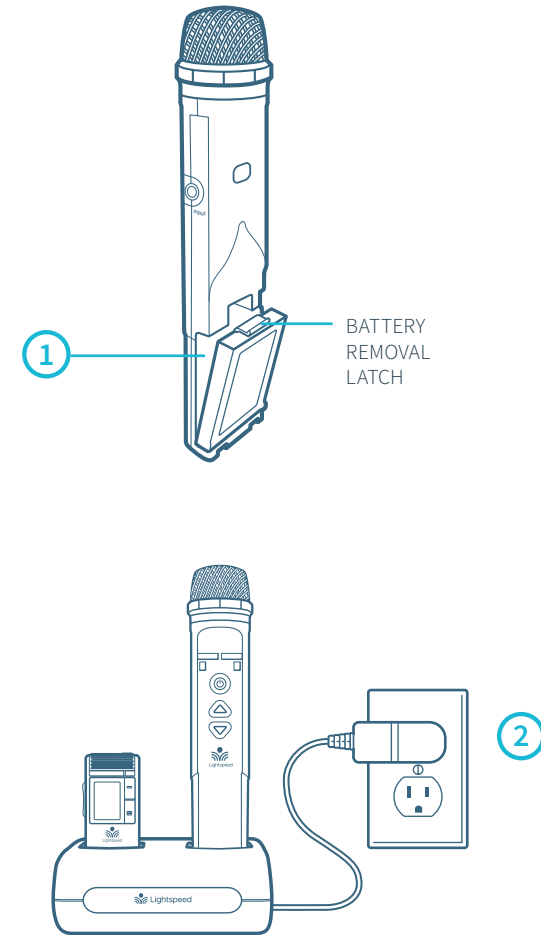



Troubleshooting

PROBLEM: Low battery indication: Most problems are directly related to low battery power. Please run through the “Battery Check” items first. For remaining troubleshooting, use known good, fully-charged batteries.

SOLUTION: Battery Check

- Confirm batteries are charged each night. A solid red light on the battery status light indicates a low battery.
- Confirm proper batteries are used: Clearmike and Sharemike require the Lightspeed #L3.7V rechargeable battery pack.
- Make sure the microphones obtain a full charge. A full charge takes 5-6 hours.
- When charging the transmitter, the red charging light is solid. The green light will be solid when a full charge is reached.

PROBLEM: Microphone doesn’t indicate a “Ready” signal (solid white light)

SOLUTION: Follow these steps to ensure the system is ready to use.

- Power cycle the microphone using either the Power/Mute button or by placing in a charger and then removing it. Wait for up to 30 seconds for the white light to turn solid, indicating READY for operation.

PROBLEM: Low volume or feedback

SOLUTION: Follow these steps to eliminate low volume or feedback:

- If the volume is too high, feedback will occur. Adjust accordingly.
- Adjust the volume level on the Clearmike or move the microphone further from the audio system speakers.

PROBLEM: No sound from speaker and wireless components

SOLUTION: Follow these steps to produce sound from TCT:

- Confirm that the white POWER light located on the front panel of the TCT is on.
- Confirm the microphone is powered on and linked to the TCT. The Talk/Mute light will be white indicating the microphone is linked.
- Tap the Power/Mute button to confirm that microphone is not muted. The Talk/Mute light on the front of the microphone will be solid blue indicating microphone is not muted.
- Check speaker connections on the TCT. Make sure the cables are properly connected (see page 8 of this manual or the Installation Guide for more information).
- Slowly turn up the volume level while talking into the microphone.

If you still have questions after reviewing these instructions, call Lightspeed Technical Services at 800.732.8999, 5am–5pm, PST.

Customers outside the U.S. should contact their local reseller.



Tips for Optimum Audio Performance

- **Speak in a natural voice.** A normal conversational speech level will provide an adequate signal. It is not necessary to increase the intensity of your voice—the audio system provides adequate amplification (approximately 5–10 dB) above ambient room noises.
- Avoid **wearing jewelry** that may rub or bump against the microphone.
- **Mute the microphone** during private conversations with a student, parent, or other classroom visitor. You can tell the mic is muted when the light turns white.
- **Recharge microphones each night.** When recharged nightly, operating time (actual usage) for the microphones will last through a typical school day.



WARRANTY, SAFETY & SPECIFICATIONS

Five-Year Limited Warranty

Lightspeed Instructional Audio Systems are guaranteed against malfunction due to defects in materials and workmanship for a period of five (5) years, beginning at the date of the purchase invoice. If such malfunction occurs, the product will be repaired or replaced (at Lightspeed's option) without charge during the warranty period.

Lightspeed's Warranty Exchange Program applies to all classroom audio systems within the five (5) year warranty period. If a classroom audio product or component has an issue that requires service, a refurbished replacement will immediately be sent to the customer to minimize downtime. Customers will receive the exchange product(s) or component(s) within 2-3 days. A prepaid return label will be included with exchanged products so original malfunctioned equipment can be returned to Lightspeed. Any exchanged equipment will remain covered under the original five-year warranty.

1. Warranty on transceivers is five (5) years.
2. Warranty on Lightspeed NiMH and Lithium Polymer rechargeable batteries is one (1) year.
3. A prepaid shipping label will be provided by Lightspeed for warranty repairs within the United States. Customers outside the U.S. should refer to the Lightspeed website (www.lightspeed-tek.com) for warranty repair instructions.
4. Warranty does not extend to finish, appearance items, or malfunctions due to abuse or operation other than specified conditions, nor does it extend to incidental or consequential damages. Repair by other than Lightspeed or its authorized service agencies will void this warranty. Information on authorized service agencies is available from Lightspeed Technologies, Inc.

Our Service Department (800.732.8999, 5am–5pm, PST) will handle your repair or replacement needs.

Customers outside the U.S. should contact their local reseller.



Safety Warnings and Certifications



CAUTION
RISK OF ELECTRICAL SHOCK
DO NOT OPEN



THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.



The lightning flash with arrowhead symbol inside an equilateral triangle is intended to alert the user to the presence of non insulated “hazardous voltage” within the product’s enclosure, which may be of sufficient magnitude to induce a risk of electric shock to persons.



The exclamation mark inside an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying this product.



USE A LIGHTSPEED SUPPLIED BATTERY ONLY



CAUTION: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.



Battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

CERTIFICATIONS



This product is listed to UL standards and requirements for electrical safety by Underwriters Laboratories Inc.



This product conforms with the essential requirements of the following European Union Directives: 2004/108/EC Electromagnetic Compatibility (EMC) and 2006/95/EC Low Voltage Directive (LVD).



LightSpeed Technologies launched a formal product recycle program in Europe that complies with the European Union Directive 2002/96/EC on Waste Electrical and Electronic Equipment (“WEEE Directive”). Please visit www.lightspeed-tek.com for more information.



This product is manufactured using lead-free processes and is free of other materials harmful to the environment. It conforms to the most stringent new European guidelines for consumer products (RoHS).



Précautions De Sécurité et Certifications



ATTENTION
RISQUE D'ÉLECTROCUTION
NE PAS OUVRIR



CONFORMÉMENT AUX NORMES D'INSTALLATION APPLICABLES, CE PRODUIT DOIT ÊTRE INSTALLÉ PAR UNE PERSONNE FAMILIARISÉE AVEC LA CONCEPTION ET LE FONCTIONNEMENT DU PRODUIT ET CONSCIENTE DES RISQUE ENCOURUS.



UTILISEZ UNIQUEMENT LA BATTERIE
LIGHTSPEED FOURNIE



ATTENTION: Risque d'explosion si la batterie est remplacée par un type incorrect. Mettre au rebut les batteries usagées selon les instructions.



L'éclair flèche dans un triangle équilatéral avertit l'utilisateur de la présence d'une "tension dangereuse" non isolée à l'intérieur de l'appareil, qui peut être d'une ampleur suffisante pour constituer un risque d'électrocution.



Le point d'exclamation contenu dans un triangle équilatéral avertit l'utilisateur de la présence d'importantes instructions d'exploitation et de maintenance dans la documentation qui accompagne ce produit.

CERTIFICATIONS



Ce produit est certifié conforme aux normes et aux exigences UL en matière de sécurité électrique par Underwriters Laboratories Inc.



Ce produit est conforme aux principales exigences des directives de l'Union Européenne suivantes : 2004/108/EC Electromagnetic Compatibility (EMC) and 2006/95/EC Low Voltage Directive (LVD).



LightSpeed Technologies a lancé un programme de recyclage de produits en Europe conformément à la directive de l'Union Européenne 2002/96/CE relative aux déchets d'équipements électriques et électroniques (directive « DEEE »). Veuillez visiter notre page Web www.Lightspeed-tek.com pour plus de renseignements.



Ce produit est fabriqué en utilisant des processus sans plomb ni aucune autre matière nuisible à l'environnement. Il est conforme aux nouvelles règles européennes les plus strictes en matière de biens de consommation (RoHS).



Canada, Industry Canada (IC) Notices

English

This device complies with Industry Canada license exempt RSS standard(s). This Class B digital apparatus complies with Canadian ICES-003 and CAN ICES-3(B)/NMB-3(B). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. The IC for this device is IC ID 1732B-LSTCT. This includes accessories such as the Clearmike (IC 1732B-LSCMT), Sharemike (IC 1732B-LSSMT) and Media Connector (IC 1732B-LSMCT).

French

Canada, avis d'Industrie Canada (IC)

Cet appareil numérique de classe B est conforme aux normes canadiennes ICES-003 et RSS-247. Son fonctionnement est soumis aux deux conditions suivantes: (1) cet appareil ne doit pas causer d'interférence et (2) cet appareil doit accepter toute interférence, notamment les interférences qui peuvent affecter son fonctionnement. L'identifiant IC de cet appareil est IC ID 1732B-LSTCT. Ceci inclus les accessoires comme le Clearmike (IC 1732B-LSCMT), Sharemike (IC 1732B-LSSMT) et un Media Connector (IC 1732B-LSMCT).

Cet équipement est conforme aux limites d'exposition aux radiations IC inaux doivent suivre les instructions d'utilisation spécifiques pour satisfaire la conformité à l'exposition IC, veuillez suivre les instructions de fonctionnement décrites dans ce manuel.



FCC Notice to User

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference; and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna (that is, the antenna for radio or television that is receiving the interference).
- Reorient or relocate and increase the separation between the telecommunications equipment and receiving antenna.
- Connect the telecommunications equipment into an outlet on a circuit different from that to which the receiving antenna is connected.
- Consult the dealer or an experienced radio/TV technician for help.

English

IMPORTANT NOTE: To comply with the FCC RF exposure compliance requirements, the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. No change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.

French

NOTE IMPORTANTE: Pour se conformer aux règles d'exposition des ondes RF par la FCC, la (ou les) antenne(s) utilisée(s) par ce transmetteur doivent être installées de façon à être séparée d'une distance d'au moins 20 cm de toute personne et ne doit pas être utilisée près ou en conjonction avec aucune autre antenne ou transmetteur. Aucune modification à l'antenne ou à l'appareil n'est permise. Toute modification à l'antenne ou à l'appareil peut résulter que l'appareil excèdera l'exposition aux ondes RF réglementaires et ainsi annuler le droit à l'utilisateur d'utiliser l'appareil.

FCC RF Radiation Exposure Statement

This device (Access Link) complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. This device should be installed and operated with a minimum distance of 20cm between the radiator (Access Link) and any part of your body.

For body worn operation, the portable part (Flexmike) has been tested and meets FCC RF exposure guidelines.

This device must not be co-located or operating in conjunction with any other antenna or transmitter. The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notice to Canada User

English

This device complies with Industry Canada license exempt RSS standard(s).

Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

French

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

1. L'exploitation est autorisée aux deux conditions suivantes :
2. L'appareil ne doit pas produire de brouillage, et l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.



RF Radiation Exposure Statement

English

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves (radio frequency electromagnetic fields) recommended by international guidelines. The guidelines were developed by Health Canada and include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

French

Votre appareil mobile est un émetteur-récepteur radio. Il est conçu pour ne pas dépasser les limites d'exposition aux ondes radio (champs électromagnétiques de fréquence radio) recommandées par les directives internationales. Les lignes directrices ont été élaborées par Santé Canada et comprennent une marge de sécurité importante destinée à assurer la sécurité de toutes les personnes, indépendamment de l'âge et de la santé.

NOTICE FOR USB

NOTE: Lightspeed is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



EU Declaration of Conformity

In accordance with EU Directive and Regulations

Manufacturer: Lightspeed Technologies, Inc.
Address: 11509 SW Herman Rd.
Tualatin, Oregon 97062

As the manufacturer hereby declares under our sole responsibility that the

Product(s): *Wireless Audio Hub and Microphone*

Model: *Cascadia C25, T25 and CMT*

is in conformity with the essential requirements of the RE Directive 2014/53/EU:

Radio Article: FCC 47 CFR Part 15D
FCC 47 CFR Part 15C
FCC 47 CFR Part 15B
RSS-213, Issue 3, 2015-03
RSS-Gen, Issue 5, 2018-04
ANSI C63.17 :2013
ANSI C63.4 :2014

Safety Article: IEC 62368-1: 2018

We hereby declare that [all essential radio test suites have been carried out and that] the above-named product is in conformity to all the essential requirement of Directive 2014/53/EU.

Lightspeed Representative

Date: May 6, 2025

Zachary Heise, Technical Program Manager

503.218.1216

zach.heise@lightspeed-tek.com

11509 SW HERMAN RD

Tualatin OR 97062, USA



System Components

STANDARD COMPONENTS

TCT	Topcat all-in-one ceiling-mount wireless audio base station
24V2.5-NA	24V/2.5A power supply for T25
FSC	Transceiver cradle charger, power supply
5V1C	5V power supply for FSC
CMT	Clearmike Classroom transceiver with battery pack and lanyard
L3.7V	Lithium Polymer rechargeable battery pack for Clearmike, one per Clearmike
FL	Microphone lavalier cord

OPTIONAL ACCESSORIES

SMT	Sharemike handheld transceiver with battery pack
L3.7V	Lithium Polymer rechargeable battery pack for Sharemike
USBC	Charging cable for Sharemike
EMA	Earset microphone with TRRS connector for Clearmike
LMA	Lapel microphone with TRRS connector for Clearmike
MCT	Media Connector with Access Technology, power adapter, power cord
WPT	Wallplate



System Specifications

TOPCAT

Product Description	All-in-one Instructional Audio System
Wireless Communication	Access Technology (1.9 GHz)
Frequency Response	20 Hz - 20 kHz Audio Out, 150 Hz - 6.5 kHz Wireless
Power Supply Options	AC Mains: 100-240V ~ 50/60Hz 1.5A
Power Output	20W RMS
Tone Control	Bass/Treble Control
Audio Inputs	Three 3.5mm inputs, one S/PDIF coaxial digital input
Audio Outputs	One (1) 3.5mm output
Max Input/Output Level	1.4VRMS / 1.4VRMS
Total Harmonic Distortion	<1%
Analog Control Signals	Inputs: PageFirst (25/70V page mute), Relay Input Output: Contact closure (initiated from microphone)
Dimensions	(W x H x D) 23.75" x 11.73" x 4.19" (603mm x 298mm x 106mm)
Weight	13.5 lbs (6.1 kg)
Mounting	In-ceiling installation or wall-mount with bracket

SHAREMIKE

Description	Handheld transceiver
Wireless Communication	Access Technology (1.9 GHz)
Total Harmonic Distortion	<1%
Integrated Microphone	Uni-directional electret
Audio input	3.5mm TRRS
Battery Power	3.7V LiPo battery pack
Battery Life	8 hours (fully charged)
Charging	2 contacts for cradle charging
Power	On/off button
Registration	Push button for registration with Access Link
Dimensions (L x W x H)	6.0" x 1.1" x 1.1" (153 x 28 x 28mm)
Weight	2.6 oz (73g)

CLEARMIKE

Description	Pendant-style transceiver
Earbud Lanyard	Magnetic clasp with integrated earbud
Wireless Communication	Access Technology (1.9 GHz)
Integrated Microphone	Uni-directional electret
Analog Audio I/O	3.5mm TRRS
Digital Audio I/O	USB-C
Control Buttons	Power/mute, volume up/down, alert
Volume Control	+/- 12dB
Total Harmonic Distortion	<1%
Display	E-paper display
Battery Power	3.7V LiPo battery pack
Battery Life	8 hours (fully charged)
Charging	Cradle charger or USB-C
Dimensions (L x W x H)	3.0" x 1.2" x 0.9" (76mm x 30mm x 23mm)
Weight	1.3 oz (37g)

MEDIA CONNECTOR

Description	Wireless audio transceiver
USB Power	5V USB-C connector
Wireless Communication	Access Technology (1.9 GHz)
Tone Control	1 bass/treble control
Audio Input	Three (3) 3.5mm inputs, One (1) Toslink digital input, Bluetooth
Audio Output	Two (2) 3.5mm outputs
Audio Link Indicator	1 LED on front panel
Device egestion	Push button for Access Link
Dimensions (W x H x D)	7.5" x 4.2" x 1.14" (190 x 107 x 29mm)
Weight	8.6 oz. (245g)



Dedicated to Access for All

We strive to make a remarkable difference for teachers and students by creating Access to powerful in-the-moment insights to the learning process. Our audio and video solutions improve student engagement, enable teachers to activate small groups, and encourage collaboration.

11509 SW Herman Road
Tualatin, Oregon 97062
Toll Free: 800.732.8999
Phone: 503.684.5538
Fax: 503.684.3197
lightspeed-tek.com