



front side  
正面

### 01 HAVIT

**SPACE T3**  
Adaptive Hybrid Noise  
Cancelling TWS Earbuds

**USER MANUAL**

### 02 PACKAGE CONTENT

1. Earbuds (L/R)  
2. Charging case  
3. Type-C charging cable  
4. User manual

### 03 FIRST TIME USE

1. Remove protective film  
2. Charge the earbuds in the case  
3. Connect to a device via Bluetooth

### 04 WEARING

\* Adjust the earbuds to the correct angle for optimal noise cancellation and comfort.

### 05 CHARGING

**EARBUDS CHARGING**

**CASE CHARGING**

Type-C

### 06 POWER ON & CONNECT

\* Note: The earbuds are automatically connected to the last paired device when the case is open.

back side  
反面

### 07 POWER OFF

1. Press and hold the touch sensor for 5 seconds to power off the earbuds.  
2. Charge the earbuds in the case.

### 08 MULTI-POINT CONNECTION

1. Connect earbuds to Device A then turn off its Bluetooth and the earbuds will auto connect to Device B.  
2. On Device B, search HAVIT SPACE T3 and tap to connect.  
3. Once again turn on Bluetooth on Device A and connect it to the earbuds.

### 09 RESET

1. In a quiet place, press 5 times to reset L and R.  
2. Charge the earbuds in the case for 10 minutes.  
3. Insert earbuds into the case, close the lid, and remove them to reset.

### 10 TOUCH CONTROL

Play/Pause: Tap once (L/R)  
Previous song: Tap 3 times (L)  
Next song: Tap 3 times (R)  
Answer/end a call: Tap twice (L/R)  
Reject the call: Touch & hold for 2 seconds (L/R)  
Switch Game mode/Music mode: Tap twice (L/R)  
ANC ON: Touch & hold for 2 seconds (L/R)  
ANC OFF/Automatic sound/ambient sound: Touch & hold for 2 seconds (L/R)  
Spatial Audio ON: Touch & hold for 2 seconds (L/R)

### 11 CONTRÔLE

Lecture/Pause: Appuyez 1 fois (L/R)  
Chanson précédente: Appuyez 3 fois (L)  
Chanson suivante: Appuyez 3 fois (R)  
Répondre/ Terminer un appel: Appuyez 2 fois (L/R)  
Rejeter l'appel: Toucher et maintenir pendant 2 secondes (L/R)  
Changer mode Jeu/ mode Musique: Toucher et maintenir pendant 2 secondes (L/R)  
ANC activé: Toucher et maintenir pendant 2 secondes (L/R)  
ANC désactivé/ son ambiante: Toucher et maintenir pendant 2 secondes (L/R)  
Audio spatial activé/désactivé: Toucher et maintenir pendant 2 secondes (L/R)

### 12 BERÜHRUNGSSTEUERUNG

Wiedergabe/Pause: Zweimal tippen (L/R)  
Vorheriger Titel: Dreimal tippen (L)  
Nächster Titel: Dreimal tippen (R)  
Anruf annehmen/ beenden: Zweimal tippen (L/R)  
Anruf ablehnen: 2 Sekunden gedrückt halten (L/R)  
Spielmodus/ Musikmodus: 2 Sekunden gedrückt halten (L/R)  
ANC ein: 2 Sekunden gedrückt halten (L/R)  
ANC aus: 2 Sekunden gedrückt halten (L/R)  
Räumliches Audio ein/aus: 2 Sekunden gedrückt halten (L/R)

### 13 CONTROLLO TATILE

Reproduzione/Pausa: Tocca due volte (L/R)  
Bravo precedente: Tocca tre volte (L)  
Bravo successivo: Tocca tre volte (R)  
Rispondi/Termina una chiamata: Tocca due volte (L/R)  
Alfabeto / Chiamata: Tocca e tieni premuto per 2 secondi (L/R)  
Tocca il modo gioco / il modo musica: Tocca e tieni premuto per 2 secondi (L/R)  
ANC attivo: Cambia il modo per toccare due volte (L/R)  
ANC disattivato / (SONO AMBIENTE) / ANC OFF: Tocca e tieni premuto per 2 secondi (L/R)  
Audio spaziale attivato / disattivato: Tocca e tieni premuto per 2 secondi (L/R)

### 14 CONTROLES

Reproducción/Pausa: Toca dos veces (L/R)  
Canción anterior: Toca tres veces (L)  
Canción siguiente: Toca tres veces (R)  
Responde/ Termina llamada: Toca dos veces (L/R)  
Alfabeto / Llamada: Mantén pulsado durante 2 segundos (L/R)  
Juego / Música: Toca y mantén pulsado durante 2 segundos (L/R)  
ANC activado: Cambia el modo tocando dos veces (L/R)  
ANC desactivado / (SONO AMBIENTE) / ANC OFF: Mantén pulsado durante 2 segundos (L/R)  
Audio espacial activado/desactivado: Mantén pulsado durante 2 segundos (L/R)

### 15 觸控操作

播放/暂停: 雙擊 (左/右)  
上一首: 三擊 (左)  
下一首: 三擊 (右)  
接聽/結束電話: 雙擊 (左/右)  
觸控遊戲/觸控音樂: 觸控 2 秒 (左/右)  
ANC 開啟: 觸控 2 秒 (左/右)  
ANC 關閉 / 環境音 / 關閉 ANC: 觸控 2 秒 (左/右)  
空間音場 / 關閉: 觸控 2 秒 (左/右)

### 16 機能

再生/一時停止: 2 回タップ (左/右)  
前曲: 3 回タップ (左)  
次曲: 3 回タップ (右)  
通話応答/終了: 2 回タップ (左/右)  
ゲームモード/音楽モード: 2 回長押し (左/右)  
ANC ON: 2 回長押し (左/右)  
ANC OFF / 環境音 / OFF: 2 回長押し (左/右)

### 17 터치 컨트롤

재생/일시정지: 두 번 탭하기 (좌/우)  
이전 곡: 세 번 탭하기 (좌)  
다음 곡: 세 번 탭하기 (우)  
통화 응답/ 종료: 두 번 탭하기 (좌/우)  
게임 모드 / 음악 모드: 2초 동안 길게 누르기 (좌/우)  
ANC ON: 이 기능을 2초 동안 길게 누르거나 터치하기 (좌/우)  
ANC OFF / 환경음 / ANC OFF: 이 기능을 2초 동안 길게 누르거나 터치하기 (좌/우)

### 18 STEROWANIE DOTYKOWE

Odtwarzanie/Wstrzymanie: Dwa razy dotknięcie (L/R)  
Poprzedni utwór: Trzy razy dotknięcie (L)  
Następny utwór: Trzy razy dotknięcie (R)  
Odbiór/ zakończenie rozmowy: Dwa razy dotknięcie (L/R)  
Tryb gry / muzyka: Dwa razy dotknięcie przez 2 sekundy (L/R)  
ANC włączony: Zmiana trybu dotknięciem dwukrotnie (L/R)  
ANC wyłączony / (DŹWIĘK OTOCZENIA) / ANC wyłączone: Przytrzymanie przez 2 sekundy (L/R)  
Dźwięk przestrzenny włączony/wyłączony: Przytrzymanie przez 2 sekundy (L/R)

### 19 KONTROL

Opust / Zastavení: Dvakrát dotknout (L/R)  
Odpověď / ukončení hovoru: Dvakrát dotknout (L/R)  
Sledující skladba: Dvakrát dotknout (R)  
Předchozí skladba: Dvakrát dotknout (L)  
Aktivace režimu hry / režimu hudby: Dvakrát dotknout po dobu 2 sekund (L/R)  
ANC ON: Dvakrát dotknout (L/R)  
ANC OFF / (OKOLNÍ ZVUK) / ANC OFF: Dvakrát dotknout (L/R)

### 20 СЕНСОРНОЕ УПРАВЛЕНИЕ

Воспроизведение/Пауза: Дважды коснитесь (L/R)  
Предыдущий трек: Трижды коснитесь (L)  
Следующий трек: Трижды коснитесь (R)  
Ответить/Закончить звонок: Дважды коснитесь (L/R)  
Активация режима игры / режима музыки: Дважды коснитесь в течение 2 секунд (L/R)  
ANC ВКЛ: Дважды коснитесь (L/R)  
ANC ВЫКЛ / (ОКРУЖАЮЩИЙ ЗВУК) / ANC ВЫКЛ: Дважды коснитесь (L/R)

### 21 PT-CR CONTROLES

Tocar/Pausar: Toque duas vezes (L/R)  
Música anterior: Toque três vezes (L)  
Música posterior: Toque três vezes (R)  
Atender/ Encerrar Chamada: Toque duas vezes (L/R)  
Ativar modo jogo / modo música: Toque duas vezes por 2 segundos (L/R)  
ANC LIGADO: Toque duas vezes (L/R)  
ANC DESLIGADO / (SOM AMBIENTE) / ANC DESLIGADO: Toque duas vezes por 2 segundos (L/R)

### 22 FCC ID: 2A161-TW919ULTRA FCC WARNING FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This equipment uses radio waves and can interfere with radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Such interference may occur in particular situations. If this equipment does cause harmful interference, there is no guarantee that the interference will be corrected by turning the equipment off and on. The user is encouraged to try to contact the manufacturer to obtain more information.

### 23 BATTERIES:

Warning: The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or a light flame.

1) Replacement of a battery with an incorrect type that can result in a fire or explosion.  
2) Disposal of a battery into a fire or hot oven, or medical or industrial or automotive battery, that can result in a fire or explosion.  
3) Loading a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.  
4) A battery subjected to excessive low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

**SAFETY TIPS**

- Don't expose the earbuds to liquids, moisture or humidity and they have electronic and battery parts.
- Don't disassemble your earbuds. There are no user-replaceable parts inside.
- Don't drop the earbuds and keep them away from sharp objects such as pins in your pockets.
- Don't use the earbuds with any other earbuds and cases with alcohol cloth regularly to ensure there is no dust accumulation and long-term good sound experience.
- Don't expose the earbuds to extremely high or low temperature as this may damage the battery.
- Listen to the music at high volume is harmful to your hearing.
- Don't throw the earbuds in a fire to dispose it otherwise noise battery may explode.

材质: 80G书纸 双面印刷, 风琴折

印刷色号(Printing color number): C:0 M:0 Y:0 K:70

尺寸(Size): 55 X 77mm