

 


DreamWave Outdoor Audio LLC
Address: 14168 Central Ave Unit B Chino, CA 91710
www.godreamwave.com
info@godreamwave.com



BOLT Portable

Bluetooth Speaker

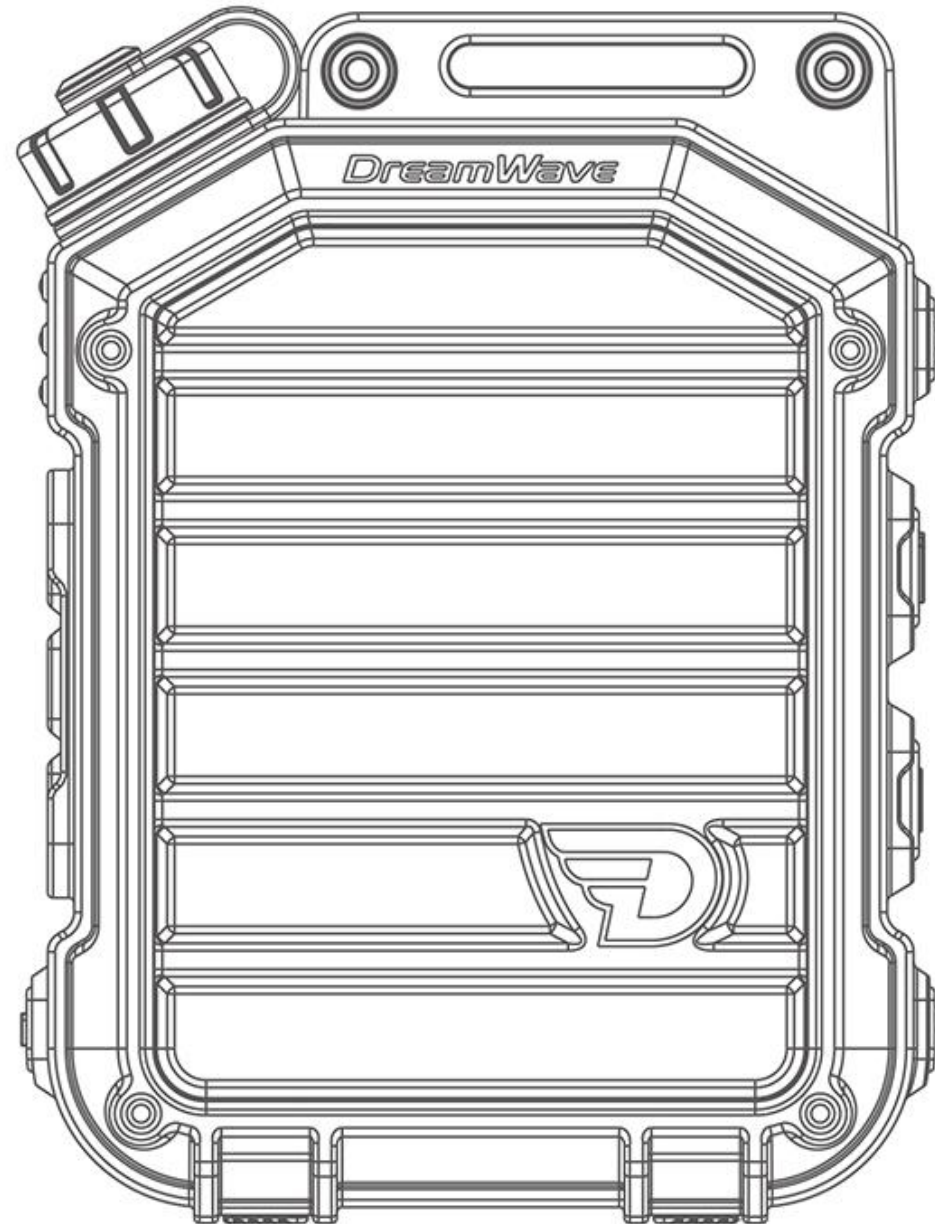

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy. If not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception (which can be determined by turning the equipment off and on), the user is encouraged to try to correct the interference by one or more of the following measures:


- * Reorient or relocate the receiving antenna.
- * Increase the separation between the equipment and the receiver.
- * Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- * Consult the dealer or an experienced radio/TV technician for help.

This device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.


Table of Contents

What's in the Box	01
Right Control Panel	02
Left Lighting Control Panel	03
Charging Instructions	04
Power ON/OFF	05
Standby Mode	05
Bluetooth Connection	06
TWS Dual Pairing Mode (2 Speakers)	07-08
Multi-Speaker Pairing (Auracast / Party Mode)	09
Technical Specifications	10

What's in the Box

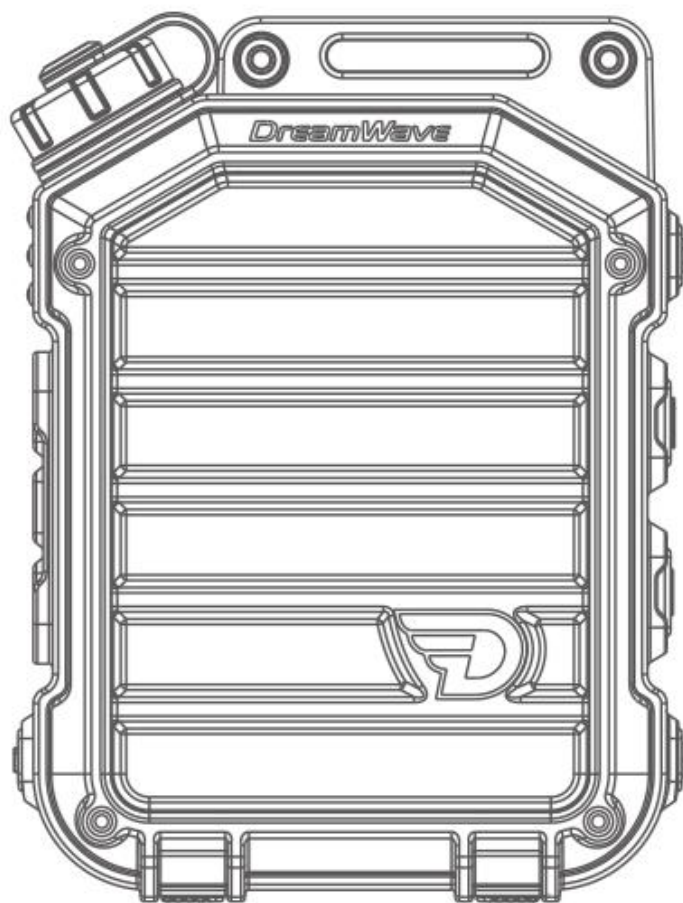


- BOLT Portable Speaker ×1

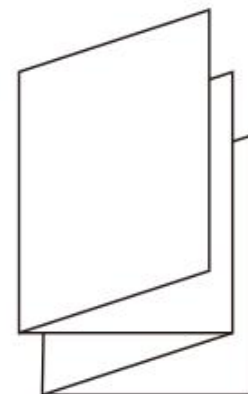

- User Manual ×1




- Warranty Card ×1

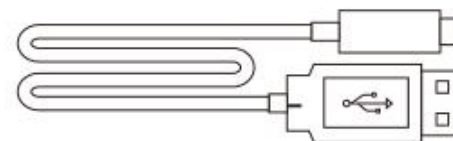


- Charging Cable ×1

Left Lighting Control Panel

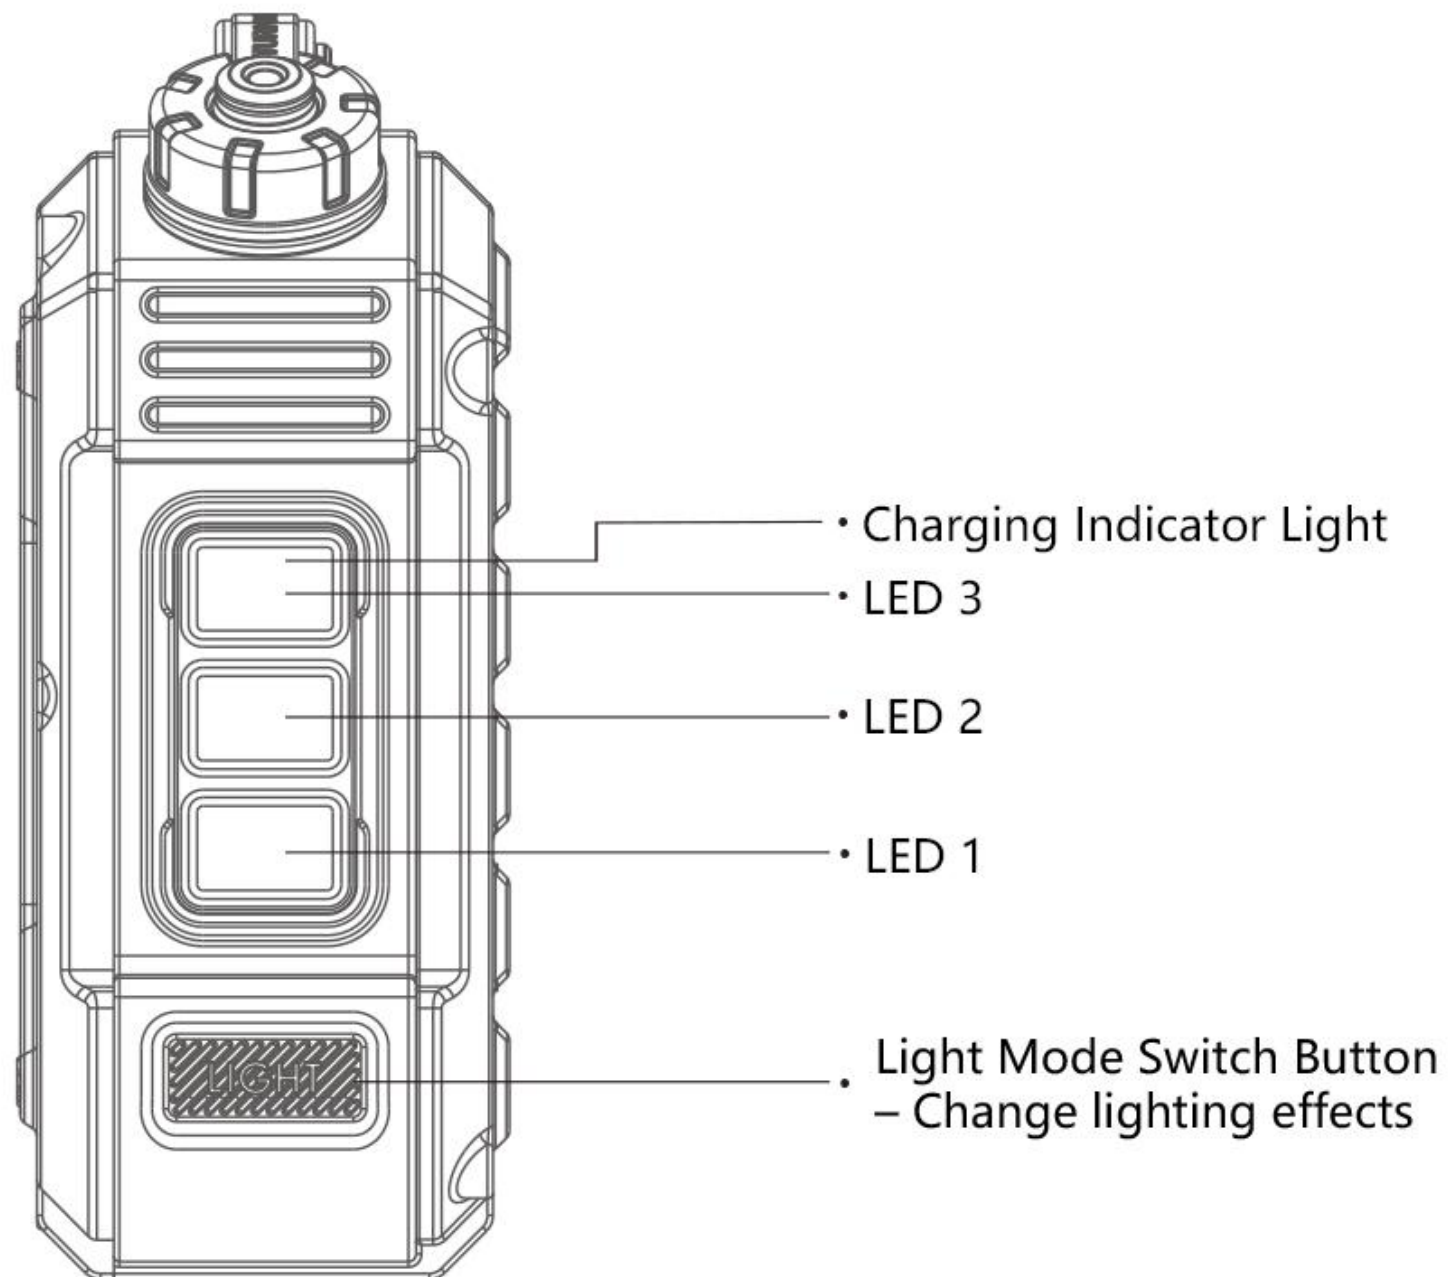

Right Control Panel

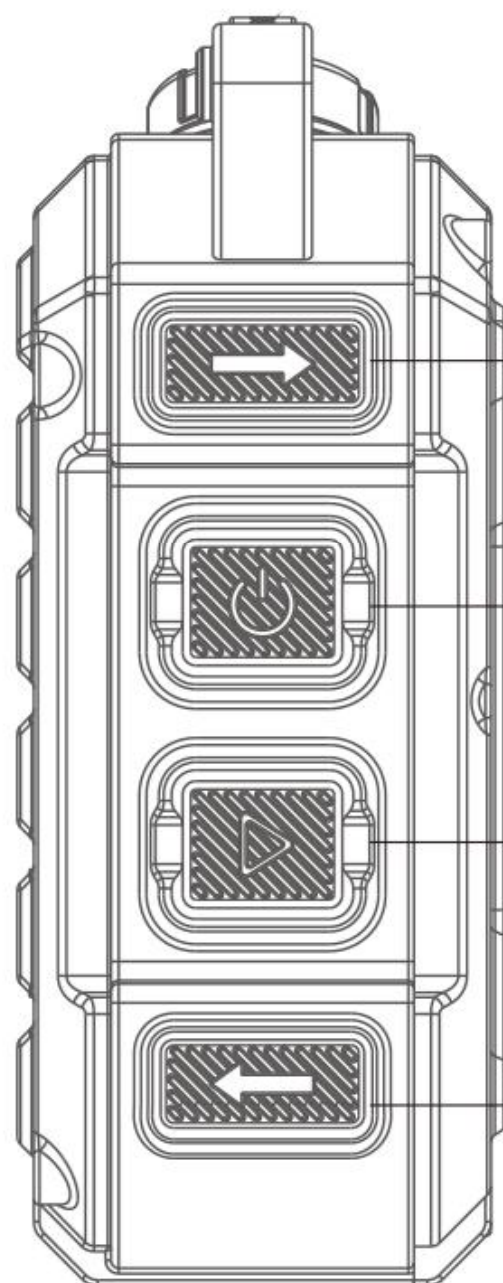

Volume + Increase volume

Power / Party Mode Button


- Long press >5 sec: Power ON/OFF
- Short press: Party Mode

Play/Pause / Bluetooth / TWS

- Short press: Play / Pause
- Long press: Disconnect Bluetooth
- Double tap: Enter TWS mode

Volume – Decrease volume


Charge Your Portable Speaker

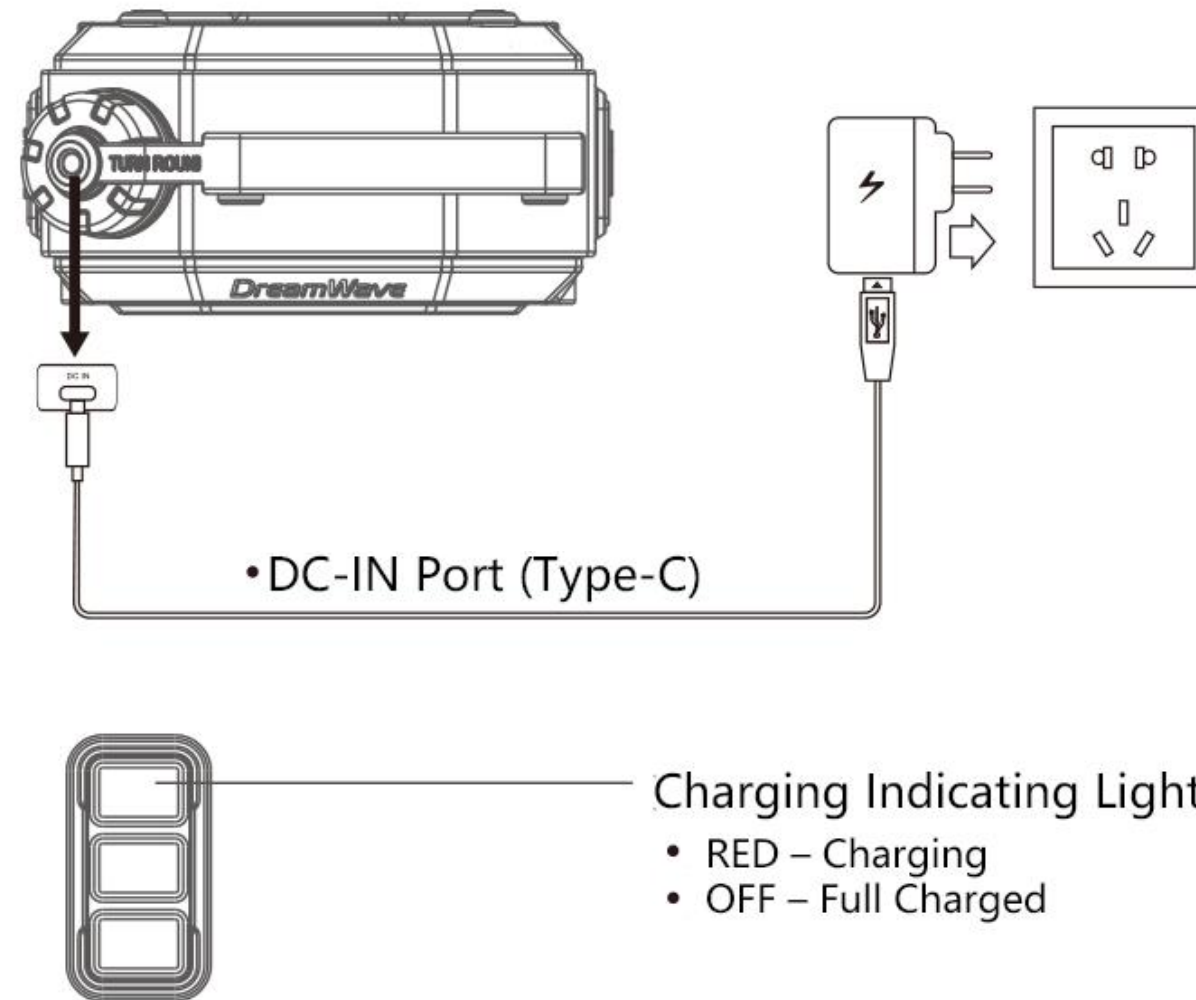


Use included Type-C cable with a 5V/1.5A or higher adapter
(adapter not included)

Power ON/OFF

Press and hold for 3 seconds
the power button to ON

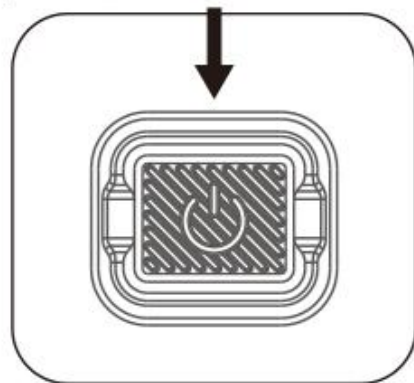


Press and hold for 3 seconds
the power button again to OFF

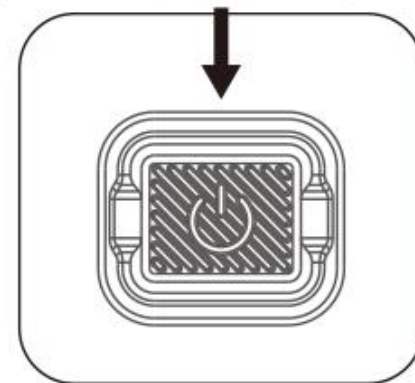


Volume Adjustment

Press to reduce volume

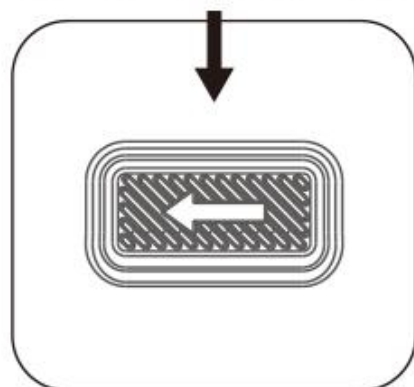

Press to increase volume

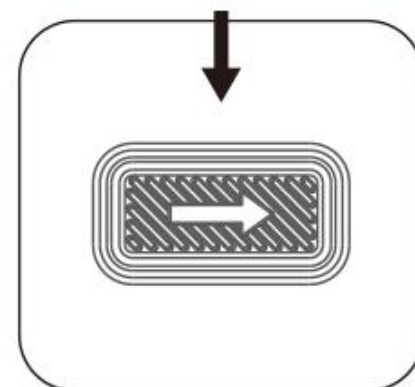


Standby Mode

The speaker will automatically power off after 10 minutes of inactivity (no music playing).

Bluetooth Connection

- ① Turn on the speaker – Long press the power button for 3 seconds. The speaker enters Bluetooth pairing mode automatically, and the Bluetooth indicator flashes blue.
- ② Pair your device – On your phone, tablet, or computer, turn on Bluetooth, search for "BOLT," and tap to connect.
For iOS 5.0 or higher (iPhone), the battery level will be shown on your device after pairing.
- ③ Connection successful – The Bluetooth indicator stays solid blue.
- ④ Re-pair or switch devices – Long press the Bluetooth button for 3 seconds to re-enter pairing mode.

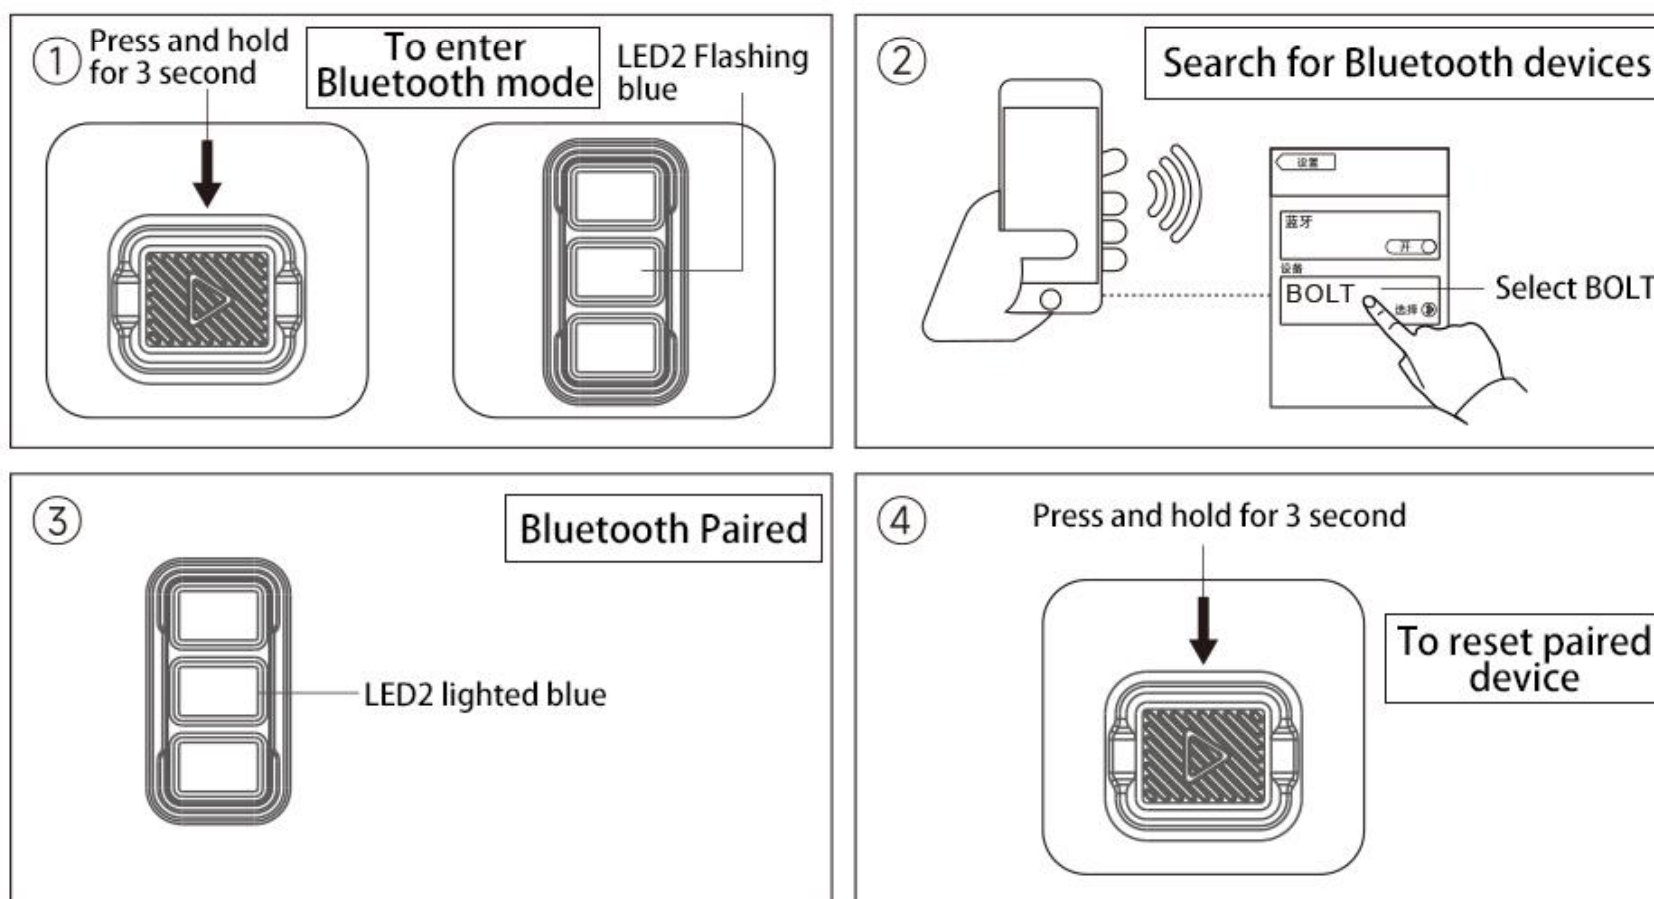

TWS Dual Pairing Mode (True Stereo Mode with Two BOLT Speakers)

Pair two BOLT speakers for true wireless stereo (left + right channels).

Before you begin: **Make sure both speakers are disconnected from any Bluetooth devices.**


Set up TWS:

Master BOLT-A Slave BOLT-B

Step 1 Turn on BOLT-A (host) – Long press the power button for 3 seconds. Pair it with your phone.




Step 2 Enter TWS mode on BOLT-A – Short press the play/pause button. The indicator flashes green quickly.

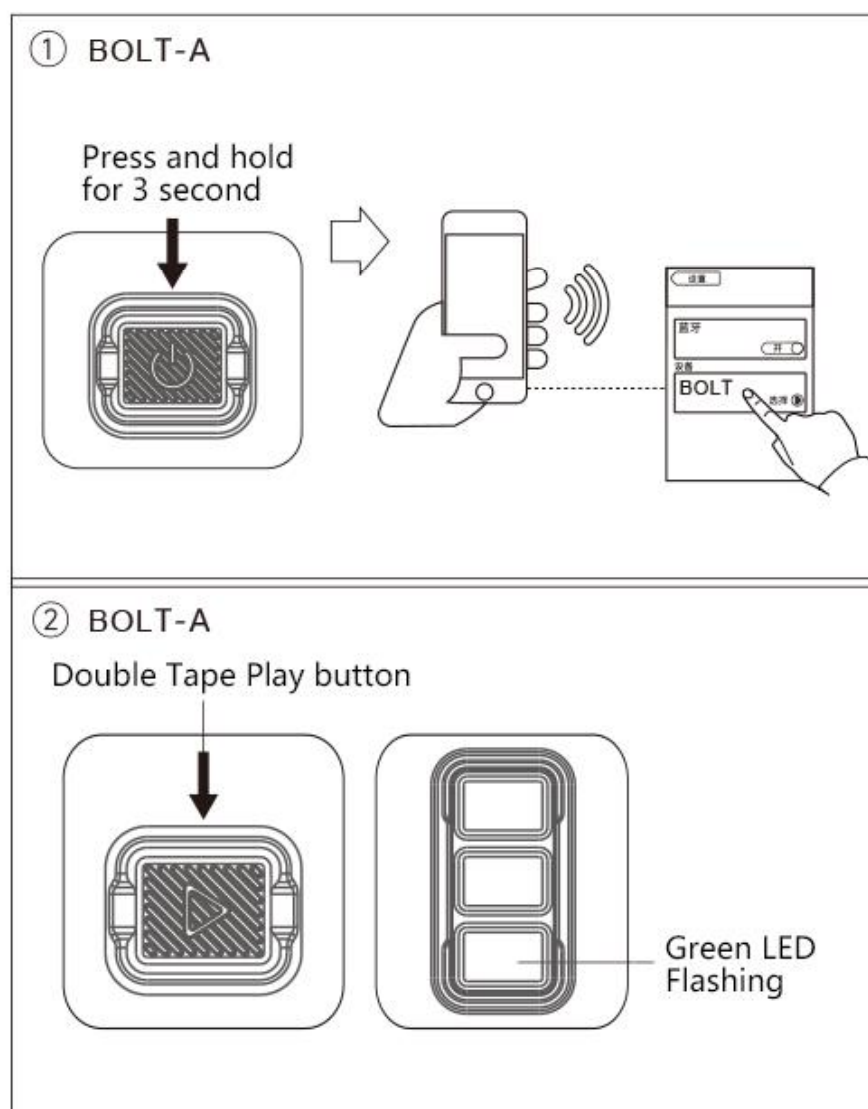


TWS Dual Pairing Mode (True Stereo Mode with Two BOLT Speakers)

Step 3 Double Tap
Play button of BOLT-B
Till LED flashing green.

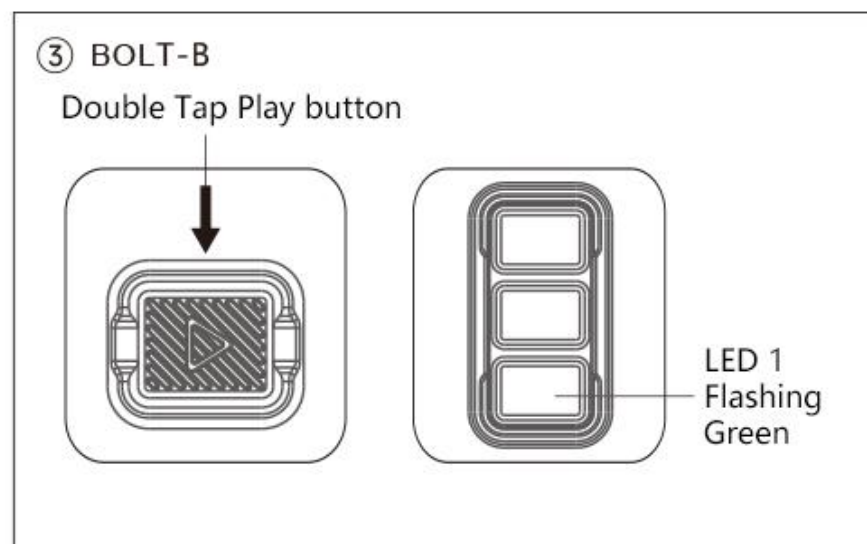

Step 4 BOLT-A & BOLT-B
will automatically pair
with each other.

The master device' s
LED display flashing blue
LED + Green LED, slave
device' s LED will only
show green LED. Pair the
phone with the master
device to play the music.

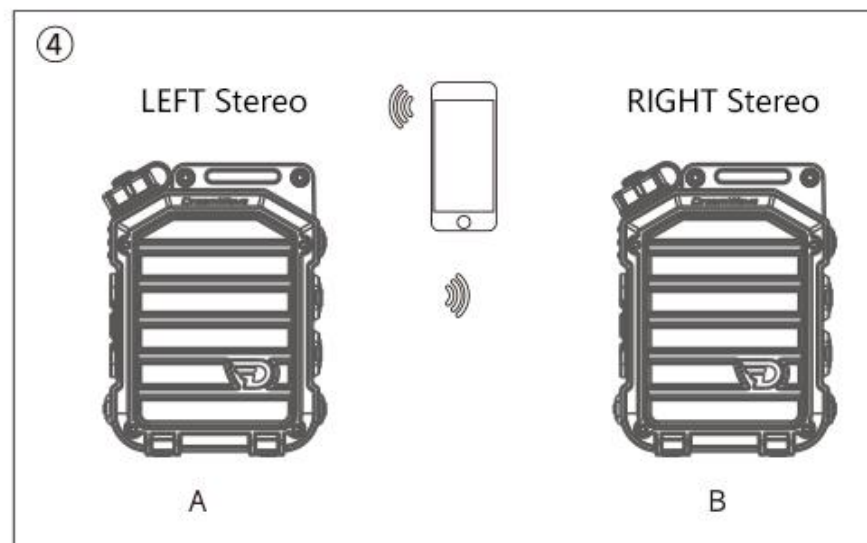

Notes:

1. To exit TWS mode, short press the play/pause button on either speaker. Both will exit.
2. Once paired, the two speakers will automatically reconnect in TWS mode the next time you turn them on.

Multi-Speaker Pairing Mode (Host + Multiple Speakers)

Set up TWS:

Master BOLT-A Slave BOLT-B Slave BOLT-C.....

Steps:

- ① Turn on BOLT-A – Long press power. Pair it with your phone via Bluetooth.



- ② Enter multi-pairing mode on BOLT-A – Short press the power button. The red light stays on.




- ③ Connect BOLT-B – Make sure BOLT-B is disconnected from all devices. Short press its power button. The green light stays on (Bluetooth light off), and it will automatically connect to BOLT-A.



- ④ Add more speakers – Repeat step 3 for BOLT-C, BOLT-D, etc.

To exit multi-speaker mode: Short press the power button on any speaker.

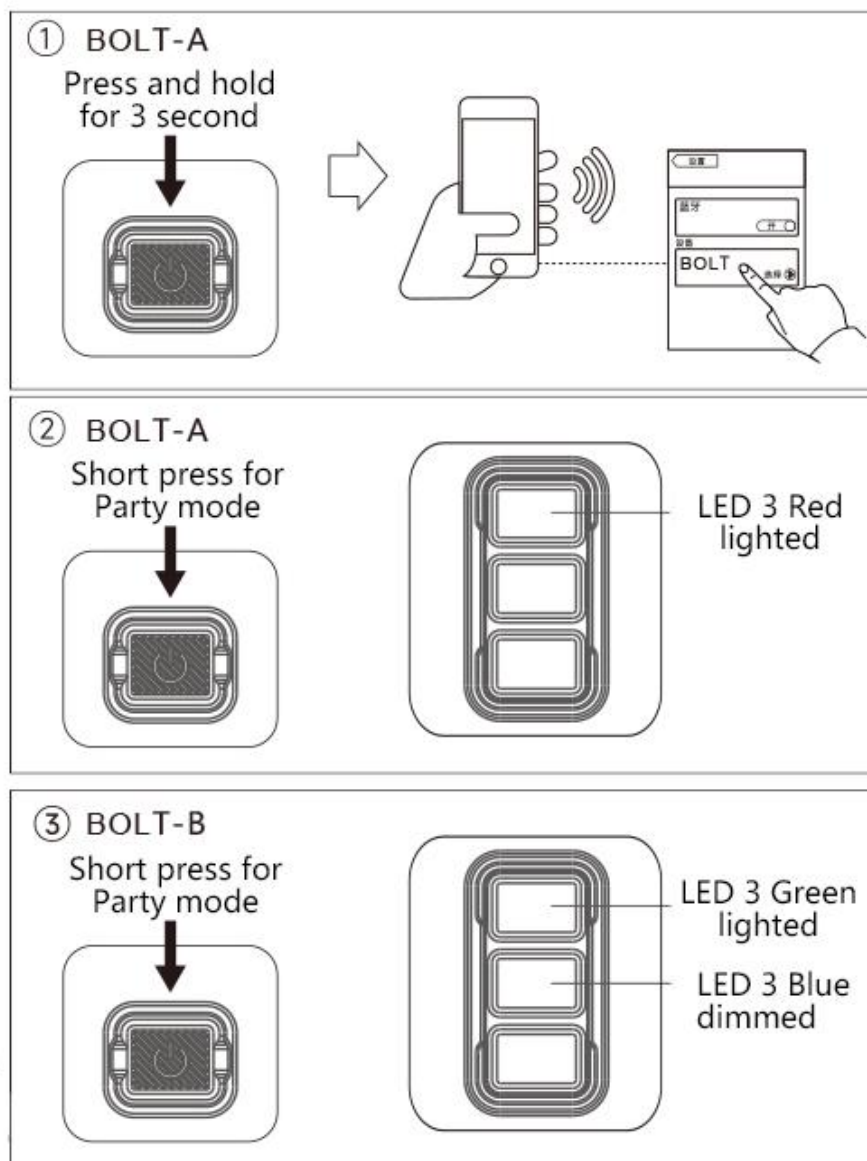

Technical Specifications

Portable Bluetooth Speaker

Model: BOLT

Driver	• Rated RMS Power: 8W • 1.75" full-range ×1 driver • 1 Passive Radiator • Signal-to-Noise Ratio: 78dB • Frequency Response: 100Hz – 18KHz	
Wireless	• Bluetooth 5.3	
Battery	• Internal Rechargeable Lithium Battery • Capacity: 2500 mAh • Playtime: Approx. 10H (depending on volume and music genre)	
Charging	• Input: 5V Type-C connector - Use 5V/1.5A 7.5W and above charge	
Physical	• IP67 Waterproof and Dustproof • Dimension: W44.5 x D86 x H114.5 mm • Weight: ?? kg	

* Dreamwave Audio reserve the right to make changes to the above product specification. Data was verified during the printing of this manual.

Troubleshooting

Problem	Cause	Suggested Solution
Speaker won't turn on	• Battery is low	• Charge the speaker by connecting the Type-C cable to a power adapter. If the speaker hasn't been used for a long time, charge it once every 1–2 months to extend battery life.
Speaker is unresponsive	• Software glitch	• Turn the speaker off and then back on again.
No sound	• Wrong audio source selected • The connected music source device volume is muted or low volume	• Make sure your device is connected to the speaker and check if another connected device is playing music. • Increase the volume on your device or on the speaker.
Sound is distorted / crackling	• Poor quality audio file • Volume too high on your device or speaker	• Try playing a lossless or higher quality music file. • Lower the volume on your device or speaker.
Sound cuts out / Bluetooth keeps disconnecting	• Device too far from speaker, or blocked by obstacles	• Keep your device within 10 meters (about 33 feet) of the speaker, with no walls or doors in between.
Sound cuts out / volume is low	• Battery is very low	• Charge the speaker by connecting the Type-C cable to a power adapter.
Can't connect or pair Bluetooth device	• Speaker is already connected to another device • Too many paired devices in your Bluetooth list	• Long press the Bluetooth button to disconnect, then try pairing again. • Clear old paired devices from your Bluetooth list, then search for the speaker again.

Still having issues?

If the problem continues, please reach out to our customer support team.



CMIIT ID:

FCC ID:2BM5X-BOLT

Patent:

Designed in California, Assembled in P.R.C