

# KALORIK®

Since 1930



**SMOKELESS ELECTRIC  
INDOOR GRILL**

# PARTS DESCRIPTION

---



1. Cool touch handles
2. Grill
3. Removable drip tray
4. Temperature control dial
5. Temperature probe
6. Body

## TECHNICAL SPECIFICATIONS

Model	Voltage	Wattage	Dimensions
GR 45927 BK	120V, 60Hz	1000W	15" x 10" plate

# IMPORTANT SAFEGUARDS

---

**When using electrical appliances, basic safety precautions should always be followed, including the following:**

1. **READ ALL INSTRUCTIONS BEFORE USE.**
2. Check that the voltage in your home corresponds to that stated on the appliance.
3. Do not touch hot surfaces. Use handles or knobs.
4. To protect against electrical shock, fire or personal injury, do not immerse cord, plugs, or the appliance in water or other liquid.
5. Close supervision is necessary when any appliance is used by or near children. As a rule, this appliance is not intended to be used by children.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair, or adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
9. Do not use outdoors.
10. Do not let the cord hang over the edge of a table or counter. Do not let it touch hot surfaces.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
13. Always attach TEMPERATURE CONTROL PROBE to appliance first, and then plug CORD into wall outlet. To disconnect, turn TEMPERATURE CONTROL DIAL to OFF, then remove PLUG from wall outlet.
14. Do not use the appliance for anything other than intended use.
15. Fuel, such as charcoal briquettes, is not to be used with this appliance.
16. Do not pour any liquids onto the grill or drip tray, as this could cause a fire.
17. Do not operate or immerse the appliance in water or under running water.
18. Extreme caution must be used when removing or disposing hot grease or moving an appliance containing hot oil or grease.

19. Do not place cooking utensils on the grid when the grid is hot, while cooking, keeping warm or reheating.
20. Make sure the grill, drip tray, and the outside of base are clean and dry before putting plug in power outlet.
21. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts resulting in a risk of electric shock.
22. Use only on properly grounded outlet.
23. Do not place any of the following materials on the appliance: paper, cardboard, plastic.
24. Do not cover any part of the grill or grid with metal foil. This will cause the appliance to overheat.
25. Do not operate this appliance in an appliance garage or directly under a wall cabinet.
26. Before you switch on the grill, remove any objects on top of it and any flammable objects close to it.
27. Do not place any food or objects on the drip tray when the grill is switched on.
28. Do not place food directly on the heating element.
29. This appliance is not intended to be operated by means of an external timer or a separate remote-control system.
30. Use on a flat stable, heat-resistant surface with sufficient open space around it and away from water or any heat source.
31. This appliance operates at high temperatures which may cause burns. Do not touch hot surfaces, parts or inside of appliance while operating. Allow appliance to cool down completely before you remove the grill or drip tray, or before moving, handling, cleaning or storing the appliance.
32. Be careful of spattering fat when you grill fatty meat or sausages.
33. Never use the appliance without the grid and drip tray in place. Always put the grill and drip tray on the appliance before you put the plug in the power outlet and switch it on. Do not use the appliance if the grill or drip tray is warped or deformed in any way.
34. This appliance is for household use only. It is not intended for use in environments such as staff kitchens of shops, offices, farms or other work environments. It is not intended to be used in hotels, motels, bed and breakfasts and other commercial environments.

**NOTE: This unit has been designed and engineered to reduce the smoke and visible vapors usually associated with grilling to a minimum. Delivers outdoor results indoors.**

# SAVE THESE INSTRUCTIONS

## HOUSEHOLD USE ONLY

### POLARIZED PLUG INSTRUCTIONS

---

This appliance is equipped with a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit into the polarized outlet only one way. If the plug does not properly fit into the outlet at first, reverse it. If it still does not fit, contact a competent qualified electrician. **Do not attempt to modify the plug in any way.**

### SHORT CORD INSTRUCTIONS

---

A short power supply cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.

### BEFORE THE FIRST USE

---

- Carefully unpack the grill and remove all packaging materials.
- Before cooking for the first time, wash the grill in mild dishwashing soap. Wipe and allow to dry.
- Turn the temperature control to the maximum temperature (450°F) and heat the grill alone for approximately 5 minutes. This will ensure the non-stick coating is ready for use. Note: You may notice a slight odor; this is normal and should quickly disappear.
- Turn the temperature control to OFF and allow to cool for 15 minutes.

**NOTE:** Make sure that the temperature control probe, located on the side of the skillet, is completely dry prior to use.

# OPERATING INSTRUCTIONS

---

- Place the appliance on a flat, heat resistant, stable surface in a ventilated area.
- Make sure the temperature control is in OFF position. Insert the temperature control probe into the side of the grill, then insert plug into electrical outlet.
- Adjust the temperature control to desired setting. **NOTE:** The indicator light on the temperature control probes indicates the heat setting. When the desired setting is reached, the light will turn off. It will continue to cycle on and off during use to indicate heat setting is being automatically maintained
- Preheat the grill for 10 minutes or until the indicator light goes out.
- Place food directly onto cooking surface and cook to desired doneness.
- When finished cooking, turn the temperature control OFF and remove plug from power outlet.

**IMPORTANT:** To avoid burn injury, wait until the appliance has cooled down completely before removing the temperature control probe.

**NOTE:** Use medium to low heat for best cooking results. Very high temperatures can cause discoloration and shorten the life span of any non-stick surface. If higher temperatures are necessary, preheat on medium for a few minutes.

## TIPS FOR USE

---

- Before using the grill for the first time, lightly brush cooking surface with vegetable oil. Heat to 300°F, then turn OFF and allow to cool completely. Wipe away any excess oil.
- Do not attempt to cool the heated cooking surface by pouring cold water onto the grill. The sudden temperature change may cause the cooking surface to warp.
- Do not immerse the temperature control probe, cord, or plug in water or any other liquid.

## GET MORE OUT OF YOUR PRODUCT

---

Browse Chef-created recipes specifically made for your Kalorik product. Visit our website [www.kalorik.com](http://www.kalorik.com) to see our extensive recipe library and start cooking. Sign up for the Kalorik email mailing list to receive special offers and recipes and connect with us on social media for daily inspiration.

## CLEANING AND MAINTENANCE

---

**CAUTION! Wait for all components to cool thoroughly after use before disassembling. Always handle hot components with oven mitts while cooking or hot.**

- Before cleaning, be sure to unplug the cord from the outlet. If necessary, wipe the cord with a damp cloth.
- Allow the appliance to cool completely before cleaning. The drip tray can be placed in the bottom rack of the dishwasher or washed by hand, while the grill plate and base have to be cleaned by hand with a warm, damp cloth and mild liquid soap.
- Always be sure to wash the grill surface after each use to remove any grease that may have accumulated. To keep grease from dripping outside of the base, always ensure that you are using your Indoor Electric Grill on a level surface and that the drip tray is completely clear of food particles.
- Use a damp cloth to clean the base. Do not use scouring pads or harsh cleaners on this unit. If necessary, use a nylon bristle brush or plastic scrubbing pad.
- Reassemble the appliance.

**NOTE:** Any other servicing should be performed by an authorized service representative.

# TROUBLESHOOTING

---

If your appliance is not working properly:

Problem	Possible cause	Solution
Appliance is not turning on.	There is no power going into the appliance	<ul style="list-style-type: none"><li>• Make sure the power cord is properly connected to the heating element.</li><li>• Make sure the power cord is plugged into an electrical socket.</li></ul>
Appliance is taking too long to heat or not heating enough.	The appliance may not be able to draw enough operating power from the outlet.	<ul style="list-style-type: none"><li>• Switch the power cord to an outlet that has no other appliances attached to it.</li></ul>
Food is undercooked or overcooked	Temperature and time setting may need to be adjusted	<ul style="list-style-type: none"><li>• Change the cooking time and temperature accordingly.</li></ul>

# WARRANTY

---

We suggest that you complete and return the enclosed Product Registration Card promptly to facilitate verification of the date of original purchase. However, return of the Product Registration Card is not a condition of these warranties. You can also fill out this warranty card online, at the following address: [www.KALORIK.com](http://www.KALORIK.com)

This KALORIK product is warranted in the U.S.A. and in Canada for 1 year from the date of purchase against defects in material and workmanship. This warranty is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance.

During this period, if the KALORIK product, upon inspection by KALORIK, is proven defective, it will be repaired or replaced, at Kalorik's option, without charge to the customer. If a replacement product is sent, it will carry the remaining warranty of the original product.

This warranty does not apply to any defect arising from a buyer's or user's misuse of the product, negligence, failure to follow KALORIK instructions noted in the user's manual, use on current or voltage other than that stamped on the product, wear and tear, alteration or repair not authorized by KALORIK, or use for commercial purposes. There is no warranty for glass parts, glass containers, filter basket, blades and agitators. There is also no warranty for parts lost by the user.

ANY WARRANTY OF MERCHANTABILITY OR FITNESS WITH RESPECT TO THIS PRODUCT IS ALSO LIMITED TO THE ONE YEAR LIMITED WARRANTY PERIOD.

Some states do not allow limitation on how long an implied warranty lasts or do not allow the exclusion of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

If the appliance should become defective within the warranty period and more than 30 days after date of purchase, do not return the appliance to the store: often, our Customer Service Representatives can help solve the problem without having the product serviced.

If servicing is needed, a Representative can confirm whether the product is under warranty and direct you to the nearest service location.

If this is the case, send the product via your pre-paid postage back to Kalorik, along **with proof of purchase** and a **return authorization number** indicated on the outer package, given by our Customer Service Representatives. Send to the authorized KALORIK Service Center (please visit our website at [www.KALORIK.com](http://www.KALORIK.com) or call our Customer Service Department for the address of our authorized KALORIK Service Center).

When sending the product, please include a letter explaining the nature of the claimed defect.

If you have additional questions, please call our Customer Service Department (please see below for complete contact information), Monday through Thursday from 9:00am - 5:00pm (EST) and Friday from 9:00am - 4:00pm (EST). Please note hours are subject to change.

If you would like to write, please send your letter to:

**KALORIK Customer Service Department**

Team International Group of America Inc.  
16175 NW 49th Avenue  
Miami Gardens, FL 33014 USA

Or call:

Toll Free: +1 888-521-TEAM / +1 888-KALORIK

**Only letters can be accepted at this address above. Shipments and packages that do not have a return authorization number will be refused.**



**For questions please contact:**

**KALORIK Customer Service**

Team International Group of America Inc.  
16175 NW 49th Avenue  
Miami Gardens, FL 33014 USA



Toll Free:

+1 888-521-TEAM / +1 888-KALORIK

[www.KALORIK.com](http://www.KALORIK.com)

*User manual content and recipes courtesy of Team International Group – Do not reproduce without consent of the authors - All rights reserved.*

**KALORIK®**  
Since 1930