


正面

Product name : User Manual
Model : AB309
size : 60x90mm / Unfolded Size : 480x90mm
105g coated art paper, single black double-sided printing, accordion fold
名称: 说明书
型号: AB309
尺寸: 60x90mm 展开尺寸: 480x90mm
105克哑粉纸, 单黑双面印刷, 风琴折

封面

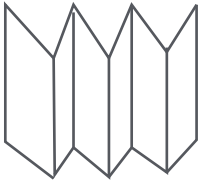

封底

SEAJIC®

Portable Selfie Tripod

User Manual【AB309】

Product Introduction

Product Introduction

Phone Clamp Unfolding

First, flip the phone clamp upward to the top, then pull out the telescopic rod.

Phone Securing

Flip open the clamp arms and clamp the phone in place.

Portrait/Landscape Adjustment

The phone clamp supports 360° roll adjustment for portrait/landscape switching and 180° tilt adjustment.

Phone Clamp Removal for 1/4" Interface Access

Simultaneously press the release buttons on both sides of the top of the phone clamp to remove it, then use the 1/4" interface to attach other devices such as an action camera.

Phone Clamp to Lanyard Securing

After removing the phone clamp, simultaneously press the release buttons on both sides of its top to secure it to the buckle of the lanyard.

Tripod Deployment and Storage

Storage: Fold the tripod legs, then push them back into the selfie stick.

Specifications and Parameters

Product Name:	Swing-to-deploy tripod
Product Model:	AB309
Dimensions:	208*33*51mm
Product Weight:	228g
Connection Method:	Bluetooth
Remote Control Distance:	10m
Product Materials:	ABS+PC/Aluminum alloy
Supported Systems:	Android/IOS/HarmonyOS
Battery Type:	Lithium-manganese button cell
Battery Model:	CR1632
Battery Capacity:	110mAh
Bluetooth Version:	BT4.2 or above

After-sales services of SEAJIC

After-sales service commitment of SEAJIC: We provide three-warranty services for all products which are sold through the official channel or authorized channel of SEAJIC in strict accordance with Law of the People's Republic of China on Protection of Consumer Rights and Interests. For regions where special three-warranty regulations are executed, SEAJIC hereby undertakes to abide by the local regulations. Please keep the warranty card and effective purchase voucher properly in order to safeguard your legal rights.

Warranty Card of SEAJIC

User Information

Name: _____

Contact phone: _____

Date of purchase: _____

Purchase platform and shop name: _____

Order No.: _____

Product information

Model: _____

* OSM (China) owns the right of interpretation of pictures and texts in the Manual,

OSM

PASS

Qualified

Inspector

01

背面

Bluetooth Connection to Phone

1.Mount the phone on the holder, then press and hold the power button for 3 seconds until the white indicator light flashes to enter Bluetooth pairing mode;

2.Open the Bluetooth settings on your phone, search for and connect to "AB309". When connected successfully, the white light stays on for 3 seconds and then turns off;

3.Press the selfie stick's shutter button to take photos. Press and hold the power button for 3 seconds to power off the selfie stick and exit Bluetooth pairing mode.

Note:

The selfie stick is set to automatically connect to the successfully paired phone. If you need to switch the connected device, please first unpair the Bluetooth connection on the currently paired phone, then pair with and connect to the new device.

Remote Control Function Instructions

Power Button: Press and hold for 3 seconds to turn on/off.

Function Button:

- Single click: Switch between front and rear camera once the camera app is opened;
- Double click: Quickly put the phone into sleep mode (screen off);
- Press and hold: Enter camera interface when screen is locked; open camera app when screen is unlocked.

Shutter Button:

- Middle button - single click: Take photo, start/stop recording. Press and hold: Burst shooting or video recording (depending on phone model settings);
- Push up once: Zoom in one step. Push up and hold: Zoom in continuously;
- Push down once: Zoom out one step. Push down and hold: Zoom out continuously;
- Push left once: Switch modes leftward in camera app. Push right once: Switch modes rightward in camera app.

Power On:

- Press and hold the power button for 3 seconds to turn on;
- Enter pairing mode. The indicator light flashes white at 1Hz for 180 seconds;
- Enter broadcasting mode. The white light flashes;
- When connected successfully, the white light stays on for 3 seconds then turns off;
- If not connected successfully, it enters sleep mode after 3 minutes.

Sleep Mode:

- After power-on and connection, it will automatically enter sleep mode after 5 minutes of inactivity;
- When connected to the phone, if the distance becomes too large and the connection is lost, the remote enters sleep mode directly;
- When connected to the phone, if the phone's Bluetooth is turned off, the remote enters sleep mode directly;
- When connected to the phone, if the pairing is manually cancelled on the phone, the remote enters sleep mode directly.

Remote Control Function Instructions

Paired Connection Status:

White (Keycode mode) / Blue (touch mode), indicator light stays on for 3 seconds then turns off.

HID/CMD Switching:

Press and hold the function button together with zoom in/out button for 3 seconds. (Example: In HID mode, white light flashes 3 times then switches to CMD mode with blue light.)

Wake from Sleep:

In sleep mode, pressing any button triggers reconnection to the phone. Once connected successfully, the white light stays on for 3 seconds then turns off. If reconnection fails, the remote enters broadcasting mode with white light flashing. If not connected successfully, it enters sleep mode after 3 minutes.

Turn-off Method:

- Press and hold the power button for 3 seconds, the white indicator light flashes 3 times then turns off;
- Automatically turns off after 15 minutes in sleep mode.

Low Battery Indicator:

- When the battery voltage is below 2.6V, each time the remote is powered on with no active pairing, it will pair or reconnect. After successful pairing, the white light stays on for 5 seconds, then the red light flashes 5 times at 1 second intervals, then turns off;
- During operation, each time a button is pressed, the red light replaces the blue light as operation feedback.

Remote Re-Pairing:

With the remote powered on, press and hold the shutter button and the function button together for 3 seconds. The remote will then clear the pairing list and enter pairing mode;

Power Consumption Requirement: Standby current < 1μA

Number of Buttons: 3

Number of Indicator Lights: 3 (Blue / White / Red)

Bluetooth Name: AB309

Remote Control Battery Replacement

Removing the Remote Control:

As shown in the figure, pry the remote control from its bottom to remove.

Insert a SIM ejector pin or suitable instrument into the remote's bottom pinhole to remove the battery cover, replace the battery, and reattach the cover.

Tips:

- When installing batteries, ensure the positive pole faces outward.
- Battery model is CR1632. Please purchase compatible batteries from reputable brands.

Important Safety Information

- Please read all safety and operation instructions carefully before use and keep the user manual in a safe place for future reference.
- Pay attention to all warnings on the device and in the user manual.
- Follow all operation and usage instructions.
- Use accessories/attachments specified by the manufacturer only.
- Only authorized technicians should perform repairs.
- In case of device damage, such as tripod body damage, liquid ingress, rain exposure, moisture damage, abnormal operation, or damage from dropping, please contact official customer service for assistance.

Name and content of hazardous substances in the product

Parts	Pb (Lead)	Hg (Mercury)	Cd (Cadmium)	Cr(VI) Hexavalent Chromium	PBDEs Polybrominated diphenyls	PBDEs Polybrominated diphenyl ethers
Selfie stick	○	○	○	○	○	○
Packing accessories	○	○	○	○	○	○

This table was prepared according to SJ/T11364

○ : It means that the content of the toxic and hazardous substance in all the homogeneous materials of the component is below the limit requirements specified in GB/T 26572.

X: It means that the content of the toxic and harmful substance in at least one homogeneous material of the component exceeds the limit requirements specified by GB/T 26572.

To protect the environment and human health:

- Once scrapped, the product should be separated from the household wastes; users have responsibilities for sending the scrapped products to the designated recycling center;
- The recycling center should recycle the product's useful materials properly;
- For details of scrapping the product, please consult the local government, waste disposal center or dealer;

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1)This device may not cause harmful interference, and
- (2)This device must accept any interference received, including interference that may cause undesired operation

Attention

To avoid damaging the product, please

- Do not expose the product to rain or a wet environment;
- Do not put open flames (such as lighted candle) on or near the product;
- Do not place the product near heat sources, such as oven, cooler, stove or other heating devices;
- Do not expose the product to boiled water;
- Do not put the product in articles containing liquids, such as vase;
- Do not place the product in hot places;
- Do not pull the product by force;
- Do not open the product's back cover by force, or repair its internal parts without permission to avoid electric shock or damage.

Public Account

Tik Tok