

ESGEEKGO®

ES-SP02

OUTDOOR

WIRELESS SPEAKER





User manual

Dear customer:

Thank you for choosing our product. please read all the instructions carefully and retain the manual for future use.

Presentation of the product

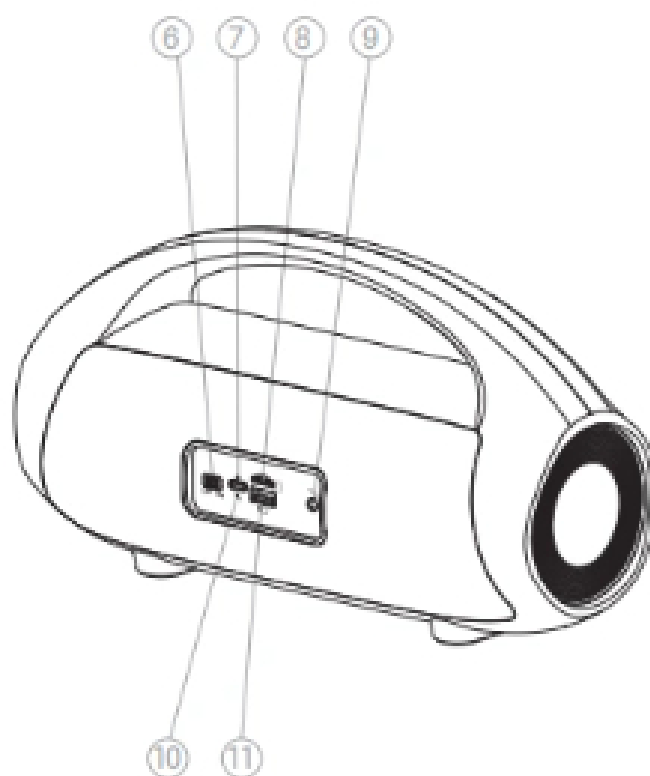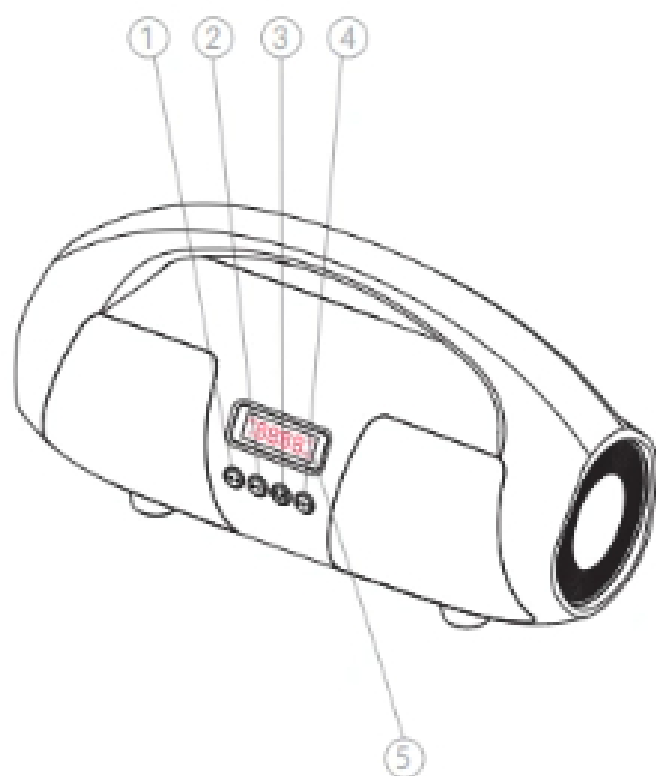

1 Short press : Previous track
Long press : Volume decrease

2 Short press : Pause / Play / Hands free calling
Long press: Auto search for radio station
Press twice : Callback call

3 Short press mode switch : Wireless / FM /
AUX / USB / TF Card mode switch
Long press: to turn on colorful light /
turns off colorful lights
Press twice: TWS connection

4 Short press : Next track
Long press : Volume increase

5 LED display

6 ON/OFF switch

7 LED indicator

8 Micro TF card slot

9 AUX inputCharging port

10 Tpye-C charging port

11 USB flash drive slot

Charging the speaker

The speaker has built-in rechargeable battery. When the battery is drained out, speaker would turn off automatically. Please recharge the battery.

Plug the Type-C end of the USB rechargeable cable into the charging port. Plug the other end into a USB port on your computer or other devices made for USB charging. Red LED Light illuminates indicating that the device is being charged. Once the speaker is fully charged, LED Light would turn OFF.

Important reminder

- Please do not disassemble, repair or transform the product.
- This product used lithium battery, please do not discard or put it in the fire.
- Do not expose this product to rain or humidity, so as to avoid the damages to the device.
- Please do not recharge the device repeatedly, otherwise the lithium battery inside would be aging quickly.
- In the FM radio mode, please insert the charging line to the charging port, to get better radio signals and better listening experience.

Pairing the device

- Toggle the ON/OFF switch to turn on the power of the speaker.
- You will hear beeping sound and words "The bluetooth device is ready to pair". The status LED will flash blue, indicating that the device is in pairing mode.
- Set your wireless-enabled device to search for wireless devices.
- When the wireless-enabled device finds the wireless devices, select "**ES-SP02**" from the list of found devices connection pairing to connect and pair.
- After a successful pairing, words "Du" will be heard, indicating that the device is paired and the status LED will stay solid blue.

Listening to music wirelessly

Please ensure that your device (Mobile phone, tablet or other devices) is paired with the Wireless Speaker to stream music wirelessly. once it is paired, play music from your device.

Music mode	Function	Operation buttons
Playing music	Increase Volume	Long press  key
Playing music	Decrease Volume	Long press  key
Playing music	Pause	Short press  key
Pause	play	Short press  key
Playing music	Previous track	Short press  key
Playing music	Next track	Short press  key

Note: The above functions can be used in all mode, such as Wireless play mode, USB flash drive play mode, Mrico TF card play mode, as well as FM radio mode. In AUX input mode, you need to control the medias through the media source devices. You need to operate with the source devices for previous / next track.

Hands free calling function

Please ensure your mobile phone is paired with the wireless speaker.

Hands free mode	Function	Operation buttons
Incoming call	Answer incoming call	Short press  key
Incoming call	Reject incoming call	Long press  key 2 seconds
Incoming call	End the call	Short press  key
ON the line	Increase volume	Long press  key
ON the line	Decrease volume	Long press  key
Standby mode and connected to a device	Redial last number	Short press  key 2 times

Colorful Lights

- Toggle the ON/OFF switch to turn on the power of the speaker.
- Long press the **M** button to turn on colorful light/switch the colorful lights/turns off colorful lights.

TWS connection

- Toggle the ON/OFF switch to turn on the power of the speaker.
- Press the **M** button twice on two speakers and you will hear "Ding Dong", then the speakers are connected successfully in TWS mode.
- Search for "**ES-SP02**" in your mobile phone and pair it with this device.
- Enjoy your music.
- If you don't need TWS mode, press the **M** button twice, you will hear "Ding Dong" voice then the speakers are not in TWS mode.

Listening to FM radio

- Toggle the ON/OFF switch to turn on the power of the speaker.
- Insert the Type-C end of the USB rechargeable cable into the charging port, and leave the other end of the cable open. USB rechargeable cable serves as FM antenna while in FM Radio mode.
- Short press the **M** button until you hear the voice prompt "The Radio Mode" to enter the FM radio mode.
- Short press key **⏮** or **⏭** to skip selected stations.
- Short press the key **⏮** to AUTO-SCAN the stations.
- It will take few minutes to search all the stations. Once all the stations are scanned, they get registered in memory, automatically.
- Long press key **⏮** or **⏭** to decrease or increase the volume.

Play music through "Auxiliary" mode

- Toggle the ON/OFF switch to turn on the power of the speaker.
- Insert one end of the auxiliary cable (included) into the auxiliary port, the voice prompt "AUX mode" will be heard. Plug the other end to the audio device (such as phone / MP3 / Player / computer / tablet ,etc.)
- Select your favorite song at the source device to play.
- Long press key **⏮** or **⏭** to decrease or increase the volume.

Note: media can be controlled only through the source devices, while playing music in auxiliary mode.

Stream music from TF card or USB flash drive

- Toggle the ON/OFF switch to turn on the power of the speaker.
- Insert the micro TF card or USB flash drive preloaded with songs, into the micro TF card slot or USB flash drive slot of the speaker correspondingly, the voice prompt "USB mode" or "TF card mode" respectively will be heard. Speaker would automatically start playing songs from the micro TF card or USB flash drive.

Trouble shooting

Problem	Possible cause	Solution
Low sound level	Source (Tablet, Mobile phone, Laptop, etc.) volume too low.	Adjust source volume
	Low battery or battery dead	Charge or replace battery
Sound distorted	Low battery or battery nearly dead	Charge or replace battery
No sound at all	Source (Tablet, Mobile phone, Laptop.) turned off.	Turn the source on
	Speaker turned off	Turn the speaker on
	Media paused on source	Play media from source
Wireless BT cannot connect	There are short functional obstacles in the product	Restart the speaker
	Product has been connected with other devices	Disable wireless BT of other source devices and search for wireless BT again

Specification

Wireless version	5.0 + EDR
Wireless distance	up to 10 metres
Output power / Impedance	2 x 5 Watts / 4Ω
Horn size	66mm
FM frequency range	87-108MHz
Unit size	L280.5 x W110 x H153.8mm
Power Input	DC 5V 1A
Charging time	2.5 hours
Play time	7 hours (70% Volume)
Built-In rechargeable battery	3.7V / 1200mAh
Micro TF card/USB flash drive	Support up to 32GB
Multiple functions	Hands free calling / Colorful lights / Wireless play / FM radio / USB flash drive /AUX input / Micro TF card / TWS connection

Safety instructions

- Keep the speaker away from heat sources, direct sunlight, humidity, water and any liquids.
 - Do not operate the speaker if it has been exposed to water, moisture or any other liquids to prevent electric shock, explosion, injure yourself and damage to speaker.
 - Do not use the speaker if it has been dropped or damaged in any way.
 - Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
 - Do not use the speaker with wet hands.
 - Do not put objects into any of the openings.
 - Keep the speaker free from dust, lint etc.
 - Do not use this speaker for anything other than its intended use.
 - Keep the speaker out of reach of children.
-
- This appliance is not a toy.
 - Batteries (battery pack or batteries installed) shall not be exposed to excessive heat place, such as sunshine, fire or the like.

Care and maintenance

Read the following recommendations before using the wireless speaker. following these you will be able to enjoy the product for many years.

- Do not expose the unit to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the unit.
- Do not expose the unit to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the unit in fire as it will lead to an explosion.
- Don't expose the unit to contact with sharp objects as this will cause scratches and damage.
- Don't let the unit fall down onto the floor, the internal circuit might get damaged.
- Don't attempt to disassemble the unit as it may get damaged if you are not professional.