

 
 
 
智能眼镜

Smart Glasses

用户指南

User Guide


产品示意图

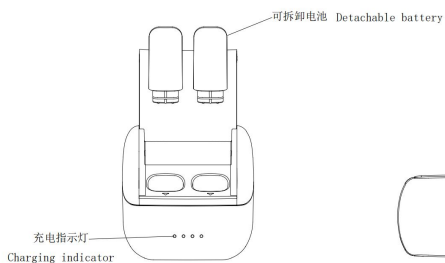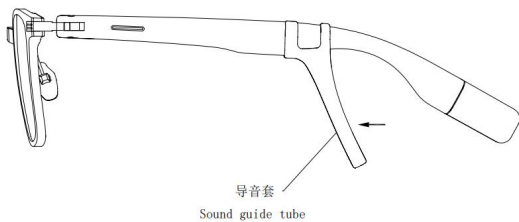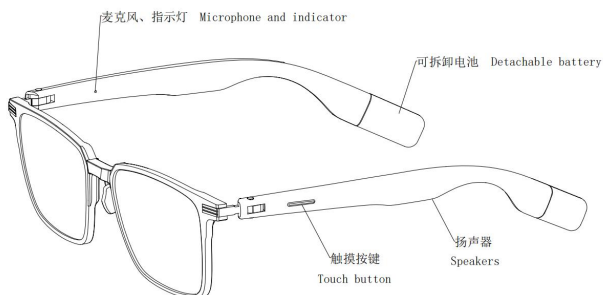

产品参数 Product parameter

- ◇ 蓝牙配对名: TX-08
- ◇ 蓝牙版本: Bluetooth V6.0
- ◇ 传输距离: >10m
- ◇ 播放音乐时长: 3~5h
- ◇ 充电仓充电输入: DC 5V/1A
- ◇ 充电仓充电时间: 约 1 h
- ◇ 可拆卸电池充电时间: 约 1 h
- ◇ Bluetooth pairing name: TX-08
- ◇ Bluetooth version: Bluetooth V6.0
- ◇ Transmission distance: >10 meters
- ◇ Play music time: 3~5 hours
- ◇ Charging input of the charging case: DC 5V/1A
- ◇ Charging time of the charging case: about 1 hour
- ◇ Charging time of the detachable battery: about 1 hour

 开/关机 Turn on/off

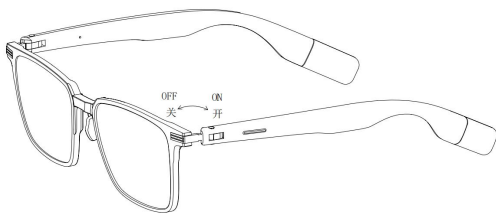

开机: 打开眼镜

关机: 合拢眼镜

 
自动关机: 5 分钟内未连接蓝牙设备, 眼镜将自动关机

Power on: Open the temple of the glasses

Power off: Fold up the temple of the glasses

Automatic shutdown: If the glasses are not connected to the Bluetooth device within 5 minutes, it will automatically shutdown


左右镜腿配对 Left and right glasses temple are matched

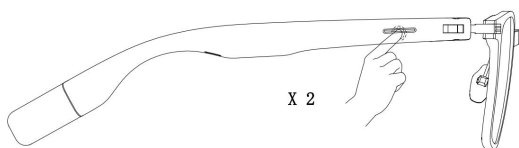

眼镜未与手机连接时，双击眼镜左/右边触摸键

When the glasses are not connected to the mobile phone,
double-click the left or right touch button of the glasses

 
播放/暂停 Play or Pause music

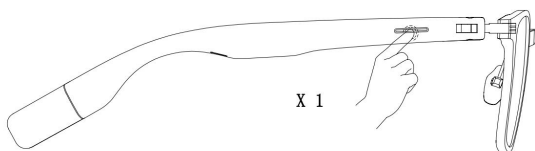

单击眼镜左/右边触摸键

Clicking the left or right touch button of the glasses

 
上一曲 Move previous

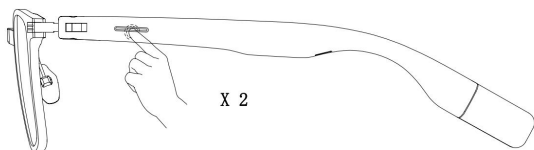

双击眼镜左边触摸键

Double click the left touch button of the glasses

 
下一曲 Move next

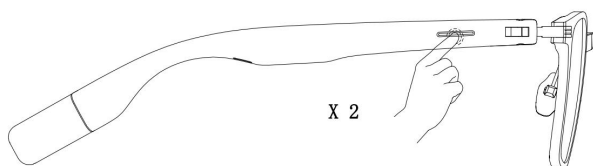

双击眼镜右边触摸键

Double click the right touch button of the glasses

 
音量增加 Volume up

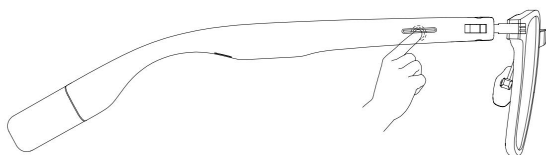

长按眼镜右边触摸键

Long press the right touch button of the glasses

 
音量减小 Volume down

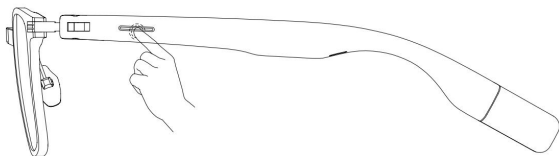

长按眼镜左边触摸键

Long press the left touch button of the glasses

 
唤醒语音助手 Wake up the voice assistant

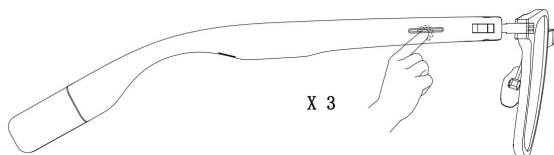

三击眼镜左/右边触摸键

There clicks the left or right touch button of the glasses

 
接听/挂断电话 Answer or hang up a call

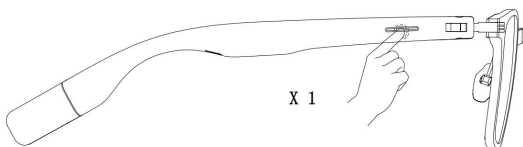

单击眼镜左/右触摸键

Clicking the left or right touch button of the glasses

 拒接电话 Reject a call

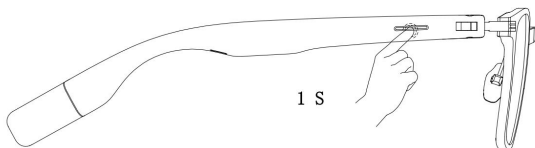

长按眼镜左/右触摸键 1s

Long press the left or right touch button of the glasses 1 second

充电 Charging

◇ 将低电量的可拆卸电池放入充电仓内，即会自动充电，且电量指示灯亮

◇ Putting the low-power detachable battery into the battery case, the battery case will automatically charge to the detachable battery, and the current power indicator lights is on

◇ 可拆卸电池充满电后，全部电量指示灯熄灭

◇ When the detachable battery is fully charged, all power indicators lights will go out

◇ 充电仓电量不足时，最左边电量指示灯闪烁

◇ When the battery case is low-power, the leftmost power indicator light will flash.

◇ 充电仓在充电时，当前电量指示灯闪烁，充满后所有灯常亮

◇ When the battery case is charging, the current power indicator will flash, The lights are always on after fully charged

温馨提示 Tips

◇  蓝牙眼镜尾部接触点容易进入汗渍以及其他脏污物，请时常清理，以免造成不能正常工作

◇  The tail contact points of Bluetooth glasses are easy to enter sweat stains and other dirty dirt, please clean it regularly to avoid abnormal work

◇ 蓝牙眼镜镜腿上有汗液时，请及时擦干，以免影响正常工作

◇ When there is sweat on the leg of the Bluetooth glasses, please dry it in time to avoid affecting the normal work.

安全信息 Safety information

在使用和操作设备前，请阅读并遵守下面的注意事项，以确保设备性能最佳，并避免出现危险或非法情况

Before you use the device, read the following precautions carefully to ensure optimal performance and to avoid danger or violation of laws and regulations

◇ 禁止对镜腿进行加热、弯折，以免损坏镜腿引起功能失效或者起火

◇ Do not heat or bend the frame temples as this may cause them to malfunction or even catch on fire

◇ 为了防止可能造成的听力损伤，请勿长时间使用高音量

◇ To prevent hearing damage, avoid using the product at a high volume for long period of time

◇ 本设备不能用于直接观察太阳，不能用于人造光源的保护，不能作为防机械冲击伤害的眼睛保护（适用于光学眼镜）

◇ Wearing this device will not protect your eyes from injury by looking directly at the sun or other strong light sources, or from physical trauma.

◇ 使用刺激性的清洁工具或错误的清洁用品可能导致产品受损，请使用内置的专用眼镜布或干净柔和的布料擦拭产品。请使用普通的中性清洁液，不可使用研磨清洗剂或喷雾剂，高浓缩清洁液、化学性清洁液、酒精或丙酮溶剂等可能会导致镜架、配件及镜片受损、变形或变色

◇ Use the microfiber cloth that came with your glasses or a clean and soft cloth to clean your glasses. Do not clean your glasses with anything sharp or abrasive. Use a neutral cleanser to clean your glasses. To avoid lens damage, deformation, and discoloration, do not use abrasive cleansers or sprays, high-concentration cleaners, chemical cleaning fluid, alcohol, or acetone solvent to clean your glasses

◇ 请注意，在佩戴产品的情况下进行剧烈的运动，将存在因产品破损导致面部受伤的风险。

◇ Please note that strenuous exercise while wearing the product carries a risk of facial injury due to product

breakage

- ◇ 请注意，金属材质的产品可能会引起敏感肌肤出现过敏症状。
- ◇ Some individuals may be allergic to some of the metallic materials used in this device.
- ◇ 有明文规定禁止使用无线设备的场所，请勿使用本设备，否则会干扰其他电子设备或导致其他危险。
- ◇ Do not use this device in areas where the use of wireless devices is prohibited as it may interfere with other devices or present other hazards.
- ◇ 在明文规定禁止使用无线设备的医疗和保健场所，请遵守该场所的规定，并关闭设备。
- ◇ In clinics and hospitals where the use of wireless devices is prohibited, please comply with the regulations and power off this device.
- ◇ 设备产生的无线电波可能会影响植入式医疗设备或个人医用设备的正常工作，如起搏器、植入耳蜗、助听器等。若您使用了这些医疗设备，请向其制造商咨询使用本设备的限制条件
- ◇ Some wireless devices may interfere with implantable medical devices and other medical equipment, such as pacemakers, cochlear implants, and hearing aids. Consult the manufacturer of your medical devices for more information
- ◇ 在使用本设备时，请与植入的医疗设备（如起搏器、植入耳蜗等）保持至少 15cm 的距离
- ◇ When using this device, keep it at least 15 cm away from medical devices
- ◇ 请在温度 0℃~35℃ 范围内使用本设备，并在温度 -20℃~45℃ 范围内存放设备及配件。当环境温度过高或过低时，可能会引起设备故障
- ◇ Use this device at temperatures between 0℃ and 35℃ and store this device and its accessories at temperatures between -20℃ and 45℃. Extreme heat or cold may damage this device
- ◇ 本设备及其配件可能包含一些小零件，请将设备及其配件放置在儿童接触不到的地方。儿童可能在无意之中破坏本设备及其配件，或吞下小零件导致窒息或其他危险
- ◇ Keep this device and its accessories that may contain

small components out of the reach of children. Otherwise, children may damage this device and its accessories by mistake, or swallow small components, which may cause choking

◇ 本设备非玩具，儿童应在成人监护下使用本设备

◇ This device is not a toy, and children should only use it under adult supervision

◇ 只能使用设备制造商认可且与此型号设备配套的配件。如果使用其他类型配件，可能违反本设备的保修条款以及本设备所处国家的相关规定，并可能导致安全事故

◇ Use only the accessories approved by the device manufacturer for use with this model. The use of other accessories may void the device warranty, lead to injury, or violate the relevant regulations of the country where you are located

◇ 使用未经认可或不兼容的电源、充电器或电池，可能引发火灾、爆炸或其他危险

◇ Connecting this device to non-approved or incompatible power supplies, chargers, or batteries may cause fires or explosions

◇ 请勿拆解或改装电池、插入异物、或浸入水或其他液体中，以免引起电池漏液、过热起火或爆炸

◇ Do not disassemble or modify this device, insert foreign objects into it, or submerge it in water or other liquids as this may cause this device to leak, overheat, catch on fire, and even explode

◇ 请勿跌落、挤压或穿刺电池。避免让电池遭受外部大的压力，从而导致电池内部短路或过热

◇ Do not drop, squeeze, or puncture this device. Avoid applying external pressure to this device as this may cause its electronic circuitry to short or overheat

◇ 如果电池漏液，请勿使皮肤或眼镜接触到漏出的液体。若接触到皮肤或眼睛上，请立即用清水冲洗，并到医院进行医疗处理

◇ If the battery fluid leaks, avoid touching it. If the battery fluid touches your skin or eyes, rinse it out immediately using clean water and seek medical treatment

◇ 设备充电时，电源插座应安装在设备附近并应易于触及。当充电完毕或者不充电时，请断开充电器与设备的连接并从电源插座上拔掉充电器

◇ When this device is being charged, ensure the power socket is close to this device and easy to reach. Disconnect the charger from this device and unplug the charger from the power socket once this device has been fully charged

◇ 请勿将公交卡、银行卡等带有芯片的卡片或其它金属材料的物品与本设备一起充电，否则可能影响本设备或卡片的正常使用

◇ When charging this device, do not place any cards with built-in chips in the card holder of the charging case. Otherwise, this device or the card may not work properly

◇ 请保持设备及其配件的干燥。请勿使用微波炉或吹风机等外部加热设备对其进行干燥处理

◇ Ensure that the device and its accessories are dry. Do not attempt to dry this device using an external heating device such as a microwave oven or hair dryer

◇ 请勿将磁条卡（例如银行卡、电话卡等）长期接触本设备，否则可能导致磁条卡被磁场损坏

◇ Do not place any magnetic stripe cards (such as bank cards and telephone cards) near this device as this may cause the card to become damaged

◇ 请勿擅自拆卸或改装设备及配件，否则该设备及配件将不在本公司保修范围之内，设备发生故障时请联系客户服务中心

◇ Avoid disassembling or modifying this device and its accessories. Unauthorized disassembly and modifications may result in voiding of the factory warranty. If the device malfunctions, take your device and proof of purchase to an authorized Customer Service Center for assistance

◇ 眼镜腿内含电池，请勿自行加热、弯折、拆卸电池，以免损坏电池设备，引起爆炸起火。请避免将产品放置在阳光下暴晒，或高温或高湿环境中存储

◇ the glasses frame temples contain built-in batteries. Do not heat, bend, or remove the batteries as this may damage them, or even cause them to catch on fire or explode. Do not

place this device in environments with strong sunlight, high temperature, or high humidity

◇ 在受控实验室条件下经测试，眼镜可抗溅、抗尘。抗溅、抗尘功能并非永久有效，以上防护性能可能会随着日常使用的磨损而下降。请勿在潮湿状态下给设备充电

◇ This device is splash and dust resistant. Splash and dust resistance are not permanent conditions, and may decrease as a result of normal wear and tear. Do not charge this device in humid conditions

◇ 请勿将本设备及其附件作为普通的生活垃圾处理

◇ Do not dispose this device and its accessories as ordinary household waste

◇ 请遵守本设备及其附件处理的本地法令，并支持回收行动

◇ Respect local laws on the disposal of this device and its accessories and support recycling efforts

FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could

void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions,

may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.