


PHILIPS


NORELCO






Tripleheader shaver

Series 6000

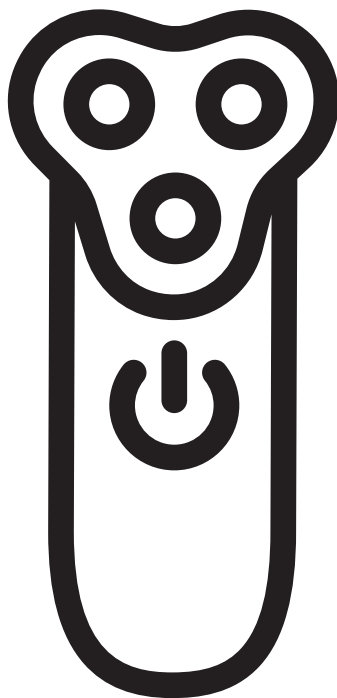

BC

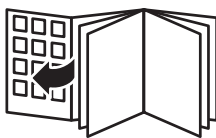

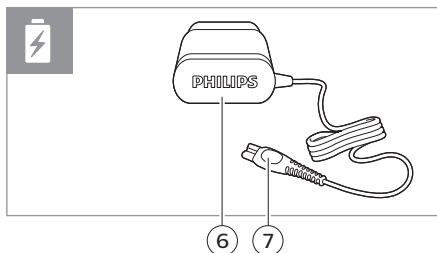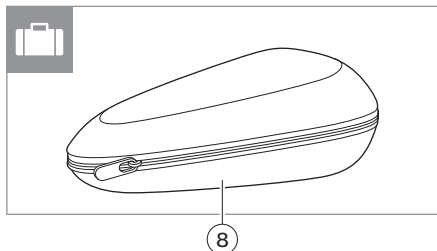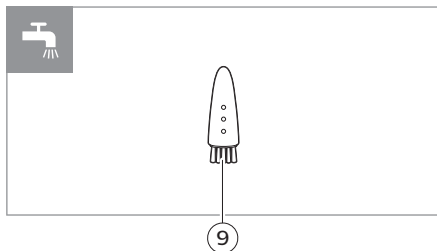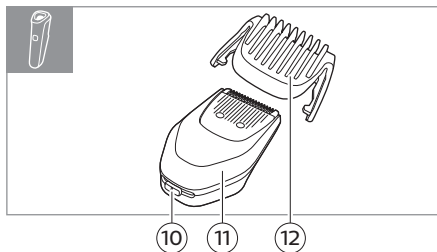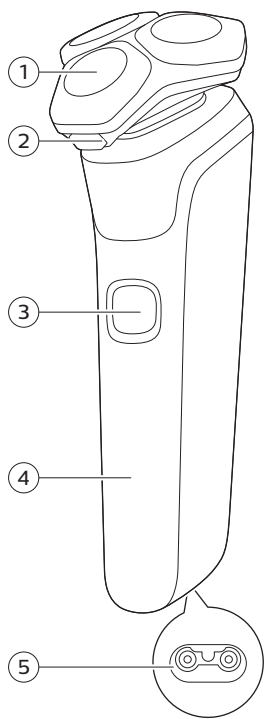

English 6
Español 28

Contents

IMPORTANT SAFETY INSTRUCTIONS _____	7
Introduction / Registration _____	10
General description _____	10
What do the icons on my product handle mean? _____	11
How do I charge my product? _____	11
How do I use my product? _____	13
How do I clean my shaver? _____	17
Storage and travel _____	21
How do I replace the shaving heads? _____	22
Accessories _____	24
Assistance _____	24
Disposal _____	24
Full One-Year Warranty _____	25

IMPORTANT SAFETY INSTRUCTIONS

When using an electric product, basic precautions should always be followed, including the following:

Read all instructions before using this product.

DANGER

To reduce the risk of electric shock:

- Do not reach for a corded product that has fallen into water. Unplug immediately from the power outlet.
- Keep the power cord dry.



- Do not place or store the product where it can fall or be pulled into a tub or sink. Do not place or drop the product into water or other liquid.
- This product does not work while it is connected to the power outlet. Except when charging, always unplug this product from the power outlet.
- Remove power cord from power outlet and product before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

8 English

- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product.
- Use this product only for its intended household use as described in this manual. Misuse can lead do hazards or serious injuries. Do not use attachments not recommended by Philips North America LLC.
- Never operate this product if it has a damaged power cord, if it is not working properly, after it has been dropped or damaged, or after the product or power cord has been dropped into water. For assistance call 1-800-243-3050.
- Keep the power cord away from heated surfaces.
- Never drop or insert any object into any opening.
- Do not use the power cord in or near a power outlet that contains an electric air freshener to prevent damage to the power cord.
- Do not use product outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Always check shaving heads (guards and cutters) before using the product. Do not use the product if cutters or guards are damaged, as injury may occur.
- Always attach power cord to product first, then to power outlet.
- Plug power cord directly into power outlet. Do not use an extension cord.
- Unplug power cord before plugging in or unplugging the product.
- The batteries used in this product may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 100 °C (212 °F) or incinerate.

- Only use original Philips accessories or consumables. Only use detachable power cord HQ8505.
- Charge, use and store the product at a temperature between 5 °C and 35 °C.
- Keep product and batteries away from fire and do not expose them to direct sunlight or high temperatures.
- If the product becomes abnormally hot or smelly, changes color or if charging takes longer than usual, stop using and charging the product and contact Philips.
- Do not place products and their batteries in microwave ovens or on induction cookers.
- Do not open, modify, pierce, damage or dismantle the product or battery to prevent batteries from heating up or releasing toxic or hazardous substances. Do not short-circuit, overcharge or reverse charge batteries.
- If batteries are damaged or leaking, avoid contact with the skin or eyes. If this occurs, immediately rinse well with water and seek medical care.
- When you handle batteries, make sure that your hands, the product and the batteries are dry.
- To avoid accidental short-circuiting of batteries after removal, do not let battery terminals come into contact with metal objects (e.g. coins, hairpins, rings). Do not wrap batteries in aluminum foil. Tape battery terminals or put batteries in a plastic bag before you discard them.

IMPORTANT: The power plug contains a transformer. Do not cut off the power plug to replace it with another plug as this will cause a hazardous condition.

SAVE THESE INSTRUCTIONS

Introduction/Registration

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome or via the app.

General description








- 1 Shaving unit
- 2 Shaving unit release button
- 3 On/off button
- 4 Handle
- 5 Socket for small plug
- 6 Power plug
- 7 Small plug
- 8 Pouch
- 9 Cleaning brush
- 10 Length settings
- 11 Click-on beard styler attachment
- 12 Comb for beard styler attachment

The accessories supplied may vary for different products. The box shows the accessories that have been supplied with your product.



- This shaver is waterproof. It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the shaver can therefore only be used without cord.

What do the icons on my product handle mean?

Icon	Behavior	Meaning
	Flashing when you switch off the product	Clean the shaver with warm water.
	Flashing when you press the on/off button	The travel lock is activated (see 'Storage and travel').
	Lights up when you pick up the product	The number of bars lit up show the remaining battery charge.
	Bottom light flashing orange	The battery is almost empty (see 'How do I charge my product?').
	Lights flashing in sequence	The product is charging.
	Lights up continuously	The product is fully charged.
	Flashing	The product must be disconnected from the power outlet before you can switch it on.

How do I charge my product?

Charge the product before you use it for the first time and when the bottom light of the battery status indicator flashes orange, indicating that the battery is almost empty.


Charging takes approx. 1 hour.

Quick Charge: After approx. 5 minutes of charging, the battery contains enough energy for one full shave.

When the product is fully charged it has a cordless operating time of up to 60 minutes.

Note: You cannot use the product while it is charging.

Charging with the power cord

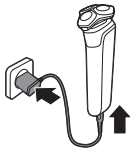

- 1 Make sure that the product is switched off.
- 2 Insert the small plug into the product and put the power plug in the power outlet.
 - While the product is in quick charge mode, the lights of the battery status indicator light up one after the other. After approximately 5 minutes, the bottom light of the battery status indicator flashes. The battery now contains enough energy for one full shave.
 - While the product charges, first the bottom light of the battery status indicator flashes and then lights up continuously. Next the second light flashes and then lights up continuously, and so on until the product is fully charged.
 - When the product is fully charged, all three battery status indicator lights light up continuously. After approx. 30 minutes, the light goes out automatically.
- 3 After charging, remove the power plug from the power outlet and pull the small plug out of the product.

'Unplug for use' symbol



The 'unplug for use' symbol flashes to remind you to disconnect the power cord from the power outlet and remove the small plug from the product before you switch it on.

How do I use my product?

Always check the product and all accessories before using. Do not use the product or any accessory if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.

Note: This product is waterproof. It is suitable for use in the bath or shower and for cleaning under the tap with water. For safety reasons, this product can only be used without cord.

Use this product for its intended household use as described in this manual.

For hygienic reasons, the product should only be used by one person.

Shaving

You can use this product either wet or dry, or even in the shower. For a wet shave, apply some water and shaving foam or gel to your skin and rinse the shaving heads under the tap with warm water before following the steps below.

1 Switch on the product.




- 2 Move the shaving heads over your skin in circular movements to catch all hairs growing in different directions. Make sure each shaving head is fully in contact with the skin. Exert gentle pressure for a close, comfortable shave.

Note: Do not press too hard, as this can cause skin irritation.



Note: If you are shaving with gel or foam, rinse the shaving unit regularly during your shave to ensure that it continues to glide smoothly over your skin.

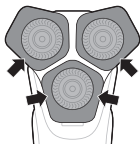

- 3 Use the narrow sides of the shaving unit to shave in hard-to-reach areas such as along your jawline and under your nose.
- 4 Switch off and clean the product after each use.

Note: Make sure you rinse all foam or shaving gel off the product..

21-Day adaptation process

- 21 Day Trial and Conversion Process. It is a fact that your skin and beard need time to adjust to a new grooming system.

- Use your new shaver exclusively for 3 weeks to fully enjoy the closeness of a Philips Norelco shave.
- At first you may not get as close a shave as you expect, or your face may even become slightly irritated. This is normal since your beard and skin will need time to adjust. Invest 3 weeks and you'll soon experience the full joy of your new shaver.
- Stick with it! If you alternate shaving methods during the adjustment period, it may make it more difficult to adapt to the Philips Norelco shaving system.
- If you are still not convinced after 21 days, Philips Norelco will refund you the full purchase price as long as the request is received within 45 days of purchase.

Cleaning reminder



When you switch off the product, the cleaning reminder flashes to remind you to clean the product.

- Clean the product and attachments after each use (see 'How do I clean my shaver?') to prevent clogging and damage.
- Clean the shaving heads thoroughly once a month or when the product does not shave as well as it used to.

Using the click-on attachments

Note: The accessories supplied may vary for different products. The box shows the accessories that have been supplied with your product.

Using the beard styler attachment with comb

You can use the beard styler attachment with the comb attached to style your beard at one fixed setting or at different length settings. You can also use it to pre-trim any long hairs before shaving for a more comfortable shave.

The hair length settings on the beard styler attachment correspond to the remaining hair length after cutting and range from 1 to 5 mm.



- 1 Twist the shaving head or other attachment to remove it from the handle and press the beard styler attachment onto the handle.



- 2 Slide the comb straight into the guiding grooves on both sides of the beard styler attachment.




- 3 Press the length selector and then push it to the left or right to select the desired hair length setting.
- 4 Switch on the product.



- 5 Move the product upwards while you exert gentle pressure. Make sure the front of the comb is in full contact with the skin.
- 6 Switch off the product and clean the attachment after each use (see 'How do I clean my shaver?').

Using the beard styler attachment without comb

You can use the beard styler attachment without the comb to contour your beard, moustache, sideburns or neckline to a length of 0.5 mm.

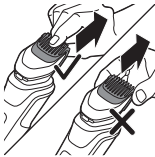

- 1 Pull the comb off the beard styler attachment.

Note: Grab the comb in the center to pull it off the beard styler attachment. Do not pull at the sides of the comb.



- 2 Switch on the product.
- 3 Hold the beard styler attachment perpendicular to the skin and move the appliance downwards while you exert gentle pressure.
- 4 Switch off the product and clean the attachment after use.

How do I clean my shaver?

Clean the product and the attachments after each use for optimal performance.

Cleaning the shaver under the tap

Clean the shaver after each use to prevent clogging and damage.

Never dry the shaving unit with a towel or tissue, as this may damage the shaving heads.

While rinsing the shaving unit, water may drip out of the base of the shaver. This is a normal occurrence.



- 1 Switch on the shaver.
- 2 Rinse the shaving unit under a warm tap.



- 3 Switch off the shaver. Press the release button to open the shaving unit.



- 4 Rinse the hair chamber under a warm tap.



- 5 Rinse the shaving head holder under a warm tap.
- 6 Carefully shake off excess water and let the shaving head holder air-dry completely.



7 Close the shaving unit.


Thorough cleaning

We advise you to clean the shaving heads thoroughly once a month or when the shaver does not shave as well as it used to.

- 1** Make sure that the product is switched off and disconnected from the power outlet.
- 2** Press the release button on the shaving unit and pull the shaving head holder off the shaving unit.
- 3** Rinse the hair chamber and shaving head holder under the tap.
- 4** Remove the shaving heads. For detailed instructions, see 'How do I replace the shaving heads?'



Note: Do not clean more than one cutter and guard at a time, since they are all matching sets. If you accidentally put a cutter in the wrong shaving guard, it may take several weeks before optimal shaving performance is restored.

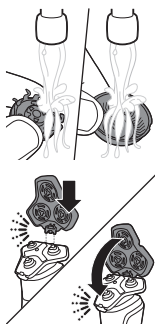

- 5 Clean the cutter and guard under the tap.
- 6 Shake off excess water.
- 7 Put the shaving heads back into the shaving head holder. For detailed instructions, see 'How do I replace the shaving heads?'
- 8 Insert the hinge of the shaving head holder into the slot in the top of the shaving unit and close the shaving unit.

Cleaning the click-on attachments

Never dry the trimmer or beard styler attachments with a towel or tissue, as this may damage the trimming teeth.

The accessories supplied may vary for different products. The box shows the accessories that have been supplied with your product.

Clean the click-on attachments after each use for optimal performance.

- 1 Make sure that the product is switched off.
- 2 Twist the attachment to remove it from the handle.
- 3 Clean the parts thoroughly with warm water.
- 4 Carefully shake off excess water from the beard styler, combs and nose/ear trimmer attachments and let them air dry completely.

Never dry the cutting unit with a towel or tissue, as this may damage the trimming teeth.

Tip: For optimal performance, lubricate the teeth of the beard styler attachment with a drop of sewing machine oil regularly.

Storage and travel

- Be sure the product is switched off. Remove the power cord from power outlet and the product before storing it in a safe, dry location where it will not be crushed, banged, or subject to damage.
- Do not wrap cord around the product when storing.
- Store cord and other accessories in a safe location where these will not be cut or damaged.
- Do not place or store the product where it can fall or be pulled into a tub or sink, water or other liquid while plugged in.


Note: We advise you to let the product and its attachments dry completely before you store them for the next use.

- Store the product in the travel case.

Travel lock

You can lock the shaver when you are going to travel to prevent it from switching on accidentally.

Activating the travel lock

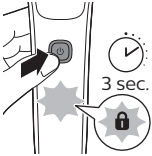

Press the on/off button for 3 seconds to use the travel lock mode.

When the travel lock is activated, the travel lock symbol flashes.

Deactivating the travel lock



Press the on/off button for 3 seconds.

Once the travel lock is deactivated, the product switches on automatically.

Note: The product unlocks automatically when connected to a power outlet.

How do I replace the shaving heads?




For maximum shaving performance, replace the shaving heads once a year. Replace damaged shaving heads immediately.

Always replace the shaving heads with original Philips Norelco shaving heads (see 'Accessories').


Replacing the shaving heads



- 1 Switch off the shaver.
- 2 Press the release button on the shaving unit and pull the shaving head holder off the shaving unit.

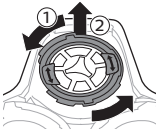


- 3** Turn the retaining rings counterclockwise and remove them. Place them aside in a safe place.

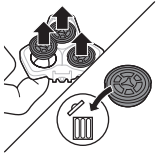


- 4** Remove the shaving heads from the shaving head holder.
Discard the used shaving heads immediately to avoid mixing them with the new shaving heads.



- 5** Place new shaving heads in the holder.

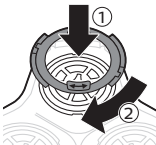

- 6** Place the retaining rings back onto the shaving heads and turn them clockwise to reattach the retaining rings.

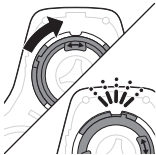

- Each retaining ring has two recesses that fit exactly into the projections of the shaving head holder. Turn the ring clockwise until you hear a click to indicate that the ring is fixed.



- 7** Insert the hinge of the shaving head holder into the slot in the top of the shaving unit and close the shaving unit.

Accessories



Replacement parts and accessories may be purchased at a store near you or on our website www.philips.com/store.

The following accessories and spare parts are available:

- SH71 Philips Norelco replacement shaving heads

Assistance

For assistance, visit our website:

www.philips.com/support or call toll free 1-800-243-3050.

Online information is available 24 hours a day, 7 days a week.

Disposal



- This product contains a rechargeable lithium-ion battery which must be disposed of properly.
- Contact your local town or city officials for battery disposal information. You can also call 1-800-822-8837 or visit www.call2recycle.org for battery drop-off locations.
- For assistance, visit our website www.philips.com/support or call 1-800-243-3050 toll free.

- Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. For recycling information, please contact your local waste management facilities or visit www.recycle.philips.com.

Full One-Year Warranty

Philips North America LLC warrants this product (except shaving heads) against defects in materials or workmanship for a period of one year from the date of purchase, and agrees to repair or replace any defective product without charge.

IMPORTANT: This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachment not provided with the product or loss of parts or subjecting the product to any but the specified voltage or batteries.*

NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

In order to obtain warranty service, simply go to www.philips.com/support. It is suggested that for your protection you return shipments of product by insured mail, insurance prepaid. Damage occurring during shipment is not covered by this warranty.

NOTE: No other warranty, written or oral, is authorized by Philips North America LLC.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion and limitations may not apply to you.

*Read enclosed instructions carefully.

Manufactured for:
Philips Personal Health
a division of Philips North America LLC
P.O. Box 10313, Stamford, CT 06904



This symbol on the product's nameplate means it is listed by Underwriters' Laboratories, Inc.

Norelco and Tripleheader are registered trademarks of Philips North America LLC.

PHILIPS and Philips shield are registered trademarks of Koninklijke Philips N.V.

©2023 Philips North America LLC. All rights reserved.

3000.115.4422.1

(revised 05/17/2023)

