


OHNIYOU

ENERGY SAVING LIFE

Ceiling Fan With Light

User Manual

GLX100

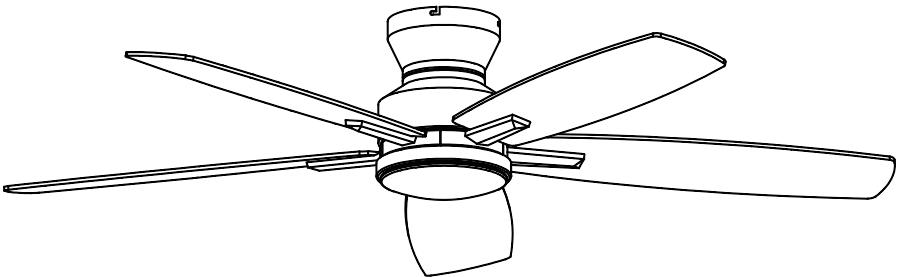

Warm Tips

Using a full range dimmer switch to control fan speed will damage the fan.

WARNING!!!

To avoid fire, shock and serious personal injury, follow these instructions.

 
1. Read your user manual and safety information before installing your new fan. Review the accompanying assembly diagrams.
2. Before servicing or cleaning the unit, switch off the power at the service panel and lock it to prevent accidental power restoration. If the service disconnecting means cannot be locked, securely fasten a warning device, such as a tag, to the service panel.
3. Exercise caution around the fan and its blades when clearing, repairing, or working near it. Always turn off the power to the ceiling fan before performing any maintenance
4. Do not insert anything into the fan blades while the fan is in operation.
5. This appliance is not intended for use by young children or individuals with disabilities without supervision. Young children should be supervised to ensure they do not play with the appliance.
6. Before installing your ceiling fan, refer to the section on the proper method of wiring your fan. If you feel you lack sufficient wiring knowledge or experience, it is recommended to have your fan installed by a licensed electrician.

Fan Components


NOTE: Place the parts from the loose parts bags in a small container to keep them from being lost. If any parts are missing contact us.




● — Mounting Bracket (1)



● — Receiver (1)

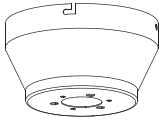

● — Canopy Canopy (1)

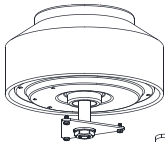

● — Fan Motor Host (1)



● — Fan Blade (5)



● — Leaf fork (5)



● — lamp panel (1)



● — Lampshade (1)



Remote control

16+16



Blade screw and red washer

2



Outlet box screw

4



Washer

4



Self-tapping screw

3



Wire nut

2+1



Balance kit

2



Expansion screw

4



Plastic expansion tube

Energy Saving Usage

Ceiling fan performance and energy savings rely heavily on the proper installation and use of the ceiling fan. Here are a few tips to ensure efficient product performance.

Choosing the Appropriate Mounting Location

Ceiling fans should be installed or mounted in the middle of the room and positioned at least 7 feet above the floor and 18 inches away from the walls.

If the ceiling height allows, it is recommended to install the fan 7~9 feet above the floor to achieve optimal airflow.

Turn Off When Not in the Room

If the room is unoccupied, turn off the ceiling fan to conserve energy.

Using the Ceiling Fan Year Round

Summer Season: Use the ceiling fan in the counterclockwise direction. The airflow created by the ceiling fan produces a wind-chill effect, making you feel cooler. Select a fan speed that provides a comfortable breeze; lower speeds consume less energy.

Winter Season: Reverse the motor and operate the ceiling fan at a low speed in the clockwise direction. This produces a gentle updraft, which pushes the warm air near the ceiling down into the occupied space. Remember to adjust your thermostat when using your ceiling fan. This simple step can lead to additional energy and cost savings.


Electrical and Structural Requirements

Your new ceiling fan will require a grounded electrical supply line of AC 110-130V/60Hz and a 15 Amp circuit. According to electrical codes, it is necessary to use a fan-rated outlet box to support the additional weight and motion associated with a ceiling fan. A fan-rated box will be clearly labeled as such and is typically designed to support ceiling fans weighing up to 70 pounds.

Fan-rated outlet boxes are available in various ratings and designs. It is essential to ensure that the rating of your ceiling fan outlet box meets the requirements for the specific ceiling fan you are installing. Please refer to the figures below for different structural configurations that can be used for mounting the outlet box.


Low-profile use (Figure 1)

A 1/2-inch deep pancake box is meant to be screwed to a joist or block. It is used if only one cable is coming into the box. It is also available in a saddle-mount configuration.

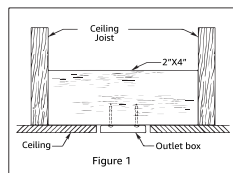


Deep-profile use (Figure 2)

A 2-1/4" deep box can be attached to blocking between joists and is roomy enough to handle more than one cable.

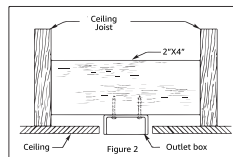

Brace Use (Figure 3)

Paired with a deep box, this hanger is meant to span between two joists and takes the place of wooden blocking.

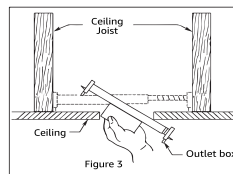

If your fan is to replace an existing light fixture, turn power off at the main fuse box and remove the existing light fixture.

WARNING

To ensure safety and prevent potential electrical shock, it is not sufficient to simply turn off the wall switch. Prior to wiring, make sure to turn off the electricity at the main fuse box. All wiring should be done in accordance with national and local electrical codes. Additionally, it is important to properly ground the ceiling fan as a precautionary measure against possible electrical shock. Following these guidelines will help ensure the safe installation and operation of your ceiling fan.

Do not use a variable (rheostat) wall controller or dimmer switch to operate this fan. Doing so can cause damage to the ceiling fan's remote control unit. It is recommended to only use the provided remote control.

Installation Video

To ensure a smooth installation process for your ceiling fan with light, simply scan the QR code below with your smartphone. You'll be directed to our official step-by-step installation video guide on YouTube.



Having trouble scanning?

Visit YouTube and search: "Installation video for Ohniyou ceiling fan model GLX100"


For further support, contact our customer care team at this email:

✉ Ohniyou@ledphy.com




Installation

1

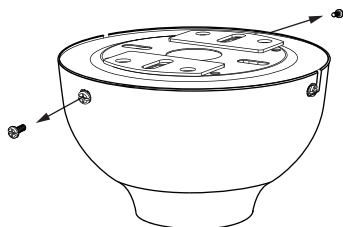


2

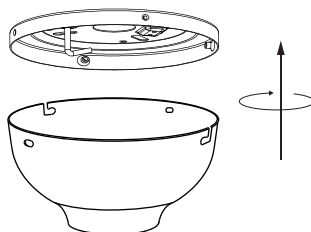

- Take out the 2 round hole screws from canopy.
- Loosen the 2 screws and then rotate to remove the bracket.


3

Cement ceiling

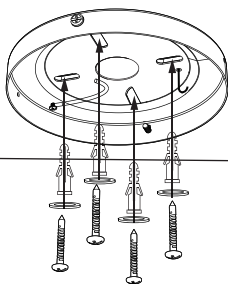

4


Wooden ceiling

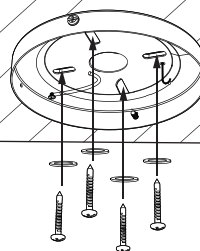


- Mount the bracket to the ceiling and use appropriate accessory screws to secure it based on the type of ceiling material.
Cement ceiling: Drill holes on the cement ceiling, then use expansion tubes and self-tapping screws for fixing.
- Wood ceiling: Use self-tapping screws to drive into the wooden ceiling.

5

Junction box

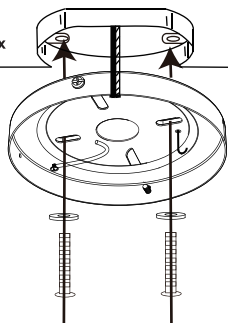


6

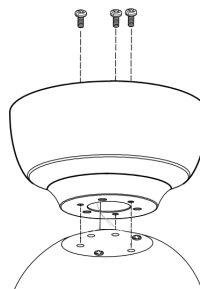


- Junction box: Use j-box screw and washer to fix the bracket to the ceiling.
(Please choose the corresponding hole size of 3 inches or 4 inches based on the dimensions of the ceiling junction box for installation.)
- Install the canopy onto the fan motor host, aligning it with the holes.
then tighten the 3 canopy attachment screws.

Installation

7

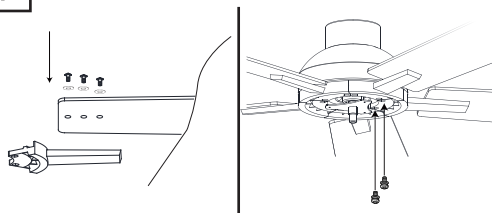


8

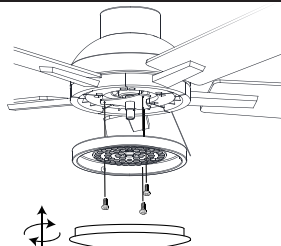


- Insert the fan blade into the holes of the motor housing and secure it using three screws and red washers. (Repeat this step for installing the remaining fan blades.)
- Install the lamp panel onto the fan motor host, connect it, then secure the lamp shade to the lamp body's locking point with screws.

9

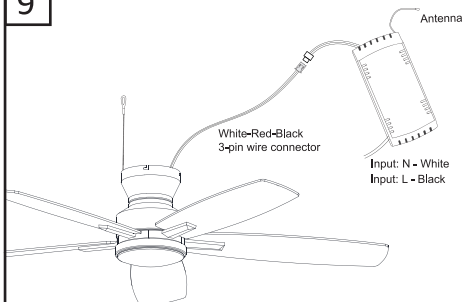

10


Concrete ceiling

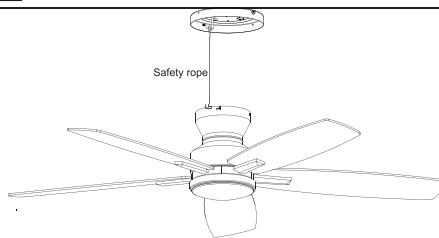

- Connect the wires between the controller and the fan motor: connect the 3-pin wire connector.
- Use the safety rope to hang the ceiling fan to the bracket hook.


11

Concrete ceiling

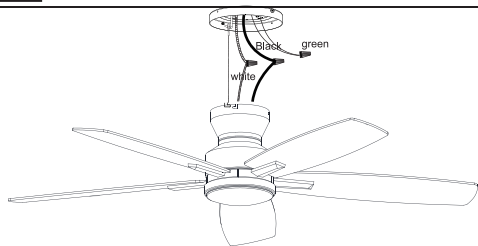

12

Cement ceiling

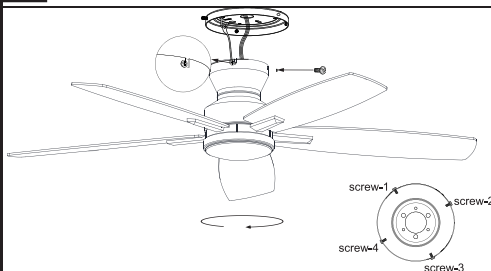

- **Wiring:**
Connect the "Neutral wire" (white wire) from ceiling to the white wire.
Connect the "Live wire" (black wire) from ceiling to the black wire.
Connect the "Ground wire" (green or yellow/green or bare) from ceiling to the bare wire.
- Align the canopy L slot to the bracket screw, rotate to a certain position, lock the other two screws, and ensure that all four screws are tightened.

Operate Your Ceiling Fan


IMPORTANT: Using a full range dimmer switch to control fan speed will damage the fan. To reduce the risk of fire or electrical shock, do not use a full range dimmer switch to control the fan speed. (Figure 1).

Only control light on/off via wall fan switch.

Restore electrical power to the outlet box by turning the electricity on at the main fuse box.(Figure 2).




(Figure 1)

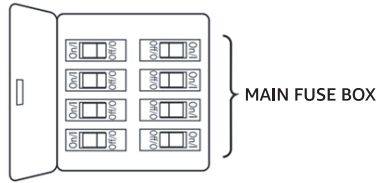

(Figure 2)


Installation Recommended

Room Size:

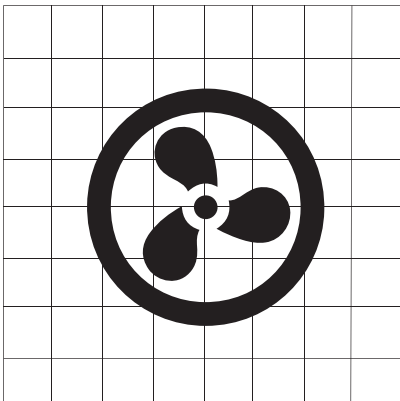

UP TO 12 ft x 12 ft

Room Height:

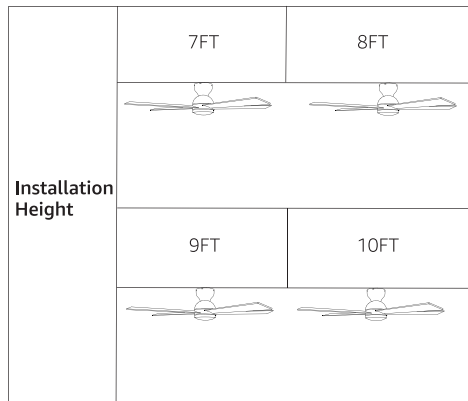


Remote Control



	Light on/off
	Light & fan /off
	CCT change
	Night light
	Brightness +
	Brightness -
	CCT + (cooler)
	CCT - (warmer)
	Pairing
	Forward/reverse
	All off after 2 hours
	Fan speed
	Fan speed
	Fan speed
	Natural wind
	Fan off

Attach wall plate using the two screws provided.

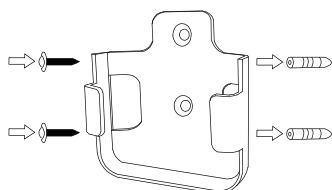

To operate the fan:

Install 2 AAA batteries in the handheld remote transmitter. If the remote is not used for extended periods, remove the batteries to prevent damage to the transmitter.

Store the remote away from extreme temperatures and humidity.



Pairing Method (Single/Multiple Fans): The remote transmitter can control multiple receivers.

1. For the ceiling fan you want to pair, turn off the main power for at least 60 seconds.
2. Turn the main power back on, then immediately press the SETUP button on the remote.
3. The light will blink or the fan will beep to indicate successful pairing.

If pairing fails, repeat the steps above.

APP Control

- **NOTE:** Scan the QR code and install the APP on your phone, or search and install "FanLampPro" from Google Play, Apple App Store, and other app stores. Make sure your phone is connected to the internet and **BLUETOOTH** enabled.

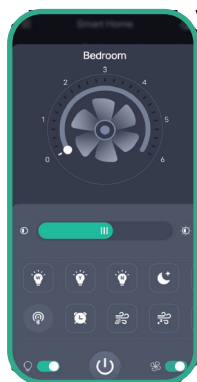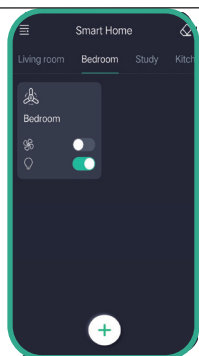

Pair button. Click it within 5 seconds after turning on the fan from the power switch. Once the light flashes or beeps, it has been successfully paired with the phone and can be controlled through the phone.



Slide to change the fan speed



Slide to change the brightness of the light



Timer the fan



Sleeping wind



Natural wind: fan speed will change automatically when use this function



Fan moves reversely



Oscillating function



Fan moves forwards



Night light (10% brightness in neutral white)



Quick switch for "Natural" light color



Quick switch for "Yellow" light color



Quick switch for "White" light color



Turn on/off the light



Turn on/off the fan




Unpair button. Click it within 5 seconds after the fan is powered on. After the fan flashes or beeps, it has been successfully unpaired with the phone.

Trouble Shooting

PROBLEM	SUGGESTED REMEDY
If Fan Does Not Start	<ol style="list-style-type: none"> 1. Check main and branch circuit fuses or circuit breakers. 2. Make sure that the wall control is turned "ON" 3. Check line wire connections to fan and switch wire connections in switch housing. CAUTION: Make sure main power is turned off. 4. Make sure battery has power, change battery(2*AAA) to try again. 5. The remote controller is not paired, check Page.8 to pair. 6. The motor or receiver or remote controller is fault, contact our customer service. 7. Make sure do not connect to any dimmer or fan speed adjust switch.
If Fan Sounds Noisy	<ol style="list-style-type: none"> 1. Make sure all screws in motor housing are snug. (not over tightened) 2. Too close to the wall, make sure the blades at least 3ft to the wall. 3. Make sure wire connectors in switch housing are not rattling against each other or against the interior wall of the switch housing. CAUTION: Make sure main power is turned off before entering switch housing. 4. DO NOT USE a Solid State variable speed control. 5. Allow "break-in" period of 24 hours. Most noises associated with a new fan will disappear after this period. 6. Make sure the ceiling bracket is screwed securely.
If Fan Wobbles	<p>All blades are weighed and grouped by weight. The following procedures should eliminate most of the wobble. Check for wobble after each step.</p> <ol style="list-style-type: none"> 1. Check that all blades are screwed firmly into motor housing. 2. Make sure that canopy and mounting bracket are tightened securely to ceiling junction box and junction box is mounted firmly to ceiling joist. 3. Make sure the ball head into the slot. (*downrod installation only) 4. Make sure the downrod is well fixed by screws.(*downrod installation only) 5. Interchanging two adjacent blades could redistribute the weight and possibly result in smoother operation.

Trouble Shooting

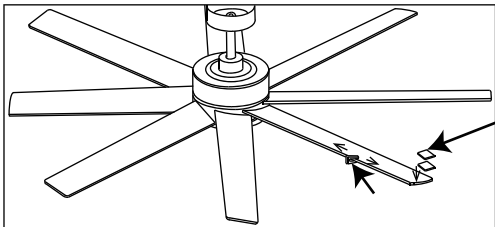PROBLEM	SUGGESTED REMEDY
If Fan Wobbles	<p>6. The balancing kit should only be used if there is an unacceptable amount of fan wobble after completing all the steps:</p> <p><u>How to use balancing kit:</u></p> <ol style="list-style-type: none">(1) Turn the fan on and set the speed control setting to a speed at which the wobble is the greatest.(2) Turn off the fan and allow it to come to a complete stop. Select one blade and place the balance clip on it, halfway between the blade holder and the blade tip on the trailing edge of the blade.(3) Turn the fan on. Note whether the wobble has increased or decreased. Turn the fan off, move the clip to another blade, and retest. Repeat this procedure on all blades, noting the blade on which the greatest improvement is achieved.(4) Move the clip back to the blade that showed the greatest improvement. Move the clip inward and outward on this blade and operate the fan to find the position where the clip gives the greatest improvement.(5) Remove the clip and install a balancing weight to the top of the blade along the centerline, near the point where the clip was positioned.(6) If the fan wobble problem has not been corrected, you can try to improve the balancing further by using the balancing clip and additional weights.  <p>The diagram shows a top-down view of a five-bladed ceiling fan. One blade is highlighted with a thick black outline. On the top surface of this blade, near the center, a small, rectangular weight is attached. An arrow points from the text 'WEIGHT BALANCING' to this weight. Another arrow points to the trailing edge of the same blade, indicating the location for the balancing clip mentioned in the text.</p>

Maintenance

1. Regularly cleaning your new ceiling fan is all that's needed to keep it in good condition. To clean it, simply use a soft brush or lint-free cloth to avoid scratching the surface. You don't need to use any harsh cleaning products, as they could damage the finish.

CAUTION

Avoid using water to clean your ceiling fan as it may harm the motor or the surface and pose a risk of electric shock.

Warranty

Dear valued customer,

OHNIYOU assures you that this product is free from any material and workmanship defects for a period of 1 year from the date of purchase. Please note that this warranty will not apply if the product has been mishandled, accidentally damaged, or used in any way other than intended.

Please feel free to contact us: ohniyou@ledphy.com

