 




PetUltra

Automatic Pet Feeder

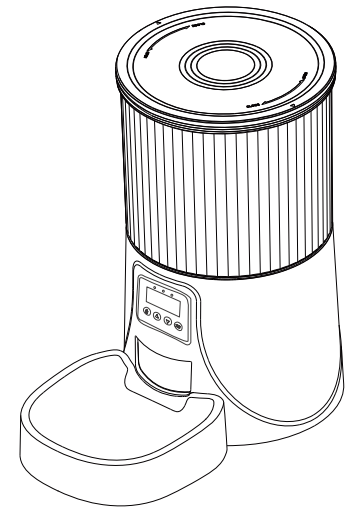

User Manual
Model: DU4LB-KY

Safety Instruction

- 1.Children need to be used in the company of adults;
- 2.Do not use the feeder for pets who cannot reach the food tray or have physical disabilities.
- 3.Do not immerse the base part in water, which will damage electronic components such as control panel.
- 4.Do not place any foreign objects in the pet feeder.
- 5.Do not put canned, wet or wet food in the feeder.
- 6.Do not disassemble the equipment by yourself.
- 7.Do not modify the pet feeder.
- 8.If the equipment has faults or damaged accessories, do not try to repair the pet feeder by yourself. Contact the seller immediately and solve it.
- 9.Be sure to unplug the power plug when not using the product or cleaning the product.
- 10.If the power plug of the equipment is damp, please turn off the power of the socket and do not try to unplug the power plug.

 
Notice

- 1.Do not let your pet chew or swallow any accessories. If you are worried about the power cord, please buy wire conduit (hard plastic protector) and protect the power cord at the hardware store.
- 2.Do not install or put the pet feeder in an exposed place. The temperature should be within the range of - 10 °C~40 °C.
- 3.Please use alkaline Size D battery for power supply. Do not use rechargeable batteries.
- 4.Check the battery regularly. If you travel or travel for a long time, be sure to replace the battery.
- 5.Do not lift the pet feeder directly with the cover, food bucket and food tray. Hold the base with both hands to lift and carry, while keeping the device in an upright position.
- 6.Only applicable to dry food with a diameter of 3~13mm. Larger foods may get stuck or block the Food Outlet.
- 7.Please carefully read and follow all important instructions listed on the pet feeder and package.

Product Image


Front view

- 1.Food Tank Lid
- 2.Food Tank
- 3.Display Screen
- 4.Control Panel
- 5.Food Outlet
- 6.Body
- 7.Food Bowl

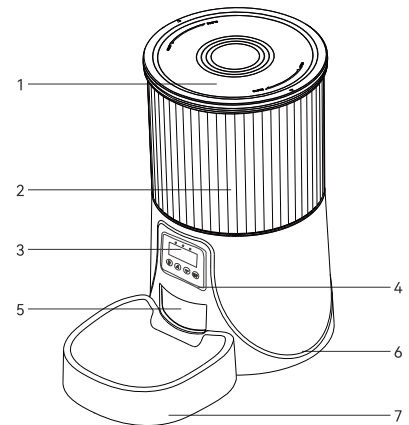


Bottom View

 - 8.Speaker
- 9.Battery Compartment
- 10.DC Interface

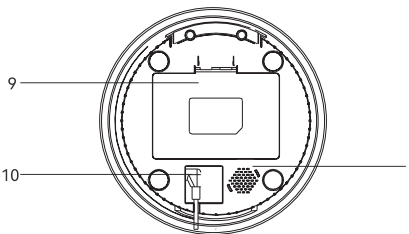

Show Icon Definition

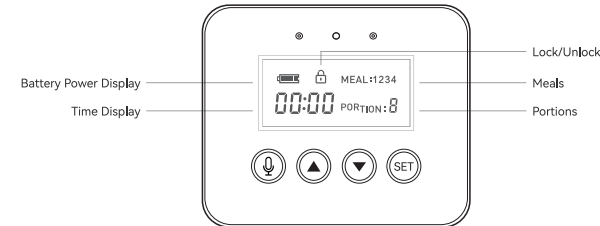 

 Display the current power: External power supply display full power status, battery power is displayed according to battery power.

 Unlock/lock: Unable to operate in locked state, long press the  button to unlock status then can operate it.

 MEAL Can set 4 meals, in the setting mode, press the  and  button can switch the selected number of meals.

 Display the current time.

 Display the feeding portions.

Button Description

 Recording button: In the unlock mode, long press  for 3s, release your hand when you hear "di", feeder will start recording, the recording time does not exceed 10s, after recording, please press the  button again to complete, when you will hear "didi" to indicate that it has been saved. If you are not satisfied, you can repeat this step to replace the previous recording.

 Up/Reset Button: This button can be set to switch numbers, and button also as a reset button. When the screen is locked, long press the  button for 5s to reset the time and feeding setting.

 Down/Unlock Button: the button can be switch numbers, and button also as a unlock button. When the screen is locked, long press the  button to unlock, after unlocking, the settings can be operated.

 Setting Button: when enter the operation of setting button to setting.

Note: The screen will automatically lock after 30s standby.

Cleaning and Maintenance

Please clean the feeder regularly to keep your pet's health.

When it starts to get dirty and a lot of loose food in the food trough, you can remove the food cover to clean it.

Clean the feeder base containing the control panel with a soft, damp cloth. Do not wet this part. Remember not to rinse it directly with running water.

Do not put the product in the dishwasher, otherwise it will be permanently damaged!

Packing List

After opening the product package, please confirm whether the machine is in good condition. Please check the list to confirm whether the accessories are complete.

- Automatic Pet Feeder ×1
- Food Bowl ×1
- Power Adapter ×1
- Power Cable ×1
- Desiccant Bag ×1
- User Manual ×1

 Huizhou Huayi Trading Co., Ltd.


 36 Months Warranty

 Petultrahelp@outlook.com




01 | Installation

 - ◎ Remove the feeder from the box.
- ◎ Place the feeder in the suitable location.
- ◎ Combine the food tray with the base of the feeder.

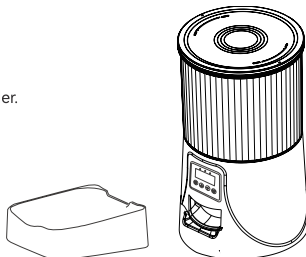

02 | Connect the power supply

 - ◎ Plug the 5V/1A power adapter into the wall socket and connect the device.
 - ◎ Open the battery compartment at the bottom of the feeder and install 3 pcs Size D Battery (not necessary) to prevent power failure
- The LED light is on to indicate that the feeder is powered on.

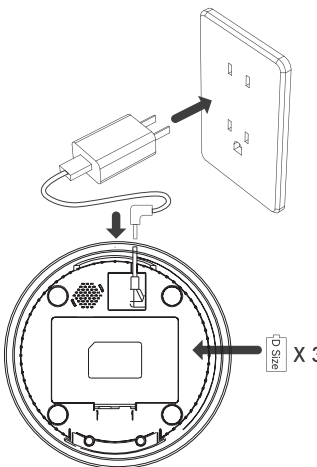

Note:

- 1) Does not including battery.
- 2) Before turning on the power, make sure that all parts are clean and completely dry.



03 | Put pet food in food tank

- ◎ Fill the food tank with dry pet food. Close the lid and it will snap into place due to gravity.

Note:

- Do not use canned, wet or damp pet food.
- The recommended pet food size range is 2-12 mm.



04 | Setting Time

- ◎ *Design by military time clock, example: 5pm would be 17:00.
- ◎ Press and hold down button for 3s to unlock the screen.
- ◎ After pressing and holding the setting button for 3s, the time icon 00:00 will flash the hour setting.
- ◎ Press the up /down buttons to scroll through the numbers to set the hour.
- ◎ Press the set button to move to the minute setting, and set the minute the same as the hour setting step.



05 | Set up a daily feeding plan

- ◎ After the current time is set, press the set button , and the display will flash the number of meals. Press the up /down buttons to set 1-4 meals a day.



06 | Set meal time and portions

- ◎ After setting the number of meals, the display will flash the current number of meals.
- Eg: The number of meals flashes "3" means that 3 meals per day have been set.



Set the feeding time

- ◎ Press the "Set" button , and the hour field of the time icon will flash.
- ◎ Press the up /down buttons to set the hour.
- ◎ Press the set button and the up /down buttons to set the minutes in same step.



Set the feeding portion

- ◎ Press the "Set" button , the number of portions will flash.
- ◎ Press the up /down buttons to set feeding portion.
- ◎ If necessary, press the set button to repeat the above process for meals 2 to 4.



07 | Feeding Recording

- ◎ In the unlock mode, long press for 3s, release your hand when you hear "di", feeder will start recording, the recording time does not exceed 10s, after recording, please press the button again to complete, when you will hear "didi" to indicate that it has been saved.
- ◎ If you are not satisfied, you can repeat this step to replace the previous recording. If you want to completely erase the recording, record a blank voice overlay.

Note:

- It will play only when you press it when there is a recording.
- When the feeding time is up, feeder will feeding and play the recording at the same time.




08 | Manual Feeding

- ◎ While unlocking the screen, press both up and down button to manual feeding one portion.

Note:

 - The feeding plan will not be affected.

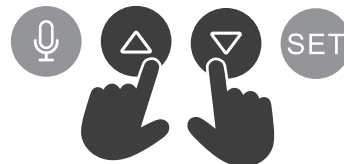

09 | Restore factory setting

- ◎ In the lock screen state, press and hold the up button for 5s to reset all settings (time, feeding plan and portion per meal).



Troubleshooting

Question Answer

Q: I press any button but can not work.

A: Lock the screen when there is no operation within 30s. Please press and hold the unlock button for 3s to unlock the screen.

Q: I forgot the specific content of the feeding plan.

A: Unlock the screen and press the setting button, you can see meals displayed (but not portion per meal).

Q: Can't get food.

- A:
- 1) Make sure to put in dry food and the diameter of the food should be between 3-13 mm.
 - 2) Check whether the battery power is low.
 - 3) Whether the power adapter is connected.
 - 4) Whether the power is cut off when the battery is not installed, if the power is cut off, please reset the feeding plan.

Q: The display does not light up.

- A:
- 1) Without any operation within 30s, the screen is locked and dimmed. Please press and hold the unlock button for 3s to unlock the screen.
 - 2) Check whether the power adapter is connected or the battery is installed.
 - 3) When the device is connected to the power supply, the display still does not light up, please contact the seller to solve it.

Q: Cannot hear any recordings while feeding.

A: Make sure you have successfully recorded—unlock the screen and press the record button to check. If no sound is heard, you need to record again.

Note: If you have any questions, please contact the after-sales support.

✉ Petultrahelp@outlook.com

Specification

Model: DU4LB-KY

Food Tank Capacity: 4L

Material: BPA-Free ABS

Screen: LCD screen

Power supply: DC 5V/1A power adapter; 3pcs alkaline batteries(not included)

Power adapter: AC110-240V input, DC5V output