

Alarms and timers

Set an alarm

Einen Alarm einstellen / Définir une alarme / Impostare una sveglia / Sæt en alarm / Een alarm instellen / Defina una alarma / Ställ in ett alarm / Nastavit budík / Ustawienie alarmu / Definir um alarme

1. Press Menu and turn and press Select dial to select ‘System Settings’

Drücken Sie auf Menü und drehen und drücken Sie das Auswahlrad, um „Systemeinstellungen“ auszuwählen
Appuyer sur Menu et tourner et appuyer sur la molette de sélection pour sélectionner « Paramètres système »
Premere Menù, ruotare, quindi premere Seleziona per selezionare 'Impostazioni di sistema'

Tryk på Menu, drej og tryk på Vælg-drejeknappen for at vælge 'Systemindstillinger'

Druk op Menu, draai en druk op de knop Select om 'System Settings' te selecteren

 
Pulse «Menü» y gire y pulse el selector para seleccionar «Configuración del sistema»

Tryck på Meny och vrid och tryck på Välj-ratten för att välja "Systeminställningar"

Stisknëte tlačítko Menu a otočte tlačítkem Vybrat. Stisknutím vyberte možnost „Systémová nastavení"

Naciśnij przycisk Menu, obróć i naciśnij pokrętkę wyboru (Select), aby przejść do „Ustawień systemu”.

Pressione Menu e rode e pressione Seleccionar para seleccionar "Configurações do sistema"

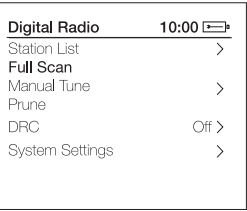

2. Turn and press Select dial to select ‘Alarm’

Drehen Sie und drücken Sie das Auswahlrad, um „Alarm“ auszuwählen.
Tourner et appuyer sur la molette de sélection pour sélectionner « Alarme »
Ruotare e premere il quadrante Seleziona per selezionare 'Sveglia'

Drej og tryk på Vælg-drejeknappen for at vælge 'Alarm'

Draai en druk op de knop Select om 'Alarm' te selecteren

 
 
Gire y pulse el selector para seleccionar «Alarma»

Vrid och tryck på Välj-ratten för att välja "Alarm"

Otočte tlačítkem Vybrat a stisknutím vyberte možnost „Budík"

Obróć i naciśnij pokrętkę wyboru (Select), aby wybrać „Alarm”.

Rode e pressione o botão Seleccionar para seleccionar "Alarme"

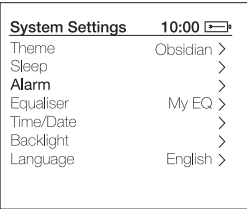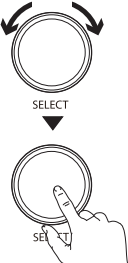

3. Turn and press Select dial to select ‘Alarm 1’ or ‘Alarm 2’

Drehen und drücken Sie das Auswahlrad, um „Alarm 1“ oder „Alarm 2“ auszuwählen

Tourner et appuyer sur la molette de sélection pour sélectionner « Alarme 1 » ou « Alarme 2 »

Ruotare e premere il quadrante Seleziona per selezionare 'Sveglia 1' o 'Sveglia 2'

Drej og tryk på Vælg-drejeknappen for at vælge 'Alarm 1' eller 'Alarm 2'

Draai en druk op de knop Select om 'Alarm 1' of 'Alarm 2' te selecteren

 
 
Gire y pulse el selector para seleccionar «Alarma 1» o «Alarma 2»

Vrid och tryck på Välj-ratten för att välja "Alarm 1" eller "Alarm 2"

Otočte tlačítkem Vybrat a stisknutím vyberte možnost „Budík 1" nebo „Budík 2"

Obróć i naciśnij pokrętkę wyboru, aby wybrać „Alarm 1" lub „Alarm 2".

Rode e pressione o botão Seleccionar para seleccionar "Alarme 1" ou "Alarme 2"

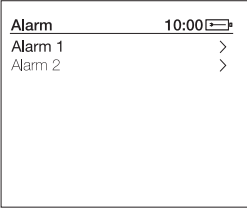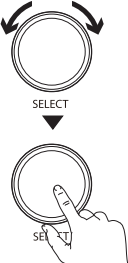

4. Turn and press the Select dial to adjust an alarm setting

Drehen und drücken Sie das Auswahlrad, um eine Alarmeinrichtung anzupassen

Tourner et appuyer sur la molette de sélection pour régler un paramètre d'alarme

Ruotare e premere la manopola Seleziona per regolare un'impostazione della sveglia

Drej og tryk på Vælg-drejeknappen for at justere en alarmindstilling

Draai en druk op de knop Select om de alarminstelling te wijzigen

 
 
Gire y pulse el selector para ajustar una configuración de alarma

Vrid och tryck på Välj-ratten för att justera en alarminställning

Otočte tlačítkem Vybrat a stisknutím upravte nastavení budíku


Obróć i naciśnij pokrętkę wyboru, aby dostosować ustawienia budzenia.

Rode e pressione o botão Seleccionar para ajustar uma configuração de alarme

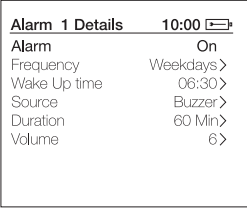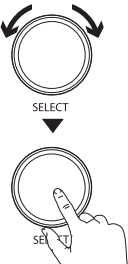



Cancel an alarm

 Alarm abbrechen / Annuler une alarme / Annullare una sveglia / Annuler en alarm / Alarm uitschakelen / Cancele una alarma / Avbryt ett alarm / Zrušit budík / Anulowanie budzenia / Cancelar um alarme

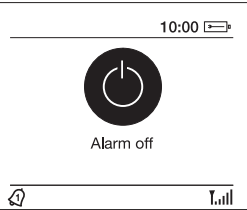







Snooze an alarm

  Schlummerfunktion des Alarms / Répéter une alarme / Posticipare una sveglia / Udsæt en alarm / Alarm op slummerstand zetten / Posponga una alarma / Snoozar ett alarm / Odłożyć budzik / Przełączenie budzika na Drzemkę / Suspender um alarme

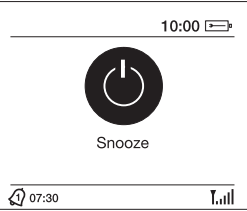

Set sleep timer

      Sleep-Timer einstellen / Régler le minuteur de veille / Impostare il timer di spegnimento / Indstil dvale-timer / Slaaptimer instellen / Ajuste el temporizador de estado de reposo / Ställ in sömntimer / Nastavit automatické vypnutí / Ustawienie trybu sleep timer / Configurar temporizador para adormecer

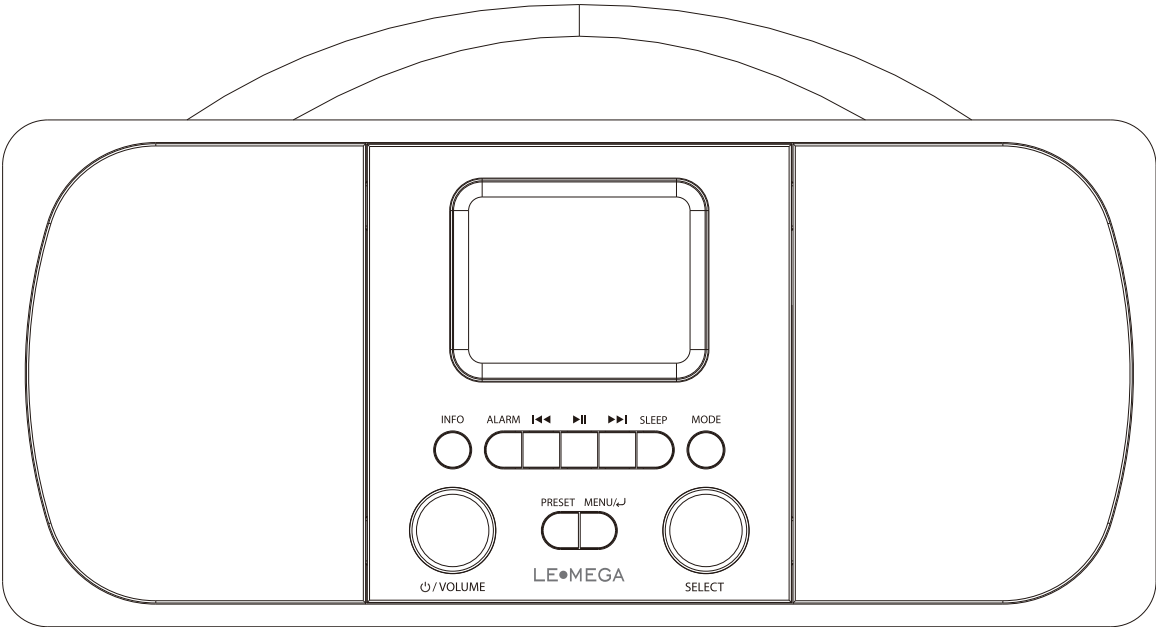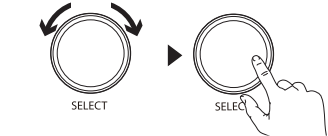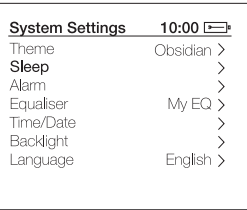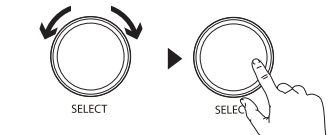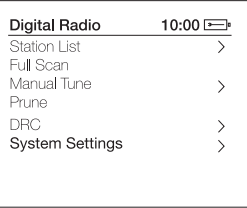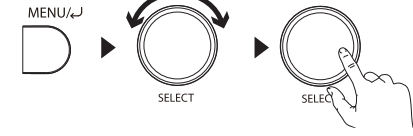

LE•MEGA
LIFE & ALOUD

DR6 Stereo DAB & FM Radio

Quick Start Guide

www.lemegaaudio.com

info@lemegaaudio.com



Scan me on your
smartphone camera
for more information

Quick setup

Schnelle Einrichtung / Installation rapide / Installazione rapida / Hurtig opsetning / Snelle installatie / Configuración rápida / Snabb installation / Rychlé nastavení / Szybkie ustawienia / Configuração Rápida

1. Unclip (A) and extend aerial (B) and connect power to USB adapter (C)

Lösen (A) und verlängern Sie die Antenne (B). Schließen Sie den USB-Adapter (C) an. Détacher (A) et déployer l'antenne (B) et connecter l'alimentation à l'adaptateur USB (C) Sganciare (A), estendere l'antenna (B) e collegare l'alimentazione all'adattatore USB (C) Frigor (A), og træk antennen (B) ud, og tilslut strømmen til USB-adapteren (C) Ontkoppel (A) en breid de antenne uit (B) en sluit de voeding aan op de USB-adapter (C) Desenganche (A) y extienda la antena (B) y conecte la alimentación al adaptador USB (C) Koppla loss (A) och förläng antennen (B) och anslut strömmen till USB-adaptern (C) Vycvkněte (A) a vytáhněte anténu (B) a připojte napájení k USB adaptéru (C) Odepnij (A), rozlož anténę (B) i podłącz zasilanie do adaptera USB (C) Solte (A) e estenda a antena (B) e conecte a energia ao adaptador USB (C)

2. Push to switch on

Zum Einschalten  drücken Appuyer sur  pour allumer Premere  per accendere Tryk på  for at tænde Druk  om in te schakelen Pulse  para encender Tryck på  för att slå på den Stisknēte  pro zapnutí Nacišnij  , aby włączyć Pressione  , para ligar

3. Wait for autotune to complete

Warten Sie, bis der automatische Sendersuchlauf abgeschlossen ist Attendre la fin du réglage automatique Attendere il completamento della sintonia automatica Vent på, at autotune er afsluttet Wacht tot de autotuning is voltooid Espere a que se complete la sintonización automática Vanta tills autotune är slutfört Počkajte na dokončení automatického ladění Odczekaj na zakończenie automatycznego strojenia. Aguarde a conclusão da sintonização automática

4. Press Mode button to display Mode menu

Drücken Sie die „Modus“-Taste, um das Menü „Modus“ anzuzeigen Appuyer sur le bouton Mode pour affiche le menu Mode Premere il pulsante Modo per visualizzare il menu Modo Tryk på Mode knappen for at få vist Mode menuen Druk op de knop Modus om Modus menu weer te geven Pulse el botón « Modo » para mostrar el menú « Modo » Tryck på Läge knappen för att visa Läge menyen Stisknutim tlačítka Režim zobrazíte nabídku Režim Nacišnij prycisk Tryb, aby wyświetlić menu Tryb. Pressione o botão Modo para exibir o menu Modo

5. Tap Mode button to switch between (A) DAB radio, (B) FM radio and (C) Bluetooth

Drücken Sie die „Modus“-Taste, um zwischen (A) DAB-Radio, (B) FM-Radio und (C) Bluetooth zu wechseln Toucher le bouton Mode pour basculer entre (A) radio DAB, (B) radio FM et (C) Bluetooth Toccare il pulsante Modo per passare tra (A) radio DAB, (B) radio FM e (C) Bluetooth (Vedere "Scegliere la Sorgente" per ulteriori informazioni) Tryk på Mode knappen for at skifte mellem (A) DAB-radio, (B) FM-radio og (C) Bluetooth Raak de knop Modus aan om te schakelen tussen (A) DAB-radio, (B) FM-radio en (C) Bluetooth Toque el botón « Modo » para cambiar entre (A) radio DAB, (B) radio FM y (C) Bluetooth Tryck på Lägeknappen för att växla mellan (A) DAB-radio, (B) FM-radio och (C) Bluetooth Klepnutim na tlačítko Režim můžete přepínat mezi (A) DAB rádiem, (B) FM rádiem a (C) Bluetooth Naciskaj przycisk Tryb, aby przełączać się pomiędzy pozycjami: (A) radio cyfrowe DAB, (B) radio FM i (C) Bluetooth. Toque no botão Modo para alternar entre (A) radio DAB, (B) rádio FM e (C) bluetooth

Controls

Bedienung / Contrôles / Comandi / Betjening / Bedieningselementen / Controles / Kontrollen / Ovládací prvky / Elementy sterujące / Controlos

Tap to turn DR6 on and long press for standby

Schalten Sie DR6 zwischen Ein und Standby Passer de marche en veille Cambiare DR6 tra acceso e standby Skift DR6 mellem tændt og standby Schakel DR6 in tussen inschakelen en stand-by Cambie su DR6 entre encendido y modo de espera Växla DR6 mellan på och standby Přepínání rádia mezi režimem zapnuto a pohotovostním režimem Używaj przycisku DR6 do przełączania urządzenia pomiędzy trybem włączenia a trybem gotowości Alternar entre ligado e em espera

Switch between Digital Radio, FM radio & Bluetooth

Schalten Sie zwischen Digitalradio, UKW-Radio und Bluetooth Basculer entre la radio numérique, la radio FM et le Bluetooth Passare tra radio digitale, radio FM e Bluetooth Skift mellem digital radio, FM-radio og Bluetooth Schakelen tussen digitale radio, FM-radio en Bluetooth Cambie entre radio digital, radio FM, y Bluetooth Växla mellan digital radio, FM-radio och Bluetooth Přepínání mezi digitálním rádiem, FM rádiem a Bluetooth Przełączanie pomiędzy radiem cyfrowym, radiem FM i Bluetooth Alternar entre rádio digital, rádio FM, Bluetooth e entrada auxiliar

Change settings (including language)

Einstellungen ändern (einschließlich Sprache) Modifier les paramètres (y compris la langue) Modificare impostazioni (inclusa la lingua) Skift indstillinger (inklusive sprog) Instellingen wijzigen (inclusief taal) Cambie la configuración (incluido el idioma) Ändra inställningar (inklusive språk) Změna nastavení (včetně jazyka) Zmiana ustawień (w tym języka) Alterar configurações (incluindo idioma)

Press to return to the previous screen

Drücken, um zum vorherigen Bildschirm zurückzukehren Appuyer pour revenir à l'écran précédent Premere per tornare alla schermata precedente Tryk for at vende tilbage til det forrige skærbillede Indrukken om terug te keren naar het vorige scherm Pulse este icono para retroceder e ir a la pantalla anterior Tryck för att återgå till föregående skärm Stisknēte pro návrat na předchozí obrazovku Nacišnij, aby powrócić do poprzedniego ekranu Premir para voltar ao ecrã anterior

Press to change radio stations

Drücken, um Radiosender zu wechseln Appuyer pour changer de station de radio Premere per cambiare stazione radio Tryk for at skifte radiostationer Indrukken om van radiostasjon te veranderen Pulse para cambiar las emisoras de radio Tryck för att byta radiostationer Stisknēte pro změnu rozhlasové stanice Naciskaj, aby zmieniać stacje radiowe Premir para mudar de estação de rádio

Set and recall presets

Voreinstellungen festlegen und abrufen Définir et se souvenir des préréglages Impostare e richiamare le impostazioni predefinite Indstil og husk forudindstillinger Installen en oproepen van presets Configure y recuperar preajustes Ställ in och återkalla förinställningar Nastavení a vyvolání předvoleb Ustawienie i przywrócenie ustawień wstępnych Definir e recuperar predefinições

Turn and press to select menu options. If listening to content, turn to adjust the volume & tap to mute the volume.

Drehen und drücken, um Menüoptionen auszuwählen. Drehen, um die Lautstärke anzupassen, wenn Sie etwas hören. Tourner et appuyer pour sélectionner les options du menu. Si vous écoutez du contenu, tournez pour régler le volume. Ruotare e premere per selezionare le opzioni del menù. Se si ascolta il contenuto, ruotare per regolare il volume. Drej og tryk for at vælge menuindstillinger. Hvis du lytter til indhold, skal du dreje for at justere lydstyrken. Draaien en indrukken om de menu-opties te selecteren. Draaien om tijdens het luisteren volume te regelen. Gire y pulse para seleccionar las opciones del menú Si está escuchando contenido, gire para ajustar el volumen Vrid och tryck för att välja menyalternativ. Om du lyssnar på innehåll, vrid för att justera volymen. Otočte a stisknēte pro výběr možností nabídky. Při poslechu můžete otočením upravit hlasitost. Obróć i naciśnij, aby wybrać opcje menu. Obracaj, aby ustawiać głośność podczas słuchania. Rodar e premir para selecionar as opções do menu. Se estiver a ouvir conteúdo, rodar para ajustar o volume.

Rear panel connections

Anschlüsse an der Geräterückseite / Raccordements du panneau arrière / Collegamenti sul pannello posteriore / Bagpanelforbindelser / Aansluitingen achterpaneel / Conexiones del panel posterior / Bakre panelanslutningar / Připojení na zadním panelu / Złącza na panelu tylnym / Conexões do painel traseiro

Type C USB Power input

Type C USB-Stromeingang Entrée d'alimentation Type C USB Ingresso di alimentazione Type C USB Type C USB Power input Type C USB-voedingsingang Entrada de alimentación Type C-USB Type C USB strömingång Vstup Type C USB Wejście zasilania Type C USB Entrada de alimentação Type C USB

Stereo headphone output (3.5mm)

Stereo-Kopfhörerausgang (3,5 mm) Sortie casque stéréo (3,5 mm) Uscita cuffie stereo (3,5 mm) Stereohovectelefonudgang (3,5 mm) Uitgang voor stereokoptelefoon (3,5 mm) Salida de auriculares estéreo (3,5 mm) Utgång för stereohörlurar (3,5 mm) Vystup pro stereofonní sluchátka (3,5 mm) Wyjście słuchawkowe stereo (3,5 mm) Saída de auscultadores estéreo (3,5 mm)

Choose Mode

Modus auswählen / Choisir la Mode / Scegliere la Modo / Vælg Mode / Kies Modus / Elegir Modo / Välj Läge / Výběr Režim / Wybierz Tryb / Escolher a Modo

Digital radio

Change digital radio station

Digitalen Radiosender wechseln Changer de station de radio numérique Cambiare la stazione radio digitale Skift digital radiostasjon Wjizig digitala radiostation Cambie de emisora de radio digital Byt till digital radiostation Změna digitální rozhlasové stanice Zmiana stacji radia cyfrowego Alterar estação de rádio digital

FM radio

Seek to next station

Nächste Station suchen Rechercher la prochaine station Cercare la prossima stazione Søg efter næste station Zoek naar het volgende station Búsqueda de la siguiente emisora Sök efter nästa station Vyhledat další stanici Wyszukiwanie następnej stacji Procurar a próxima estação

Manual tune

Manueller Suchlauf Syntonisation manuelle Sintonizzazione manuale Manuell kanalindstilling Handmatig afstemmen Manual Manuell inställning Ruční ladění Strojenie ręczne Sintonização manual

Bluetooth

Pair with a Bluetooth device

Mit einem Bluetooth-Gerät koppeln Jumeler avec un appareil Bluetooth Associare a un dispositivo Bluetooth Par med en Bluetooth-enhed Koppel met een bluetooth-apparaat Emparejamiento con un dispositivo Bluetooth Para ihop med en Bluetooth-enhet Spárovat s Bluetooth zařízením Parowanie z urządzeniem Bluetooth Emparellar com um dispositivo bluetooth

Preset 1-20

Voreinstellung 1–20 / Préréglage 1- 20 / Impostazioni predefinite 1-20 / Forudindstilling 1-20 / Voorinstelling 1-20 / Preeajuste 1- 20 / Förinställning 1-20 / Předvolba 1-20 / Ustawienia wstępne 1-20 / Predefinição 1-20

Store

Speichern Enregistrer Memorizza Gemme Opslaan Guardar Spara Uložit Zapisz Save

Select

Auswählen Sélectionner Selezionare Vælg Selecteer Selección Välj Vybrat Wybór Seleccionar

Digital radio settings

Autotune

Autom. Sendersuche / Autotune / Sintonia automatica / Autotune / Autotune / Sintonización automática / Autotune / Automatické ladění / Strojenie automatyczne / Sintonização automática

MENU/↵

SELECT

SELECT

PRESET

2 sec

Station list

10:00

BBC Radio 1

BBC Radio 1Xtra

BBC Radio 2

BBC Radio 3

BBC Radio 4

BBC Radio 5 Live

BBC Radio 6Music

Digital Radio

10:00

BBC Radio 2

Pop Music

Full Scan

10:00

Scanning...

Stations: 54

Digital Radio

10:00

Station List

>

Full Scan

>

Manual Tune

>

Prune

>

DRC

Off >

System Settings

>

Full Scan

10:00

Scanning...

Stations: 54

LE•MEGA

LIFE & ALOUD

DR6 STEREO DAB & FM RADIO

LE•MEGA

LIFE & ALOUD

 
DR6 STEREO DAB & FM RADIO



Scan me on your
smartphone camera
for more information

If you have any questions or suggestions, please share with us.

info@lemegaaudio.com
www.lemegaaudio.com

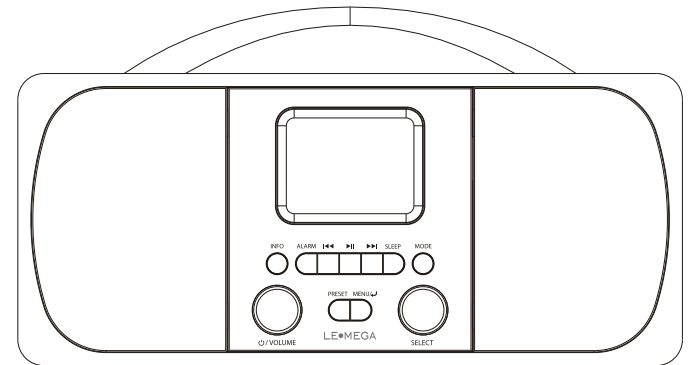

Owner's manual

1. Introduction

1.1 Safety Instructions

Please store this instruction manual for future reference.

- Do not use this product near water or moisture.
- Clean only with a dry cloth.
- Unplug this product from the wall outlet before cleaning.
- Place the unit on a solid surface.
- Do not put it in a closed bookcase or a cabinet that may keep air from flowing through its ventilation openings.
- Do not install near any heat sources, such as radiators, heat registers, stoves or other appliances that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs and the point where they exit from the product.
- Servicing is required when the product has been damaged. Do not attempt to service this product yourself. Opening or removing covers may expose you to dangerous voltages or other hazards.
- Please contact the manufacturer to be referred to an authorized service center near you.
- To prevent risk of fire or electric shock, avoid over loading wall outlets, extension cords, or integral convenience receptacles.
- Do not let objects or liquids enter the product.
- Use proper power sources. Plug the product into a proper power source, as described in the operating instructions or as marked on the product.



1.2 Features

This manual describes how to use the DR6 with the following modes :

- DAB/DAB+ digital radio with a wide choice of channels and digital quality sound broadcast free-to-air.
- FM with RDS (Radio Data System)
- Bluetooth to act as a Bluetooth wireless speaker for Bluetooth capable smart devices.

 
1.3 Carton contents

After you unpack the box, you will find the following items:

- 1 DR6 unit
- 1 Owner's manual
- 1 Quick Start Guide
- 1 Power adapter
- 1 USB Charging cable

2. Controls, connectors and display

2.1 Main controls

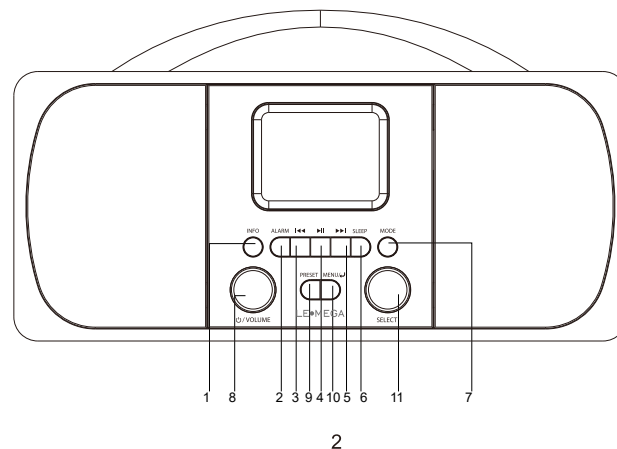

1. Info	7 .Mode
2. Alarm	8 .Power on/off & Volume/Mute/Snooze
3. Tune- / ◀◀	9 .Preset
4. Play/Pause / ▶▶	10.Menu/Back ↶
5. Tune+ / ▶▶	11.Select
6.Sleep	

1. **INFO:** View more information about the station or track playing. Press again to cycle through further information screens then return to the normal playing screen.

2. **ALARM:** Press Alarm button, use the Select control knob to select the required Alarm 1 or 2.

3. **◀◀ / Tune-:** Press to select the previous track under FM/DAB/ Bluetooth Mode; Press and hold the Tune- button 2 seconds to auto-scan the stations under the FM/DAB mode.

4. **▶▶ :** Press to do autoscan under DAB/FM mode, Press to select Play/Pause under BT mode.

5. **▶▶ / Tune+:** Press to select the next track under FM/DAB/ Bluetooth Mode; Press and hold the Tune+ button 2 seconds to auto-scan the stations under the FM/DAB mode.

6. **SLEEP:** Press Sleep button, use the Select control knob to choose the sleep delay time in minutes from: Sleep timer Off | 15 | 30 | 45 | 60 | 90.

7. **MODE:** Press to Source to select different modes DAB, FM, Bluetooth.

8. **KNOB: POWER/VOLUME/MUTE/SNOOZE:**

8.1. **POWER:** Push and hold the knob for 3 seconds to Power off or go Standby mode. [showing clock and date] depends on battery power or Mains power, or cancel sleep, or cancel alarm function.

8.2. **VOLUME:** Rotate the knob to adjust the volume up or down during playback.

8.3. **MUTE:** Press the knob to mute the music when playing.

8.4. **SNOOZE:** Press the knob to snooze a set time [5minutes] when alarm sounding.

9. **PRESET:** Saving Presets--FM, DAB, total can save 40 preset stations [20 DAB stations and 20 FM stations].

To save preset, press the Preset button for 2 seconds, use the navigation control ◀◀ / ▶▶ or rotate the Select knob to select and push Select knob to save.

Recall Presets-- FM, DAB

Press the Preset button and use the navigation control ◀◀ / ▶▶ or rotate the Select knob to tune into the station.

10. **MENU/↶ BACK BUTTON:**

 
10.1. **MENU:** press the MENU to show the MENU for the current mode. Press again to show now playing screen.

10.1. **BACK:** press the BACK to return to the previous screen.

11. **KNOB: SELECT:** Rotate the knob scroll through a menu or station list. Press to the knob to select the chosen option.

2.2 Connectors.

As shown below has connectors for the following:

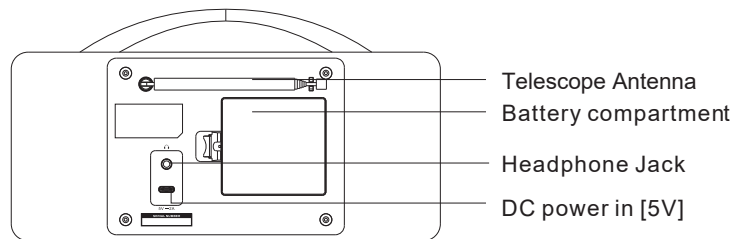

3. Started and setup

DR6 is easy to use. To play DAB or FM radio, all you need is a power Mode :

- 1). Place DR6 on a suitable shelf or table.
- 2). Extend the telescopic antenna.
- 3). Connect the power adaptor between DR6 and the mains supply.

4. DAB radio mode

DAB radio mode receives DAB/DAB+ digital radio and displays information about the station and programme /track as broadcast. To enter DAB mode, press Mode until the display shows Digital Radio.

4.1 Full Scan

The first time you use DR6, or if the station list is empty, the radio automatically performs a full scan to see what stations are available. You may also need to start a scan manually to update the list of stations for one of the following reasons:

New stations may become available from time to time.

If reception was not good for the original scan (for example the antenna was not up), this may result in an empty or incomplete list of available stations.

If you have poor reception of some stations causing the audio to break up, you may wish to list only stations with good signal strength. To do a full scan Select Menu > Full scan.

Once a scan is complete, the radio returns to playing the previously-selected station or first station on the station list.

4.2 Manual tune

As well as the normal method of scanning, you can also manually tune to a particular channel / frequency. This can be useful for adjusting your antenna to achieve the best possible reception and scanning a particular channel to update the station list.

To manually tune

Press Menu > Manual tune then use select control button to display a particular channel/frequency, press Select to tune to that channel/frequency.

The display shows a live indication of the received signal strength on the selected frequency.

Adjustments to your antenna will be manifested in the received signal strength displayed.

Note: The division in the signal strength bar indicates the audio quality threshold – if the signal strength, as indicated by the solid rectangles, falls below this threshold the audio quality will deteriorate.

When a channel/frequency is selected DR6 also scans for any DAB stations on the selected frequency and updates the station list with any new stations found. To listen to any stations found return to the Now playing screen and select the required station from the station list as normal.

4.3 Prune Invalid

To remove stations that are listed but unavailable Select Menu > Prune invalid. > Yes

4.4 DRC

Dynamic range compression (DRC)

This function reduces the difference between the loudest and quietest audio being broadcast.

Effectively, this makes quiet sounds comparatively louder, and loud sounds comparatively quieter.

Note: DRC only works if it is enabled by the broadcaster for a specific station.

To change the DRC setting Select Menu > DRC > The options available are: DRC high | low | off.

5 FM radio mode

FM radio mode receives analogue radio from the FM band and displays RDS [Radio Data System] information about the station and show [where broadcast].

To enter FM mode: Press Mode until the display shows FM Mode.

5.1 Selecting stations

The first time you select FM radio, DR6 is set to the lowest frequency in the FM band. On subsequent selections the last used frequency/station is displayed.

To scan for a station in FM mode

Press Play/Pause button scans up through the FM band frequencies, showing the current frequency on the screen display.

A scan stops when a signal is found. DR6 can be set to stop at each station or only at stations with a strong signal.

Alternatively, you can tune, using the Tune+/Tune- button in 50 kHz steps.

5.2 Now playing information

While FM radio is playing, the screen shows its frequency, or if RDS information is available, station name and any further RadioText' information. If no information is available, just the frequency and a No RadioText message is shown.

To view further information about the broadcast Press Info.

Date /Service / Pty / Freq / Signal/Power status

5.3 Settings

Scan settings

By default, FM scans stop at any available station (All stations).This may include poor quality audio from weak stations.

Options Strong stations only | All stations

To change the scan settings to stop only at stations with good signal strength

Select Menu > Scan setting then Strong stations only.

Audio settings

By default, all stereo stations are reproduced in stereo. For weak stations, this may result in poor quality audio, The audio quality can be improved using mono.

Options Stereo allowed | Forced mono

To play weak stations in mono

Select Menu > Audio setting > Forced mono

6 Bluetooth

Bluetooth mode allows DR6 to act as a wireless speaker playing audio content from a connected Bluetooth capable device.

To enter Bluetooth mode

Press Mode to choose Bluetooth mode to connect a Bluetooth capable device.

Use your Bluetooth capable smart device to pair and connect with the DR6.

6.1 Display information

The screen displays either a connected or disconnected message depending on the connection state.

7 System settings

The System Settings allow you to tailor the DR6 with a variety of options to suit you.

To access system settings from any mode Select Menu >System Settings >, then choose from the various options as described in the menu as below.

The System Setting Menu options are:

- Sleep
- Alarm
- Equaliser
- Time/Date
- Backlight
- Language
- Factory Reset
- Software update
- Software version

To navigate through the menus

The following controls are used to move about the menu tree to choose and select the required settings:

Select knob– [push the Select control knob] this selects the currently displayed option, if the option has a further sub-menu the first option of the sub-menu is displayed. If the option is a setting value, the displayed value is selected and either the next setting is highlighted or, if there are no further settings, the display returns to the parent menu for that setting.

Select control knob– cycles forwards and backwards through the current menu or setting options.

Back – jumps back to the parent menu of the currently displayed menu or setting.

Menu to return to the Now Playing screen.

7.1 Sleep

To set the sleep timer while the radio is playing Press Sleep button on the front panel. You can choose the sleep delay time in minutes from:

Sleep timer Off | 15 | 30 | 45 | 60 | 90.

Use select control knob to cycle through the options or press Tune- / Tune+ button to choose the displayed option.

Once you select a sleep delay period, the display returns to the Now playing screen displaying a Crescent moon icon and the remaining time, in minutes, before the sleep time expires.

After the sleep delay period the radio switches to standby mode.

7.2 Alarms

As well as a clock/calendar, there are two versatile wake-up alarms with snooze facility, and a sleep function to turn the system off after a set period of time. The alarm sound for each alarm can use a buzzer or a selection from the audio sources.

Note: Alarms will only function when the DR6 unit is On or in Standby mode.

An active alarm is indicated by its icon in the bottom line of the display.

Note: Alarms can be switched on or off in standby mode.

To set alarms

Press Alarm button on the front panel, use the Select control knob to select the required Alarm 1 or 2.

To exit alarm setting mode, press Menu / Back [alternatively, the Alarm display will timeout and automatically return to the Now Playing screen after a certain time].

The alarm setup prompts you for the following parameters. Select a value for each parameter in turn turning the select control knob and push knob to confirm and move to the next parameter.

Parameters

Alarm – Off | On

Frequency - Daily | Once | Weekends | Weekdays

Note: if you choose 'Once', you are prompted to enter the required date.

Wake Up time – hours and minutes

Sources – Buzzer | Digital Radio| FM

If DAB or FM is chosen as the audio Mode you will also be prompted to select the Last played station.

Duration – 15 | 30 | 45 | 60 | 90 | 120 minutes

If the alarm is not canceled DR6 returns to standby after this time period.

Volume – rotate the Select control knob to set the required alarm volume 1-16.

This is the volume the alarm will build up to. [Initially the alarm sounds at a low volume and gradually gets louder to the set volume].

In all listening modes active alarms are indicated by displaying the relevant Alarm 1 and/or Alarm 2 icons.

At the set time, the alarm will sound, quietly at first, then gradually building up to the set volume. When an alarm sounds, the icon in the display flashes.

To cancel a sounding alarm and switch the radio to standby, press Alarm button .

Snooze

To temporarily silence a sounding alarm, short press Power Knob for 5/10/15/30 minutes snooze period.

7.3 Equaliser

This presents a My Equaliser option to allow you to create your own equaliser settings.

My EQ... | Normal | Classic | Jazz | Pop | Rock | Speech

7.3.1 My EQ setup...

This option allows you to set a bias in the treble and bass audio frequencies and turn 'Loudness' On or Off. Values can be set between -7 (Minus 7) and +7 (plus 7).

Treble – (Use the select control button to choose a bias value between -7 and +7)

Bass – (Use the select control button to choose a bias value between -7 and +7)

Loudness – No or Yes. (When Yes, low-level high and low frequency sounds are boosted to give a 'fuller' sound.)

7.4 Time/Date

The time and date can be updated manually or automatically. With auto-update, the time and date are automatically synchronised with national time signals broadcast over DAB and FM [when available] .

You can also select the display format for the time and date

The Time menu contains the following options

- Set Time/Date – [see below]
- Auto update - Update from Any | Update from Digital Radio | Update from FM | No Update
- Set 12/24 hour - 12 | 24
- Set date format - DD-MM-YYYY | MM-DD-YYYY.
- Clock Style - Normal Digital / Big Digital / Classic Analog / Modern Analog

Set time/date

This option is for manually setting the time and date displayed. The time displays as hh:mm, with the first value, hh, active (flashing). Adjust each value using the select control knob and push Select knob to confirm. The next value then becomes active and flashes. The date values follow and are set in the same way.

Note: The date displays as DD-MM-YYYY or MM-DD-YYYY depending on your choice of date format (see above).

7.5 Backlight

The DR6 has a backlight with three brightness settings, and adjustable timeout [this is the time delay, in seconds, after which the display switches to the Dim level].

There are three settings:

- Timeout - On | 10 | 20 | 30 | 45 | 60 | 90 | 120 | 180 sec
- On level - High | Medium | Low
- Dim level - High | Medium | Low

7.6 Language

The default language is English. To change select Menu > System settings > Language > then select your language

7.7 Factory reset

A factory reset clears all user defined settings, replacing them with the original default values, so time/date, preferences settings and DAB station list are all lost.

If you select Factory reset, you are asked to confirm by selecting "Yes".

7.8 Software Update

From time to time, DR6 may make software upgrades available with bug Fixes and/or additional features.
This feature is for service centre.

7.9 Software Version

This is used to display the current software version. Under the system menu, or rotate SELECT knob to select "Software version" through the list of menu, push the SELECT knob to confirm. Then, the existing SW version will be showed.

8 Troubleshooting and error messages

8.1 Error messages

Message	Description
	DAB mode
Service not available	No DAB reception
Signal error	The DAB signal has been interrupted
No DAB Station	The listed station cannot be found.
No Name	The current station does not broadcast an identity name.

No stations found	No DAB stations are available – check aerial.
	FM mode
No RadioText	No RDS text information is available on this station.
No PTY	No RDS programme type information is available
No Name	No RDS station name is being broadcast
	General messages
Update failed	Software upgrade failed
Message	Description
Time is not set	No time value is currently set on this platform.
Time Not saved	Any changes made to the time settings will be lost
Alarm Not saved	Any changes made to the Alarm settings will be lost
Invalid Date	The entered value does not match a valid date

8.2 Troubleshooting

Problem	Cause	Solutions
FM: Hiss DAB: burbling/ intermittent cut-out	Low signal strength	Check/move antenna, Move radio Rescan high- strength stations only. For DAB or DAB+, check the current status of local coverage with your national digital radio authority.
DAB: No stations available' message	Low signal strength	As above then rescan stations

9 Technical Specification:

Model:	DR6
Type:	DAB & FM Radio
Speaker:	2X 2.5" full range speaker
Power:	2x3W RMS
Power Supply:	5V DC or 4 x AA batteries [battery not included]
Dimension (mm):	W255 X H132 X D100 MM
Weight:	1.02KG

Specifications subject to change without notice



This symbol indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and battery, please dispose them in accordance to any applicable local laws of requirement for disposal of electrical equipment or batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste (Waste Electrical and Electronic Equipment Directive).