



((BOGASING))

Ace ONE

Wireless bluetooth speaker

User Manual



Made in China





English

Thank you for purchasing the **BOGASING-Ace ONE** Bluetooth speaker. Please read the User Manual before use and keep it properly for future reference. If you have any questions or comments, please contact us by email: **support@bogasing.com**




Specifications

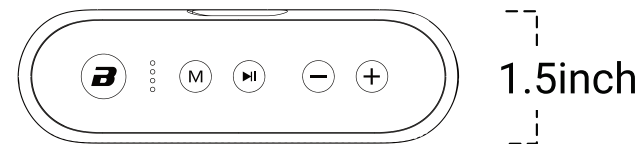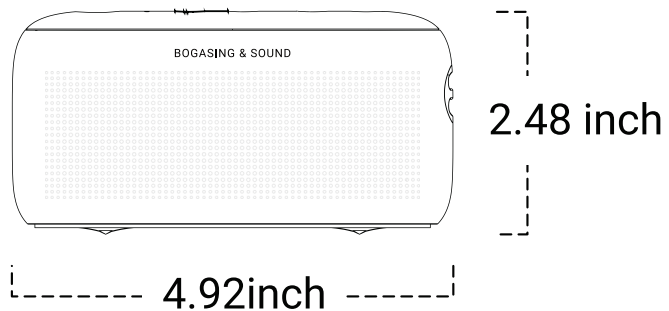


Model:	Ace ONE
Bluetooth Range:	Up to 18m/60ft (Unobstructed)
Battery: Equivalent:	7.4V 700mAh (5.18Wh) 1600mAh (3.7V)
Output Power:	10W
Bluetooth Version:	5.3

Waterproof:	IPX6
Input Power:	5V 1A
Charging Time:	3 - 4 hours
Dimension:	4.92*1.5*2.48inch
Weight:	199g

Accessories

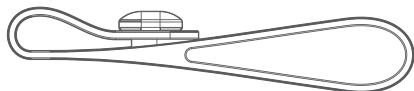


Detachable Strap

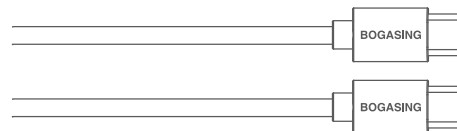

USB-C cable

Button Configuration

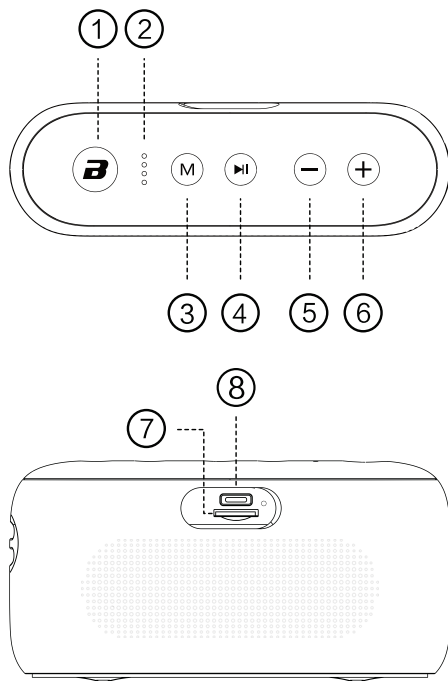

- ① Power On/Off / Sound Effect Mode/ Status Indicator
- ② Battery Indicator
- ③ Mode Switch / Restore Factory Settings
- ④ Play / Pause / Answer / End a Call
- ⑤ Volume Down / Previous Track
- ⑥ Volume Up / Next Track
- ⑦ TF Card Slot
- ⑧ USB-C Audio / Charging Port

LED Indicator


① Status Indicator

a. Bluetooth Indicator

- Waiting for connection: Indicator flashes.
- Connected: Indicator glows solid.

b. Sound Effect Indicator

- 3D: Glows solid white
- Vocal: Glows solid red
- Super Bass: Glows solid green

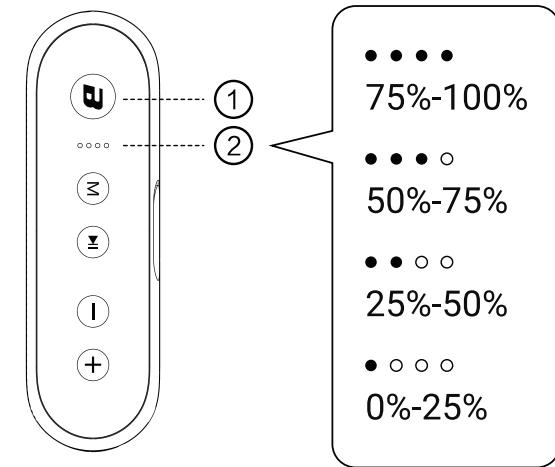

(Note: The indicator defaults to the last used sound effect when reconnecting.)


② Battery Indicator

- When the battery runs low, the speaker emits a "beep beep" sound to indicate that it needs to be charged.
- The battery light blinks while charging. When the battery is fully charged, the blinking stops and the battery light glows solid.

BUTTON	OPERATION	FUNCTION DESCRIPTION
	Press and hold	Turn ON/OFF.
	Press twice quickly	Enter into True Wireless Stereo (TWS) mode
	Press	Switch sound effect modes in turn (3D, Vocal, and Super Bass).
	Press	Switch the playing modes (Bluetooth, USB-C, or TF-card)
	Press and hold	Press and hold it until you hear a prompt tone to clear all paired devices or restore to factory settings.
	Press	Play/Pause.
	Press and hold	Press and hold for 3s, disconnect the bluetooth device.

	Press	Volume down, total 16 levels
	Press and hold	Previous track
	Press	Volume up, total 16 levels
	Press and hold	Next track


Bluetooth Connection

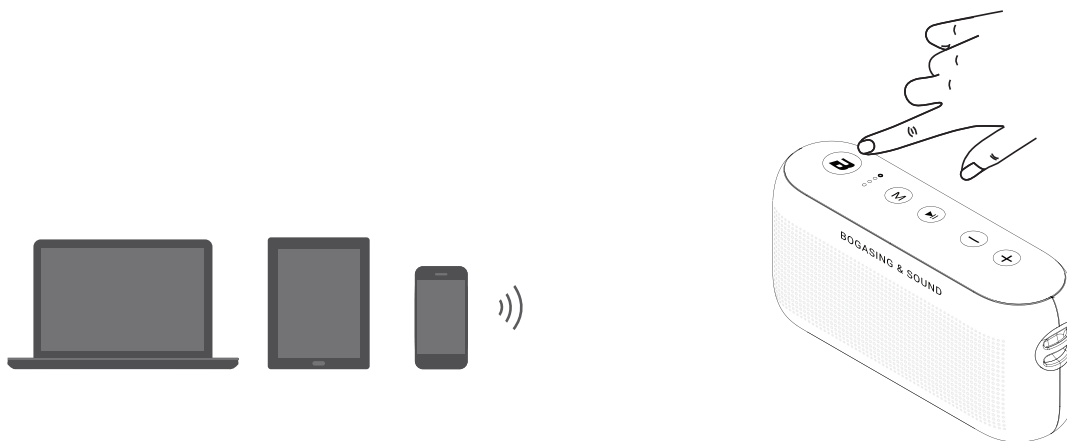

1. Power on the speaker, and the indicator light blinks.
2. On your device, enable Bluetooth. Select the speaker named "BOGASING-Ace ONE" from the device list.
3. Once connected, you will hear a prompt tone and the indicator light glows solid.

Wired Connection(USB-C Audio)

Upon connecting the USB-C audio cable to the speaker and an audio source, the playback mode will automatically switch to USB-C Audio.

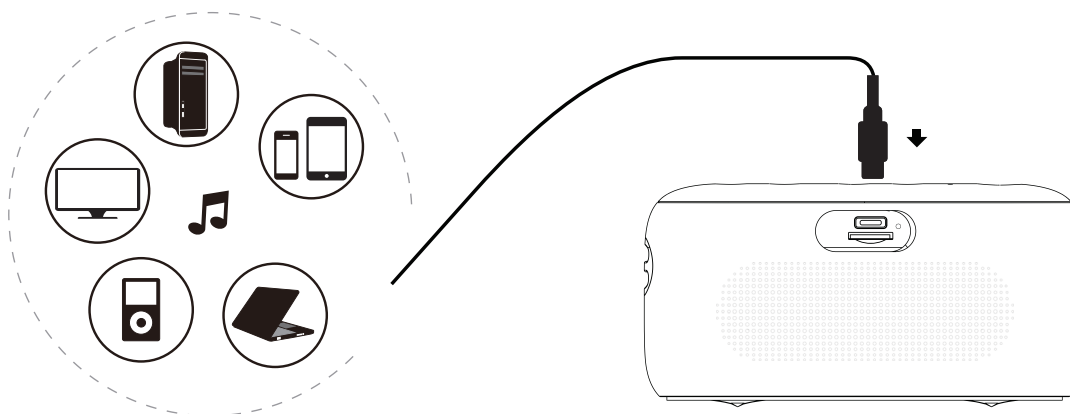

Note: Please use a USB-C cable with audio or data transfer capability. A power-only cable may not work.

Multiple Play Modes

1. This speaker supports TF cards up to 128GB and audio formats including APE, FLAC, WAV, and MP3.
2. When a TF card is inserted, the speaker automatically detects and plays the audio files in sequence.



TWS Pairing

1. Ensure both speakers are powered on and disconnected from any other Bluetooth devices.
2. On either speaker, quickly press the "  " button twice to enter TWS pairing mode.
3. Once pairing is successful, a prompt tone will sound. The indicator on the master speaker will then blink, while the indicator on the slave speaker glows solid.
4. Enable Bluetooth on your phone or other device, then find and connect to the speaker named "BOGASING-Ace ONE".
5. After the initial pairing, the speakers will automatically connect in TWS mode whenever they are powered on, with no need to re-pair.
6. To clear an existing TWS connection with other speakers, press and hold the "  " button to reset. After resetting, restart the speakers and follow steps 1-4 to create a new pairing.

Troubleshooting

Problem	Solution
Speaker does not charge	1. Please use 5V1A charger to charge the speaker, or try another charging source or cable. 2. If your speaker has been exposed to high or low temperatures, let it return to room temperature and then try charging again. 3. If you have not used it for a long time or the battery exhausted, please charge it for 20 minutes to activate the battery. 4. Please charge it every three months if you do not use it for a long time.
Speaker does not connect with mobile device	1. On your device: – Disable and then enable the Bluetooth feature. – Delete your speaker from the Bluetooth list on your device, Connect again (see page 06). 2. Connect a different device. 3. Clear the speaker pairing list (Press and hold the "M" button to reset it). Connect again.



Problem	Solution
No sound or the volume abnormal	1. Check the volume setting of the mobile device 2. Reduce the volume to minimum on your speaker, and then increase it to maximum. 3. Use a different music source. 4. Connect a different mobile device
Stuck in Bluetooth mode while playing	1. Make sure that the mobile device is within the effective transmission range of the Bluetooth speaker (18m/60ft), and that Bluetooth has been enabled on it. 2. Make sure there are no obstacles between the speaker and the device, or no interference from other wireless signals.
Cannot be played in TF card mode	1. Refer to the user manual to confirm if it is in TF card or USB-C audio playback mode. 2. Make sure the audio files on the TF card are supported by the speaker.
The speaker can't be operated	Press and hold the power button for 10 seconds to force shutdown.
Other issues	Contact BOGASING customer service at: support@bogasing.com



Warranty Card

Dear customer, thank you for purchasing our products.
Please keep this warranty card properly in order to serve you better.

Maintenance records	Date	Malfunctions and causes
Product		
Model		
Name		
TEL/Phone		
Purchase date		
Address		



((BOGASING))

SHENZHEN BOGASING TECHNOLOGY CO.,LTD.

Nankeng Second Industrial Zone, Longgang District,
Shenzhen, Guangdong, China

Email: support@bogasing.com

www.bogasing.com



RoHS



Made in China

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.