

# 3 PK Indoor Remote Outlets

3635419




## INSTRUCTIONS:

1. Plug the receiver into a grounded-3-wire indoor outlet, and then plug the lights or devices to be controlled into the receiver.
2. Make sure there is power to the outlet the receiver is plugged into.
3. Remove the plastic battery tab from the battery compartment in the back of the remote control to activate CR2032, 3V pre-installed battery.
4. The red indicator light on the receiver is lit when the indoor unit is powered on.
5. Remote can control only one line, don't need set again.

## HELPFUL TIPS:

- Make sure the receiver is plugged into a working AC outlet.
- Make sure the receiver and connected equipment are turned on.
- Make sure the remote control ON button is pushed.
- Make sure the CR2032, 3V battery in the remote control is still functioning.

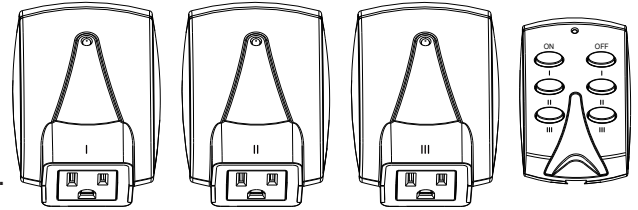

## BATTERY REPLACEMENT:

1. On the right bottom corner of the remote use your finger to slide out the battery holder.
2. Remove the spent battery and insert a new CR2032, 3V Button-Cell Battery with the "+" polarity mark facing up.
3. Slide the battery holder back inside.
4. Dispose the old battery in compliance with all applicable laws.

For detail information, contact your local solid waste authority.

## FCC COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT:

**CAUTION:** Changes or modifications to this unit expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation, If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

## WARNING:

- Do not dispose of batteries in fire. Batteries may explode or leak.
- Keep the batteries away from children and pets.
- Risk of fire.
- Do not exceed electrical ratings.
- For indoor use only.