

20 oz. DUAL VOLTAGE TRAVEL KETTLE



INSTRUCTION MANUAL

MODEL: EKT719

THANK YOU

for your purchase!

FOLLOW US FOR MORE KITCHEN
TIPS, HACKS, & INSPIRATIONS!



shopelitegourmet

LET'S GET COOKING!



Maxi-Matic, USA
18401 E. Arenth Ave
City of Industry, CA
91748-1227



shopelitegourmet.com
Visit our website to
contact us for support.
Register your product online!

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS	2
SHORT CORD PURPOSE	4
POLARIZED PLUG	4
PARTS IDENTIFICATION	5
BEFORE FIRST USE	6
HOW TO USE	6
CLEANING AND MAINTENANCE	7
WARRANTY POLICY	8
RETURN INSTRUCTIONS	9

IMPORTANT SAFEGUARDS

The Elite Brand takes consumer safety very seriously. Products are designed and manufactured with our valued consumers' safety in mind. Additionally, we ask that you exercise a level of caution when using any electrical appliance by following all instructions and important safeguards.

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

WARNING: When using electrical appliances, basic safety precautions should always be followed as below:

1. Always ensure that the voltage on the rating label corresponds to the main voltage in your home.
2. Incorrect operation and improper use can damage the appliance and cause injury to the user.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.
4. Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the manufacturer or qualified person in order to avoid an electrical hazard.
5. Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorized service agent.
6. Never immerse the unit in water or any other liquid for cleaning purposes.
7. Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the power source/outlet. Always unplug the unit when not in use, before cleaning or when adding or removing parts.
8. Do not use the appliance on a gas or electric cooking top or over or near an open flame.
9. The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
10. A short cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
11. Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
12. Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.

IMPORTANT SAFEGUARDS (cont.)

- Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension cord, ensure that the extension cord is suited to the power consumption of the appliance to avoid overheating of extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.
- This appliance is not suitable for outdoor use. Do not use for anything other than its intended use.
- Do not carry the appliance by the power cord.
- Do not leave the appliance unattended during use. Always unplug the unit when not in use or before cleaning.
- Always operate the appliance on a smooth, flat, stable surface. Do not place the unit on a hot surface.
- This appliance is set by the factory to operate at 120V. Refer to Operating Instructions section of this manual for conversion to 230V. Be sure the Dual Voltage Selector is in the Correct Voltage Position before operating.
- Before plugging appliance into a power source, Read the information regarding the Dual Voltage selector on Page 6 of this Instruction Manual.
- The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorized personnel.
- In case of technical problems, switch off the appliance, unplug from electrical outlet and do not attempt to repair it yourself. Return the appliance to an authorized service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with above mentioned precautions and instructions, could affect the safe operation of this product.
- Some countertop and table surfaces, such as Corian®, wood and/or laminates, are not designed to withstand prolonged heat generated by certain appliances. It is recommended by countertop manufacturers that a hot pad or trivet be placed under your appliance to prevent possible damage to the surface.
- CAUTION: DO NOT OVERFILL. IF KETTLE IS OVERFILLED, BOILING WATER MAY BE EJECTED CAUSING BURNS AND/OR SERIOUS INJURY.**
- NEVER ATTEMPT TO CLEAN THIS PRODUCT UNTIL IT HAS COMPLETELY COOLED.**
- DO NOT USE AUTOMATIC TIMERS IN CONJUNCTION WITH THIS PRODUCT.**

IMPORTANT SAFEGUARDS (cont.)

26. For use in The USA., the voltage selector switch should be set to 120V position. For use in several countries, the voltage selector may need to be placed in the 230V position. Confirm the voltage available in country of travel before using appliance.

NOTE: For connection to a 230V power supply, an Adapter with correct configuration will be needed for power/plug receptacle.

**SAVE THESE INSTRUCTIONS.
THIS PRODUCT IS FOR
HOUSEHOLD USE ONLY.**

SHORT CORD PURPOSE

Note: A short power cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a long cord.

Longer power-supply cords or extension cords may be used if care is exercised in their use.

If an extension cord is used: (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the product; (2) the extension cord should be arranged so that it will not drape over the counter top or tabletop where it can unintentionally be pulled on or tripped over by children or pets.

PARTS IDENTIFICATION



- A. Lid Lock Release Button
- B. Spout with Filter
- C. Indicator Light
- D. Lid
- E. On/Off Switch
- F. Foldable Handle
- G. Power Cord Port
- H. Removable Power Cord
- I. Voltage Selection Knob
(Located on bottom of kettle)

*** Before use, please select the correct voltage***

FOLD AND UNFOLD HANDLE

To unfold the handle, slightly pull until it clicks into place, you will hear a click sound. To fold handle, press towards kettle body to move back to its original position.

VOLTAGE SELECTION

If you are traveling to the the European Union of other countries that require 230V, you can switch voltage from 120V to 230V.

NOTE: For connection to a 230V power supply, an Adapter with correct configuration will be needed for power/plug receptacle. **(Not Included)**

NOTE: For consecutive boiling, please allow kettle to cool for 1 – 3 minutes in between uses.

BEFORE FIRST USE

Remove all packaging materials before using. Wipe clean the interior and exterior of the machine with a damp cloth. When using the kettle for the first time, it is recommended that you clean your kettle before use by boiling a full kettle (.6L/20oz.) of water twice and then discarding water.

1. Fully unwind the Power Cord and connect it to the Power Cord Port of the kettle.
2. **Confirm that the Dual Voltage Selector is in the Correct Voltage Position before operating. 120V for USA, 230V for EU & other countries.**
3. Place the appliance on a flat, level heat resistant surface. Do not place it on top of a metal surface.
4. Use only cold water when filling the kettle.
5. Use filtered water to reduce lime scale buildup.
6. The water level must not exceed the MAX mark. If the kettle is overfilled, boiling water may be ejected causing burns and/or serious injury.
7. Always make sure that the lid is tightly closed.

HOW TO USE

1. Open the lid by pressing the Lid Lock Release Button. Fill the kettle to the desired level. The water level must not exceed the MAX mark. If the kettle is overfilled, boiling water may be ejected causing burns and/or serious injury.
2. To close the lid, push down until it snaps into place.
3. Always place the kettle on a flat, level surface. Connect the Power Cord to the Cable Port of the appliance and insert the plug into wall outlet.
 - Check the power source voltage of your location to confirm that it coincides with the voltage of the kettle.
4. Switch the kettle ON by pressing the Power Switch. The indicator will illuminate showing that the water is being boiled.
5. After boiling, the kettle switches off automatically and the light will turn off. Disconnect the kettle from the electric supply.
6. This appliance is intended for household use only.

NOTE: You can stop the boiling process anytime during heating cycle by pressing the On/Off button to Off or removing the plug from the wall outlet. DO NOT unplug power cord from the port on the kettle body.

6. Questions? We're here to help!
Visit: shopelitegourmet.com for support on this product.



CAUTION:

- Never open the lid while water is boiling.
- Be careful when opening the lid; the water is very hot. Wait a few minutes for condensation to evaporate.
- After boiling water, the outside of the kettle can be very hot. Only grasp by the handle. Do not try to lift kettle body with both hands.
- Do not open the lid when pouring. If the kettle is overfilled, boiling water may be ejected.

CLEANING & MAINTENANCE

- Always disconnect the appliance from the power outlet and let it cool down completely before cleaning.
- Never immerse the kettle and cord in water!

REMOVAL OF MINERAL DEPOSITS AND LIME SCALE:

Mineral deposits in tap water may cause the kettle interior to discolor. To remove this build-up, use Liquid De-scaler, a simple to use, non-toxic cleaner.

Alternatively:

1. Pour 1 cup of white vinegar into the kettle and remainder with water to the MAX fill line (.6L/20 oz.) and allow to stand overnight. DO NOT BOIL!
2. Empty the solution from the kettle. Any remaining stains inside the kettle can be removed by rubbing with a damp cloth. Fill the kettle with clean water, bring to boil and then discard the water. Repeat and the kettle will then be ready to use. The outside of the kettle can be wiped with a damp cloth.

CLEANING APPEARANCE OF HOUSING:

Wipe the appearance of housing with a damp cloth or non abrasive cleaner, never use harsh chemical cleansers.



NOTE:

- Lime scale forms over time when water is heated. Though scale is natural and harmless, it may produce a powdery substance or mineral-like pieces that can get into your hot beverages and affect the taste. This kettle is designed with a concealed element to reduce scale build up.
- For consecutive boiling, please allow kettle to cool for 1 – 3 minutes in between uses.



CAUTION:

Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle.

LIMITED WARRANTY* ONE (1) YEAR
WARRANTY IS ONLY VALID WITH A DATED PROOF OF PURCHASE

PLEASE DO NOT RETURN TO STORE OF PURCHASE.

If you have any problems with this unit, contact Customer Service for support.

1. Your small kitchen appliance is warranted to the original purchaser to be free from any manufacturing defects under normal use and conditions for one (1) year, cord excluded. This Warranty applies only to the original purchaser of this product.
 2. Retail stores/merchants selling this product do not have the right to alter, modify, or in any way revise the terms and conditions of the warranty.
 3. If you use your appliance for household use and according to instructions, it should give you years of satisfactory service.
 4. At its sole discretion, Maxi-Matic USA will either repair or replace the product found to be defective during the warranty period.
 5. The repaired or replacement product will be in warranty for the remaining balance of the one-year warranty period and an additional one-month period.
 6. Consumer's remorse is not an acceptable reason to return a product to our Service Center.
 7. This limited warranty covers appliances purchased and used within the 50 U.S. states plus the District of Columbia and does NOT cover normal wear of parts or:
 - Damages caused by unreasonable use, neglect, normal wear and tear, commercial use, improper assembly or installation of product.
 - Damages caused in shipping.
 - Damages caused by replacement or resetting of house fuses or circuit breakers.
 - Defects other than manufacturing defects.
 - Breakage caused by misuse, abuse, accident, alteration, lack of proper care and maintenance, or incorrect current or voltage.
 - Lost or missing parts of the product. Parts will need to be purchased separately.
 - Damages of parts that are not electrical; i.e. cracked or broken plastic/glass, scratched/dented inner pots.
 - Damage from service or repair by unauthorized personnel.
 - Extended warranties purchased via a separate company or reseller.
 - Acts of nature such as fire, floods, hurricanes, tornadoes, etc.
- 8. This warranty does not apply to re-manufactured merchandise.**

Maxi-Matic, USA shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Apart from the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in time to the duration of the warranty.

*One Year Limited Warranty valid only in the 50 U.S. states plus the District of Columbia, excluding Puerto Rico and the Virgin Islands.

This warranty is effective only if the product is purchased and operated in the USA; product usage which is in violation of the written instructions provided with the unit will void this warranty. For international warranty, please contact the local distributor.

This warranty gives you special legal rights and you may also have other rights to which you are entitled which may vary by state, province, and/or jurisdiction.

**Any instruction or policy included in this manual may be subject to change at any time.

MAXI-MATIC, USA

18401 E. Arenth Ave. City of Industry, CA 91748

Visit: shopelitegourmet.com to contact us for support

- 8 Questions? We're here to help!
Visit: shopelitegourmet.com for support on this product.

RETURN INSTRUCTIONS

RETURNS:

- A. Any return of defective merchandise to the manufacturer must be processed accordingly by first contacting customer service to obtain an RA # (Return Authorization Number). We will not accept any returns of merchandise without an applicable RA #.
- B. **IMPORTANT RETURN INSTRUCTIONS.** Your Warranty depends on your following these instructions if you are returning the unit to Maxi-Matic, USA:
1. Carefully pack the item in its original carton or other suitable box with sufficient cushioning to avoid damage in shipping.
 2. Before packing your unit for return, be sure to enclose:
 - a) Your name, full address with zip code, daytime telephone number, and RA#,
 - b) A dated sales receipt or PROOF OF PURCHASE,
 - c) The model number of the unit and the problem you are having (Enclose in an envelope and tape directly to the unit before the box is sealed,) and
 - d) Any parts or accessories related to the problem.
 3. Maxi-Matic, USA recommends that you ship the package via UPS ground service for tracking purposes. **We cannot assume responsibility for lost or damaged products returned to us during incoming shipment.** For your protection, always carefully package the product for shipment and insure it with the carrier. C.O.D shipments cannot be accepted.
 4. **All return shipping charges must be prepaid by you.**
 5. Once your return has been received by our warehouse, Maxi-Matic, USA will repair or replace the product if it is defective in material or workmanship, subject to the conditions in paragraph B.
 6. **Maxi-Matic will pay the shipping charges to ship the repaired or replacement product back to you.**

ELITE CUSTOMER SERVICE CENTER



Maxi-Matic, USA
18401 E. Arenth Ave
City of Industry, CA
91748-1227



shopelitegourmet.com
Visit our website to contact us
for support.
Register your product online!



We take pride in the fact that Elite Gourmet products are continuously improving. To keep you well informed of these changes and to reduce paper consumption, we've included this QR code for you to scan and easily download the most recent updates to your product to your mobile device. Just access your camera, point at the QR code & your mobile device will do the rest.

FOLLOW US FOR MORE KITCHEN TIPS,
HACKS, & INSPIRATIONS!



shopelitegourmet

Elite is a registered trademark of Maxi-Matic, USA.
Copyright Elite by Maxi-Matic.

Actual product may vary from the images/illustrations in this manual
due to continual product improvement.

®



Elite Gourmet