

H5 英文说明书

材质工艺：128双铜+四色印刷

成品尺寸：95X160MM (骑马钉)

料号：



User Manual



H5



ozzle

Diffuser

Hair Dryer Bag

European Plug Adapter(Not applicable in the UK)

Specification:

Product name: High speed hair dryer

Model: H5 Supply Voltage: Dual Voltage

Voltage: AC100-240V~,50/60Hz

Power:1500W Ions: 200 million

Brushless Motor: 110,000RPM



Operating Instructions:

1. On/off: Off (○), On(—)

2. Speed settings: — (low speed),
 ≡ (high speed)

3. Cold air : Blue light Warm air : Green light
 Medium Heat : Orange light High Heat : Red light

≡ High speed
— ON / Slow Wind
○ Off

Dryer+nozzle

Dryer+magnetic diffuser

Hair Dryer Bag

CARE AND MAINTENANCE

1. Body maintenance

During daily use, if the surface of the machine is wet, please unplug the power supply immediately and wipe it with a dry cloth before use.
If the surface of the machine is dirty, please unplug the power supply and wipe it with a wrung towel.

2. Air inlet screen cleaning

Depending on the frequency of use, plan to regularly open the air inlet net every half a month or a month to clean dust and lint.

Hold the handle of the hair dryer with your left hand, pinch the back cover of the hair dryer with your right hand, and twist it counterclockwise to remove the back cover. Open the back cover to see the ultra-small hole stainless steel filter and nylon filter. The stainless steel filter can be cleaned with a cleaning brush or dry paper towel, and the nylon filter can be washed directly with water, but please note that the nylon filter must be kept dry when installed.



Rotate counterclockwise

Open the back cover

PRECAUTIONS

1. Do not repair, disassemble or modify the hair dryer by yourself.

2. If the power cord or plug is damaged, in order to avoid danger, please stop using it immediately and contact authorized repair center.

3.When using hot air, the wind blowing becomes cool, and sees fire from the inside of the hair dryer. Please consult or contact an authorized service center for repair.

4.Before the air outlet is cooled, the power cord should not be placed near the air outlet. The power cord should be Rollef up and then stored.

5.This machine does not have waterproof function, please do not wash or place the machine in standing water or damp surroundings.

6.Wipe the power cord and plug regularly with a cloth.

7.After each use, please make sure to turn off the power switch and unplug the cable.

8.Do not use corrosive solutions on the machine such as: alcohol, Tianna water,gasoline, nail remover, etc.The fuselage may cause product failure or parts cracking,discoloration,etc.

9.Do not wrap the power cord around the fuselage, it should be placed next to the machine in a loose loop.

10.Do not let the machine fall from high.

NEED TO LEARN MORE?

Visit www.slopehill.com

Or scan the QR code



Warranty Activation

US tollfree: +1 732 762 3574
DE: +49 6931090210
Email: support@slopehill.com

FC CPC

DIMENSION:



4.1inch

2.1 inch

7.3inch

PRODUCT CHARACTER

5 minutes quick drying

With Strong wind 110,000 rpm/BLDC high-speed motor fast drying, no need to use high temperature.

4 temperature modes

More suitable for personalized using needs, 3D nourishing hair, and intimately creating personalized hairstyles.

High-speed negative ions

High-speed airflow transports nano-negative ions from root to tip, reducing static and firizz. Helps condition hair while creating a smoother look.

Precise and intelligent temperature control technology

The technology monitors the temperature of the air outlet and transmits the data to the microprocessor to ensure a constant temperature duringuse, prevent the hair from drying out and split ends due to the loss of moisture and nutrients, making the hair naturally strong and less damage by overheating.

Low electromagnetic radiation

By changing the structure of the movement, the air outlet is close to zero electromagnetic wave radiation, which children and pregnant women can also use it with safe.

IMPORTANT SAFETY INSTRUCTIONS:

When using electrical appliances, especially when children are present, basic safetyprecautions should always be followed, including the following:
READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER.

DANGER – As with most electrical appliances, electrical parts are electrically live even when the switch is off. To reduce the risk of death by electric shock: Always "unplug it"immediately after using. Do not use while bathing. Do not place or store appliance where it can fall or be pulled into a tub or sink. If an appliance falls into water, "unplug it"immediately.

WARNING – To reduce the risk of burns, electrocution, fire, or injury to persons:

- An appliance should never be left unattended when plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water.
- Keep the cord away from heated surfaces.
- Do not wrap the cord around the appliance.
- Never use while sleeping.
- Do not use an extension cord with this appliance.