



USER'S MANUAL

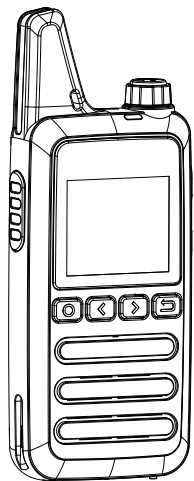

◆◆ Product Overview

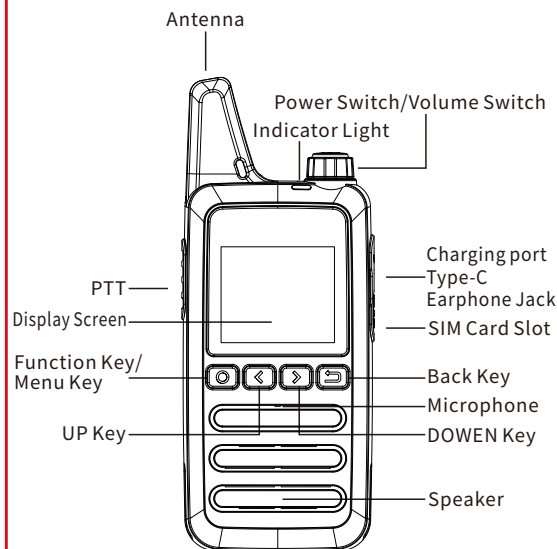

◆◆ Charging Instructions

- 1.The battery is not charged in the factory,please charge the battery under the environmental temperature 0-45°C before using.
- 2.After purchasing or long-term storage(more than two months),charging the battery for the first time can not reach its saturation capacity,repeat charge/discharge for twice or three times to make battery capacity achieve the best state.
- 3.Before charging,please power off the transceiver,using the radio during charging may affect correct charging.
- 4.If the battery has been charged fully,please do not charge it again,otherwise the service life of the battery may be shorten or may be damaged.
- 5.If the service time is significantly reduced even after completely correct charging,the battery can not be used any more,please replace a new battery.

◆◆ Basic Operations

Power Switch/Volume Adjustment

Turn the power switch knob clockwise to turn on the transceiver,and adjust the volume by turning the volume switch;turn the power switch knob counterclockwise to turn it off.

◆◆ Functions Guide

Key Operations

●Group Selection

Main Menu → Groups,select the groups with Up/Down keys,then press the Menu key to confirm.

●Single Call Selection

Main Menu → Member List,use the Up/Down keys to select the target for the single call,press the Menu key to enter the single call interface,then press the PTT key to initiate communication.

●Group Talk

After the transceiver is successfully logged in,press the PTT key to activate the group communication.

●Other Settings

Press the Menu key to access the menu,in Settings,configure: keypad tone,screen brightness,screen timeout duration,call alert tone.

Navigate to Main Menu → About the device to view:
device account,IMEI number,ICCID、device model、software version、key wake-up、incoming call wake-up、voice prompts、power-saving mode、signal value、service information、call pop-up、software update、weather forecast (supported on select platforms)、location(supported on select platforms).

Functions

●Single Call

Steps:Go to the member list,select a member,then press the Menu key to enter the single call interface,both parties can press the PTT key to initiate a single call.

●Group Call

After joining a group,press the PTT key,all members in the group can receive voice communication.

Steps:

Navigate to Main Menu→Groups→Select a Group,after the voice prompt confirms group entry,press the PTT key to speak from any interface,all members in the group can receive the message.

●Create Temporary Group

Specify members to add to a temporary group (requires platform support).

Steps:

1. Go to Main Menu→Create Temporary Group.
2. Select two or more members,then press the PTT key to create the temporary group.
3. Press the PTT key to initiate communication within the temporary group.
4. Members can exit the temporary group by pressing the Back key.
- 5.The creator can disband the temporary group by pressing the Back key,and all members exit automatically.

Talk Rules

When an active group call is initiated,other group members cannot receive any other incoming communications.

Single Call:In the member list,select a member and press the confirm key to initiate a single call.During a single call,the two devices involved cannot be reached by any group call,cannot receive single calls from other members,and cannot form a temporary group.

PTT Key

Speak clearly into the microphone for best audio quality.

Standby Indicator

Green light blinks every 10s.

Charging Status

Red light during charging;
Green light when fully charged.

◆◆ Technical Specifications:

The complete machine part	
Network	Mobile/Unicom/Telecom
Product Size	135*55*22mm
Operating Temperature	-20°C-50°C
Charging Temperature	0°C-45°C

▲ We May Change The Specifications For Technical Improvement Without Prior Notice.

◆◆ Guarantee

Model Number: _____

Serial Number: _____

Purchasing Date: _____

Dealer: _____ Telephone: _____

User' s Name: _____ Telephone: _____

Country: _____ Address: _____

Post Code: _____ Email: _____

Remarks:

- 1.This guarantee card should be kept by the user,no replacement if lost.
 - 2.The user can get warranty and after-sales service as below:
 - Contact the seller where you buy.
 - Products repaired by our local repair center
 - 3.For warranty service,you will need to provide a receipt proof of purchase from the actual seller for verification
- Exclusions from Warranty Coverage:
- 1.To any product damaged by accident.
 - 2.In the event of misuse or abuse of the product or as a result of unauthorized alterations or repairs.
 - 3.If the serial number has been altered,defaced,or removed.

FCC compliance statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference including received interference that may cause undesired operation.

The grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user’s authority to operate the equipment.

Replacement of any transmitter component (crystal, semiconductor, etc.) not authorized by the FCC equipment authorization for this radio could violate FCC rules.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF Exposure Statement:

SAR tests are conducted using standard operating positions accepted by FCC with the device transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. Before a new model is an available for sale to the public, it must be tested and certified to the FCC that is does not exceed the exposure limit established by the FCC. Tests for each product are performed in positions and locations as required by the FCC. For body worn operation, this device has been tested and meets the FCC RF exposure guidelines when used with and accessory designated for this product or when used with and accessory that contains no metal. To maintain compliance with FCC RF exposure guidelines, hold the transmitter and antenna at least 1 inch (2.5 centimeters) from your face and speak in a normal voice, with the antenna pointed up and away from the face.

