


beurer

MP 64

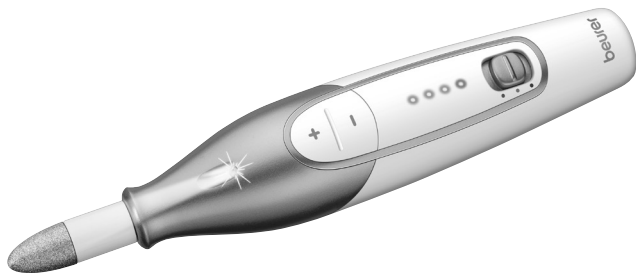

EN Manicure/pedicure set
Instructions for use2

CE



Read these instructions for use carefully and keep them for later use, be sure to make them accessible to other users and observe the information they contain.

Warning

- The device is only intended for domestic/private use, not for commercial use.
- This device may be used by children over the age of 8 and by people with reduced physical, sensory or mental skills or a lack of experience or knowledge, provided that they are supervised or have been instructed on how to use the device safely, and are fully aware of the consequent risks of use.
- Children must not play with the device.
- Cleaning and user maintenance must not be performed by children unless supervised.
- Do not use the device if it shows signs of damage or does not function properly. In such cases, contact Customer Services.
- Repairs must only be carried out by Customer Services or authorised suppliers.
- If the mains connection cable of this device is damaged, it must be disposed of. If it cannot be removed, the device must be disposed of.

Dear customer,

Thank you for choosing one of our products. Our name stands for high-quality, thoroughly tested products for applications in the areas of heat, gentle therapy, blood pressure/diagnosis, weight, massage, beauty and air. Read these instructions for use carefully and keep them for later use, be sure to make them accessible to other users and observe the information they contain.

With kind regards,
Your Beurer team

Table of contents

1. Included in delivery.....	3	7. Cleaning and maintenance....	11
2. Signs and symbols	4	8. Accessories and	
3. Warnings and safety notes	5	replacement parts	12
4. Device description	7	9. Disposal.....	12
5. Initial use	7	10. Technical specification	13
6. Use	8	11. Warranty/service.....	13











1. Included in delivery




Check that the device packaging has not been tampered with and make sure that all contents are present. Before use, ensure that there is no visible damage to the device or accessories and that all packaging material has been removed. If you have any doubts, do not use the device and contact your retailer or the specified Customer Services address.

- 1 x Manicure/pedicure set
- 10 x high-quality attachments made from sapphire and felt
- 1 x Protective cap for nail dust
- 1 x Mains adapter with micro USB cable
- 1 x Storage bag
- 1 x These instructions for use

2. Signs and symbols

The following symbols are used in these instructions for use, on the packaging and on the type plate for the device:

 WARNING	Warning notice indicating a risk of injury or damage to health.
 CAUTION	Safety note indicating possible damage to the device/accessory.
 Note	Note on important information.
	Observe the instructions for use
	Disposal in accordance with the Waste Electrical and Electronic Equipment EC Directive – WEEE
	Manufacturer
	The device is double protected and therefore corresponds to protection class 2.
	Only use indoors.
	Dispose of packaging in an environmentally friendly manner
	This product satisfies the requirements of the applicable European and national directives.

	Certification symbol for products that are exported to the Russian Federation and members of the CIS
	Energy efficiency class 6
	Short-circuit-proof safety isolating transformer

3. Warnings and safety notes

Use of this device can create a considerable amount of heat on your skin or nails.

- Check the results regularly during the treatment. It is particularly important for diabetics to do so as they have a lower sensitivity to pain and could injure themselves more easily. The attachments 1, 2, 3, 4 and 5, which are included, are generally suitable for diabetics as they are only intended for use over larger areas and not spot treatment. In contrast, attachments 6 to 10 are less suitable for diabetics. Always work very carefully. If you have any doubts, consult your doctor.
- This device may only be used for the purpose for which it is designed and in the manner specified in the instructions for use. Any form of improper use can be dangerous.
- The device may heat up faster during prolonged, intensive use, for example to sand off calluses on the feet. Allow the device to cool down for a relatively long time between individual applications to prevent skin burns. For your own safety, continuously check the heat development of the device. This applies in particular to persons that are not as sensitive to heat as others.
- The device is suitable for private use, and not for medical or commercial purposes.
- For hygienic reasons, the device may only be used on one person.
- The manufacturer is not liable for damage resulting from improper or incorrect use.
- Keep packaging material away from children to avoid danger of suffocation.
- Check the device frequently for signs of wear and tear or damage. If there are signs indicating the above or if this device was used improperly, it must be returned to the manufacturer or retailer before further use.

- In the event of defects and operational faults, switch off the device immediately.
- Never attempt to repair the device yourself!
- Only use the device with the supplied accessories.
- Never leave the device unattended when it is in operation, in particular if there are children nearby.
- Do not use on animals.
- Do not allow the device to come into contact with water (except in the case of cleaning with a slightly damp cloth). Water must never enter the device. Never submerge the device in water. Never use the device in the bath, in the shower, in a swimming pool or above a sink filled with water. If water enters the housing of the device nevertheless, immediately disconnect the device from the mains supply and contact your electronics retailer or Customer Services.
- Please ensure that no hair can get caught in the rotating attachments when using the device. Use a hair tie for your safety.
- Keep the device away from sources of heat.
- Do not use the device under a blanket, pillow or cushion, etc.
- Hands must always be dry when using the device and mains part plug.
- Do not pull on the mains cable or on the device to disconnect the mains part plug from the socket.
- The mains part plug must only be operated using the voltage specified on it.
- The device may only be operated with the supplied mains part plug.




Notes on handling batteries

- If your skin or eyes come into contact with fluid from a rechargeable battery cell, flush out the affected areas with water and seek medical assistance.
- **⚠ Choking hazard!** Small children may swallow and choke on batteries. Store batteries out of the reach of small children.
- Protect batteries from excessive heat.
- **⚠ Risk of explosion!** Never throw batteries into a fire.
- Do not disassemble, split or crush the batteries.
- Only use chargers specified in the instructions for use.
- Batteries must be charged correctly prior to use. The instructions from the manufacturer and the specifications in these instructions for use regarding correct charging must be observed at all times.

- Fully charge the battery prior to initial use.
- In order to achieve as long a battery service life as possible, fully charge the battery at least twice per year.

4. Device description

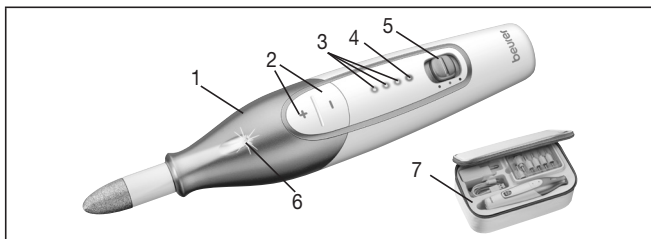

1. Manicure/pedicure device	5. Sliding switch for clockwise/anti-clockwise rotation and off position
2. +/- speed regulation	6. LED light
3. Speed setting display	7. Storage bag
4. LED display for direction of rotation (red for anti-clockwise rotation; green for clockwise rotation)	

5. Initial use


This manicure/pedicure set is equipped with high-quality attachments. The basic version includes 10 attachments made from a durable sapphire coating and polishing felt.

Together with three levels of adjustable speed regulation and clockwise/anti-clockwise rotation, this allows for professional foot and nail care at the standard of a pedicurist. All the attachments can be easily integrated into the storage bag of the MP 64.

The integrated LED light additionally creates ideal light conditions during application.

To put the device into operation, proceed as follows:

- Remove the packaging.
- Check the device, mains adapter and cable for damage.
- Ensure that the cable does not pose a trip hazard while the device is being charged.
- Connect the device to the mains. When doing so, the device must be **switched off**, with the sliding switch in the middle position. If the red/green LED above the sliding switch is flashing, this means the device is switched on, and therefore cannot be charged.
- Charge the device for approximately 3 hours before the first use.
- When the 3 blue charger indicator lights flash continuously, it means the battery is charging. Once all 3 LEDs are permanently illuminated, the device is fully charged. You can now begin using the device on battery power.
- If the blue LEDs flash quickly (1, 2 or 3 LEDs depending on the speed setting) during battery operation, this indicates that the battery is dead.
- You can charge the device by plugging it into the mains, or alternatively using the USB cable.
- One charge is sufficient for approx. 2 hours of cordless operation.

 The device switches off automatically after 20 minutes. After this time, have a break of at least 15 minutes to prevent the motor from overheating.

6. Use

General

- This device is intended for the treatment of hands (manicure) and feet (pedicure) only.
- Make sure that the device is switched off beforehand.
- Select the desired attachment part and carefully press it onto the axle of the device. To remove, pull apart the attachment and the device in opposing directions.
- Switch on the device by moving the sliding switch down (anti-clockwise rotation, LED lights up red) or up (clockwise rotation, LED lights up green).
- You can select the speed of the drive axle using the plus (+) and minus (-) buttons. Start each application at a low speed and then increase as required.

- Blue LEDs light up on the surface of the device depending on the selected speed.
- All filing and callus attachments are coated with a sapphire grain. This guarantees a long service life and ensures practically no wear.
- Do not press too hard and always carefully move the attachments towards the area to be treated.
- Move the device over the area to be treated and apply slight pressure while slowly moving the device in circles.
- Please note that the callus attachments show reduced performance on soaked or wet skin. For this reason, we ask that you do not soak the foot in water before treatment.
- To maintain natural skin protection, do not remove all calluses.
- Ensure the axle can always rotate freely. The axle must not be permanently blocked, as otherwise the device will become too hot and may become damaged.
- Apply moisturiser to the treated areas after each use.

i The device switches off if an attachment is prevented from moving for approx. 3 seconds during use. To restart the device, switch it briefly off and then on again.

! Important:

Check the results during the treatment. This applies in particular for diabetics as they have less sensitive hands and feet.

Attachments

Since the attachments are of a professional quality and improper use can lead to injury, we ask that you handle the attachments carefully. At high speeds in particular, we advise that you proceed with caution.

The following attachments are included with the device:



1 – Sapphire wheel, fine

Fine sapphire wheel, for filing and treating nails. The special feature of this sapphire wheel is that the internal sanding disc rotates whereas the external housing does not. This makes it possible to file nails precisely without the risk of burning the skin with the quickly rotating wheel.



2 – Sapphire wheel, coarse

Coarse sapphire wheel, for filing and treating nails. This attachment makes it possible to shorten even thick nails yourself. However, also take care during use as it quickly removes large areas of the nail.



3 – Sapphire cone

For removing dry or hard skin or calluses on the sole of the foot or heel, and treating nails.



4 – Felt cone

For smoothing and buffing the tips of the nails after filing and for cleaning the surface of the nails. Always use circular movements to buff the nails and never let the felt cone rest in one position as the friction can create a considerable amount of heat.



5 – Fine sapphire callus file

For removing calluses on the soles of the feet and heel. This attachment is intended for application on large areas.



6 – Crystal callus file

Coarse crystal callus attachment to quickly remove thick hard skin or large calluses on the sole of the foot and heel.



7 – Cylindrical cutter

For buffing rough surfaces and coarse smoothing of toenails. For this purpose, please place the cylindrical cutter horizontally on the nail surface and remove the nail layer by moving the device in slow circles.



8 – Flame-shape cutter

Removes ingrown nails. For this purpose, please carefully position the flame-shape cutter on the area to be treated and remove the necessary nail parts.




9 – Nail cutter

The nail cutter is a precision tool. Please exercise care when using this attachment, as careless use can quickly result in injury. This attachment can be used to expose ingrown nails and cut dead nail parts. Operate the nail cutter at a low speed.



10 – Sapphire cutter, round

This accessory attachment is for carefully removing corns. If you are using this attachment, please keep in mind that you may soon penetrate deeper into the skin when removing the skin layers of the corn, therefore damaging the periosteum

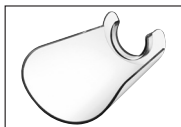

11 – Protective cap for nail dust

This attachment ensures nail dust and skin cells are collected.

When filing, always move from the outside of the nail towards the tip!

Check the results regularly during the treatment. Stop treatment as soon as it becomes unpleasant.

7. Cleaning and maintenance

Always unplug the mains part from the socket before cleaning the device.

- Clean the device with a slightly damp cloth. If it is very dirty, you can also moisten the cloth with a mild soapy solution.
- For hygiene reasons, you may use alcohol and a cloth or brush to clean the attachments if required. Please dry carefully afterwards.
- Do not drop the device.
- Please make sure that no water enters the device. If this should happen, only reuse the device once it has fully dried out.

- Do not use any chemical or abrasive cleaning agents.
- Never immerse the device or mains adapter in water or other liquids.

8. Accessories and replacement parts

Replacement parts and wearing parts are available from the corresponding listed service address under the stated material number.

Designation	Item number and/or order number
Sapphire wheel, fine	162.750
Sapphire wheel, coarse	162.751
Sapphire cone	162.752
Felt cone	162.753
Fine sapphire callus file	162.754
Crystal callus file	164.064
Cylindrical cutter	162.755
Flame-shape cutter	162.756
Nail cutter	164.066
Sapphire cutter, round	164.065
Protective cap for nail dust	163.755

Subject to technical changes

9. Disposal

For environmental reasons, do not dispose of the device in the household waste at the end of its useful life. Dispose of the device at a suitable local collection or recycling point in your country. Dispose of the device in accordance with EC Directive – WEEE (Waste Electrical and Electronic Equipment). If you have any questions, please contact the local authorities responsible for waste disposal.



The empty, completely flat batteries must be disposed of through specially designated collection boxes, recycling points or electronics retailers. You are legally required to dispose of the batteries.

The codes below are printed on rechargeable batteries containing harmful substances:

Pb = Battery contains lead,

Cd = Battery contains cadmium,

Hg = Battery contains mercury.



10. Technical specification

Supply	Input: 100-240 V ~ 50/60 Hz, 0.2 A Output: 5.0 V --- 1.0 A, 5.0 W
Dimensions	155 x 37.4 x 38.3 mm
Average active efficiency	$\geq 73,62\%$
No-load power consumption	$\leq 0,09$ W
Weight	approx. 133 g
Battery: Capacity Nominal voltage Type designation	500 mAh 3.7 V Lithium-ion

Subject to technical changes

11. Warranty/service

Beurer GmbH, Söflinger Straße 218, 89077 Ulm, Germany (hereinafter referred to as “Beurer”) provides a warranty for this product, subject to the requirements below and to the extent described as follows.

The warranty conditions below shall not affect the seller’s statutory warranty obligations which ensue from the sales agreement with the buyer.

The warranty shall apply without prejudice to any mandatory statutory provisions on liability.

Beurer guarantees the perfect functionality and completeness of this product.

The worldwide warranty period is 3 years, commencing from the purchase of the new, unused product from the seller.

The warranty only applies to products purchased by the buyer as a consumer and used exclusively for personal purposes in the context of domestic use. German law shall apply.

During the warranty period, should this product prove to be incomplete or defective in functionality in accordance with the following provisions, Beurer shall carry out a repair or a replacement delivery free of charge, in accordance with these warranty conditions.

If the buyer wishes to make a warranty claim, they should approach their local retailer in the first instance: see the attached “International Service” list of service addresses.

The buyer will then receive further information about the processing of the warranty claim, e.g. where they can send the product and what documentation is required.

A warranty claim shall only be considered if the buyer can provide Beurer, or an authorised Beurer partner, with

- a copy of the invoice/purchase receipt, and
- the original product.

The following are explicitly excluded from this warranty:

- deterioration due to normal use or consumption of the product;
- accessories supplied with this product which are worn out or used up through proper use (e.g. batteries, rechargeable batteries, cuffs, seals, electrodes, light sources, attachments and nebuliser accessories);
- products that are used, cleaned, stored or maintained improperly and/or contrary to the provisions of the instructions for use, as well as products that have been opened, repaired or modified by the buyer or by a service centre not authorised by Beurer;
- damage that arises during transport between manufacturer and customer, or between service centre and customer;
- products purchased as seconds or as used goods;
- consequential damage arising from a fault in this product (however, in this case, claims may exist arising from product liability or other compulsory statutory liability provisions).

Repairs or an exchange in full do not extend the warranty period under any circumstances.



Beurer GmbH • Söflinger Str. 218 • 89077 Ulm (Germany)
www.beurer.com • www.beurer-healthguide.com
www.beurer-gesundheitsratgeber.com



570.37_MP64_2020-01-29_05_IM1_BEU_EN