



2 OUTLET HOSE FAUCET TIMER

IMPORTANT PLEASE READ!

 


WHEN EXPECTING FREEZING TEMPERATURES, TIMERS SHOULD BE REMOVED FROM THE HOSE FAUCET AND STORED INDOORS TO AVOID POTENTIAL FREEZE DAMAGE.



FILTER TRAPS DIRT PARTICLES, PROLONGING LIFE OF TIMER. CLEAN FILTER REGULARLY AND REPLACE IF WORN.

TIMER FEATURES

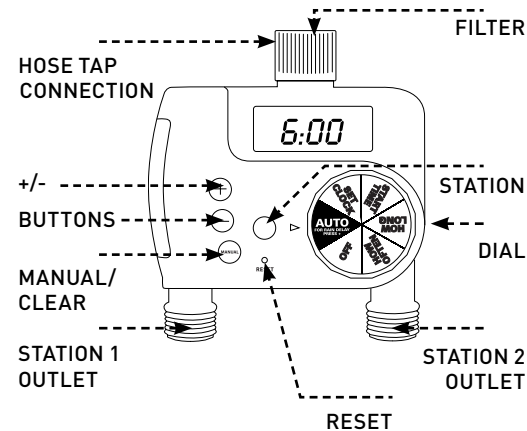


DIAL—Rotate the dial to customize your watering schedule

STATION—Press to select the station you want to program

RESET—Press to clear all programming

MANUAL/CLEAR—Press to water manually or to clear programming within a specific program

 +/- Buttons—Use these buttons to adjust time and system setup

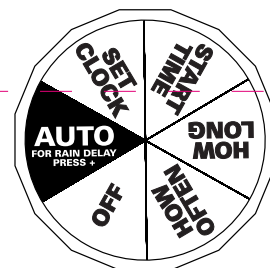

AUTO—Timer waters according to your customized schedule for both stations

SET CLOCK—Set the time of day

START TIME—Select what time you would like each Station to start

HOW LONG—Determine how long to water each Station

HOW OFTEN—Choose how often you will water each Station

OFF—Turn off all watering

QUICK START

 
INSTALLING THE BATTERIES

1. Remove the tray on the back of the timer by sliding or pulling it out.
2. Insert two AA (1.5V) alkaline batteries (not included) and replace the tray.

NOTE: Firmly replace the battery tray to insure water resistance and increase battery life. You will know the battery tray is fully inserted if it does not pull out easily.


PROGRAMMING THE TIMER

SET CLOCK

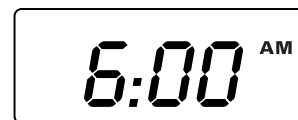

1. Turn dial to SET CLOCK.
2. Using the +/- buttons, set the time of day, including AM and PM.
3. Turn dial to save changes.

 START TIME

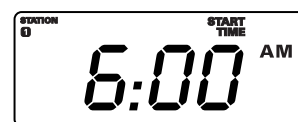

1. Turn dial to START TIME.
2. Select the station you would like to program by pressing the STATION button.
3. Using the +/- buttons, set your start time, including AM and PM.
4. Turn dial to save changes.

HOW LONG



1. Turn dial to HOW LONG.
2. Select the station you would like to program by pressing the STATION button.
3. Using the +/- buttons, select watering duration from 1 to 240 minutes.
4. Turn dial to save changes.

HOW OFTEN



1. Turn dial to HOW OFTEN.
2. Select the station you would like to program by pressing the STATION button.
3. Using the +/- buttons, set your watering frequency. You can choose to water every 6 hours, 12 hours, or from 1 to 7 days.



P 801 295 9820
F 801 951 5815
www.fluid-studio.net
1065 South 500 West
Bountiful, Utah 84010

PROOF NO: 3

DATE: 09.05.13

DES: SH SPCK:

JOB NO: N/A

CLIENT: ORBIT

SKU: 58910

UPC: N/A

FILE NAME: 58910-24 rA.indd

 
SOFTWARE: InDesign CS6

DIMENSIONS:

FLAT: W: 12.0" H: 6.0"

FINISHED: W 3.0" D: 0 H 3.0"

COLORS



ADDITIONAL INSTRUCTIONS:

- Font sizes cannot be smaller than 7 pt.
- Proofing Code:

Printers are responsible for meeting print production requirements. Any changes must be approved by the client and Fluid Studio.

PRINTED PIECE MUST MEET DESIGNATED SPECIFICATIONS ON THIS FORM.

© 2013 Fluid Studio. This work is the property of Fluid Studio, and cannot be used, reproduced or distributed in any way without their express permission.



NOTE: 1 is every day, 2 is every other day, etc.

4. Turn dial to save changes.

Congratulations! Your timer is now programmed. Turn your dial to AUTO to allow your timer to water according to programmed time, station, duration, and frequency.

ADDITIONAL FEATURES

 
RAIN DELAY



Rain delay allows you to postpone watering for a set period of time. To access the rain delay, follow the steps below.

1. With the dial on AUTO, press the + button to select a delay of 24 hrs, 48 hrs, or 72 hrs.
2. Screen will flash between clock and hours remaining before programmed cycle resumes.
3. To remove rain delay, turn dial to OFF and then back to AUTO.

MANUAL/HAND WATERING

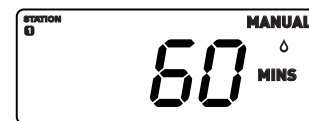

This feature allows you to water without interrupting your set schedule. To access this feature, follow the steps below.

1. With the dial on AUTO, press the MANUAL button.
2. Select the station you would like to program by pressing the STATION button.
3. Use the + and - buttons to select watering time, from 1 to 240 minutes.

NOTE: There may be a slight delay between the time the manual button is pressed and when watering begins.

To stop manual watering, turn the dial to OFF. Turn the dial back to AUTO to resume your programmed watering schedule.

TROUBLESHOOTING

WATER DOES NOT COME ON AT DESIRED TIME.

CHECK IF:

- Clock is set to correct time, including AM and PM.
- Start time is set to desired time, including AM and PM.
- Rain Delay is on.

TIMER DOES NOT WATER.

CHECK IF:

- Timer is set to AUTO.
- Hose faucet is on.
- Batteries are low.
- Clock is set to correct time, including AM and PM.
- Rain Delay is on.

WATER WON'T TURN OFF.

CHECK IF:

- HOW LONG is set to desired time.
- Start times begin after previous watering cycle has run through all stations and set durations.



Orbit® Irrigation Products, Inc.
North Salt Lake, UT 84054

© 2013 Orbit Irrigation Products, Inc.
All rights reserved. All trade names are registered trademarks of respective manufacturers listed.

PN 58910-24 rA