



GLASS DOOR DISPLAY FREEZER

Model SCFU1375

Instruction Manual

BEFORE USE, PLEASE READ AND FOLLOW ALL SAFETY RULES AND OPERATING INSTRUCTIONS.

Write Serial No. (on back of unit) here:

**Felix Storch, Inc.
770 Garrison Avenue
Bronx, NY 10474
www.summitappliance.com**

TABLE OF CONTENTS

Appliance Safety	3
Important Safeguards	3-4
Location of Parts	5
Technical Information	5
Installation Instructions	6-7
Moving and Installing Your Appliance	6
Electrical Connection	6-7
Extension Cord	7
Operating Your Appliance	7-8
Turning On the Unit	7
Storing Items in the Unit	7
Setting and Adjusting the Temperature	7-8
Defrosting the Unit	8
Interior Lights	8
Door Lock	8
Shelves	8
Normal Phenomena	8
Care and Maintenance	9-10
Cleaning Your Appliance	9
Bulb Replacement	9
Power Failure	9
Vacation Time	9
Moving Your Appliance	10
Power Cord	10
Energy Saving Tips	10
Troubleshooting	11
Limited Warranty	12



APPLIANCE SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the Safety Alert Symbol. The symbol alerts you to potential hazards that can kill or injure you and others. All safety messages will follow the Safety Alert Symbol and either the words "DANGER" or "WARNING".



Danger means that failure to heed this safety statement may result in severe personal injury or death.



Warning means that failure to heed this safety statement may result in extensive product damage, serious personal injury, or death.

All safety messages will alert you about the potential hazard, tell you how to reduce the chance of injury, and let you know what can happen if the instructions are not followed.

IMPORTANT SAFEGUARDS



Before the appliance is used, it must be properly positioned and installed as described in this manual, so read the manual carefully. To reduce the risk of fire, electrical shock or injury when using the appliance, follow basic precautions, including the following:



- Plug into a grounded 3-prong outlet, do not remove grounding prong, do not use an adapter, and do not use an extension cord.
- Replace all panels before operating.
- It is recommended that a separate circuit serving only your appliance be provided. Use receptacles that cannot be turned off by a switch or pull chain.
- Never clean appliance parts with flammable fluids. These fumes can create a fire hazard or explosion. And do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.
- Before proceeding with cleaning and maintenance operations, make sure the power line of the unit is disconnected.

- Do not connect or disconnect the electric plug when your hands are wet.
- Unplug the appliance or disconnect power before cleaning or servicing. Failure to do so can result in electrical shock or death.
- Do not attempt to repair or replace any part of your appliance unless it is specifically recommended in this manual. All other servicing should be referred to a qualified technician.

WARNING

FOLLOW WARNING CALLOUTS BELOW ONLY WHEN APPLICABLE TO YOUR MODEL

- Use two or more people to move and install the appliance. Failure to do so can result in back or other injury.
- To ensure proper ventilation for your appliance, the front of the unit must be completely unobstructed. Choose a well-ventilated area with temperatures above 60°F (16°C) and below 90°F (32°C). This unit must be installed in an area protected from the elements, such as wind, rain, water spray or drips.
- The appliance should not be located next to ovens, grills or other sources of high heat.
- The appliance must be installed with all electrical, water and drain connections in accordance with state and local codes. A standard electrical supply (115 V AC only, 60 Hz), properly grounded in accordance with the National Electrical Code and local codes and ordinances, is required.
- Do not kink or pinch the power supply cord of the appliance.
- The size of the fuse (or circuit breaker) should be 15 amperes.
- It is important that the appliance be leveled in order to work properly. You may need to make several adjustments to level it.
- All installations must be in accordance with local plumbing code requirements.
- Make certain that the pipes are not pinched, kinked or damaged during installation.
- Check for leaks after connection.
- Never allow children to operate, play with or crawl inside the appliance.
- Do not use solvent-based cleaning agents or abrasives on the interior. These cleaners may damage or discolor the interior.
- Use this appliance only for its intended purpose as described in this *Instruction Manual*.
- Keep fingers out of the “pinch point” areas. Clearances between the doors and between the doors and cabinet are necessarily small. Be careful closing doors when children are in the area.

DANGER

Risk of child entrapment!


Child entrapment and suffocation are not problems of the past. Junked or abandoned appliances are still dangerous, even if they will “just sit in the garage a few days”.

Before discarding your old refrigerator:

- *Take off the doors.*
- *Leave the shelves in place so that children may not easily climb inside.*

- SAVE THESE INSTRUCTIONS -

LOCATION OF PARTS

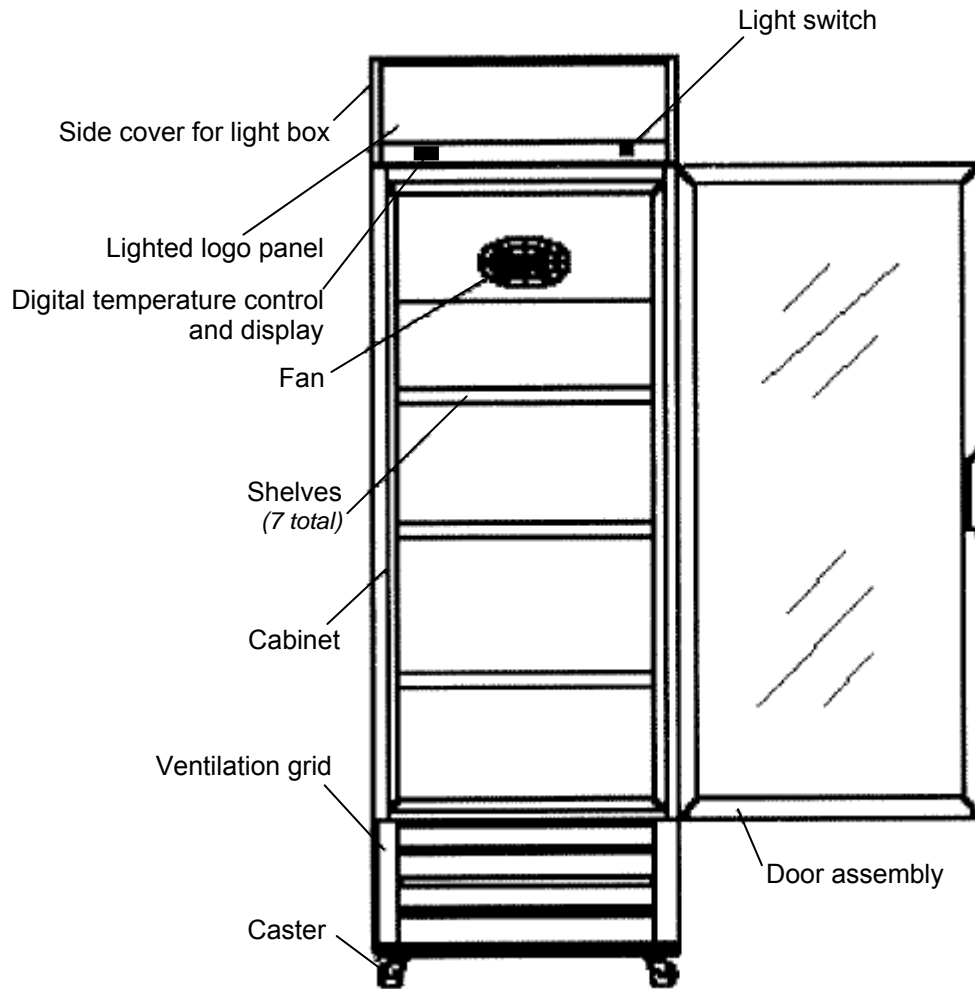

TECHNICAL INFORMATION

Model:	SCFU1375
Installation:	Free-standing
Capacity:	11.2 cubic feet
Electrical Input:	115V AC / 60Hz
Rated Current:	1.4A
Storage Temperature:	-0.4°F (-18°C)
Refrigerant:	R404A (350 g)
Unit weight:	220 lbs
Unit Dimensions:	23.6"W x 24.8"D x 74.8"H

INSTALLATION INSTRUCTIONS

- *This appliance is meant for free-standing installation; it should not be built-in.*
- *Do not put heavy items on top of the unit.*
- *Do not store or install the appliance outdoors.*
- *This appliance is designed for the storage and display of frozen items. Do not use it to store medicine or other medical products.*

Moving and Installing Your Appliance

- When transporting, keep the unit vertical as much as possible. The angle between the vertical and the side of the unit should never exceed 40° since this could affect the compressor and result in abnormal operation.
- After unpacking the unit, remove the packing materials and place the unit on a level and sturdy floor near a power socket.
- Leave at least 4" of space between the back of the unit and the wall for ventilation. Leave space enough to allow the door to swing open 160°.
- Keep the unit away from heat sources and avoid direct sunlight.
- Never place the unit in a location with high humidity or where water can reach it.
- It is recommended that you install the appliance in a place where the ambient temperature is between 72° and 78°F (23°-26°C). If the ambient temperature is above or below the recommended temperatures, the performance of the unit may be affected. For example, placing your unit in extreme cold or hot conditions may cause interior temperatures to fluctuate.

Electrical Connection

WARNING

Improper use of the grounded plug can result in the risk of electrical shock. If the power cord is damaged, have it replaced by a qualified electrician or an authorized service center.

Never ground the unit through a gas pipe, tap water pipe or the grounded wire of a single-phase power supply.

This appliance should be properly grounded for your safety. The power cord of this appliance is equipped with a three-prong plug which mates with standard three-prong wall outlets to minimize the possibility of electrical shock.

Do not under any circumstances cut or remove the third (ground) prong from the power cord supplied. For personal safety, this appliance must be properly grounded.

This appliance requires a standard 115/120 Volt AC ~ 60Hz three-prong grounded electrical outlet. Have the wall outlet and circuit checked by a qualified electrician to make sure the outlet is properly grounded. When a standard 2-prong wall outlet is encountered, it is your responsibility and obligation to have it replaced with a properly grounded 3-prong wall outlet.

To prevent accidental injury, the cord should be secured behind the appliance and not left exposed or dangling.

The appliance should always be plugged into an exclusive, properly grounded wall outlet which has a voltage rating that matches the rating label on the appliance. This provides the best performance and also prevents overloading house wiring circuits that could cause a fire hazard from overheating. Never unplug

the appliance by pulling on the power cord. Always grip the plug firmly and pull straight out from the receptacle. Repair or replace immediately all power cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length or at either end. When moving the appliance, be careful not to damage the power cord.

Extension Cord

Because of potential safety hazards under certain conditions, it is strongly recommended that you do not use an extension cord with this appliance. However, if you must use an extension cord it is absolutely necessary that it be a UL/CUL-Listed, 3-wire grounding type appliance extension cord having a grounding type plug and outlet and that the electrical rating of the cord be 115 volts and at least 10 amperes.

OPERATING YOUR APPLIANCE

Turning On the Unit

Connect the unit to a power supply to turn it on. Be sure the door is closed. After half an hour, the temperature inside the cabinet should have cooled down; if so, the unit is operating normally.

CAUTION


- If power is disconnected, do not try to restart the unit within 5 minutes of the power disconnect.
- Do not make holes through the walls of the unit in order to mount other items.
- Avoid splashing water on the unit.
- Do not store medical or pharmaceutical products in the unit.
- Keep the keys of the door lock out of the reach of children.

Storing Items in the Unit

- The shelves can be adjusted to suit your needs. (See **Shelves** below.)
- Avoid putting a large number of items into the unit at one time. Leave some space around the items to allow an unimpeded flow of cold air.
- To lower energy consumption and prolong the life of the compressor, avoid putting warm food into the unit. Only foods at room temperature or already frozen should be put into the freezer.

Setting and Adjusting the Temperature

The digital temperature controller is just below the lighted logo panel, toward the left. The control panel is illustrated below:

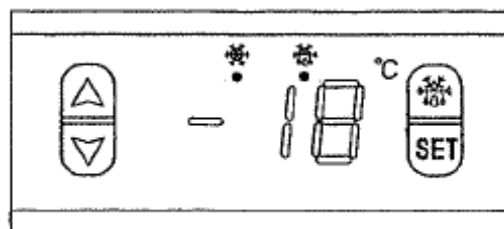

The first LED (snowflake) will be on while the compressor is running to bring the unit down to the desired temperature, and will be off when the compressor is off. The second LED (dripping snowflake) indicates the defrost status of the unit (see below).

To set the operating temperature of the unit:

1. Press the SET button. The set temperature is displayed, in degrees Celsius.
2. Press the ▲ or ▼ button to modify and store the displayed value.
3. Press the SET button to exit the adjustment. The interior temperature will be displayed after 10 seconds.

Defrosting the Unit

Defrosting is automatic in the SCFU1375, but if you wish to defrost the unit manually, press the DEFROST button (just above SET) and hold it for 6 seconds. When defrost is completed, press the DEFROST button again and hold for 6 seconds; this will stop the defrosting process. The DEFROST LED will be on while defrosting is in progress, and will be off when defrosting stops.

Interior Lights

The light switch just below the logo panel controls both the lighting of the panel and the interior of the cabinet. Pressing the switch turns both lights on and off.

Door Lock

Your unit is provided with a lock and set of keys.

The keys are located inside the plastic bag that contains the *Instruction Manual*. Insert the key into the lock and turn it clockwise to unlock the door. To lock the door, do the reverse operation, making sure the metal pin is engaged completely. Remove the key and put it in a secure place for safekeeping, out of the reach of children.

Shelves

There are a total of seven (7) adjustable shelves. To change the position of a shelf, first remove all shelf contents. Then tap the shelf from below at each of the four corners to free it from the brackets holding it in place. Remove the brackets from the slotted vertical posts and reset them at the height you desire for the new shelf position. Snap the shelf onto the four brackets and replace the shelf contents.

Normal Phenomena

You may notice the following phenomena happening with your appliance. They are normal and should not be a cause for alarm.

- You may hear a sound like water flowing. This is refrigerant flowing through the pipes.
- The compressor, condenser or the region of the unit near the door feel warm, or even hot.
- Under conditions of high humidity, moisture forms on the outer cabinet or door. This can be wiped away with a clean, soft, dry cloth.

CARE AND MAINTENANCE

Cleaning Your Appliance

- Turn off the power, unplug the appliance, and remove all items, including shelves.
- Wash the inside surfaces with a solution of warm water and baking soda (about 2 tablespoons of baking soda to a quart of water).
- Wash the shelves with a mild detergent solution.
- Wring excess water out of the sponge or cloth when cleaning the area where the controls are located, or any electrical parts.
- Wash the outside cabinet with warm water and mild liquid detergent. Rinse well and wipe dry with a clean soft cloth. Do not get the electrical controls below the logo panel wet.
- Do not use steel wool or a steel brush on the stainless steel.
- Wipe off the condenser (on the back of the unit) regularly to keep it well ventilated.
- Keep the door gasket clean. The gasket can be removed and then remounted after cleaning. Putting a little talcum powder on the magnetic surface of the gasket will prolong its service life.

CAUTION:

Failure to unplug the appliance during cleaning could result in electrical shock or other personal injury.

Bulb Replacement

When the bulbs behind the lighted logo panel must be replaced,

1. Remove the left side cover of the light-box. (You'll need a Phillips screwdriver.)
2. Slide out the logo panel.
3. Replace the bulb or bulbs and reinsert the logo panel.
4. Replace the left side cover.

NOTE: Replacement bulbs can be purchased directly from SUMMIT by calling us at **1-800-932-4267** or by going to our website at www.summitappliance.com/support. Have the model number, SCFU1375, handy.

Power Failure

Most power failures are corrected within a few hours and should not affect the temperature of your appliance if you minimize the number of times the door is opened. If the power is going to be off for a longer period of time, you need to take the proper steps to protect the contents.

Vacation Time

- **Short vacations:** Leave the appliance operating during vacations of less than three weeks.
- **Long vacations:** If the appliance will not be used for several months, remove all items and turn off the appliance. Clean and dry the interior thoroughly. To prevent odor and mold growth, leave the door open slightly, blocking it open if necessary.

Moving Your Appliance

1. Remove all items from the shelves.
2. Securely tape down all loose items (shelves) inside your appliance.
3. Tape the door shut.
4. Be sure the appliance stays secure in the upright position during transportation. Also, protect the outside of the appliance with a blanket or similar covering.

Power Cord

If the power cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid an electrical hazard.

Energy Saving Tips

- The appliance should be located in the coolest area of the room, away from heat producing appliances and out of direct sunlight.
- Ensure that the unit is adequately ventilated. Never cover air vents.
- Do not keep the door open any longer than necessary.

TROUBLESHOOTING

You can solve many common problems easily, saving you the cost of a possible service call. Try the suggestions below to see if you can solve the problem before calling the servicer.

Troubleshooting Guide

PROBLEM	POSSIBLE CAUSE	SOLUTION
The unit does not operate.	Bad plug connection	Reconnect the plug to the power source.
	Tripped circuit breaker or blown fuse	Reset circuit breaker or replace fuse.
Abnormal operation of the compressor, or a buzzing sound	The supplied voltage is out of the rated range.	Disconnect the power supply immediately and reconnect it to an acceptable voltage source. If the power supply is erratic, you will need a voltage stabilizer.
Compressor is on too long and there is no frost on the surface of the evaporator	Refrigerant circuit has a leak or blockage.	Call for a qualified service technician.
There is frost or ice on the walls of the inner cabinet and the internal temperature is too low. The compressor operates continuously.	Thermostat does not work.	Call our service department for repair suggestions.
	The thermostat sensor has separated from the wall of the cabinet.	Tighten the screw of the sensor cover.
The internal temperature is too high and the compressor operates continuously.	Poor heat dissipation and ventilation of condenser	Improve the ventilation.
	Too much warm food was put in at one time.	Take out some of the food.
	Door was opened frequently or held open too long.	Decrease frequency and length of time of door opening.
Operation is too noisy.	The appliance is not level.	Level the appliance.
	Pipes near the compressor are touching.	Carefully separate the touching pipes.
	The unit is too close to a wall or cabinet.	Move the unit away from the adjacent surface.

WARNING

If the unit develops problems that cannot be solved by referring to the chart above, do not try to dismantle the unit yourself. This could void your warranty. Instead, refer to an authorized service center or call SUMMIT Customer Service at 1-800-932-4267.

LIMITED WARRANTY

ONE-YEAR LIMITED WARRANTY

Within the 48 contiguous United States, for one year from the date of purchase, when this appliance is operated and maintained according to instructions attached to or furnished with the product, warrantor will pay for factory-specified parts and repair labor to correct defects in materials or workmanship. Service must be provided by a designated service company. Outside the 48 states, all parts are warranted for one year from manufacturing defects. Plastic parts, shelves and cabinets are warranted to be manufactured to commercially acceptable standards, and are not covered from damage during handling or breakage.

5-YEAR COMPRESSOR WARRANTY

1. The compressor is covered for 5 years.
2. Replacement does not include labor.

ITEMS WARRANTOR WILL NOT PAY FOR:

1. Service calls to correct the installation of your appliance, to instruct you how to use your appliance, to replace or repair fuses or to correct wiring or plumbing.
2. Service calls to repair or replace appliance light bulbs or broken shelves. Consumable parts (such as filters) are excluded from warranty coverage.
3. Damage resulting from accident, alteration, misuse, abuse, fire, flood, acts of God, improper installation, installation not in accordance with electrical or plumbing codes, or use of products not approved by warrantor.
4. Replacement parts or repair labor costs for units operated outside the United States.
5. Repairs to parts or systems resulting from unauthorized modifications made to the appliance.
6. Expenses for travel and transportation for product service in remote locations.
7. The removal and reinstallation of your appliance if it is installed in an inaccessible location or is not installed in accordance with published installation instructions.

DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES

CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR AS PROVIDED HEREIN. IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR. WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS, SO THESE EXCLUSIONS OR LIMITATIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

WARNING! This product may contain chemicals known to the state of California to cause cancer or birth defects or other reproductive harm. For more information, visit: www.summitappliance.com/prop65

Chemicals known by the manufacturer to be present in this product in concentrations higher than threshold limits: NONE.

FELIX STORCH, INC.
770 Garrison Avenue
Bronx, NY 10474
Phone: (718) 893-3900
Fax: (718) 842-3093
www.summitappliance.com

The logo for Summit Appliance, featuring the word "SUMMIT" in a bold, stylized, blocky font with a horizontal line underneath.

For parts and accessory ordering,
troubleshooting and helpful hints, visit:
www.summitappliance.com/support