 


SerenLife

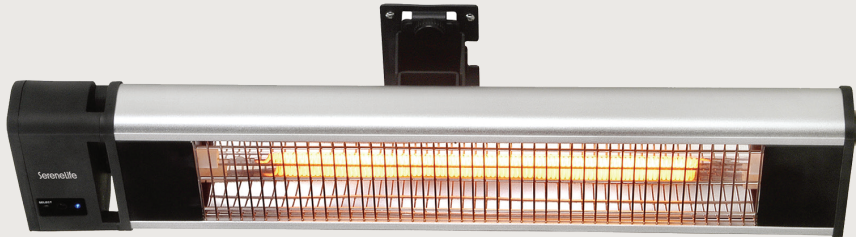

SLOHT26

**wall mounting
patio heater**

user guide

visit our website



SCAN ME
serenlifelifehome.com

PLEASE KEEP THIS MANUAL CAREFULLY FOR FUTURE REFERENCE. FOR HOUSEHOLD USE ONLY.

Features:

- High-Rated Aluminum Reflector
- Provides Sun-like Infrared Heating
- Includes Mesh Grille Front
- Odorless; No Gas or Propane Required
- Remote-Controlled Ceiling Heater
- Dust- and Waterproof Design
- Anodized Extruded Aluminum Alloy Housing
- High-Efficiency Carbon Fiber Heating Elements
- One Power Setting
- IP65 Approved

What's in the Box:

- 1500-Watt Electric Patio Heater
- Allen Wrench
- (2) Upper L Brackets
- (2) Lower L Brackets
- (2) Expansion Bolts (M6 x 2.75 in.)
- (2) Screws (M6 x 0.63 in.)
- (1) Remote Control
- (4) Screws (M6 x 0.31 in.)

CALIFORNIA PROP 65 WARNING

WARNING:

This product may expose you to chemicals, which is known to the state of California to cause cancer, birth defects and other reproductive harm. Do not ingest.

For more info go to: www.P65warnings.ca.gov

Technical Specs:

- Construction Material: Aluminum Alloy Frame
- Power Supply: 1500W
- Heat Level: 1500 Watts
- Heating Area: 18 sq. ft.
- Maximum Amperage: 12.5 Amps
- Battery Life: Up to 2+ Hours
- Remote Battery: 1.5V (2 x AAA batteries, not included)
- Power Cable Length: 6.56 ft (120V)
- Heat Coverage Range: Around 108–161 sq. ft.
- Product Dimensions (L x W x H): 29.13 x 6.4 x 6.1 in.

PLEASE MAKE SURE TO READ THIS MANUAL CAREFULLY BEFORE USE.

IMPORTANT INSTRUCTIONS:

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- 1. Read all instructions before using this heater.**
2. Use extreme caution when any heater is used by or near children, invalids, or when left unattended.
3. Do not operate any heater after it malfunctions. Disconnect power at the service panel and have the heater inspected by a qualified electrician before reuse.
4. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause electric shock, fire, or damage.
5. Do not block air intakes or exhaust openings.
6. Do not use the heater in areas where gasoline, paint, flammable vapors, or liquids are stored or used.
7. Maintain a clearance of at least 39 inches from walls and 12 inches from the ceiling.
8. Avoid burns—do not let bare skin touch hot surfaces. Keep combustible materials at least 3 feet (0.9 meters) from the heater.
9. Install the heater at least 7 feet above the floor.
10. The unit remains hot after shutdown. Do not touch during this time.

11. Keep the unit away from curtains and other flammable objects.
12. Do not cover the unit during operation or shortly after shutdown.
13. Do not wrap the power cord around the unit.
14. Handle the unit carefully to avoid vibration or impact.
15. Always ensure the unit is grounded during use.
16. If the unit is damaged, it must be repaired by a qualified professional.
17. If the power cord is damaged, it must be replaced by the manufacturer or a qualified technician.
18. Do not install the heater directly below a power outlet.
19. Keep the unit clear of boards or flammable materials during assembly.
20. Do not use this heater with timers or automatic controls due to fire risk.
21. This appliance is not intended for use by individuals with reduced physical, sensory, or mental capabilities, unless supervised.
23. The head of the unit becomes hot during operation. Unplug and let cool before cleaning.
24. Do not use the heater near bathtubs, showers, or swimming pools.
25. Do not use the heater in areas with caustic or volatile air (dust, steam, gas, etc.).
26. Do not use this unit as a cloth or towel dryer.
27. Do not use this unit as a sauna heater.
28. Do not use this unit for heat storage.
29. Do not use this unit for animal propagation or raising.
30. Do not use this unit in a central heating system.
31. Never immerse the unit in water for cleaning.
32. Plug into a visible and easily reachable outlet.
33. Never place the heater or cord under rugs or carpets. Keep cords away from high-traffic areas.
34. To disconnect, turn off the heater and power at the breaker panel, then unplug.
35. Use the heater only as described in this manual. Improper use may result in fire, electric shock, or injury.
36. The surface becomes very hot during operation. Keep away to avoid burns.
37. Supervise young children around the heater.
38. **CAUTION: MOUNT THE HEATER WITH ITS BOTTOM AT LEAST 8 FEET ABOVE THE FLOOR OR GROUND.**

SAVE THESE INSTRUCTIONS

PREPARATION

1. Unpack the box and check all accessories listed above. If anything is missing, contact the retailer.
2. Prepare a Phillips-head screwdriver.
3. Read this instruction manual carefully. Store it in a safe place for future use.

PARTS DESCRIPTIONS


No.	Part Name	No.	Part Name
1	Expansion Bolt M6*70	7	Lower L Bracket
2	Upper L Bracket	8	Main Switch
3	Washer	9	Control Panel
4	Spring Washer	10	Screw M6*8
5	Screw Nut M6	11	Allen Key
6	Screw M6*16	12	Remote Control

ACCESSORIES PACK CHECK LIST

Accessory Name	Qty
Upper L Bracket	2
Lower L Bracket	2
Expansion Bolt M6*70	2
Screw M6*16	2
Remote Control	1
Allen Key	1
Screw M6*8	4



PARTS DESCRIPTIONS

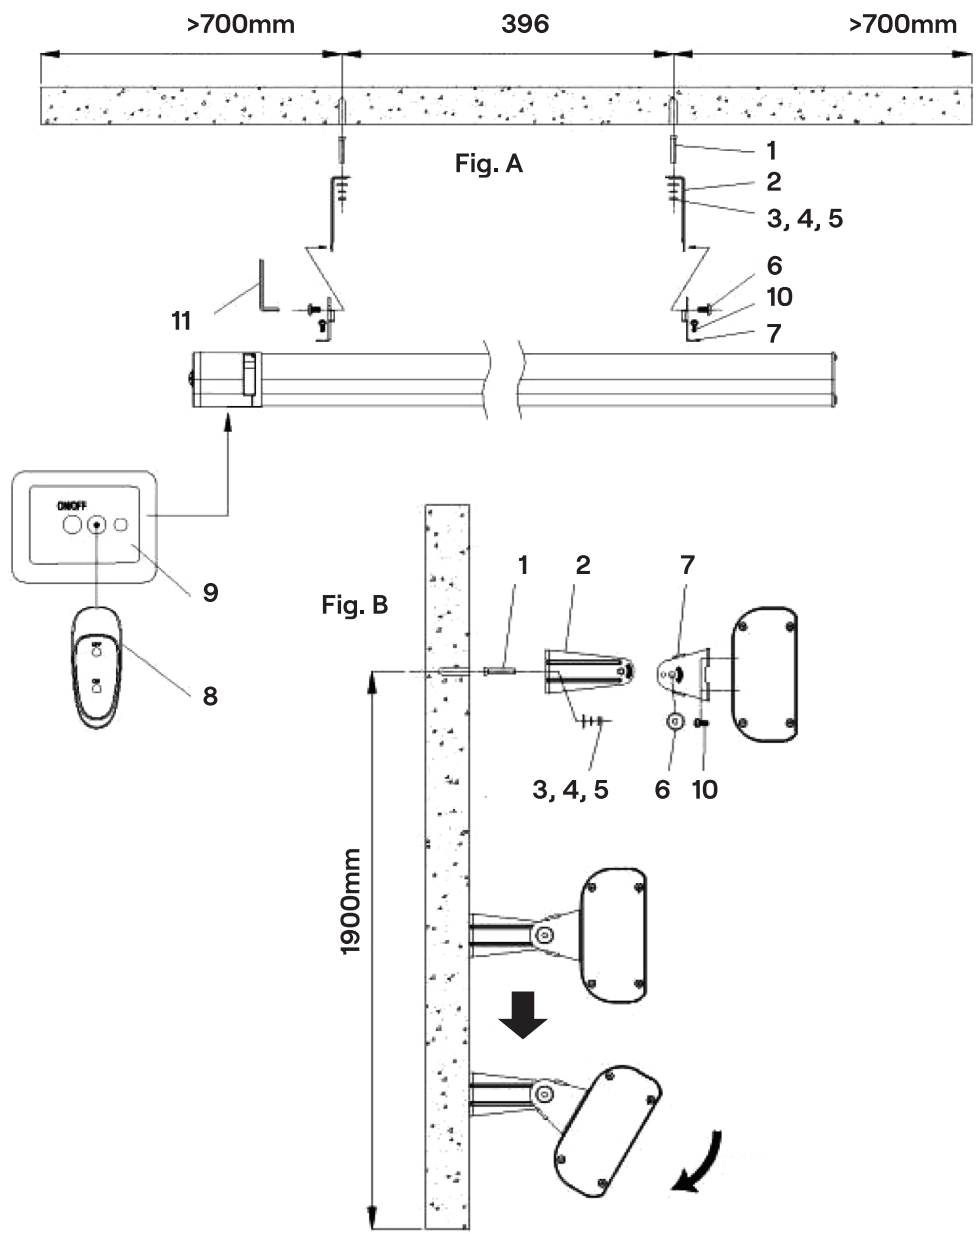

INSTALLATION

1. Install the heater at least 5.9 ft (1.8 m) from the ground and 19.7 in. (50 cm) from the side wall.
2. Drill 2 holes in the ceiling or wall as shown in the installation diagram. Insert the 2 expansion bolts. Tighten the screw nuts securely, then remove them along with the washers for later use.
3. Place the upper L bracket against the wall or ceiling. Insert the expansion bolts through the holes in the bracket and secure them with washers, spring washers, and screw nuts.
4. Attach the lower L bracket to the rear of the heater using the M6 x 0.31 in. screws and the provided Allen key.
5. Connect the upper and lower L brackets using the M6 x 0.63 in. screws. Ensure the control box is on the left side for wall mounting.
6. Loosen the M6 x 0.63 in. screw, adjust the heater to the desired angle (up to 60° total), and tighten the screw.


OPERATIONS

1. Plug the unit into a compatible outlet. Ensure the power supply matches the heater's rating.
2. Press the switch on the left side of the heater. The LED indicator will begin flashing, indicating standby mode. Press the ON button on the control panel or remote control to activate heating.
 - To return to standby mode, press the ON button on the control panel or the OFF button on the remote. The LED will flash again.
3. To turn the heater completely off, press the side switch accordingly.

GROUNDING INSTRUCTIONS


This heater is designed for 120V use. It includes a three-prong plug (see figure A). An adapter (figure C) is available to connect the plug to a two-slot outlet. The adapter's green grounding lug must be connected to a permanent ground (e.g., a grounded outlet box). However, using a three-slot grounded receptacle is highly recommended over using an adapter.

Grounding Methods

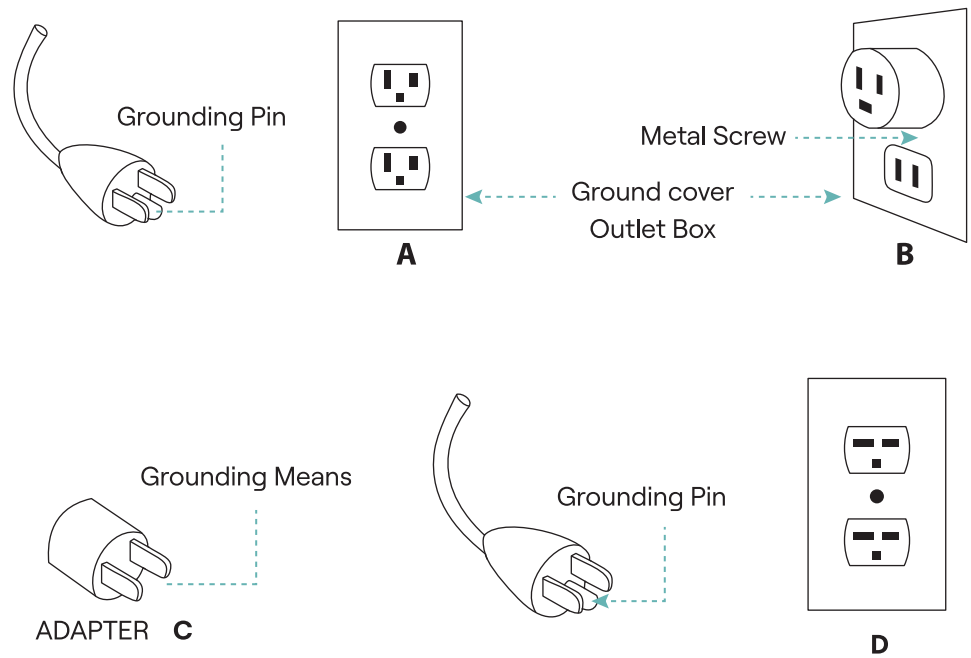

Cleaning and Maintenance

1. Ensure the unit is powered off at the circuit breaker and has completely cooled before cleaning.
2. Wipe the exterior occasionally with a dry duster. When not in use, especially during summer, use a damp cloth to clean. Store the unit and cord in a cool, dry place.
3. Do not use abrasive powders, polishes, chemical cleaners, or metallic scourers, which may damage the surface.
4. All servicing should be performed by authorized personnel only.
5. Do not disassemble the heater for cleaning.

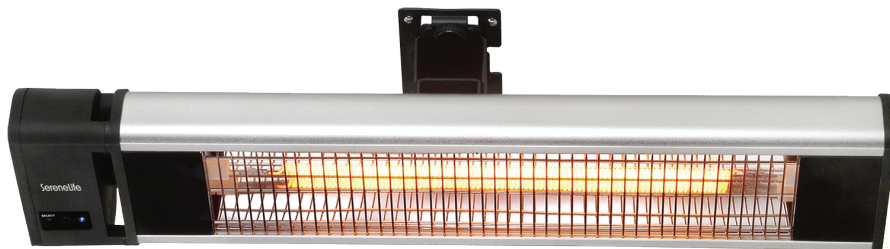

Register Product

Thank you for choosing SereneLife. By registering your product, you ensure that you receive the full benefits of our exclusive warranty and personalized customer support. Complete the form to access expert support and to keep your SereneLife purchase in perfect condition.

Start Here



Model Number:

SLOHT26

[SereneLifehome.com/pages/register](https://serenelifehome.com/pages/register)



questions? comments?

We are here to help!

Phone: 1.718.535.1800

[serenelifehome.com/contact us](https://serenelifehome.com/contact-us)