



BEEM 550

SMART LED PROJECTOR

User Manual

INTRODUCTION



Thank you for choosing the Beem 550 Smart LED Projector. This manual will guide you through the setup, operation, and maintenance of your projector to ensure optimal performance and longevity. Please read the instructions carefully before using the device.

SAFETY PRECAUTIONS

 


Ensure there are no obstacles within 30 cm of the projector's air inlet and outlet during use.

Provide adequate ventilation to prevent hot air from building up inside the projector.

Blocked airflow can lead to overheating and abnormal functioning of the projector. (Refer to the diagram for correct setup)

Dust Maintenance
After using the dust removal window, always close it properly. Leaving it open may cause serious damage to the projector.

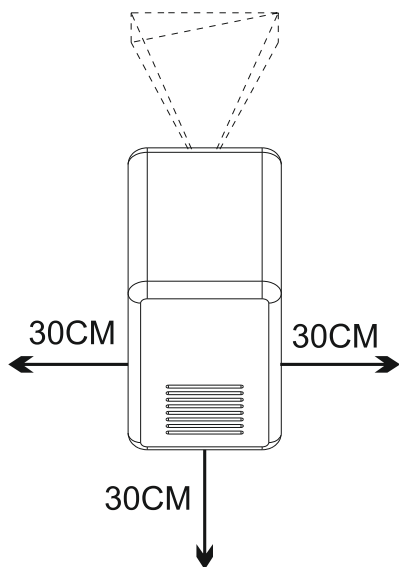

Regularly clean the air inlet dust screen to avoid dust buildup, which can block airflow and harm the device.

You may use soft brushes, vacuum cleaners, or similar tools for cleaning.

CATALOGUE



Cautions And Warnings	01
List Of Items	02
The Remote Control	03
Installation And Debugging	04
The Software Settings	06
Picture adjustment	09
Media Player	10
Screen sharing	11
Warranty Card	12
Clean And Maintain	14

For best viewing performance, it is recommended to use this product in a dark room.

1. Do not install the projector in areas exposed directly to air conditioning. Moisture or high temperature may cause malfunction.
2. Ensure proper ventilation to avoid heat buildup inside the projector. Blocked airflow can lead to overheating or failure.
3. Do not insert clips, paper, or metal objects into the projector. If anything falls inside, power off immediately and contact qualified service personnel.
4. To avoid the risk of electrical damage, do not place any liquids on or near the projector.
5. When transporting the projector, use soft materials and always apply the lens protection cover to prevent scratches and damage.
6. After use, the exhaust vent area may become hot. Avoid touching it with bare hands.
7. Never look directly into the projector lens while it is powered on. This can cause serious eye injury.


IMPORTANT NOTICES



NOTICE 1

Do not open the projector casing. Only trained professionals should perform internal maintenance.

NOTICE 2

 **Warning:** Parts inside the projector may carry uninsulated high voltage and a surface magnetic field. Do not touch internal components as this may result in electric shock.

NOTICE 3

To avoid fire or electric shock, do not expose the projector to rain or moisture under any circumstances.

 
LIST OF ITEMS



Projector



Remote Controller



User Manual



power line

 
Products with different configurations
have different remote control configurations

Thank you very much for purchasing our products.

Please check whether the physical products received are complete;

If the products and accessories you receive are not complete, please contact the sales personnel in a timely manner.

(For specific items, please refer to the actual package.)

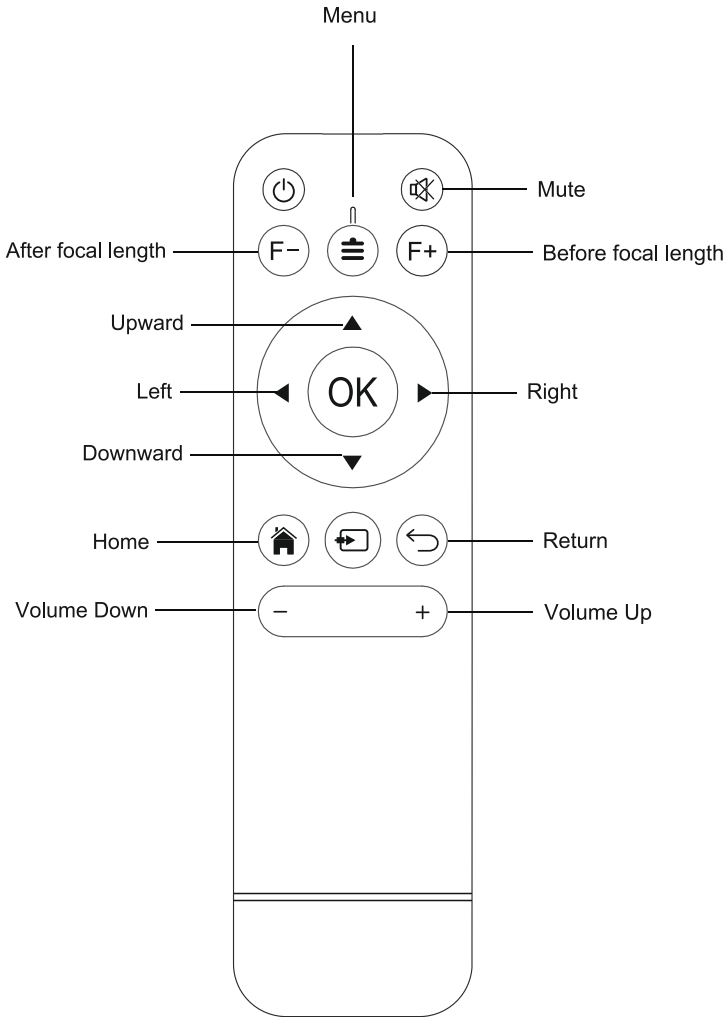


1. Manual Focusing: When the projection image is blurred (as shown in the figure below), rotate the focusing ring on the fuselage to adjust the effect, so as to obtain satisfactory results. If you cannot obtain satisfactory clarity through adjustment,

please move the fuselage to adjust it appropriately.


2. Autofocus: For versions with autofocus capability, after enabling the autofocus function in the settings interface, the mobile device can achieve automatic focusing.

3. Autofocus: Whether it's autofocus or manual focusing, as long as the version has the autofocus function, the focal length can be adjusted by operating the remote control.

 **Please select the appropriate operation method for your device based on the model and version of the projector you are currently using. Here are some general guidelines to consider.*




Blurry Image

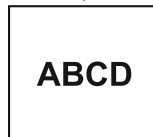 

INTELLIGENT PROJECTOR



 Projection Distance Reference

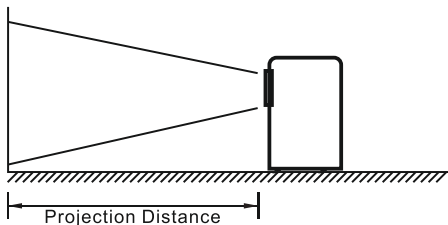




1. Press the ON/OFF button on the remote control or the power switch on the unit.
2. Put the lens cap on and store the unit in a dry and cool place.



 1 Home Page

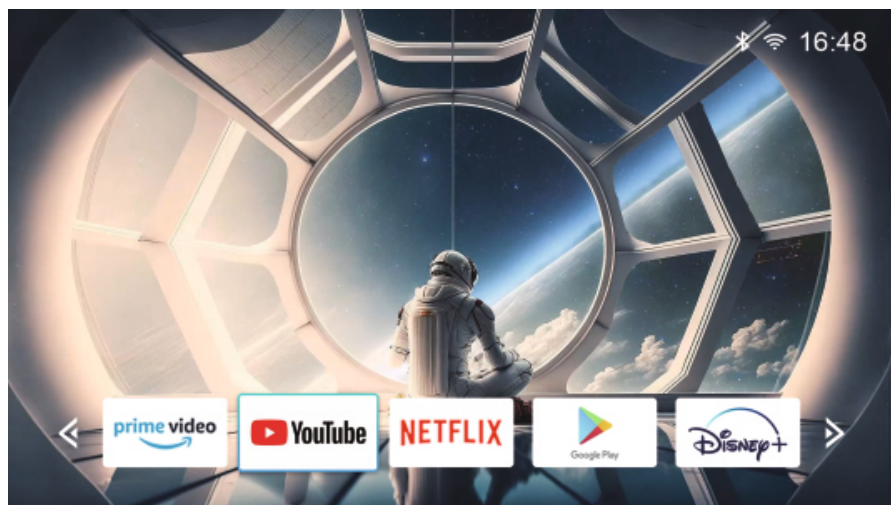

2 Projection Setting



 
Notes: With the update of system version, there will be differences from the actual interfaces. Please refer to the displayed interfaces as final.

INTELLIGENT PROJECTOR



3 Language setting

Setting Screen - Select the appropriate language in system configuration.

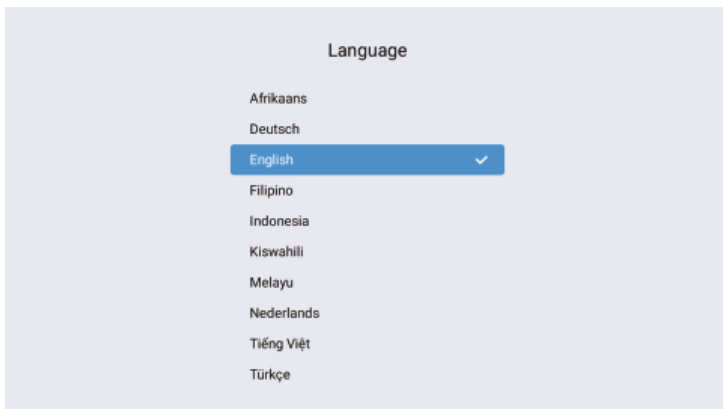

4 Time setting

Setting Screen - Select the appropriate time setting for you in system configuration.



SOFTWARE SETTINGS



 
5 Wi-Fi Setting

Select a and enter a password to connect.



2 Bluetooth Settings

Open Bluetooth Setting

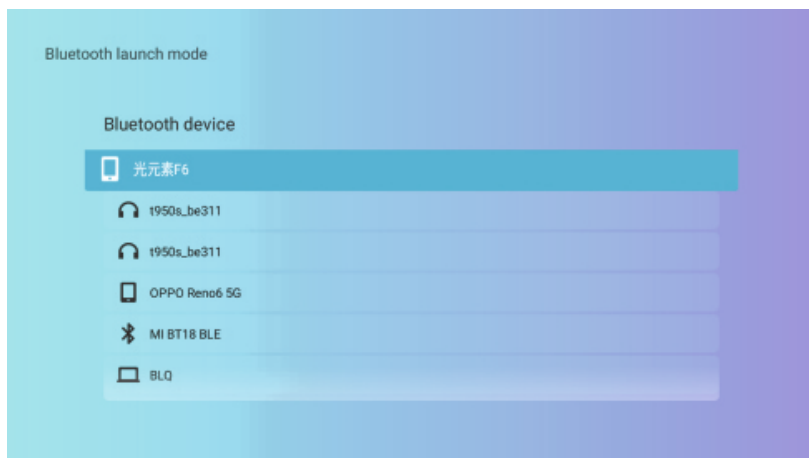


Notes: With the update of system version, there will be differences from the actual interfaces. Please refer to the displayed interfaces as final.

PICTURE ADJUSTMENT




1 Projection mode

 Select the projection method that suits you in the Settings screen.

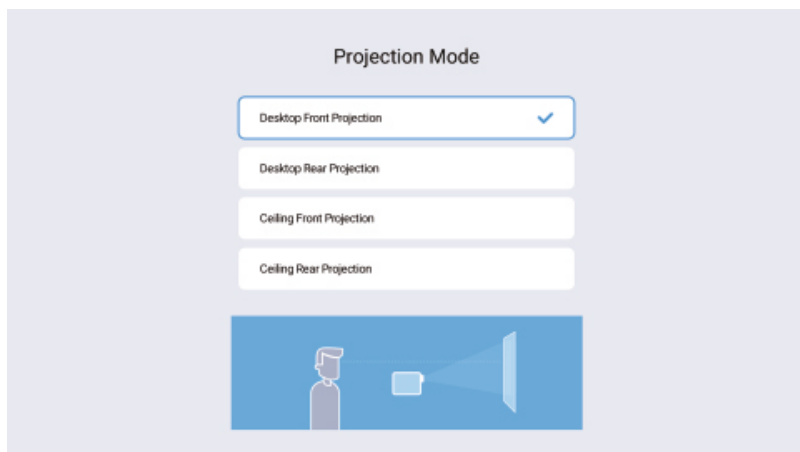

2 Picture correction

 Select Manual keys in the setting interface screen correction.

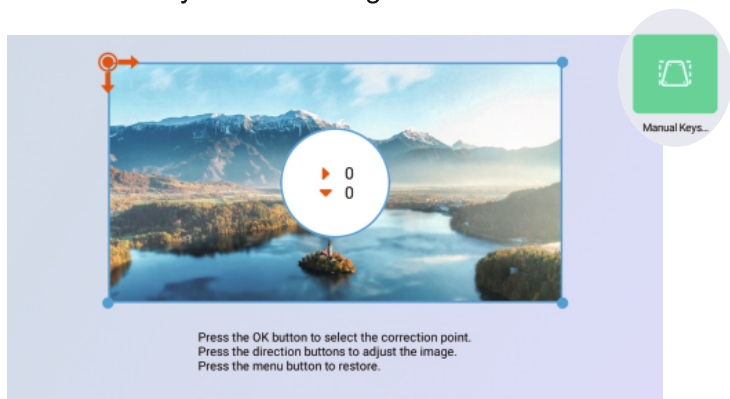


MEDIA PLAYER



You can play videos, music, or pictures from a storage device in the following ways.

 (1) After the projector is turned on, insert a USB flash drive, and the system will detect the external device by itself, and a pop-up prompt will pop up. Select the type of file you want to play, and press the "OK" button on the remote control panel to enter.

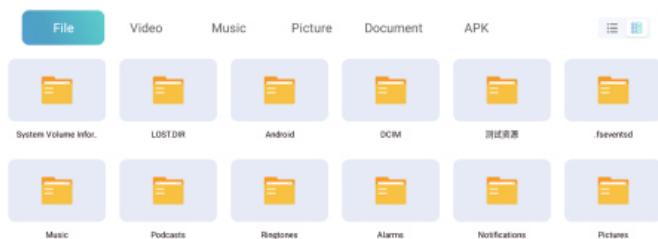


Due to frequent software updates, the interface may vary. Please focus on the actual interface.

(2) Press the signal input button on the remote control and select USB device to turn it on.

1 SAME SCREEN


The Projector And Mobile Phone Can Be Connected To Each Other Through Screen Sharing Software In The Same Wi-fi Environment To Achieve Screen Sharing.

 (you Can Choose The Software That Comes With The System, Or Download Other Same Screen Software From The Application Store)

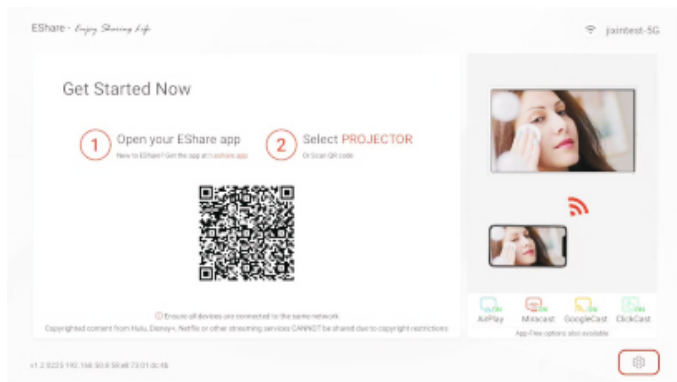

2 Other operations

 On the home page, press the direction down key to select applications, change the desktop background, and sound effects.

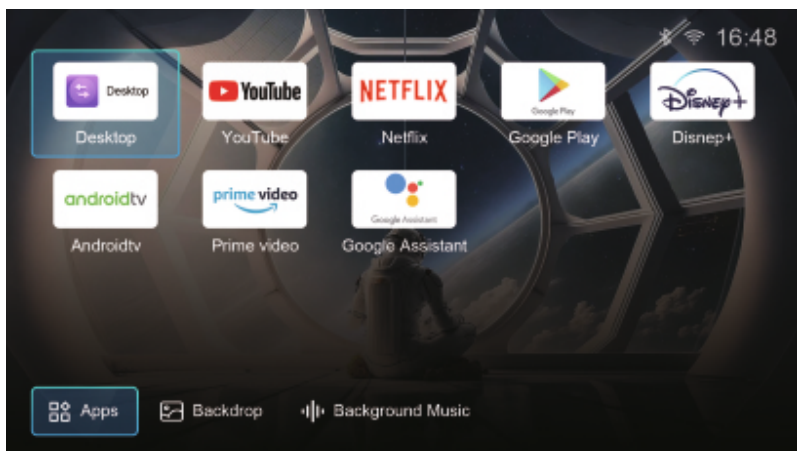



PORTRONICS

www.portronics.com

For Support

Visit : www.portronics.com

E-mail : help@portronics.com

Contact No.: +91 9555245245

(Working Hours: Monday - Saturday, 10:00am - 6:00pm)



E-Waste Management

E: info@3rrecycler.com

**For E-Waste & ROHS compliance
refer to www.portronics.com/ewaste**