


# 快速启动向导

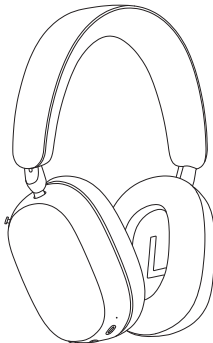

## 主动降噪无线耳机

# 快速启动向导

### 按键、接口、开关说明

|     |                                                                                                        |             |
|-----|--------------------------------------------------------------------------------------------------------|-------------|
|     | ① 中间长按3秒开关机键<br>② 向上拨短按暂停播放 / 双击拨打电话 / 长按拒接<br>③ 向下拨双击语音助手<br>④ 向左拨长按音量减 / 短按上一曲<br>⑤ 向右拨长按音量加 / 短按下一曲 |             |
|     | 切换模式                                                                                                   | 长按切换降噪模式    |
| AUX | AUX 接口                                                                                                 | 外部音频输入耳机扬声器 |
| USB | 充电                                                                                                     | 连接充电器USB充电  |

#### 耳机开机模式

长按开机键 3秒后耳机开机，进行配对或是在回连最后一次连接成功的无线设备。  
注:耳机开机未连接状态下，5分钟会自动关机。

#### 无线模式连接

耳机开机后。进入无线配对模式，LED灯蓝灯闪烁。点开

# 快速启动向导

手机无线功能，并搜索无线设备名: P ANC，点击设备名进行连接。连接成功后耳机上指示灯蓝灯熄灭，表示已经连接成功。

#### 降噪模式开关

在无线开启状态下，长按ANC按键 开启主动降噪，指示灯绿灯常亮，再次长按关闭降噪功能，绿灯熄灭。

#### 自动关机及超距离回连

当耳机超出有效距离范围耳机断开连接。在5分钟内回到无线范围内自动重新连接，如未在5分钟内回到有效无线连接范围耳机自动关机。

#### 充电模式

当电池电量低时，请使用USB充电线充电3小时左右，在充电过程中耳机会自动关机。充电时红灯长亮，充满电后红灯灭。

# 快速启动向导

### 参数配件

|        |                    |
|--------|--------------------|
| 无线协议   | A2DP/AVRCP/HFP/HSP |
| 接收距离   | 10m                |
| 喇叭尺寸   | 40mm               |
| 频响范围   | 20HZ-20KHZ         |
| 喇叭灵敏度  | 108.5±3dB          |
| 喇叭阻抗   | 32Ω±15%            |
| 麦克风灵敏度 | -42dB±2dB          |
| 工作电流   | 8-30mA             |
| 充电电压   | 5V                 |

### 包装配件

|        |            |
|--------|------------|
| 1、无线耳机 | 3、USB-C充电线 |
| 2、用户手册 | 4、音频线      |

### 温馨提示

- 1、请使用5V 1A/5V 2A充电器对耳机充电。使用电压过高的充电设备对耳机充电可能会损坏；
- 2、当耳机超过3个月未使用时，需要给耳机充电后再使用；

# 快速启动向导

3. 长期不使用时，建议每3个月为耳机充一次电，能更有效的保护电池的使用。


### 注意事项

- \*请勿将耳机放置在高温环境，包括太阳直射。
- \*请勿将耳机放置在靠近火源或其他过热环境下。
- \*请勿将耳机放置于潮湿或淹没在液体中，保持耳机干爽。
- \*除了所提供的充电线以外，请勿试图用其他的方法为耳机充电。
- \*请勿将耳机拆开，禁止企图修理，改造耳机的任何行为。
- \*请注意过度跌落、撞击、擦伤或其他影响耳机功能的行，如果有任何损坏，如凹陷，穿刺、撕裂变形或腐蚀等，请立即停止使用该耳机设备，并联系所购买的商家联系。
- \*如果耳机产生异常气味，高于正常温度，颜色或形状出现异常变化，请立即停止该耳机的使用，并联系所购买的商家联系。

### 警告

- \*如果电池更换不当会有爆炸危险，只能用同类型或等效类型的电池来更换。电池(电池包或组合电池) 不得暴露在诸如日照、火烤或类似过热环境中。
- \*设备不应遭受水滴或水溅，设备不应放置在诸如花瓶或者相似装满液体的物体中。

## QUICK START GUIDE

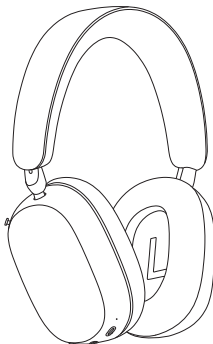

### Active Noise Cancelling Wireless Headset

## QUICK START GUIDE

### Instructions for buttons, interfaces, and switches

|     |                                                                                                                                                                                                                                                                                                                                                                                                |                                           |
|-----|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------|
|     | ① Press and hold the power button for 3 seconds to turn the device on or off<br>② Press up to pause playback / Double-tap to make a call / Press and hold to reject the call<br>③ Double-tap the assistant by swiping down<br>④ Long press to the left to decrease volume/short press the previous song<br>⑤ Long press to the right to increase volume/Short press to switch to the next song |                                           |
|     | Switch mode                                                                                                                                                                                                                                                                                                                                                                                    | Long press to switch noise reduction mode |
| AUX | AUX port                                                                                                                                                                                                                                                                                                                                                                                       | External audio input headphone speaker    |
| USB | Charge                                                                                                                                                                                                                                                                                                                                                                                         | Connect the charger to USB charging       |

#### Earphone startup mode

Press and hold the power button for 3 seconds to turn on the earphones for pairing or reconnecting to the last successfully connected wireless device.  
Note: The earphones will automatically shut down after 5 minutes when not connected.

## QUICK START GUIDE

#### Wireless mode connection

After turning on the headphones. Entering wireless pairing mode, the LED light flashes blue. Click on the wireless function on your phone and search for the wireless device name: P ANC, then click on the device name to connect. After successful connection, the blue indicator light on the earphones will turn off.

#### Noise reduction mode switch

In the wireless enabled state, long press the ANC button to activate active noise reduction, and the green indicator light will remain on. Long press again to disable the noise reduction function, and the green light will turn off.

#### Automatic shutdown and over distance reconnection

When the headphones exceed the effective distance range, the headphones disconnect. Automatically reconnect within 5 minutes of returning to wireless range. If not returned to a valid wireless connection range within 5 minutes, the earphones will automatically shut down

#### Charging mode

When the battery level is low, please use a USB charging cable to charge for about 3 hours. During the charging process, the earphones will automatically shut down. The red light stays on during charging and goes out when fully charged.

## QUICK START GUIDE

### Parameter fitting

|                          |                    |
|--------------------------|--------------------|
| Wireless protocol        | A2DP/AVRCP/HFP/HSP |
| Receiving distance       | 10m                |
| Horn size                | 40mm               |
| Frequency response range | 20HZ-20KHZ         |
| Horn sensitivity         | 108.5±3dB          |
| Horn impedance           | 32Ω±15%            |
| Microphone sensitivity   | -42dB±2dB          |
| Working current          | 8-30mA             |
| Charging voltage         | 5V                 |

### Packing accessories

|                        |                         |
|------------------------|-------------------------|
| 1. Wireless headphones | 3. USB-C charging cable |
| 2. User manual         | 4. Audio cable          |

### Warm reminder

1. Please use 5V 1A/5V 2A charger to charge the earphone. Charging the headset with a charging device with too high a voltage may cause damage.
2. When the earphone is not used for more than 3 months, it needs to be charged before use;

## QUICK START GUIDE

3. When not in use for a long time, it is recommended to charge the headset once every 3 months to protect the battery more effectively.

### Matters needing attention

- \* Do not place headphones in high temperature environment, including direct sunlight.
- \* Do not place headphones near fire or other overheating environment.
- \* Do not place earphones in wet or submerged liquid, keep earphones dry.
- \* Do not attempt to charge the headset by any other means than the charging cable provided
- Electricity.
- \* Please do not disassemble the headset. Any attempt to repair or modify the headset is prohibited.
- \* Please pay attention to excessive drops, bumps, bruises or other behaviors that affect the function of the headset. If there is any damage, such as dents, puncturing, tearing, deformation or corrosion, please stop using the headset immediately and contact the purchased vendor.
- \* If the earphones produce abnormal odor, higher than normal temperature, or abnormal changes in color or shape, please stop using the earphones immediately and contact the purchased business.

### warning

- \* If the battery is not replaced properly, there is a risk of explosion. Only use the same type or equivalent type of battery to replace. Batteries (battery packs or combination batteries) shall not be exposed to conditions such as sunlight, fire, or similar overheating.
- \* Equipment should not be exposed to drops or splashes and should not be placed in objects such as vases or similar liquid filled objects.



**FCC Warning:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.