

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed. Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, do not use. Only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the appliance for anything other than its intended use.

Do not touch any sections of the appliance that may become hot during use, as this could cause injury.

Do not direct steam at people or animals or towards equipment containing electrical components, such as the interior of ovens.

Always unplug the appliance after use and allow to cool fully before any cleaning or maintenance

or storing away.

This appliance must only be used and rested on a stable surface.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

 **Caution:** The appliance emits very hot steam; always exercise extreme caution during use.

 Hot surface - do not touch the hot section or heating components of the appliance.

 **Warning:** Danger of scalding. Keep the appliance away from flammable materials.

Care and Maintenance

Before attempting any cleaning or maintenance, always unplug the iron from the mains power supply, drain the water tank and allow it to cool sufficiently.

To remove any build-up around the steam holes, use a cotton wool tip dampened with methylated spirits. Wipe off the methylated spirits with a soft damp cloth and dry thoroughly.

Cleaning the Anti-calc Filter

The anti-calc filter should be cleaned every 2-4 weeks or after approx. 30 hours of accumulative use, depending upon the frequency of use and the hardness of water in the area.


STEP 1: Remove the water tank. Use a crosshead screwdriver (not included) to unscrew the anti-calc filter and lift it out; gently pull it away from the rubber tube.

STEP 2: Soak the anti-calc filter in a limescale-removing solution that is suitable for use with a steam iron.

STEP 3: Once the anti-calc filter has been soaked in a limescale removing solution, rinse it with tap water and then reattach the rubber tube. Refit the filter into the water tank, using the screw to secure it.

STEP 4: Replace the water tank.

Description of Parts

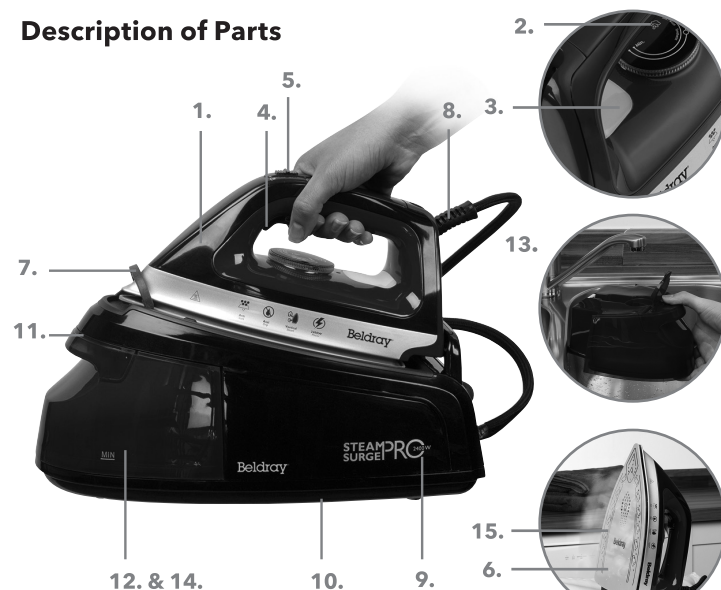

- | | |
|--------------------------------|----------------------|
| 1. Steam Surge Pro | 8. Cord guard |
| 2. Control dial | 9. Cord storage |
| 3. Temperature indicator light | 10. Base unit |
| 4. Steam control trigger | 11. Water tank |
| 5. Steam lock | 12. Rubber tube |
| 6. Ceramic soleplate | 13. Easy-fill nozzle |
| 7. Safety lock | 14. Anti-calc filter |
| | 15. Steam holes |

Instructions for Use

Before First Use

Before connecting to the mains power supply, wipe the exterior surface of the iron with a soft, damp cloth and dry thoroughly.

To remove any impurities that may have occurred during the manufacturing process, it is best to use the iron on an old piece of cloth, making sure that it is on the highest temperature setting suitable for the material.

STEP 1: Plug in and switch on the iron, place the iron onto the cloth and then hold down the steam control trigger for approx. 15-20 seconds.

STEP 2: Repeat this 2-3 times, waiting approx. 5 seconds in-between.

Do not immerse the iron in water or any other liquid.

Note: When using the iron for the first time, a slight odour and a small amount of smoke may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the iron when it is in use.

Filling the Water Tank

- STEP 1:** Check that the iron is switched off and unplugged.
STEP 2: Remove the water tank by pulling it out and away from the base unit.
STEP 3: Fill a suitable measuring vessel with water and then carefully pour the contents into the water tank.

Caution: Do not let the water fall below the min. fill mark.

Do not overfill the water tank.

Warning: Never add aromatic, alcoholic or detergent products to the water tank, as this could cause damage to the iron or injury to the user.

Using the Steam Surge Pro

Ironing with Steam

The steam settings are ideal for removing creases from fabrics such as cotton and linen with ease.

- STEP 1:** Fill the water tank.
STEP 2: Plug in and switch on the iron.
STEP 3: Rotate the control dial in a clockwise direction until the desired heat setting is reached. The temperature indicator light will illuminate to signal that the iron is heating up; this will switch off once the iron is ready to use. The iron will only produce steam when the control dial is set to the 2-dot heat setting or higher.
STEP 4: To iron with steam, press and hold the steam control trigger. To use continuous steam, press the steam control trigger and then push the steam lock. It may take up to 1 minute for water to be drawn from the water tank and for the iron to produce steam.
STEP 5: After use, rotate the control dial to the 'MIN' position and move the steam lock to the 'off' position. Switch off and unplug the iron.

Note: Allow the iron to fully heat up before pressing the steam control trigger; not doing so may cause water to leak from the ceramic soleplate.

Caution: The cord will become very hot during use.

Warning: Do not use the iron on any area of fabric for long periods of time.

Ironing without Steam

For removing creases from more sensitive fabrics, try ironing without steam.

- STEP 1:** Plug in and switch on the iron.
STEP 2: Rotate the control dial in a clockwise direction until the desired heat setting is reached.
STEP 3: Test the iron on a small area of the fabric to check that the selected temperature is suitable.
STEP 4: After use, rotate the control dial to the 'MIN' position. Switch off and unplug the iron.

Note: Always make sure that the water tank is filled to the min. fill mark even when ironing without steam to prolong the iron's life.

Vertical Steam Ironing

- STEP 1:** Hang up the item to be vertically steamed.
STEP 2: Fill the water tank following the instructions.
STEP 3: Plug in and switch on the iron.
STEP 4: Rotate the control dial until a minimum of the 2-dot heat setting is selected; the higher the temperature, the more powerful the steam.
STEP 5: Hold the iron approx. 20 cm away from the item and press the steam control trigger for a short burst of steam, or push the steam lock forward for prolonged, continuous steaming.

Storage

Check that the iron is cool and dry and that the water tank is empty before storing in a cool, dry place. Lock the iron into place using the safety lock when storing.

Specifications

Product code: BEL0775N Output: 2200-2400 W
Input: 220-240 V ~ 50-60 Hz Water tank capacity: 1.2 L



If this product does not reach you in an acceptable condition please contact our Customer Services Department at www.beldray.com. Please have your delivery note to hand as details from it will be required. If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions). Go to www.beldray.com and search **BEL0775** to access the instruction manual for your product.

*To be eligible for the extended guarantee, go to www.beldray.com and register your product within 30 days of purchase.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



For more information on how to get the most out of your new purchase, please scan the QR code for an online tutorial.

Beldray est 1872

SCAN ME



Beldray est 1872

STEAM SURGE PRO

QUICK START GUIDE

Find us on

www.facebook.com/Beldray

Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.

MADE IN CHINA.
www.beldray.com

CD200520/MD000000/V1

 ULTIMATE PRODUCTS HOME OF BRANDS		Manchester OL9 0DD United Kingdom www.upgs.com t: +44 (0) 161 627 1400 f: +44 (0) 161 628 2126 hk: +852 6681 9752 cn: +86 1 3417586804																
Artworker: Date: Project Name: Type of Artwork: Size: Software Used: Typefaces:	Jennifer Dodd 2/6/2020 EES200379 UPG BEL0775N QSG Quick Start Guide A4 Folding Leaflet Double-sided Indesign CC20 Avenir Next																	
<table border="0"> <tr><td></td><td>☐ Cyan</td></tr> <tr><td></td><td>☐ Magenta</td></tr> <tr><td></td><td>☐ Yellow</td></tr> <tr><td></td><td>☒ Black</td></tr> <tr><td></td><td>☐ PMS</td></tr> <tr><td></td><td>☐ PMS</td></tr> <tr><td></td><td>☐ PMS</td></tr> <tr><td></td><td>☐ PMS</td></tr> </table>		☐ Cyan		☐ Magenta		☐ Yellow		☒ Black		☐ PMS		☐ PMS		☐ PMS		☐ PMS	Artwork Version 2 Artwork Scale 1:1 ©2020 UP Global Sourcing. All designs, images and artwork are the copyright of UP Global Sourcing. No copying, alterations or amendments to the artwork, design can be undertaken without prior written permission of UP Global Sourcing. Any costs incurred as a result of unauthorised amendments will be recovered from the supplier responsible.	
	☐ Cyan																	
	☐ Magenta																	
	☐ Yellow																	
	☒ Black																	
	☐ PMS																	
	☐ PMS																	
	☐ PMS																	
	☐ PMS																	

DO NOT PRINT THIS PAGE
ARTWORK REFERENCE ONLY