

✓ **INSTALLATION CHECKOFF LIST**

Doors

- ☐ Handles are secure and tight
- ☐ Door seals completely to cabinet on all sides
- ☐ Freezer door is level across the top

Leveling

- ☐ Refrigerator is level, side to side and tilted 1/4" (6mm) front to back
- ☐ Toe grille is properly attached to refrigerator
- ☐ Cabinet is setting solid on all corners

Electrical Power

- ☐ House power turned on
- ☐ Refrigerator plugged in

Ice Maker

- ☐ House water supply connected to refrigerator
- ☐ No water leaks present at all connections - recheck in 24 hours
- ☐ Ice Maker is turned ON.

Final Checks

- ☐ Shipping material removed
- ☐ Fresh Food and Freezer controls set
- ☐ Crisper Humidity controls set
- ☐ Registration Card sent in


Refer to your *Owner's Use and Care Manual* for additional information about your refrigerator.

5 LEVELING AND ADJUSTING


All four corners of your refrigerator must rest firmly on a solid floor. Your refrigerator is equipped with adjustable front rollers or front leveling screws to help level your unit.

To level cabinet or change door height:


1. Remove toe grille.
2. Use flat-blade screwdriver or 3/8" socket wrench to adjust front rollers. Use adjustable wrench to adjust leveling screws.

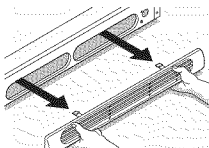

Toe Grille

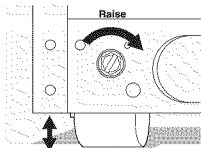

Adjustable Front Roller
(some models)

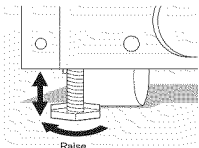


Stationary Front Roller
with Leveling Screw
(some models)


NOTE

Raise the front of the refrigerator enough so the doors close freely when opened halfway. The refrigerator should slope 1/4" to 1/2" from front to back. Then level the refrigerator from side to side.

Tools Necessary:

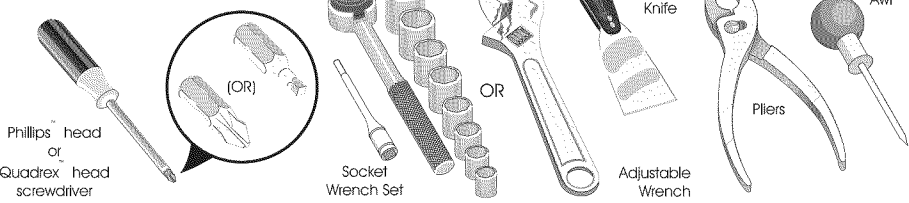

1

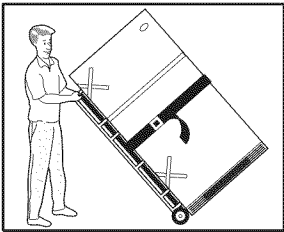


HAND TRUCKING

- Load refrigerator from side of cabinet only.
- Do not run retaining straps over handles.
- Do not over-tighten retaining straps.
- Never use refrigerator handles to move the refrigerator.
- Remove tape from doors only after unit is in place.

2


SHIPPING MATERIAL

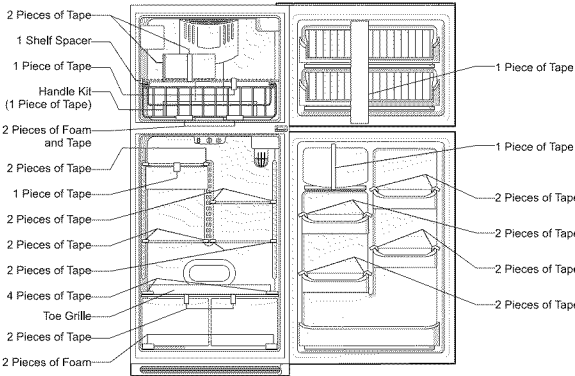

Remove Shipping material. (Features may vary per model.)


3

WATER SUPPLY

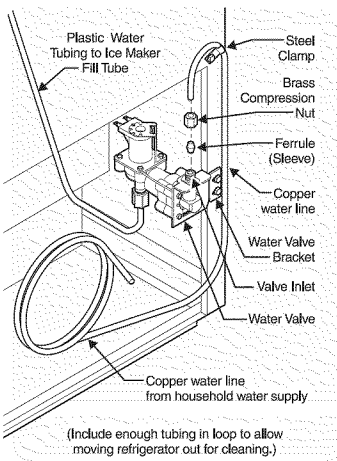

Connect water supply - check for water leaks. **Turn icemaker OFF if water supply is not connected immediately. Connecting to a reverse osmosis system is not recommended.**

The water valve on the back of the refrigerator will Click/Buzz if the water valve is closed.

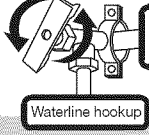

Be certain the water valve is open and there are no leaks.

4

INSTALLATION CLEARANCES


Allow the following clearances for ease of installation, proper air circulation, and plumbing and electrical connections:

- Sides & Top.....3/8"
- Back.....1"

NOTE


If you are installing your refrigerator beside a wall, leave 1/2" minimum between hinges and wall to allow for the door to swing open.

6

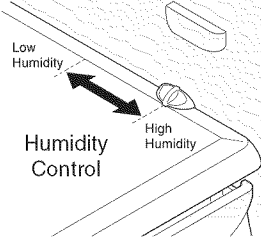


CONTROLS

When changing controls, wait 24 hours before making additional adjustments.

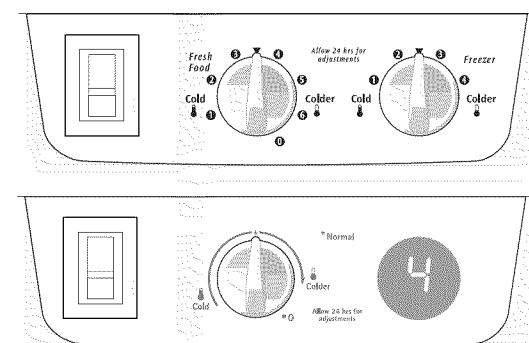


(For models with LED display, 3 to 5 is normal operating range.)

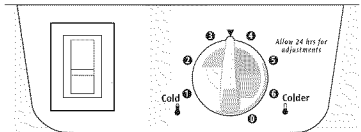

8


**DOOR REMOVAL
(IF NECESSARY)**

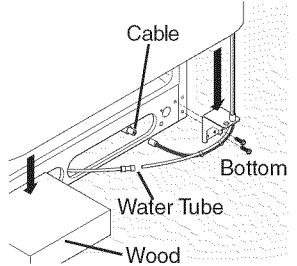



7

ICEMAKER

Ensure icemaker is turned ON.

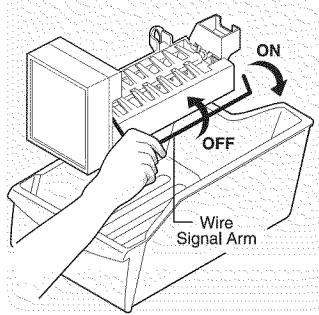

If you need to remove the doors to get your refrigerator into the house please see "Door Removal and Reversal Instructions" in your *Use & Care Manual*.

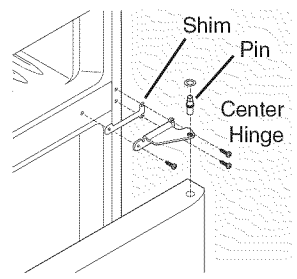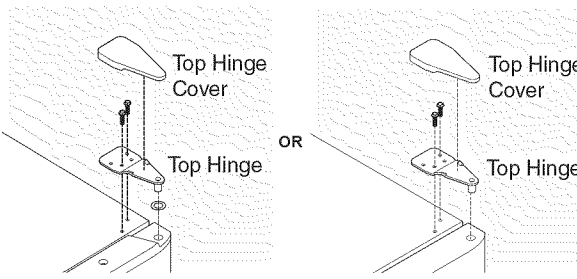

9

- ✓ See "Normal Operating Sights & Sounds" in the *Use & Care Manual* so you understand the sounds you may hear once your refrigerator is running.
- ✓ Please read entire *Use & Care Manual* to become aware of important safety instructions and to become familiar with your new refrigerator.
- ✓ Send in Registration card to register your refrigerator.
- ✓ Congratulations! You are ready to enjoy your new refrigerator.

**IF YOU ARE DISSATISFIED WITH THE
INSTALLATION, PLEASE CALL THE STORE
YOU PURCHASED IT FROM.**

